



REPAIR PARTS MANUAL
MODEL NO. RE115B97 (96011024500)
Lawn Tractor

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - "Lawn Tractor"
- Model Number - RE115B97 (96011024500)
- Part Number
- Part Description



TABLE OF CONTENTS

SCHEMATIC	3
ELECTRICAL.....	4-5
CHASSIS AND ENCLOSURES.....	6-7
DRIVE.....	8-9
STEERING WHEEL	10-11
ENGINE.....	12-13
SEAT	14
DECALS.....	15
MOWER DECK	16-17
MOWER LIFT.....	18

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
 SCHEMATIC

www.ersatzteil-service.de

03049_197427-428

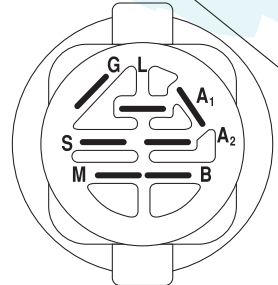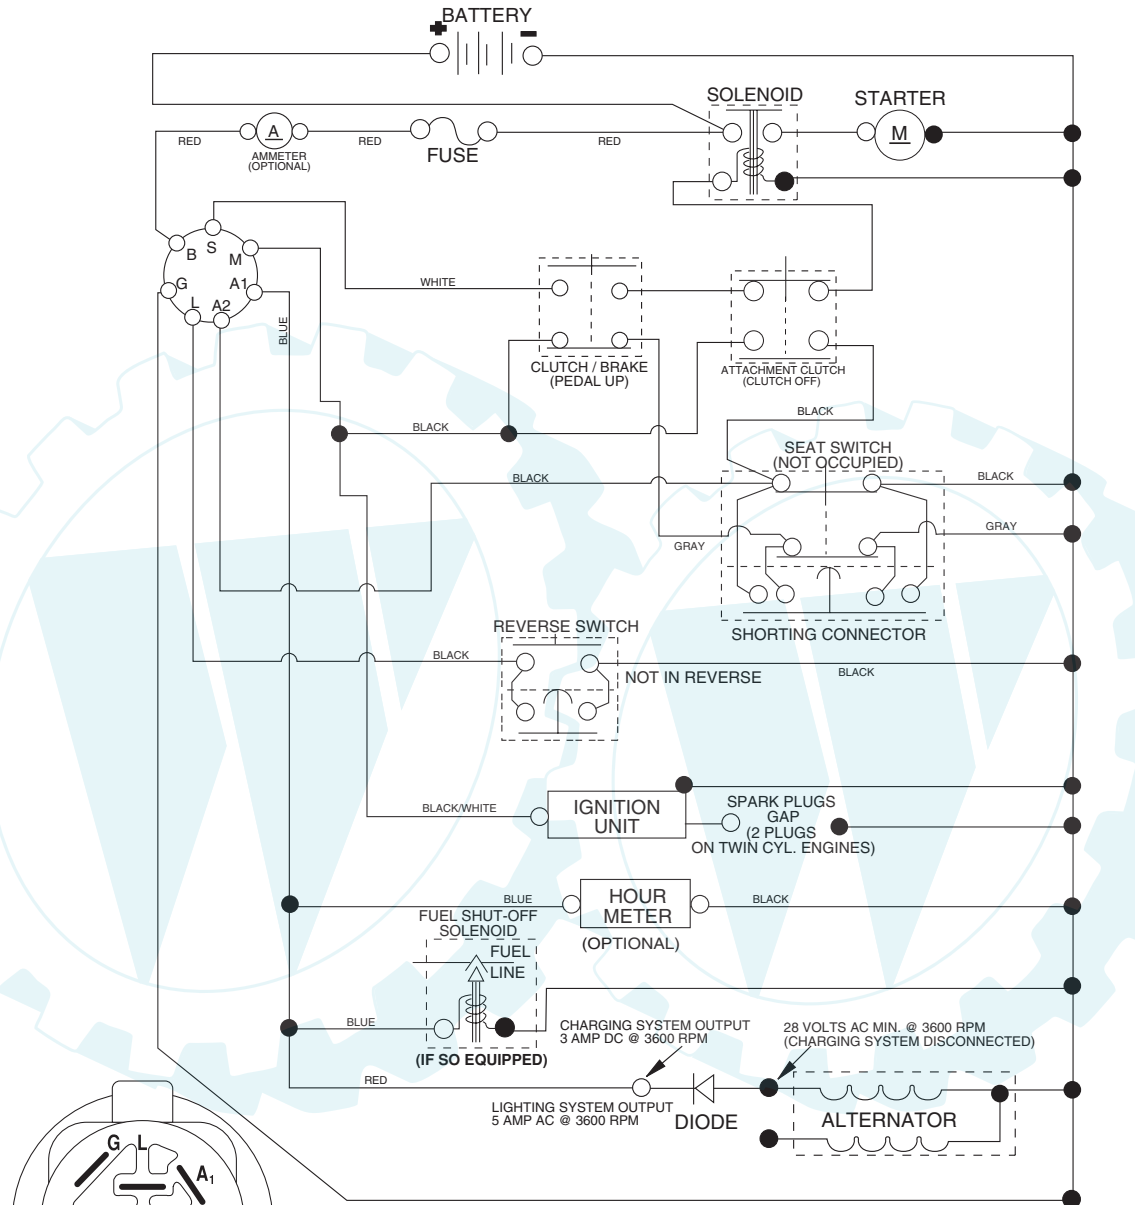

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	
RUN/OVERRIDE	B+A1	
RUN	B+A1	L+A2
START	B + S + A1	

03049

NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.




WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

REPAIR PARTS


www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
ELECTRICAL

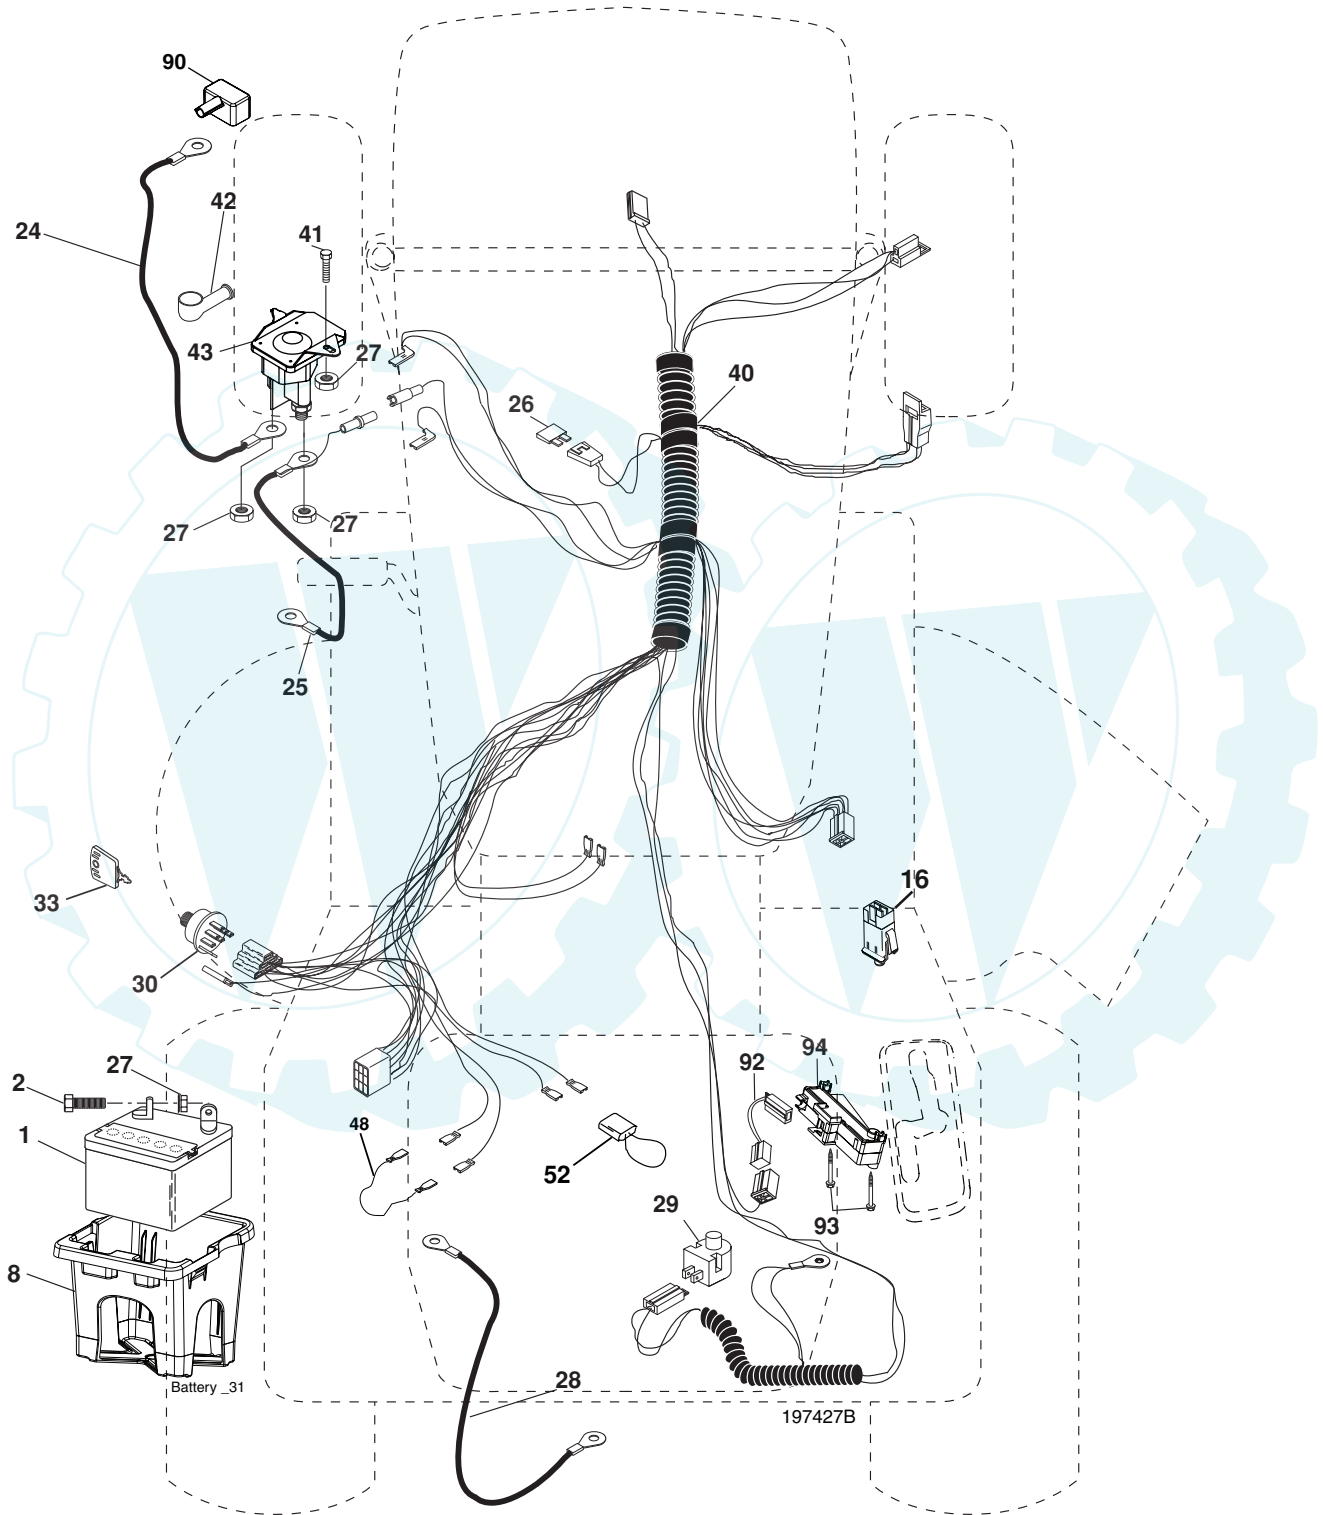

REPAIR PARTS

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
ELECTRICAL

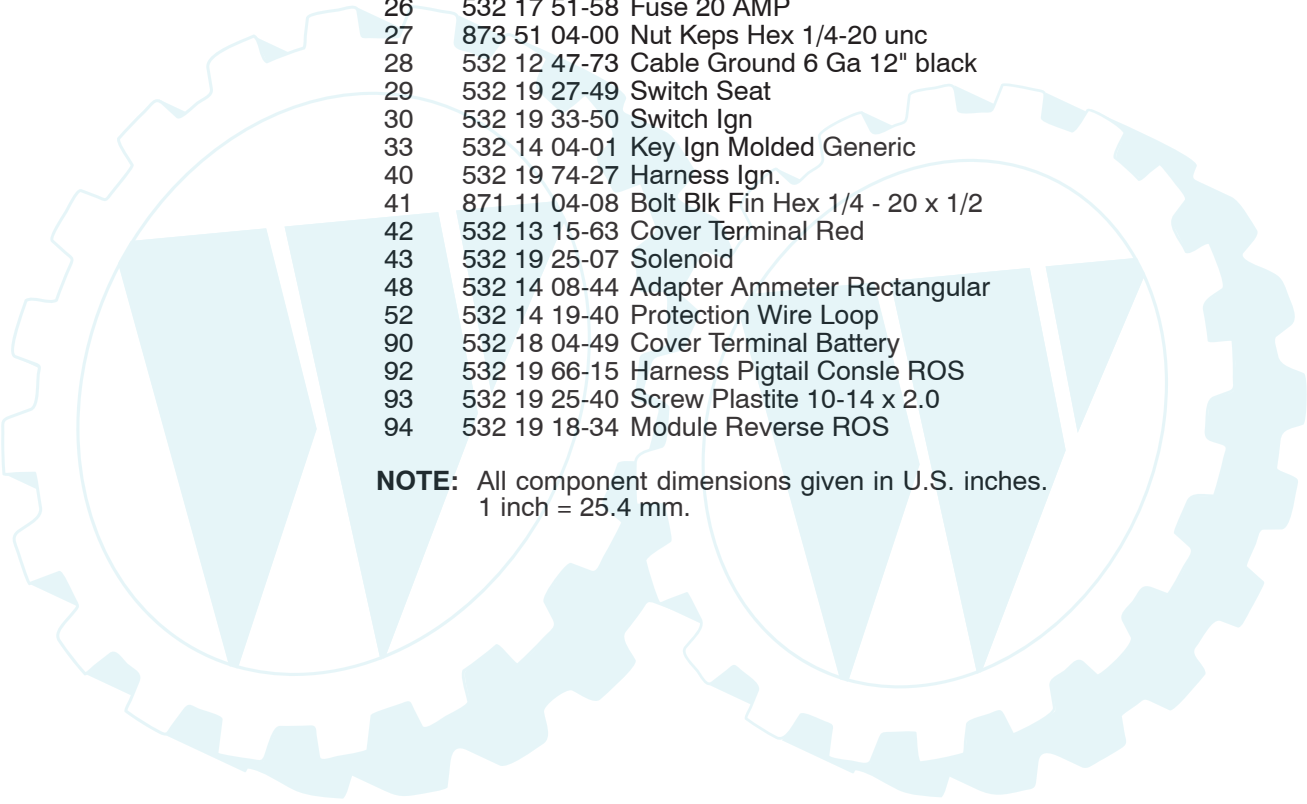


KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery 12 Volt 25 AMP
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 17 66-89	Box Battery
16	532 17 61-38	Switch Interlock Push-In
24	532 12 47-80	Cable Battery 6 Ga 11" red
25	532 14 61-47	Cable Battery 6 Ga 44" red w/16 wire
26	532 17 51-58	Fuse 20 AMP
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 12 47-73	Cable Ground 6 Ga 12" black
29	532 19 27-49	Switch Seat
30	532 19 33-50	Switch Ign
33	532 14 04-01	Key Ign Molded Generic
40	532 19 74-27	Harness Ign.
41	871 11 04-08	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 19 25-07	Solenoid
48	532 14 08-44	Adapter Ammeter Rectangular
52	532 14 19-40	Protection Wire Loop
90	532 18 04-49	Cover Terminal Battery
92	532 19 66-15	Harness Pigtail Console ROS
93	532 19 25-40	Screw Plastite 10-14 x 2.0
94	532 19 18-34	Module Reverse ROS

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

www.ersatzteil-service.de

**TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
CHASSIS AND ENCLOSURES**

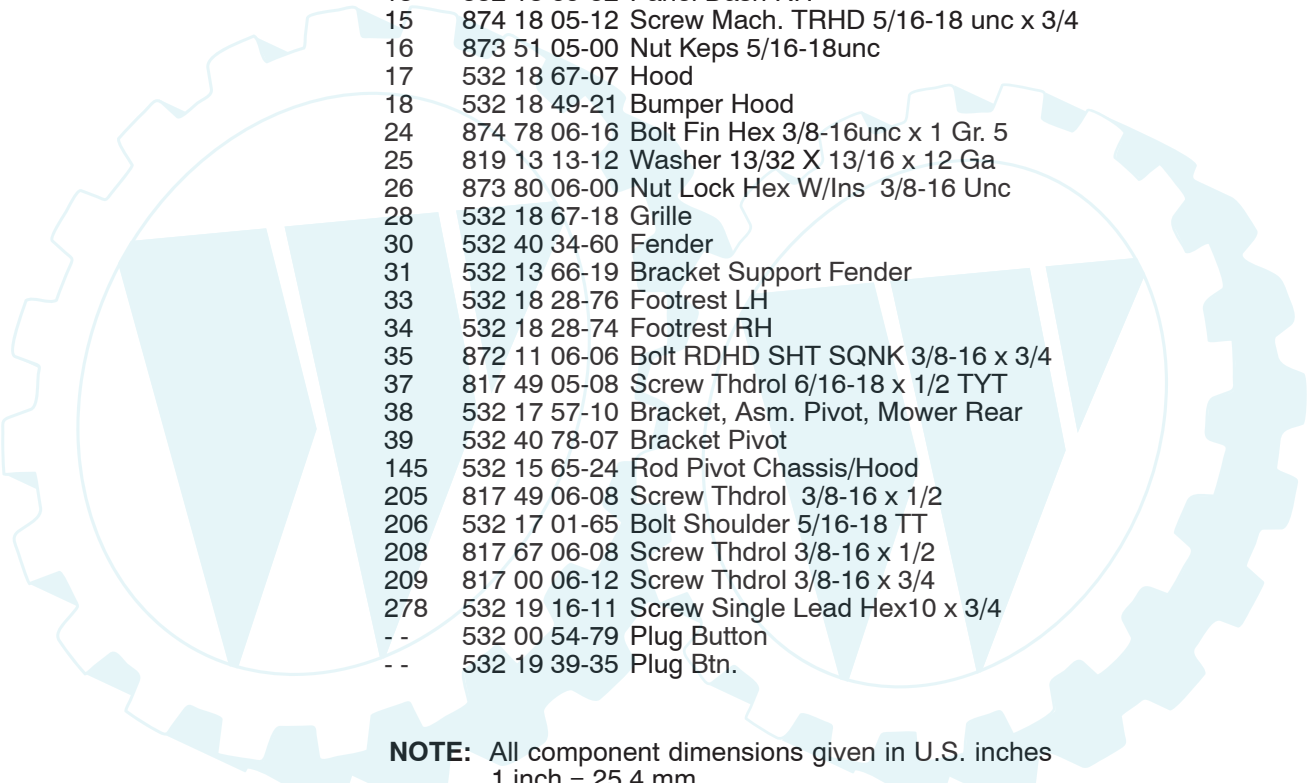


KEY NO.	PART NO.	DESCRIPTION
1	532 17 46-20	Chassis Stamping
2	532 17 65-54	Drawbar
5	532 15 52-72	Bumper Hood/Dash
6	532 18 44-19	Saddle,Flat
8	532 15 51-38	Clip Retainer
9	532 19 46-88	Dash P/L
10	872 14 06-08	Bolt Carriage 3/8-16 x 1
11	532 17 49-96	Panel Dash LH
13	532 18 69-52	Panel Dash RH
15	874 18 05-12	Screw Mach. TRHD 5/16-18 unc x 3/4
16	873 51 05-00	Nut Keps 5/16-18unc
17	532 18 67-07	Hood
18	532 18 49-21	Bumper Hood
24	874 78 06-16	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
25	819 13 13-12	Washer 13/32 X 13/16 x 12 Ga
26	873 80 06-00	Nut Lock Hex W/Ins 3/8-16 Unc
28	532 18 67-18	Grille
30	532 40 34-60	Fender
31	532 13 66-19	Bracket Support Fender
33	532 18 28-76	Footrest LH
34	532 18 28-74	Footrest RH
35	872 11 06-06	Bolt RDHD SHT SQNK 3/8-16 x 3/4
37	817 49 05-08	Screw Thdrol 6/16-18 x 1/2 TYT
38	532 17 57-10	Bracket, Asm. Pivot, Mower Rear
39	532 40 78-07	Bracket Pivot
145	532 15 65-24	Rod Pivot Chassis/Hood
205	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
206	532 17 01-65	Bolt Shoulder 5/16-18 TT
208	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
209	817 00 06-12	Screw Thdrol 3/8-16 x 3/4
278	532 19 16-11	Screw Single Lead Hex10 x 3/4
--	532 00 54-79	Plug Button
--	532 19 39-35	Plug Btn.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
DRIVE

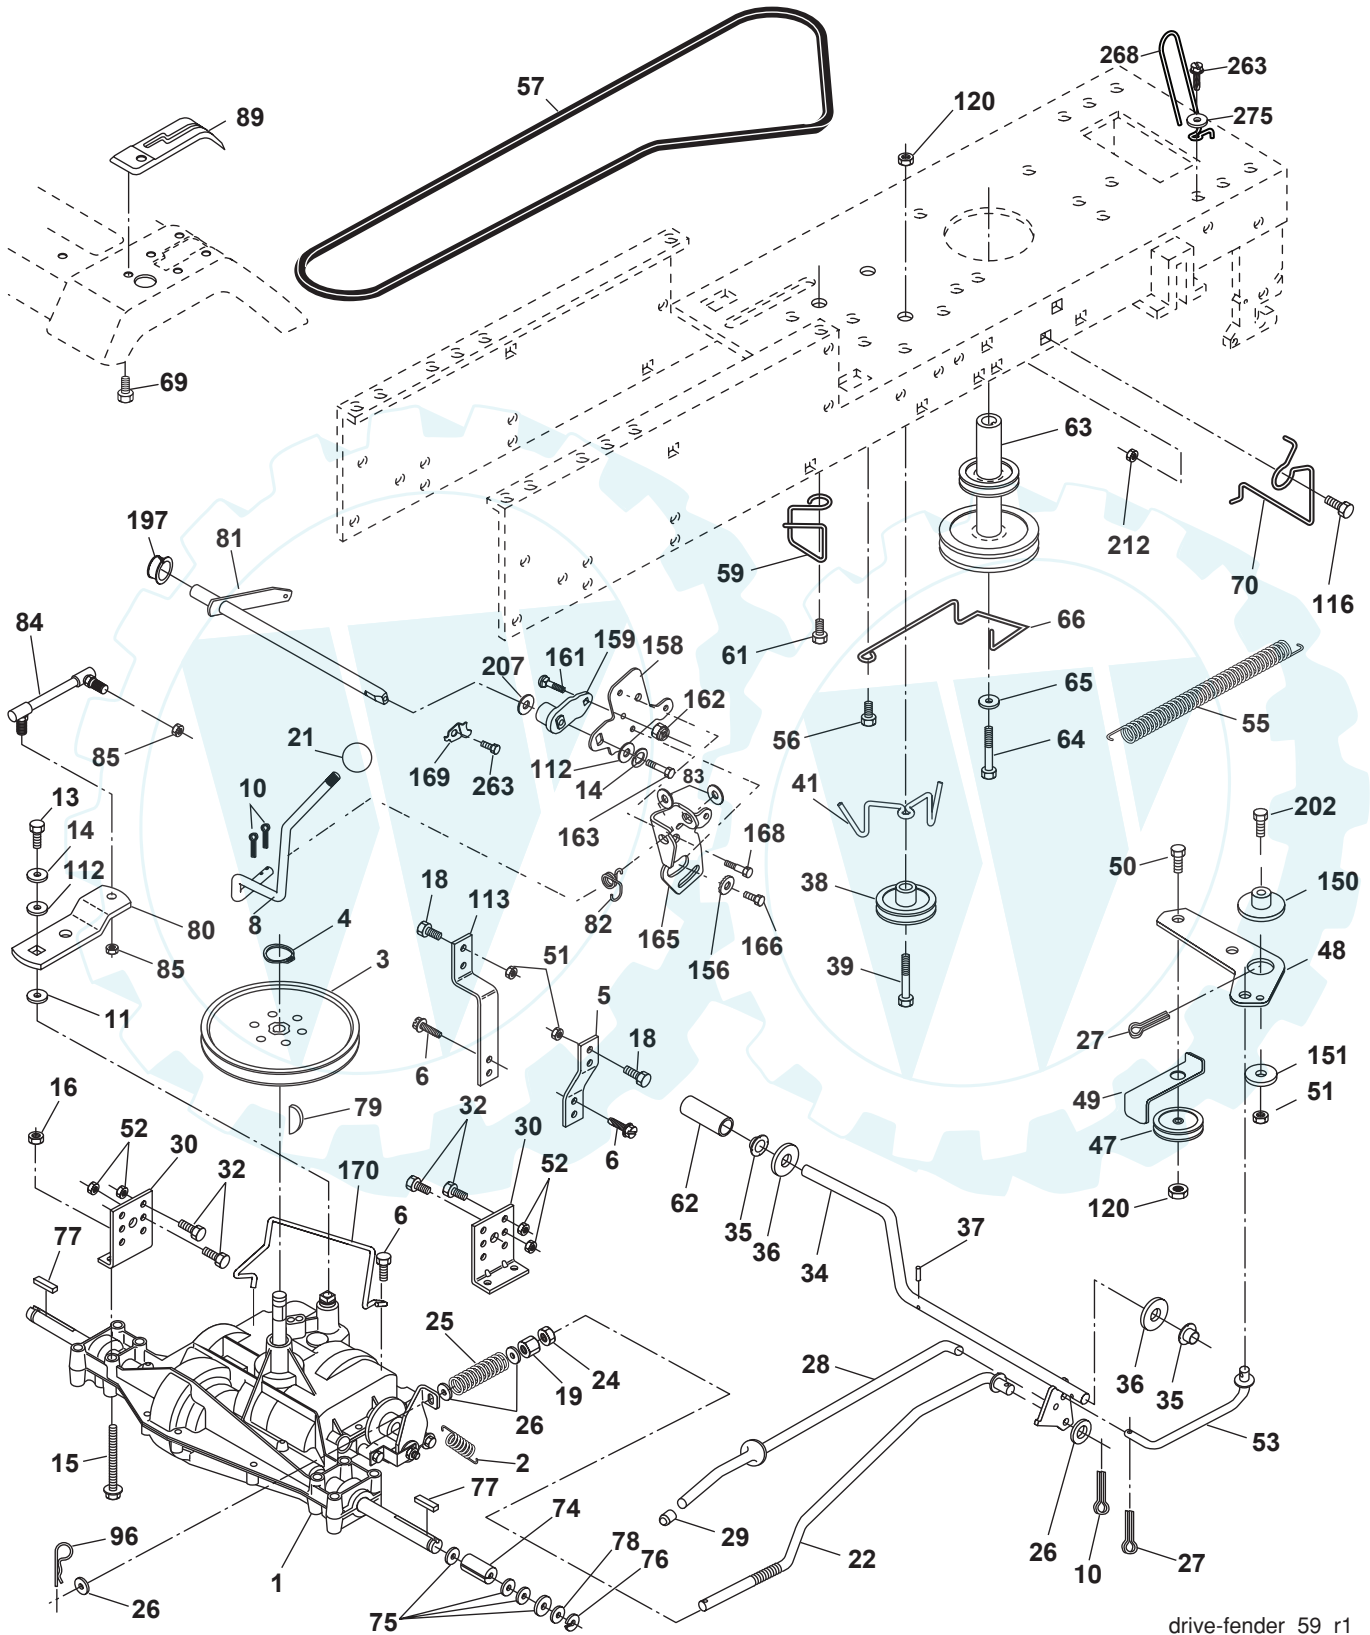

drive-fender_59_r1

REPAIR PARTS

www.ersatzteil-service.de

**TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
DRIVE**


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	----- Transaxle, DANA D4360-139 (Order Parts From Transaxle Manufacturer)	63	532 17 54-10 Engine Pulley
2	532 14 66-82 Spring Return Brake T/a Zinc	64	532 17 39-37 Bolt Hex
3	532 12 36-66 Pulley Transaxle 18" tires	65	810 04 07-00 Washer Lock Hvy Hlcl Spr 7/16
4	812 00 00-28 Ring Retainer # 5100-62	66	532 15 47-78 Keeper Belt Engine Foolproof
5	532 12 15-20 Strap Torque 30 Degrees	69	532 14 24-32 Screw Hex Wsh Hi-Lo 1/4 X 1/4 unc
6	817 06 05-12 Screw Thdrol 5/16-18 x 3/4 TYT	70	532 13 46-83 Guide Belt Mower Drive RH
8	532 19 27-06 Rod Shift	74	532 10 95-02 Spacer Split
10	876 02 04-16 Pin Cotter 1/8 x 1 Cad	75	532 12 17-49 Washer 25/32 x 1 1/4 x 16 Ga.
11	532 10 57-01 Washer Plate Shf 388 Sq Hole	76	812 00 00-01 E-ring #5133-75
13	874 55 04-12 Bolt 1/4-28 Unf Gr. 8 W/Patch	77	532 12 35-83 Key Square 2 0 x 1845/ 1865
14	810 04 04-00 Washer Lock Hvy Helical 1/4	78	532 12 17-48 Washer 25/32 x 1-5/8 x 16 Ga.
15	874 49 05-44 Bolt 5/16-18 Gr. 5	79	532 12 50-96 Key Woodruff #9 3/16 x 3/4
16	873 80 05-00 Nut Lock Hex W/Ins 5/16-18	80	532 13 14-88 Arm Shift Trans
18	874 78 06-16 Bolt, Fin Hex 3/8-16 unc x 1 Gr. 5	81	532 16 55-94 Shaft Asm. Cross Taper
19	873 80 06-00 Nut Lock 3/8-16 unc	82	532 16 57-11 Spring Torsion
21	532 10 69-33 Knob	83	819 17 12-16 Washer 17/32 x 3/4 x 16 Ga.
22	532 13 08-04 Rod Brake Blk Zinc 26 840	84	532 16 62-29 Link Trans
24	873 35 06-00 Nut Hex Jam 3/8-16 unc	85	532 15 03-60 Nut Lock Center 1/4-28
25	532 10 68-88 Spring Rod Brake 2 00 Zinc	89	532 19 58-61 Console Shift
26	819 13 13-16 Washer 13/32 x 13/16 x 16 Ga	96	532 12 47-88 Retainer Spring 1"
27	876 02 04-12 Pin Cotter 1/8 x 3/4 Cad	112	819 09 12-10 Washer 9/32 x 3/4 x 10 Ga.
28	532 17 57-65 Rod Brake Parking LT/YT	113	532 12 72-85 Strap Torque LT
29	532 07 16-73 Cap Brake Parking Black	116	872 14 06-08 Bolt Rdhd Sq Neck 3/8-16 x 1
30	532 17 49-73 Bracket Mtg Transaxle	120	873 90 06-00 Nut Lock Flg. 3/8-16
32	874 76 05-12 Bolt Hex Hd 5/16-18unc x 3/4	150	532 17 54-56 Spacer Retainer
34	532 17 55-78 Shaft Asm Pedal Foot	151	819 13 32-10 Washer 13/32 x 2 x 10 Ga.
35	532 12 01-83 Bearing Nylon Blk 629 Id	156	532 16 60-02 Washer Srtd 5/16ID x 1 x .125
36	819 21 16-16 Washer 21/32 x 1 x 16 Ga.	158	532 16 55-89 Bracket Shift Mount
37	532 12 49-63 Pin Roll 3/16 x 1"	159	532 18 39-00 Hub Shift
38	532 17 91-14 Pulley Composite	161	872 14 04-06 Bolt RDHD SQNK 1/4-20 x 3/4 Gr. 5
39	872 11 06-22 Bolt 3/8-16 x 2-3/4 Gr.5	162	873 68 04-00 Nut Crownlock 1/4-20 UNC
41	532 17 55-56 Keeper Belt Idler Flat	163	874 78 04-16 Bolt Hex Fin 1/4-20 UNC x 1 Gr.5
47	532 12 77-83 Pulley Idler V Groove Plastic	165	532 16 56-23 Bracket Pivot Lever
48	532 15 44-07 Bellcrank Clutch Grnd Drv Stl	166	817 49 05-10 Screw 5/16-18 x 5/8
49	532 12 32-05 Retainer Belt Style Spring	168	532 16 54-92 Bolt Shoulder 5/16-18 x .561
50	872 11 06-12 Bolt Carr SH 3/8-16 x 1-1/2 Gr.5	169	532 16 55-81 Plate Fastening
51	873 68 06-00 Nut Crownlock 3/8-16 unc	170	532 18 74-14 Keeper Belt T/A
52	873 68 05-00 Nut Crownlock 5/16-18 unc	197	532 16 96-13 Nyliner Smap-in 5/8
53	532 19 96-52 Link Clutch	198	532 16 98-45 Washer Nylon
55	532 10 57-09 Spring Return Clutch 6 75	202	872 11 06-14 Bolt 3/8-16 x 1-3/4 Gr. 5
56	817 06 06-20 Screw 3/8-16 x 1-1/4	212	532 14 52-12 Nut Hex Flg Lock
57	532 16 08-55 V-Belt Ground Drive	263	817 00 06-12 Screw Hex Wsh THDR 3/8-16 x 3/4
59	532 16 96-91 Keeper Belt Span Ctr	268	532 18 24-02 Guard Muffler
61	817 12 06-14 Screw 3/8-16 x .875	275	819 13 16-14 Washer 13/32 x 1 x 14 Ga.
62	532 12 48-72 Cover Pedal	263	817 00 06-12 Screw Hexwsh Thdr 3/8-16 x 3/4

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
STEERING ASSEMBLY

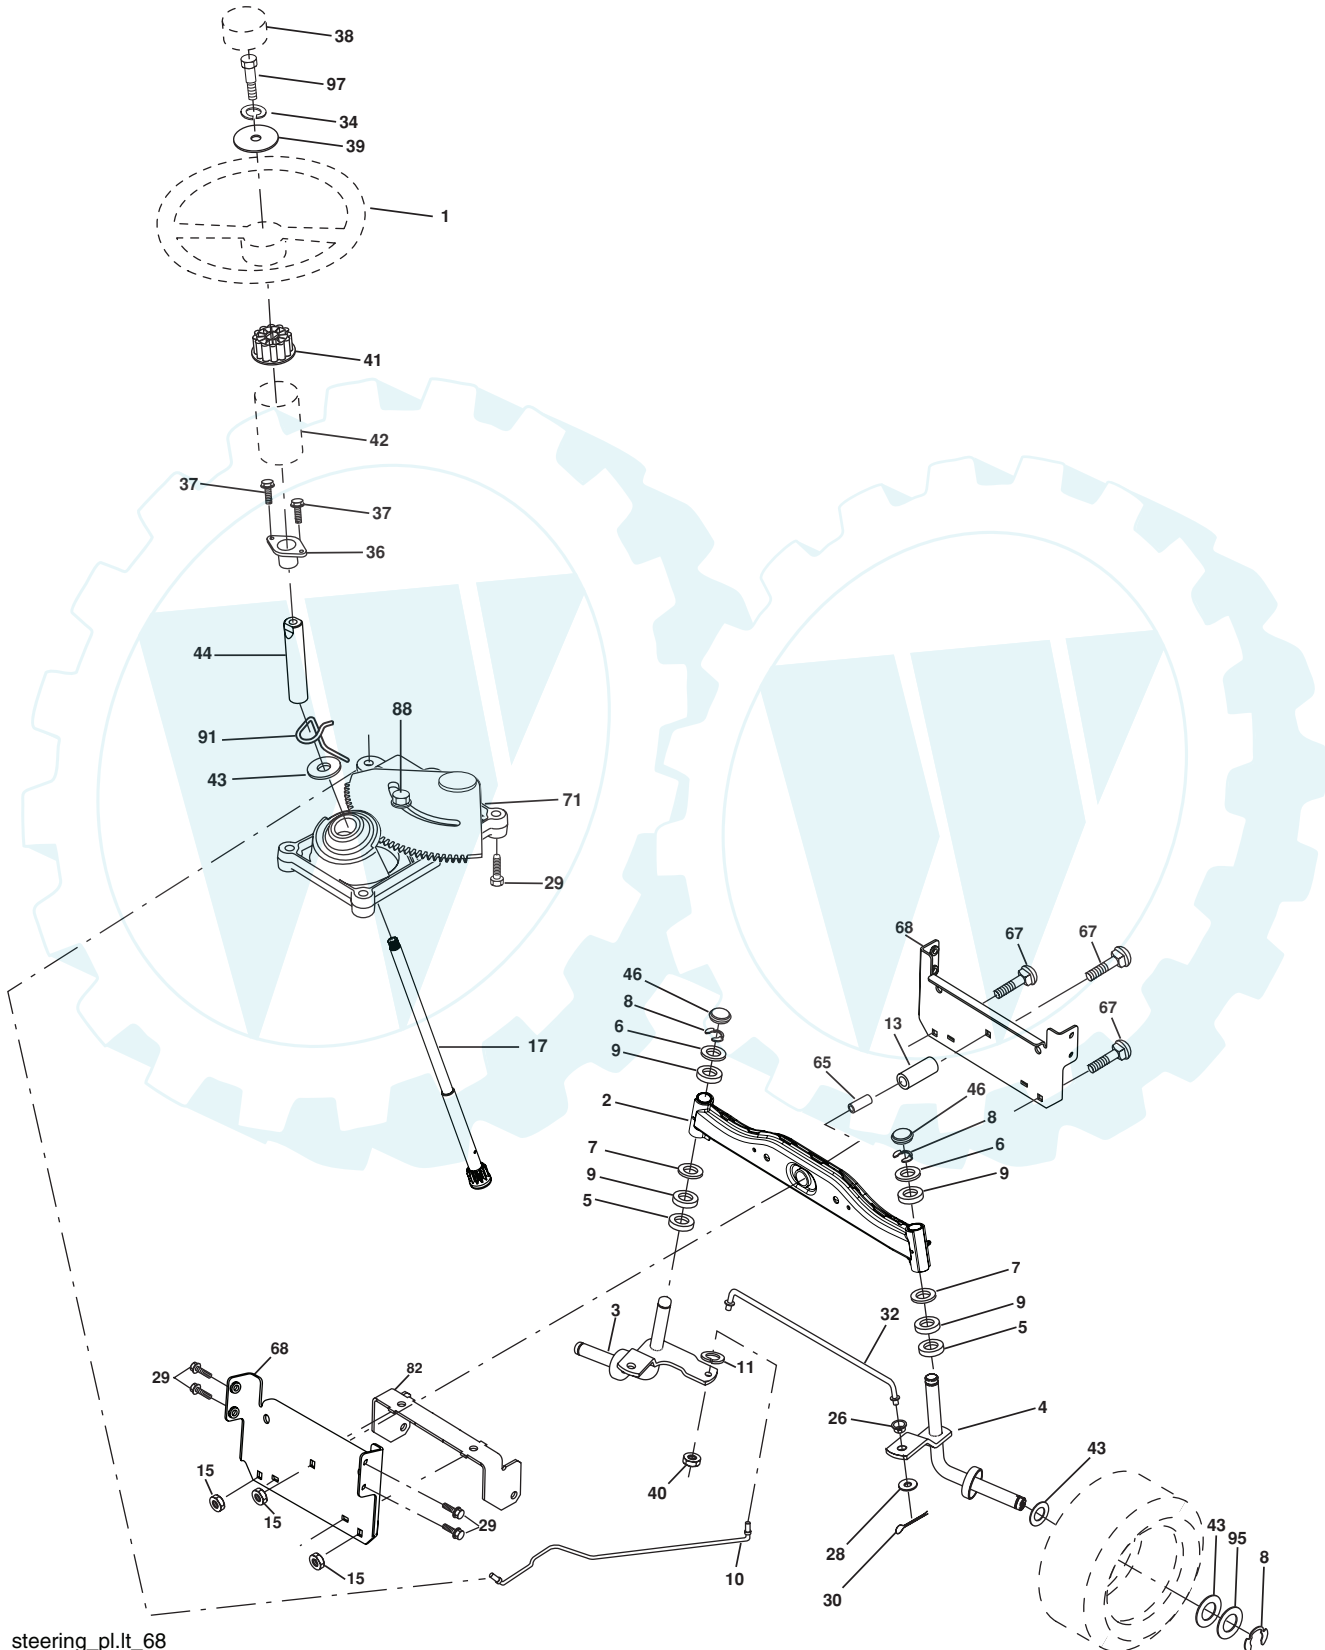


steering_pl.it_68

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45 STEERING ASSEMBLY

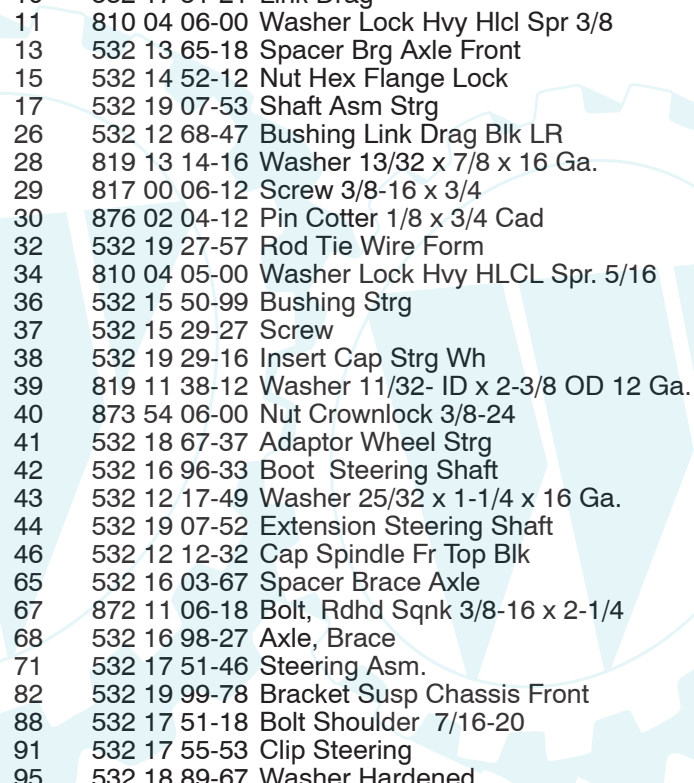


KEY NO.	PART NO.	DESCRIPTION
1	532 18 67-80	Wheel Steering
2	532 19 56-73	Axle Asm
3	532 16 98-40	Spindle Asm LH
4	532 16 98-39	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
7	819 27 20-16	Washer 27/32 x 1-1/4 x 16 Ga.
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 17 51-21	Link Drag
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
13	532 13 65-18	Spacer Brg Axle Front
15	532 14 52-12	Nut Hex Flange Lock
17	532 19 07-53	Shaft Asm Strg
26	532 12 68-47	Bushing Link Drag Blk LR
28	819 13 14-16	Washer 13/32 x 7/8 x 16 Ga.
29	817 00 06-12	Screw 3/8-16 x 3/4
30	876 02 04-12	Pin Cotter 1/8 x 3/4 Cad
32	532 19 27-57	Rod Tie Wire Form
34	810 04 05-00	Washer Lock Hvy HLCL Spr. 5/16
36	532 15 50-99	Bushing Strg
37	532 15 29-27	Screw
38	532 19 29-16	Insert Cap Strg Wh
39	819 11 38-12	Washer 11/32- ID x 2-3/8 OD 12 Ga.
40	873 54 06-00	Nut Crownlock 3/8-24
41	532 18 67-37	Adaptor Wheel Strg
42	532 16 96-33	Boot Steering Shaft
43	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
44	532 19 07-52	Extension Steering Shaft
46	532 12 12-32	Cap Spindle Fr Top Blk
65	532 16 03-67	Spacer Brace Axle
67	872 11 06-18	Bolt, Rdhd Sqnk 3/8-16 x 2-1/4
68	532 16 98-27	Axle, Brace
71	532 17 51-46	Steering Asm.
82	532 19 99-78	Bracket Susp Chassis Front
88	532 17 51-18	Bolt Shoulder 7/16-20
91	532 17 55-53	Clip Steering
95	532 18 89-67	Washer Hardened
97	874 78 05-64	Bolt 5/16-18 UNC x 4" L Gr. 5

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
ENGINE

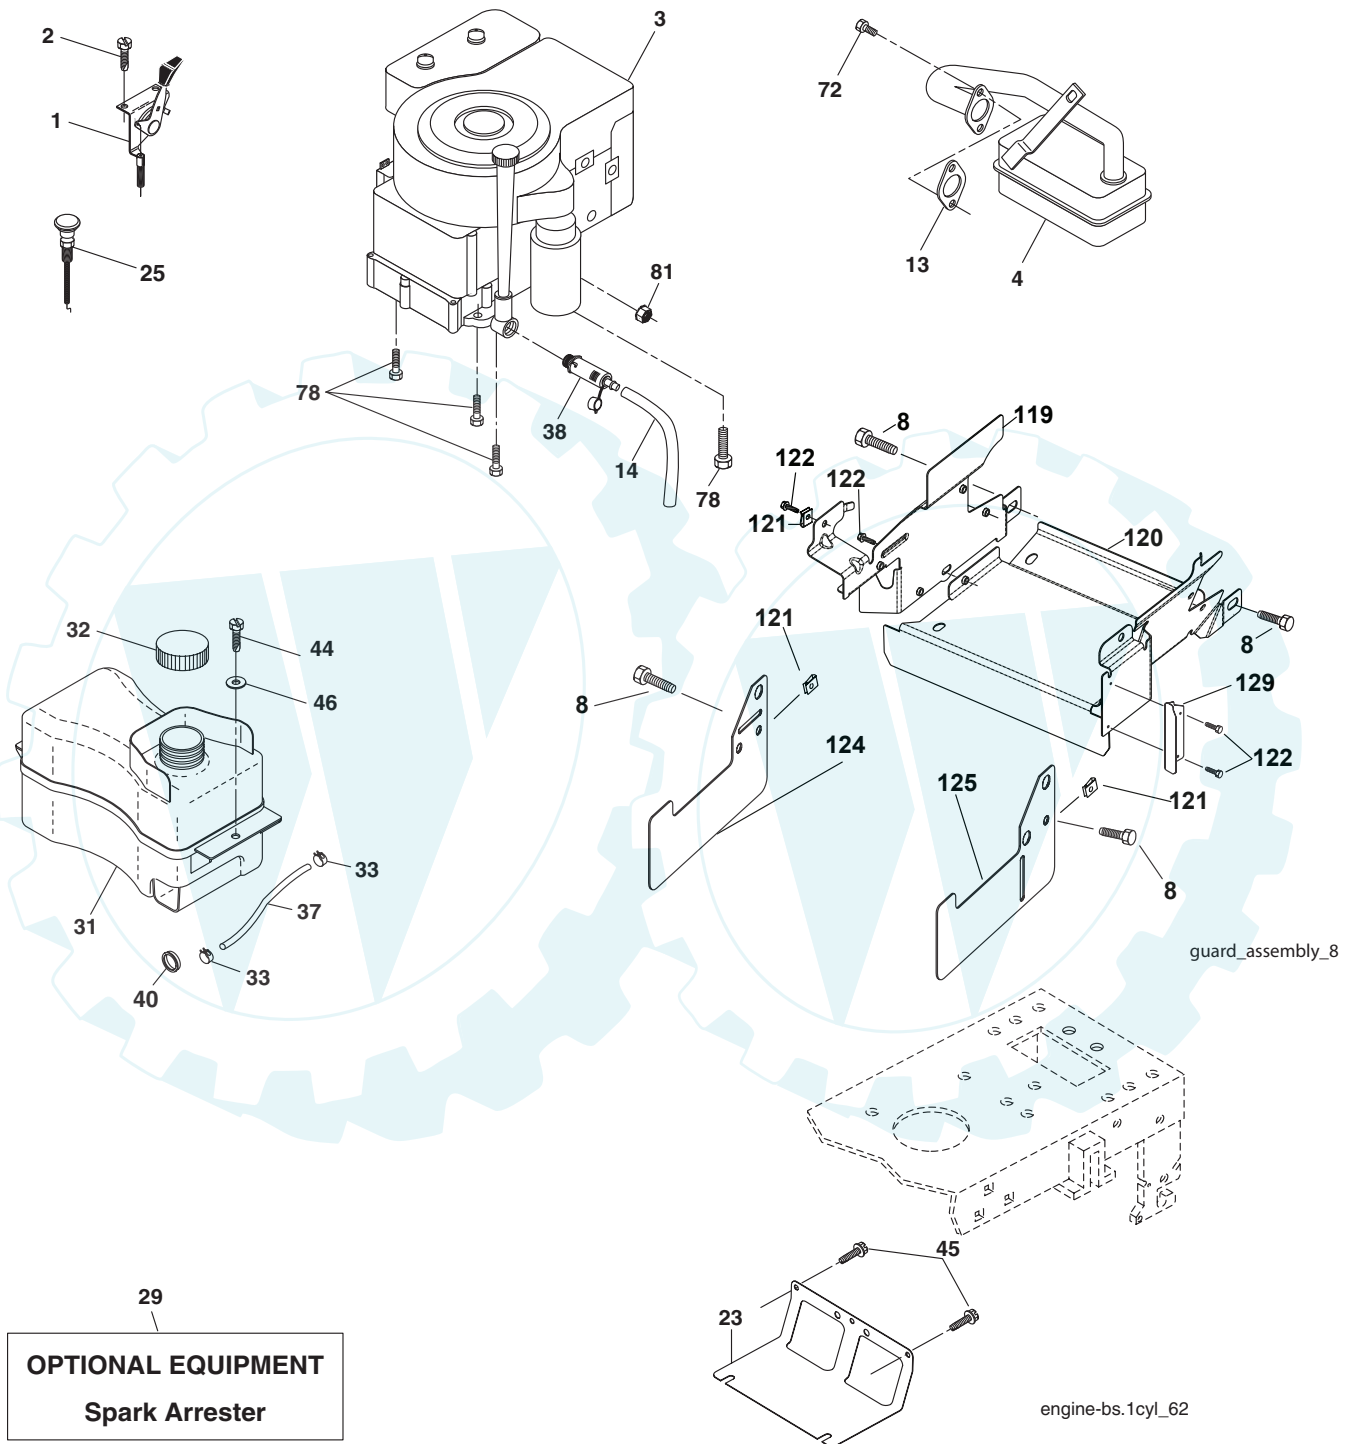

REPAIR PARTS

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45 ENGINE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 17 05-51	Control Throttle	38	532 18 16-54	Plug Drain Oil Easy
2	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 1/2	40	532 12 40-28	Bushing Snap Nyl Blk Fuel Line
3	-----	Engine B&S Model No. 217707 (Order Parts From Engine Manufacturer)	44	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
4	532 17 97-58	Muffler LT B&S	45	817 00 06-12	Screw Hex Wsh Thdrol 3/8-16 x 3/4
8	532 17 18-77	Bolt 5/16-18 UNC x 3/4 x/Sems	46	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
13	532 16 52-91	Gasket	72	532 19 23-34	Screw Socket HD 5/16-18 x 3/4
14	532 14 84-56	Tube Drain Oil Easy	78	817 06 06-20	Screw 3/8-16 x 1-1/4
23	532 16 98-37	Shield Brn/Dbr Guard	81	873 51 04-00	Nut 1/4-20
25	532 19 06-95	Control Choke	119	532 19 79-49	Guard Pulley Eng. LH
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)	120	532 19 79-48	Guard Pulley Eng. RH
31	532 40 75-16	Tank Fuel Front	121	532 19 66-88	Clip Threaded
32	532 19 77-25	Cap Asm Fuel	122	532 13 77-29	Screw 1/4-20 x 5/8
33	532 12 34-87	Clamp Hose Black	124	532 41 05-20	Shield Side LH
37	532 13 70-40	Line Fuel 20"	125	532 41 05-21	Shield Side RH
			129	532 40 03-28	Guard Pulley Eng. Adapter

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


ENGINE POWER RATING INFORMATION

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
SEAT ASSEMBLY

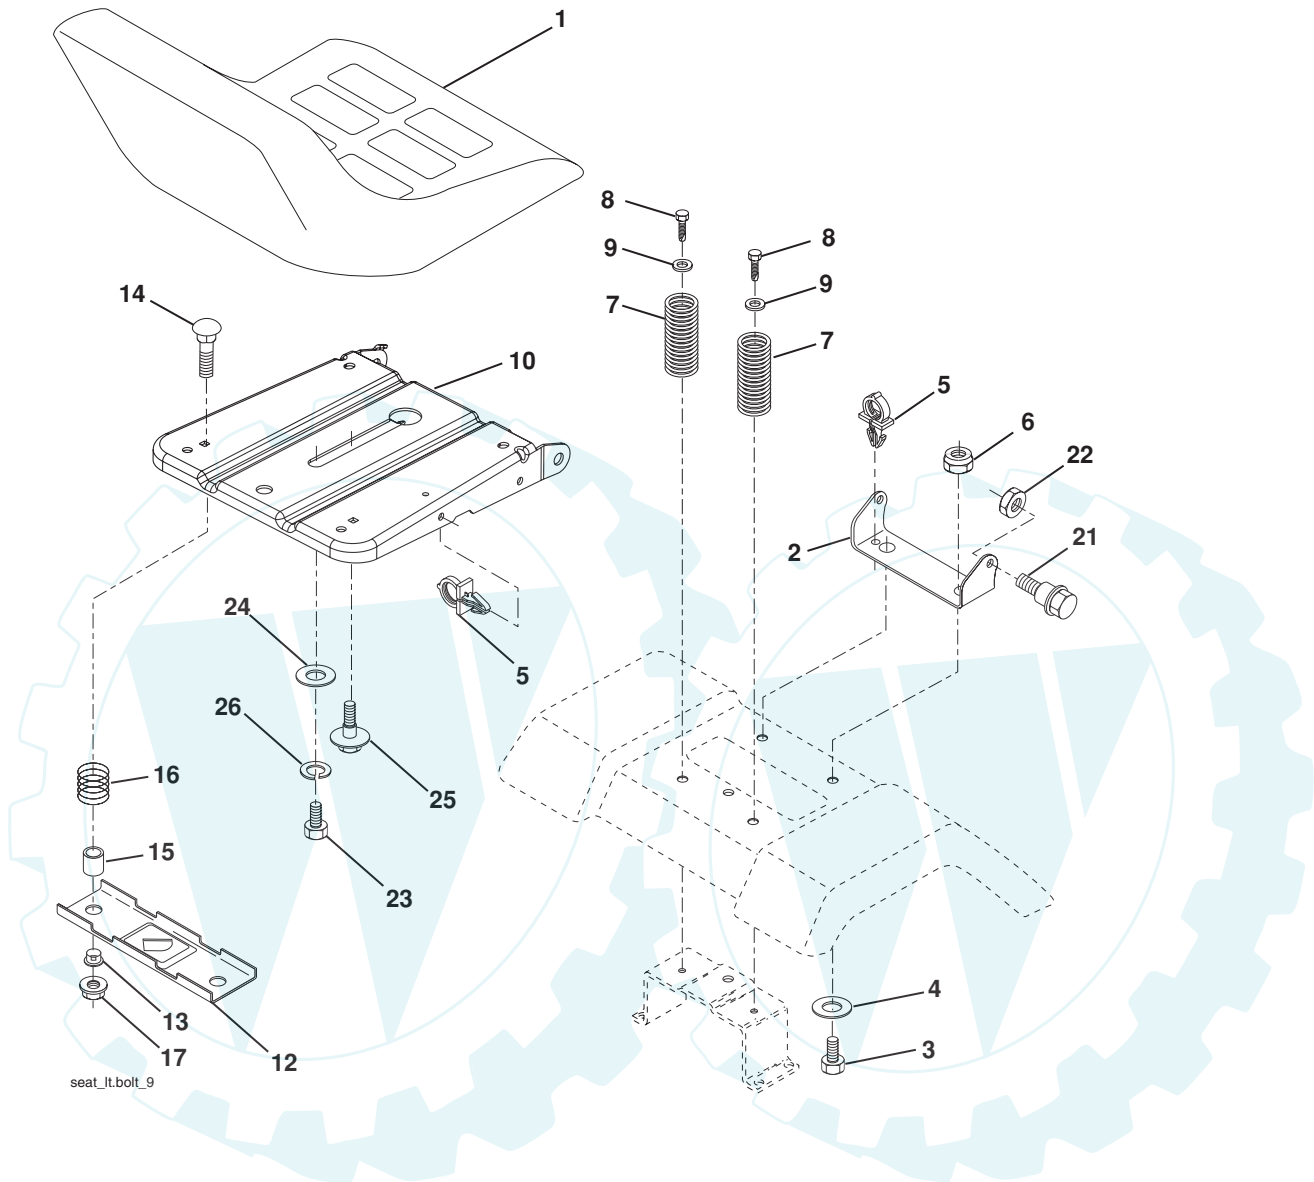

KEY NO.	PART NO.	DESCRIPTION
1	532 40 10-42	Seat
2	532 14 05-51	Bracket Pivot Seat 8 720
3	871 11 06-16	Bolt Fin Hex 3/8-16 unc x 1
4	819 13 16-10	Washer 13/32 x 1 x 10 Ga
5	532 14 50-06	Clip Push-In
6	873 80 06-00	Nut Hex w/Ins. 3/8-16 unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 00 06-16	Screw 3/8-16 x 1-1/2
9	819 13 16-14	Washer 13/32 x 1 x 14 Ga.
10	532 19 55-30	Pan Seat
12	532 17 46-48	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id


KEY NO.	PART NO.	DESCRIPTION
14	872 05 04-12	Bolt Rdhd Sqnk 1/4-20 x 1-1/2
15	532 13 43-00	Spacer Split 28 x 96 Yel Zinc
16	532 12 12-50	Spring Cprsn 1 27 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr. 5 Zinc
21	532 17 18-52	Bolt Shoulder 5/16-18 unc
22	873 80 05-00	Nut Hex Lock W/Ins 5/16-18
23	871 11 08-14	Bolt Hex
24	819 17 19-12	Washer 17/32 x 1-3/16 x 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 x 62
26	810 04 08-00	Washer Lock Hvy HLCL SPR 1/2

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

www.ersatzteil-service.de


TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
DECALS

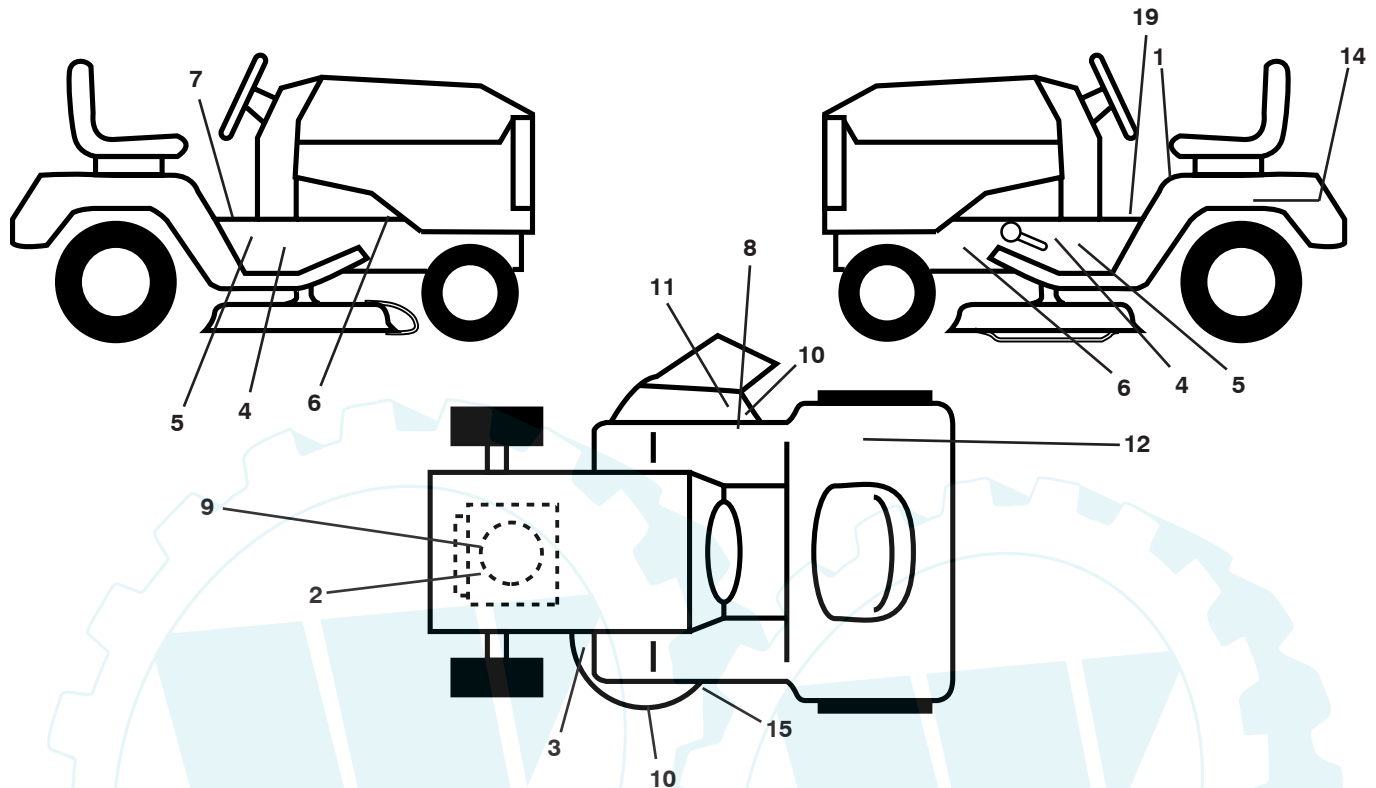

KEY NO.	PART NO.	DESCRIPTION
1	532 40 03-89	Decal Warning Symbols CE
2	532 19 68-41	Decal Warning Eng Syms.
3	532 13 49-99	Decal Mower Enviro
4	532 40 22-08	Decal Chassis
5	532 19 68-42	Decal Warning Cutfinger
6	532 15 97-36	Decal Chassis Hot Muffler
7	532 15 97-37	Decal Brake/Clutch Symbol LT
8	532 19 63-57	Decal Deflect Warning Cutfinger
9	532 40 88-07	Decal Engine HP
10	532 19 68-42	Decal SDL SHF/CRD SYM Cutfinger

KEY NO.	PART NO.	DESCRIPTION
11	532 18 21-66	Decal Mower Cut Finger Symbol
12	532 18 04-32	Decal 100 DE/CE
14	532 14 50-05	Decal Btry Dngr/PSN P/L Symbol
15	532 19 43-02	Decal V-Belt
19	532 14 08-37	Decal Parking Brake
--	532 16 25-98	Decal Drawbar
--	532 13 83-11	Decal Handle Lift Height Adjust
--	532 40 09-01	Manual Operator's (Euro.)
--	532 40 81-20	Manual Parts

WHEELS & TIRES

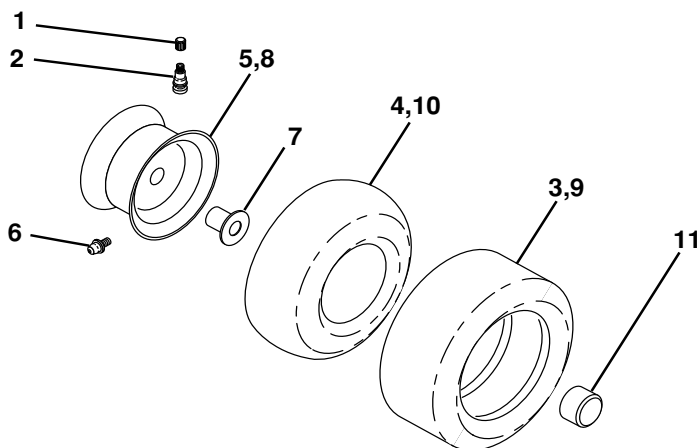


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 12 41-57	Tire F Ts 15 x 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 18 33-37	Rim Asm 6" front Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 18 33-38	Rim Asm 8" rear Service
9	532 12 39-69	Tire R Ts 18 x 8 5-8 C Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 17 50-39	Cap Axle Blk 1 50 x 1 00
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
MOWER DECK

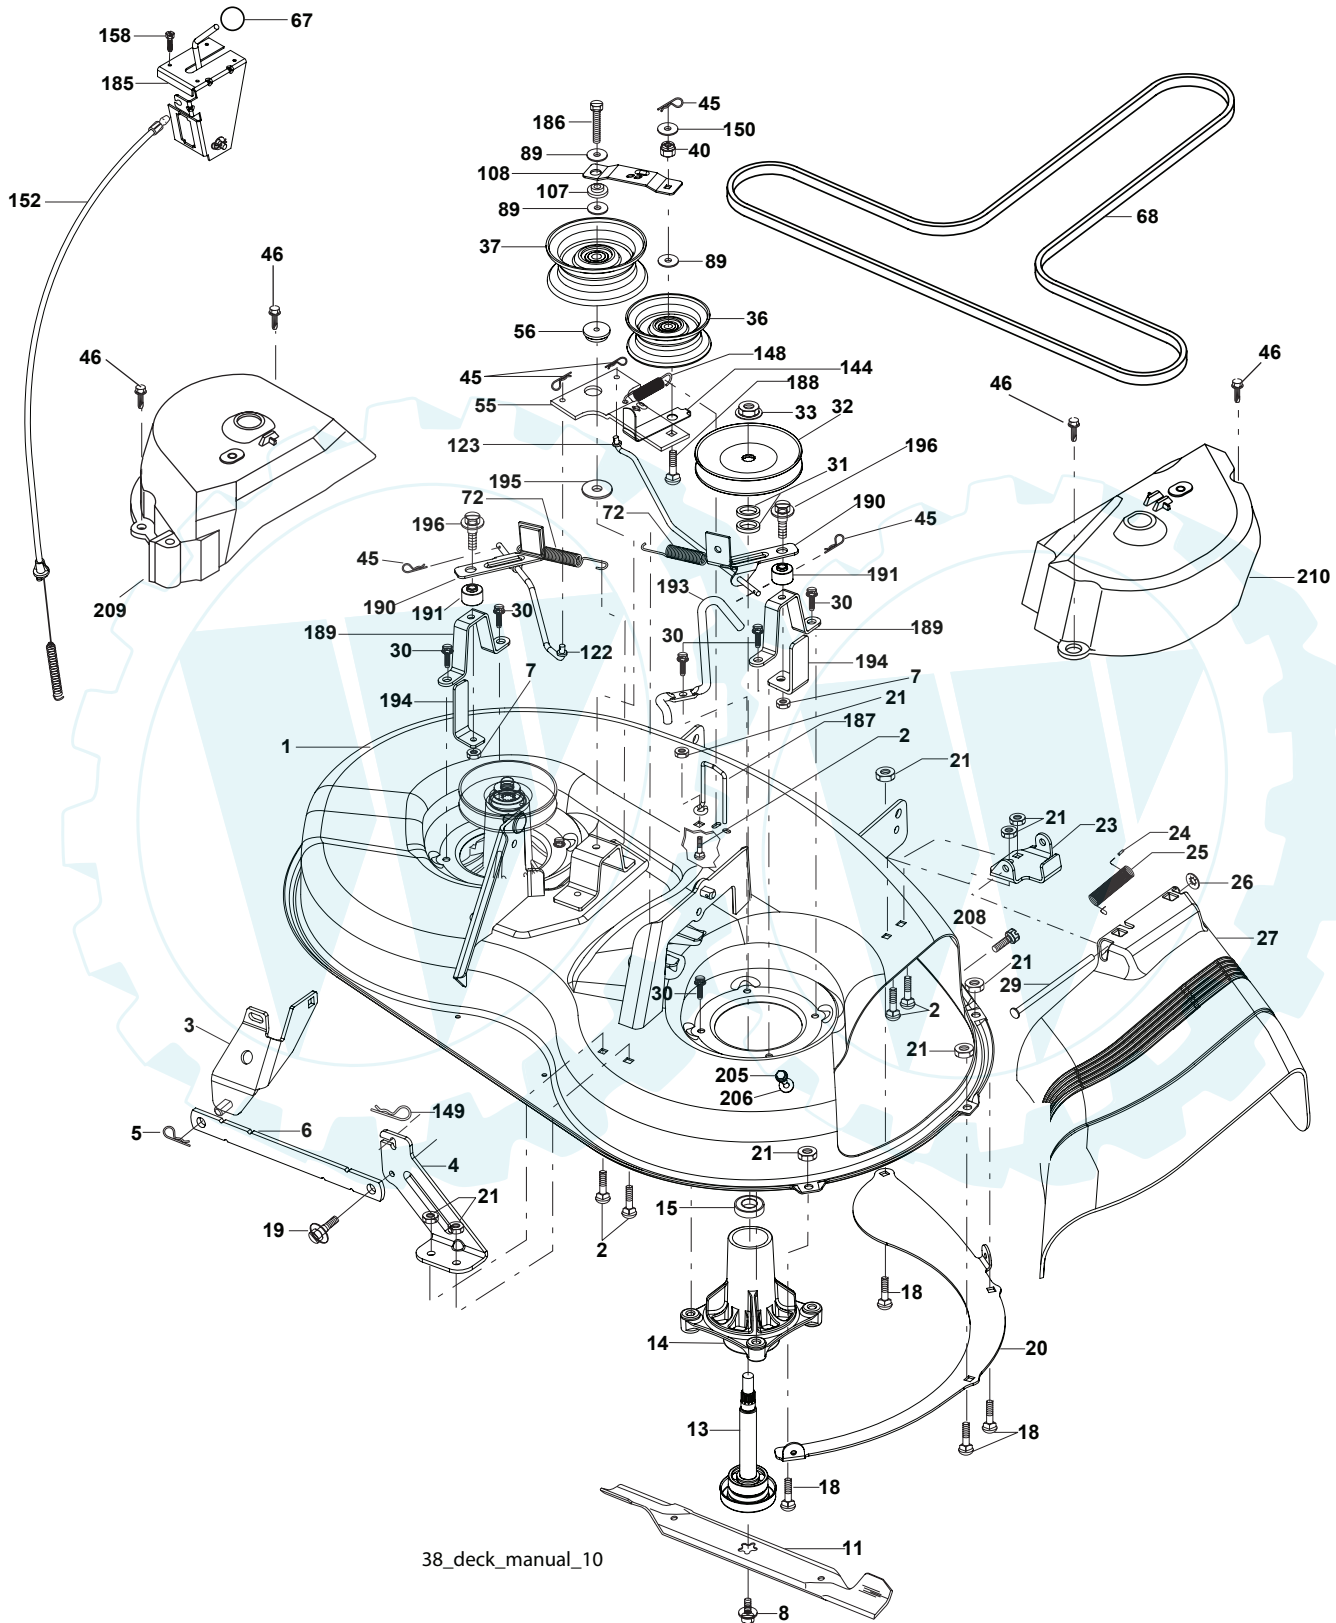

38_deck_manual_10

REPAIR PARTS

www.ersatzteil-service.de

**TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
MOWER DECK**


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 25-56	Mower Housing Assembly	107	532 13 35-02	Spacer Retainer
2	872 14 05-06	Bolt Carriage 5/16-18 x 3/4	108	532 13 35-03	Stiffener, Idler Arm
3	532 13 80-17	Bracket Asm Fr. Sway Bar	122	532 41 01-89	Rod, Brake LH
4	532 19 25-68	Bracket Deck Sway Bar 38"/42"	123	532 41 01-90	Rod, Brake RH
5	532 12 46-70	Retainer Spring	144	532 19 34-14	Keeper Belt Idler Tension
6	532 17 80-24	Bar Sway Deck	148	532 16 90-22	Spring Return Idler
7	873 80 05-00	Nut Lock Hex w/Ins. 5/16-18 unc	149	532 16 58-98	Retainer Spring Yellow
8	532 19 30-03	Bolt 3/8-24 x 1.25 Gr. 8	150	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
11	532 19 39-57	Blade Mower	152	532 19 32-35	Clutch Cable 38"/46"
13	532 19 28-72	Shaft Assembly, Mandrel, Vented	158	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 1/2
14	532 18 72-81	Housing, Mandrel, Vented	185	532 18 82-34	Head Asm Cable Clutch
15	532 11 04-85	Bearing, Ball, Mandrel	186	817 49 06-44	Screw Hex Wsh Thdrol 3/8-16 x 2-3/4
18	872 14 05-05	Bolt Rdhd Sqnk 5/16-18 x 5/8	187	532 19 34-12	Keeper Belt
19	532 13 28-27	Bolt, Shoulder	188	532 16 58-91	Bolt Carriage Idler
20	532 40 00-95	Baffle Vortex Front	189	532 19 25-59	Stand, Brake
21	873 68 05-00	Nut	190	532 19 25-60	Arm, Brake
23	532 19 25-57	Bracket, Mower Deflector	191	532 19 25-61	Spacer, Brake
24	532 10 53-04	Cap, Sleeve	193	532 19 34-13	Keeper Belt Rh Mandrel
25	532 19 70-26	Spring, Torsion, Deflector	194	532 19 41-05	Guard Brake
26	532 11 04-52	Nut, Push	195	819 13 32-10	Washer 13/32 x 2 x 10 Ga.
27	532 40 16-18	Shield, Deflector	196	532 19 37-82	Bolt/Washer Asm 5/16-18
29	532 13 14-91	Rod, Hinge	205	817 49 04-16	Screw 1/4-20 x 1
30	532 17 39-84	Screw Thdrol.	206	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
31	532 18 76-90	Washer, Spacer	208	817 67 06-08	Screw 3/8-16 x 1/2
32	532 15 35-32	Pulley, Mandrel	209	532 40 92-56	Cover Mandrel LH
33	532 40 02-34	Nut, Toplock	210	532 40 92-57	Cover Mandrel RH
36	532 13 14-94	Pulley, Idler, Flat	--	532 19 25-58	Brake Assembly (Includes Stand, Arm and Guard Components)
37	532 19 31-98	Pulley Idler Flat	--	532 19 28-70	Mandrel Assembly (Includes Hous- ing, Shaft and Shaft Hardware Only - Pulley Not Included)
40	873 68 06-00	Nut, Crownlock 3/8-16 unc	--	532 19 36-46	Replacement Mower, Complete
45	532 12 47-88	Retainer			
46	532 13 77-29	Screw			
55	532 13 38-40	Idler Arm Assembly			
56	532 16 57-23	Spacer, Retainer			
67	532 10 69-32	Knob			
68	532 19 32-14	V-Belt			
72	532 19 32-16	Spring Brake Return			
89	819 13 13-11	Washer 13/32 x 13/16 x 11 Ga.			
92	873 80 06-00	Nut Lock Hex W/Ins. 3/8-16 unc			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

www.ersatzteil-service.de

TRACTOR - MODEL NO. RE115B97 (96011024500), PRODUCT NO. 960 11 02-45
MOWER LIFT

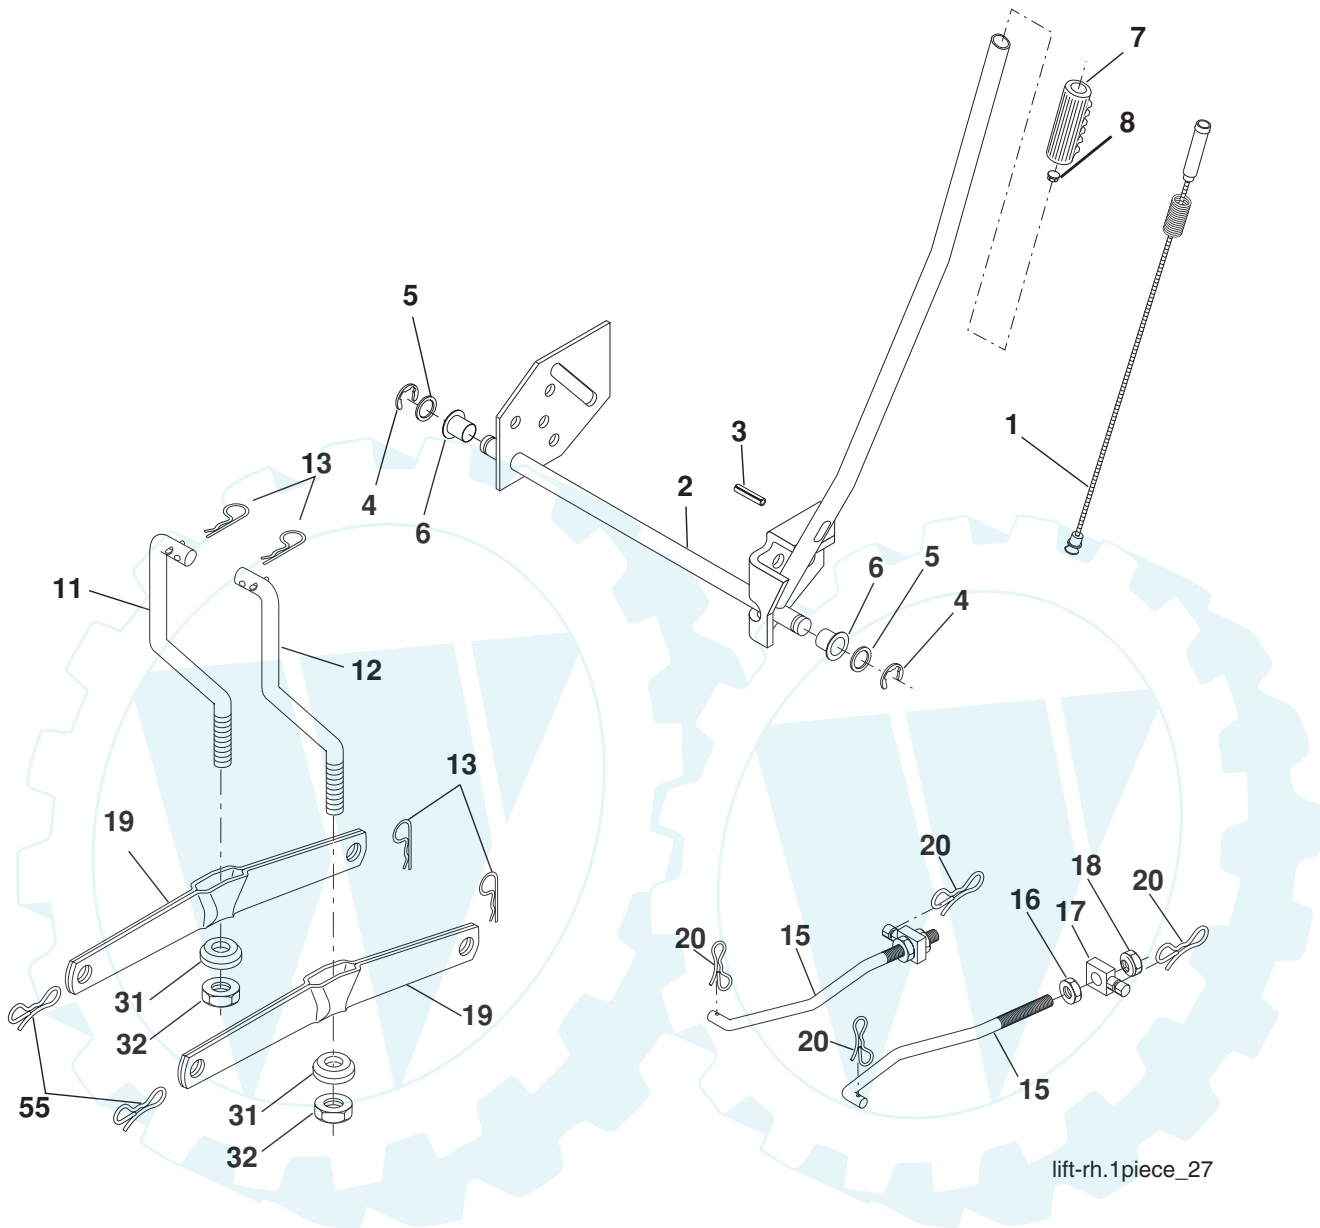

lift-rh.1piece_27

KEY NO.	PART NO.	DESCRIPTION
1	532 19 84-17	Wire Asm Inner/Spring W/plunger
2	532 19 80-70	Shaft Asm Lift
3	532 18 88-22	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer PLTD 21/32 x 1 x 21 Ga.
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 10 94-13	Grip Handle
8	532 12 45-26	Button Plunger Black
11	532 13 98-65	Link Lift LH
12	532 13 98-66	Link Lift RH
13	532 12 46-70	Retainer Spring

KEY NO.	PART NO.	DESCRIPTION
15	532 17 32-88	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 unc
17	532 17 56-89	Trunnion
18	873 80 08-00	Nut Lock W/wsh 1/2-13 unc
19	532 13 98-68	Arm Suspension Rear
20	532 19 42-09	Spring, Retainer
31	532 16 98-65	Bearing Pvt. Lift
32	873 54 06-00	Nut Crownlock 3/8-24
55	532 19 42-08	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm