


REPAIR PARTS


14 H.P. HYDROSTATIC YARD TRACTOR

SCHEMATIC

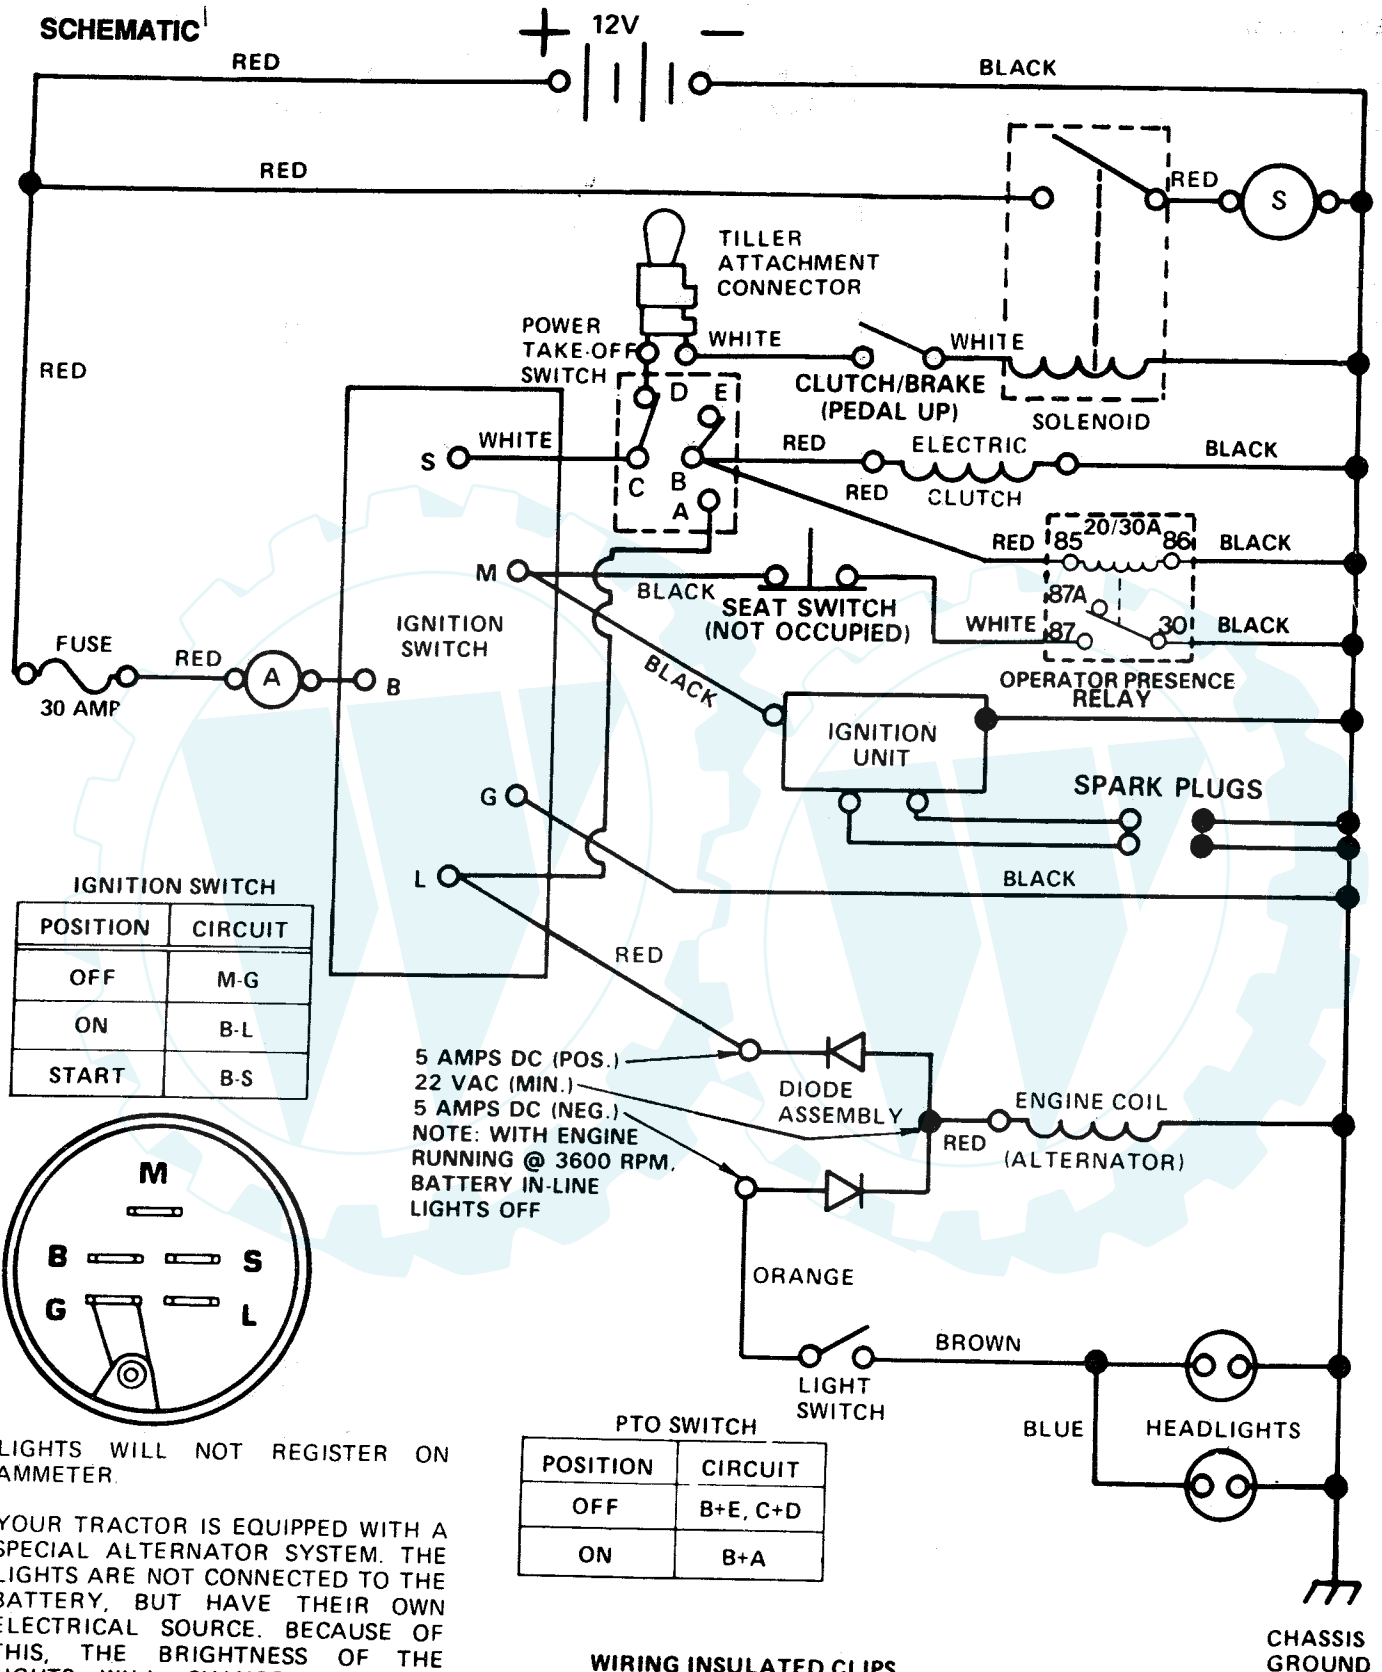

IGNITION SWITCH

POSITION	CIRCUIT
OFF	M-G
ON	B-L
START	B-S

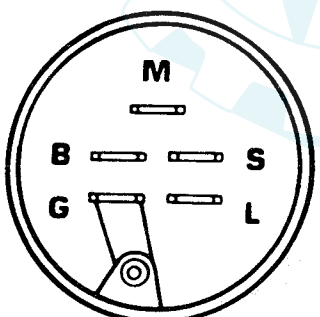

LIGHTS WILL NOT REGISTER ON AMMETER.

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH THE ENGINE SPEED. AT IDLE SPEED THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

5 AMPS DC (POS.)
22 VAC (MIN.)
5 AMPS DC (NEG.)
NOTE: WITH ENGINE RUNNING @ 3600 RPM, BATTERY IN-LINE LIGHTS OFF

PTO SWITCH

POSITION	CIRCUIT
OFF	B+E, C+D
ON	B+A

WIRING INSULATED CLIPS


NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

- Removable Connectors
- Non-removable connections

REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

ELECTRICAL

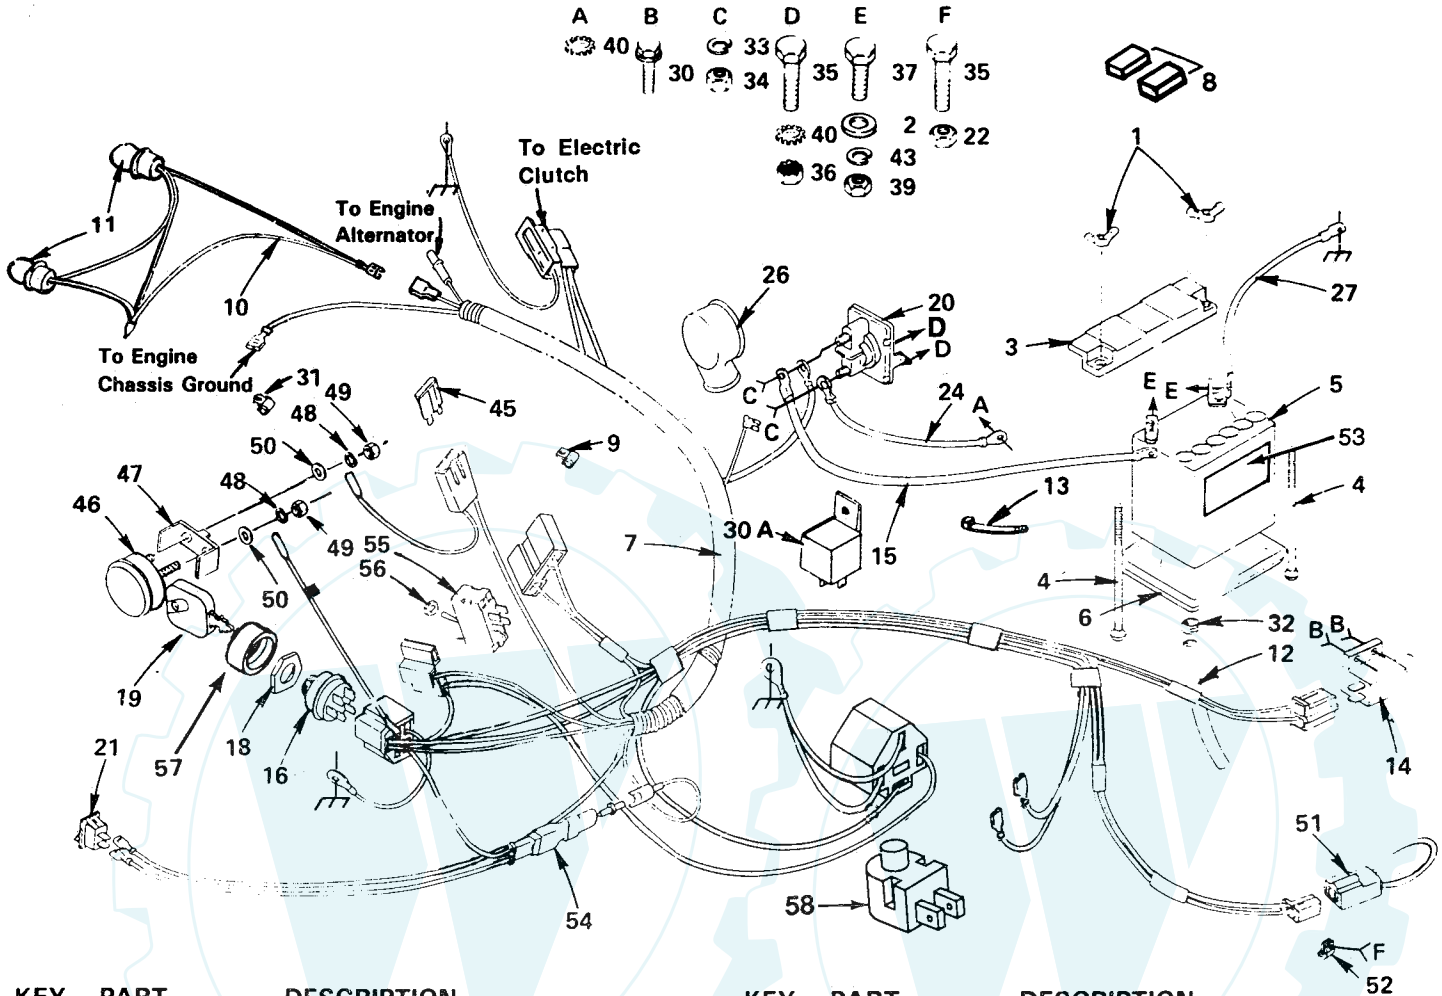

KEY NO.	PART NO.	DESCRIPTION
1	123198X	*Wing Nut 1/4-20
2	19091016	Washer 9/32 x 5/8 x 16 Ga.
3	102476X	Guard-Terminal
4	72240460	Battery Bolt (Bolt-Carriage, Rd. Hd. Sq. Neck 1/4-20 x 7-1/2)
5	121537X	Battery
6	7603J	Battery Tray
7	121534X	Harness-Ignition
8	121264X	Caps, Battery
9	4171R	Insulated Clip
10	110859X	Harness-Light Socket
11	7662J	Bulb-Light
12	100541K	Tube-Battery Tray
13	7192J	Cable Tie
14	104445X	Switch - Interlock - Clutch
15	4206J	Cable-Battery (Battery-to Solenoid)
16	4406R	Ignition Switch
18	109788X	Nut-Ignition
19	109434X	Key
20	109081X	Solenoid
21	110712X	Switch-Light
22	73680400	Nut-Hex 1/4-20
24	4799J	Cable-Battery (Solenoid to Starter)
26	719J	Terminal Cover (For Solenoid)
27	4207J	Cable-Battery (Battery to Ground)
30	17021008	Screw-Tap. Hex Hd. No. 10-24 UNC x 1/2 Type T
30A	109748X	Relay
31	2751R	Clip-Fuel Line
32	109596X	Clamp-Hose
33	10090400	Lockwasher 1/4

KEY NO.	PART NO.	DESCRIPTION
34	73350400	*Nut-Hex Jam 1/4-20
35	74780408	*Bolt-Hex 1/4-20 x 1/2 Gr. 5
36	73510400	Nut-Keps, Hex 1/4-20
37	74760412	*Bolt-Hex 1/4-20 x 3/4
39	73220400	*Nut-Hex 1/4-20
40	11050400	Washer-Lock 1/4 Ext. Tooth
43	10040400	*Lockwasher 1/4
45	108824X	Fuse-30 Amp.
46	9433R	Ammeter
47	6009J	Bracket-Ammeter
48	10101000	Lockwasher No. 10
49	73911000	Nut
50	19070818	Washer 7/32 x 1/2 x 18 Ga.
51	102501X	Loop-Wire
52	235R	Clip-Insulated
53	121549X	Decal-Battery
54	106315X	Diode Assembly
55	4021J	Switch PTO
56	4022J	Nut-Hex
57	109787X	Bezel, Ignition
58	121305X	Switch, Seat
---	123845X	Sheet Instruction, Tractor 15 Slope (English)
----	123846X	Sheet Instruction, Tractor 15 Slope (French)
---	123845X	Owners Manual (English)
----	121699X	Owners Manual (French)


*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR


CHASSIS AND ENCLOSURES

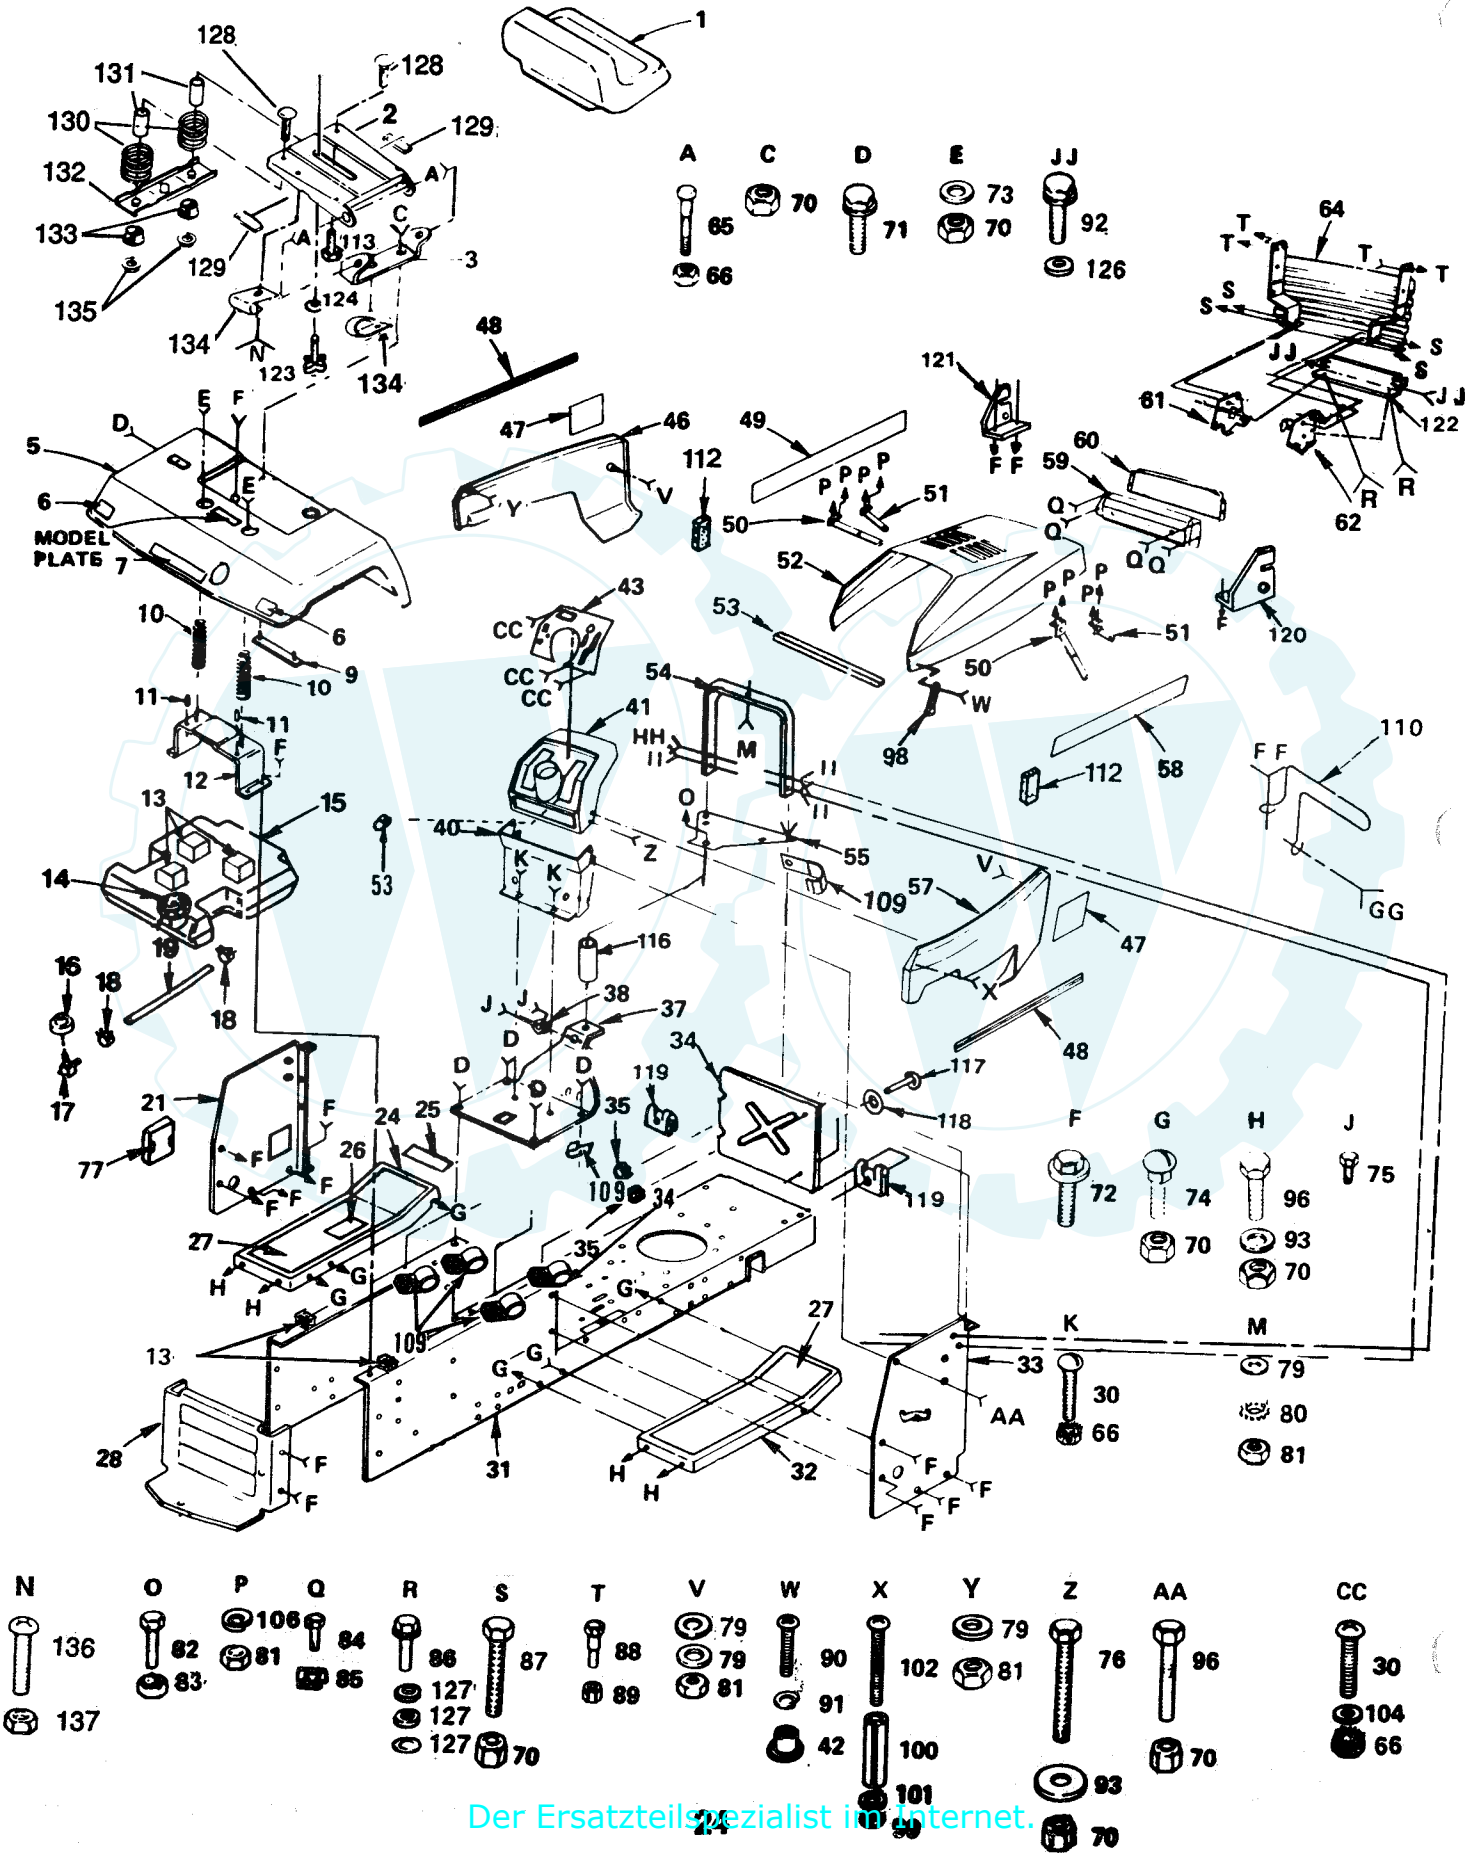

REPAIR PARTS 14 H.P. HYDROSTATIC YARD TRACTOR

CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	110840X	Seat			
2	121247X	Pan - Seat	70	73680600	Nut - Crownlock 3/8 - 16
3	105513X	Bracket - Pivot, Seat	71	17490608	Screw - Hex Washer Thread Rolling 3/8 - 16 x 1/2
5	121642X388	Fender	72	17490612	Screw - Hex Washer Thread Rolling 3/8 - 16 x 3/4
6	106202X	Reflector - Rear	73	19131614	Washer 13/32 x 1 x 14 Ga.
7	121586X	Decal - Fender	74	72140606	Bolt - Carriage 3/8 - 16 x 3/4
8	121068X	Spring - Compression L.H.	75	17431008	Screw - Hex Self Tapping No. 10 - 16 x 1/2
9	105511X	Strap - Fender			
10	121067X	Spring - Compression R.H.	77	121794X	Cover - Access
11	105531X	Nut - Push	79	19091216	Washer 9/32 x 3/4 x 16 Ga.
12	105509X	Bracket - Fender	80	11050400	*Washer - Lock 1/4
13	6431J	Pad - Spacer	81	73220400	*Nut - Hex 1/4 - 20
14	121221X	Cap - Fuel	82	74780512	*Bolt - Hex 5/16 - 18 x 3/4 Gr. 5
15	106020X	Tank - Fuel	83	73510500	Nut - Keps 5/16 - 18
16	3645J	Bushing	84	17211010	Screw - Hex Head Washer Hd, Tap. No. 10 - 16 x 5/8
17	8710J	Stem - Tank, Fuel	85	104755X	"J" Fastener
18	6999R	Clamp - Hose	86	17490512	Screw - Hex Washer Thread Rolling 5/16 - 18 x 3/4
19	5277J	Line - Fuel	87	74760616	Bolt - Hex 3/8 - 16 x 1
20	19143210	Spacer - Washer	88	7605J	Bolt - Shoulder 1/4 - 20
21	105523X	Panel - Dash, L.H.	89	73680400	Nut - Lock 1/4 - 20
24	105465X	Footrest - L.H.	90	74191008	Screw - Pan Hd. Machine No. 10-24 x 1/2
25	101892X	Decal - Clutch/Brake (YTH 16OCT only)	91	10071000	Washer - Lock No. 10
26	121215X	Decal - Drive Belt	92	17190412	Scr. Thrd. Roll 1/4 - 20 x 3/4
27	109864X	Pad - Footrest	93	19131312	Washer 13/32 x 13/16 x 12 Ga.
28	121306X	Drawbar	96	74760612	Bolt - Hex 3/8 - 16 x 3/4
29	109219X	Deflector - Debris	98	109808X	Latch - Hood
30	74180512	Screw - Mach. Cr. Thd. 5/16 - 18 x 3/4	99	73731000	Nut - Keps 10-24
31	121278X	Chassis	100	7206J	Spacer - Split 10 x 3/4
32	105464X	Footrest - R.H.	101	19070818	Washer 7/32 x 1/2 x 18 Ga.
33	110828X	Panel - Dash, R.H.	102	74981020	Screw - Mach. Cr. Pan 10-24 x 1 - 1/4
34	108105X	Baffle - Rear Lower	104	19111116	Washer 11/32 x 11/16 x 16 Ga.
35	110436X	Grommet, Split	106	10090400	Washer - Lock 1/4
37	121195X	Saddle	109	2751R	Clip
38	1554J	Bushing - Steering	110	108885X	Guard - Muffler
40	104805X	Dash Assembly - Lower	111	19131616	Washer 13/32 x 1 x 16 Ga.
41	121312X	Dash	112	109459X	Strip - Foam
42	2029J	Nut - Weld	113	121144X	Bolt - Hex Finish 5/16 x 16 x 1
43	121723X011	Plate - Dash	116	121236X	Spacer
46	108372X388	Panel - Side, L.H.	117	105751X	Stud 1/4 Turn
47	123841X	Decal - Side Panel, 14 HP	118	105838X	Retainer 1/4 Turn
48	121589X	Decal - Strip, Hood	119	105839X	Receptacle 1/4 Turn
49	121587X	Decal - Hood, L.H.	120	110853X	Bracket Assembly R.H.
50	106784X	Strap Assembly - Hinge, Rear	121	110852X	Bracket Assembly L.H.
51	104618X	Strap Assembly - Hinge, Front	122	105419X	Strap - Grill
52	108370X388	Hood	123	120068X	Adjustment Knob
53	109458X	Strip - Foam, 18"	124	19171912	Washer 17/32 x 1 - 1/16 x 20 Ga.
54	110829X	Support Assembly - Dash	125	11050600	Lockwasher 3/8 Ext. Tooth
55	106965X	Plate - Support, Battery	126	11030400	Lockwasher 1/4
57	108371X388	Panel - Side, R.H.	127	19111216	Washer, 11/32 x 3/4 x 12
58	121588X	Decal - Hood, R.H.	128	72170410	Bolt, Carr. 1/4-20 x 1-1/4
59	104613X	Bezel Assembly	129	121251X	Foam, Strip
60	106395X	Lens	130	121250X	Spring, Compression
61	110855X	Support - Grill, L.H.	131	121249X	Spacer, Split
62	110854X	Support - Grill, R.H.	132	121246X	Bracket, Switch
63	104634X	Strap - Grill	133	121248X	Bushing, Snap
64	122100X	Grill Assembly	134	4171R	Clip, Insulated
65	105529X	Bolt - Shoulder 5/16 - 18	135	73900400	Nut, Lock 1/4 - 20
66	73680500	Nut - Lock 5/16 - 18	136	71031012	Scr. HS. Wash 10 - 32 x 3/4
			137	73951000	Nut, Keps #10 - 32

 


REPAIR PARTS

www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR

DRIVE /

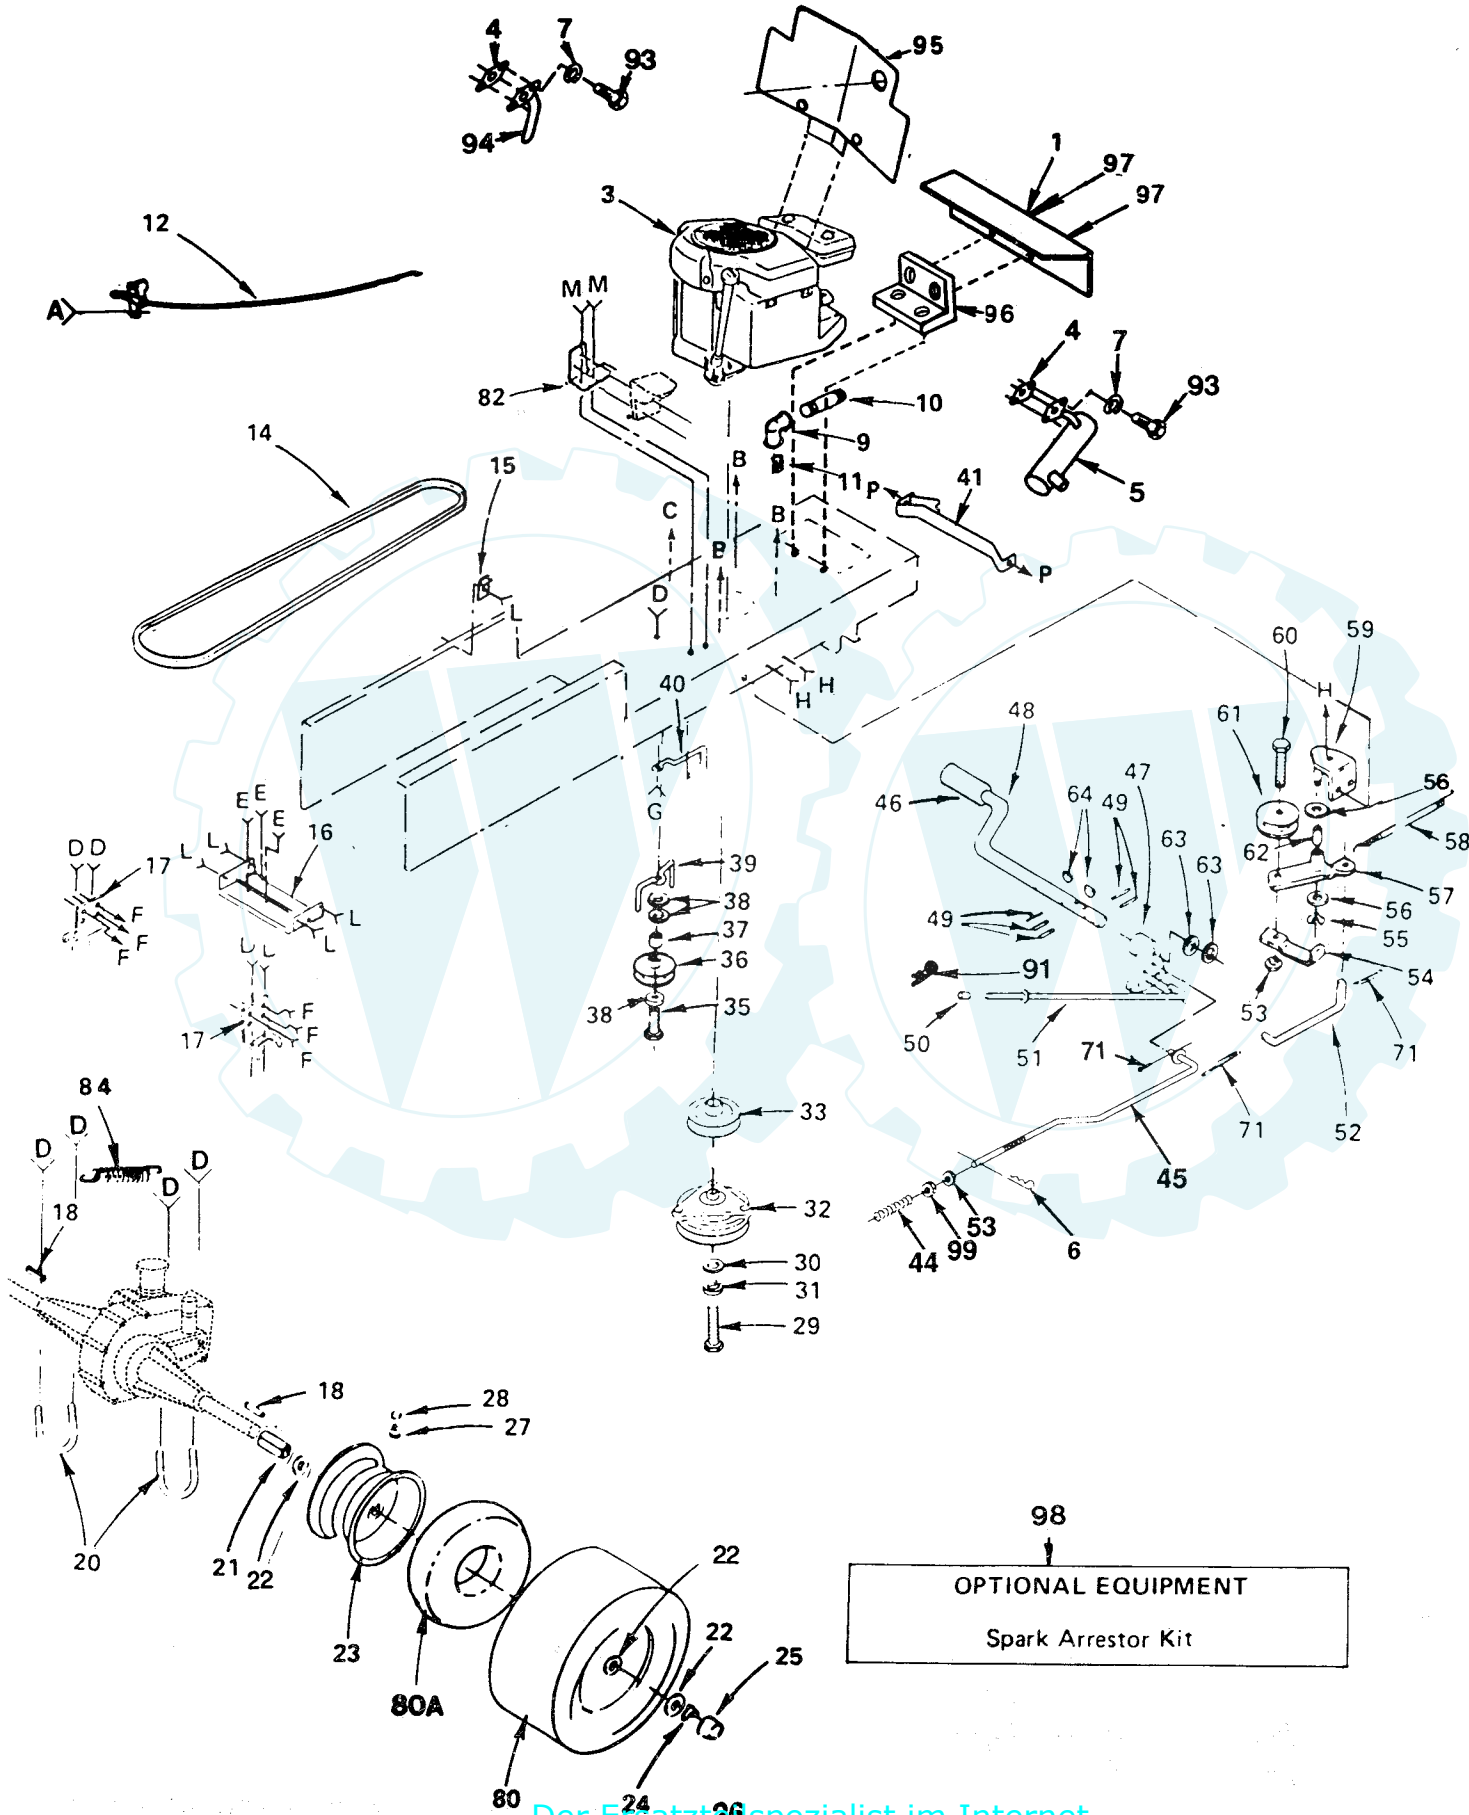


REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

DRIVE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	110012X	Baffle - Vertical	50	71673	Cap
2	9151R	Grommet	51	105844X	Rod, Brake, Park
3	---	Engine 14 H.P. Model Number 400707 Type Number 1211 - 01	52	105710X	Link, Clutch
4	8545J	Gasket	53	73680600	Nut, Lock, 3/8 - 16
5	108373X	Muffler	54	106499X	Retainer, Belt
6	4497H	Clip, Hairpin	55	12000039	Klip Ring
7	10040400	*Washer, Lock 1/4	56	110812X	Washer, Hardened
8	17210806	Screw - Hex Hd. No. 8 - 32 x 3/8	57	105707X	Bellcrank Assembly (Incl. Key No. 62)
9	13200300	Coupling, Pipe, Std. 3/8 - 18 NPT Elbow - 90°, 3/8 - 18 NPT	58	105709X	Spring, Return, Clutch
10	13280336	Nipple, Pipe	59	105724X	Bracket, Clutch
11	91084	Plug - 1/4	60	74760624	*Bolt, Hex, 3/8 - 16 x 1-1/2
12	121524X	Control, Throttle	61	106298X	Pulley, Idler
14	108103X	V-Belt, Drive	62	105706X	Bearing
15	2751R	Clip	63	121749X	Washer, 25/32 x 1-1/4 x 16 Ga.
16	121187X	Plate, Transaxle Support	64	2228M	*Key, Woodruff No. 9
17	121191X	Bracket, Transaxle	65	17080408	Screw, Hex Thread Cut. 1/4 - 20 x 1/2
18	2703J	Key - Square 1/4 x 2	66	17490624	Bolt, Hex Washer Thd. Rolling 3/8 - 16 x 1 - 1/2
19	73510600	Nut - Keps 3/8 - 16	67	11050600	Washer - Lock Ext. Tooth 3/8
20	121189X	U-Bolt, 3/8 - 16 x 2-3/4	68	74760612	*Bolt, Hex 3/8 - 16 x 3/4
21	121199X	Spacer, Split	69	74760616	*Bolt, Hex 3/8 - 16 x 1
22	121748X	Washer, 1-1/32 x 1-5/8 x 16 Ga.	70	72140606	*Bolt, Carr., 3/8 - 16 x 3/4
23	106108X	Rim - Rear - 8"	71	76020412	Pin, Cotter, 1/8 x 3/4
24	12000001	E-Ring	79	10040600	*Washer - Lock 3/8
25	104757X	Cap, Hub, Rear	80	122082X	Tire - 20 - 10.00 x 10 Rear
27	65139	Stem, Valve	80A	7152J	Tube (not furnished with tractor)
28	59192	Cap, Valve	82	108236X	Bracket - Switch
29	74610764	Bolt, Hex 7/16 - 20 x 4	83	17021008	Screw - Tap. Hex Hd. No. 10 - 24 x 1/2 Type T
30	19152405	Washer, 15/32 x 1 - 1/2 x 5 Ga.	84	110442X	Brake Return Spring
31	10040700	*Washer, Lock 7/16	88	19091016	*Washer 9/32 x 5/8 x 16 Ga.
32	108218X	Clutch - Electric	89	72140506	Bolt - Rd. Hd. Sq. Nk. 5/16 - 18 x 3/4
33	109841X	Pulley - Engine	90	73680500	Nut - Lock 5/16 - 18
35	74760644	*Bolt, Hex 3/8 - 16 x 2-3/4	91	4921H	Spring - Retainer
36	4859J	Idler, Flat			5/16 - 18 x 1/2 Ty TT
37	4470J	Spacer	93	74780412	Bolt - Hex 1/4 - 20 x 3/4
38	19131312	Washer, 13/32 x 13/16 x 12 Ga.	94	100229L	Tube Assembly - Exhaust
39	105730X	Keeper, Belt			
40	121218X	Keeper, Belt, Engine, L.H.	95	104917X	Baffle - Vertical
41	109169X	Clutch Retainer Assembly	96	110013X	Bracket Heat Shield
44	106888X	Spring - Rod, Brake	97	17490508	Bolt - Hex Thd. Cutting 5/16 - 18 x 1/2
45	121200X	Rod, Brake			
46	8883R	Cover, Pedal	98	100091M	Spark Arrester Screen
47	106918X	Arm, Brake	99	73350600	Nut Hex. Jam 3/8 x 16 UNC
48	109037X	Shaft, Foot Pedal			
49	1572H	*Pin, Roll, 3/16 x 1			

*STANDARD HARDWARE--PURCHASE LOCALLY

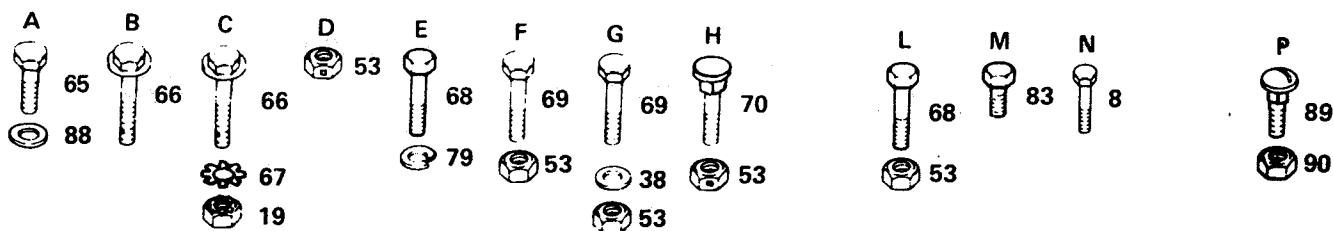

14 H.P. HYDROSTATIC YARD TRACTOR

STEERING ASSEMBLY

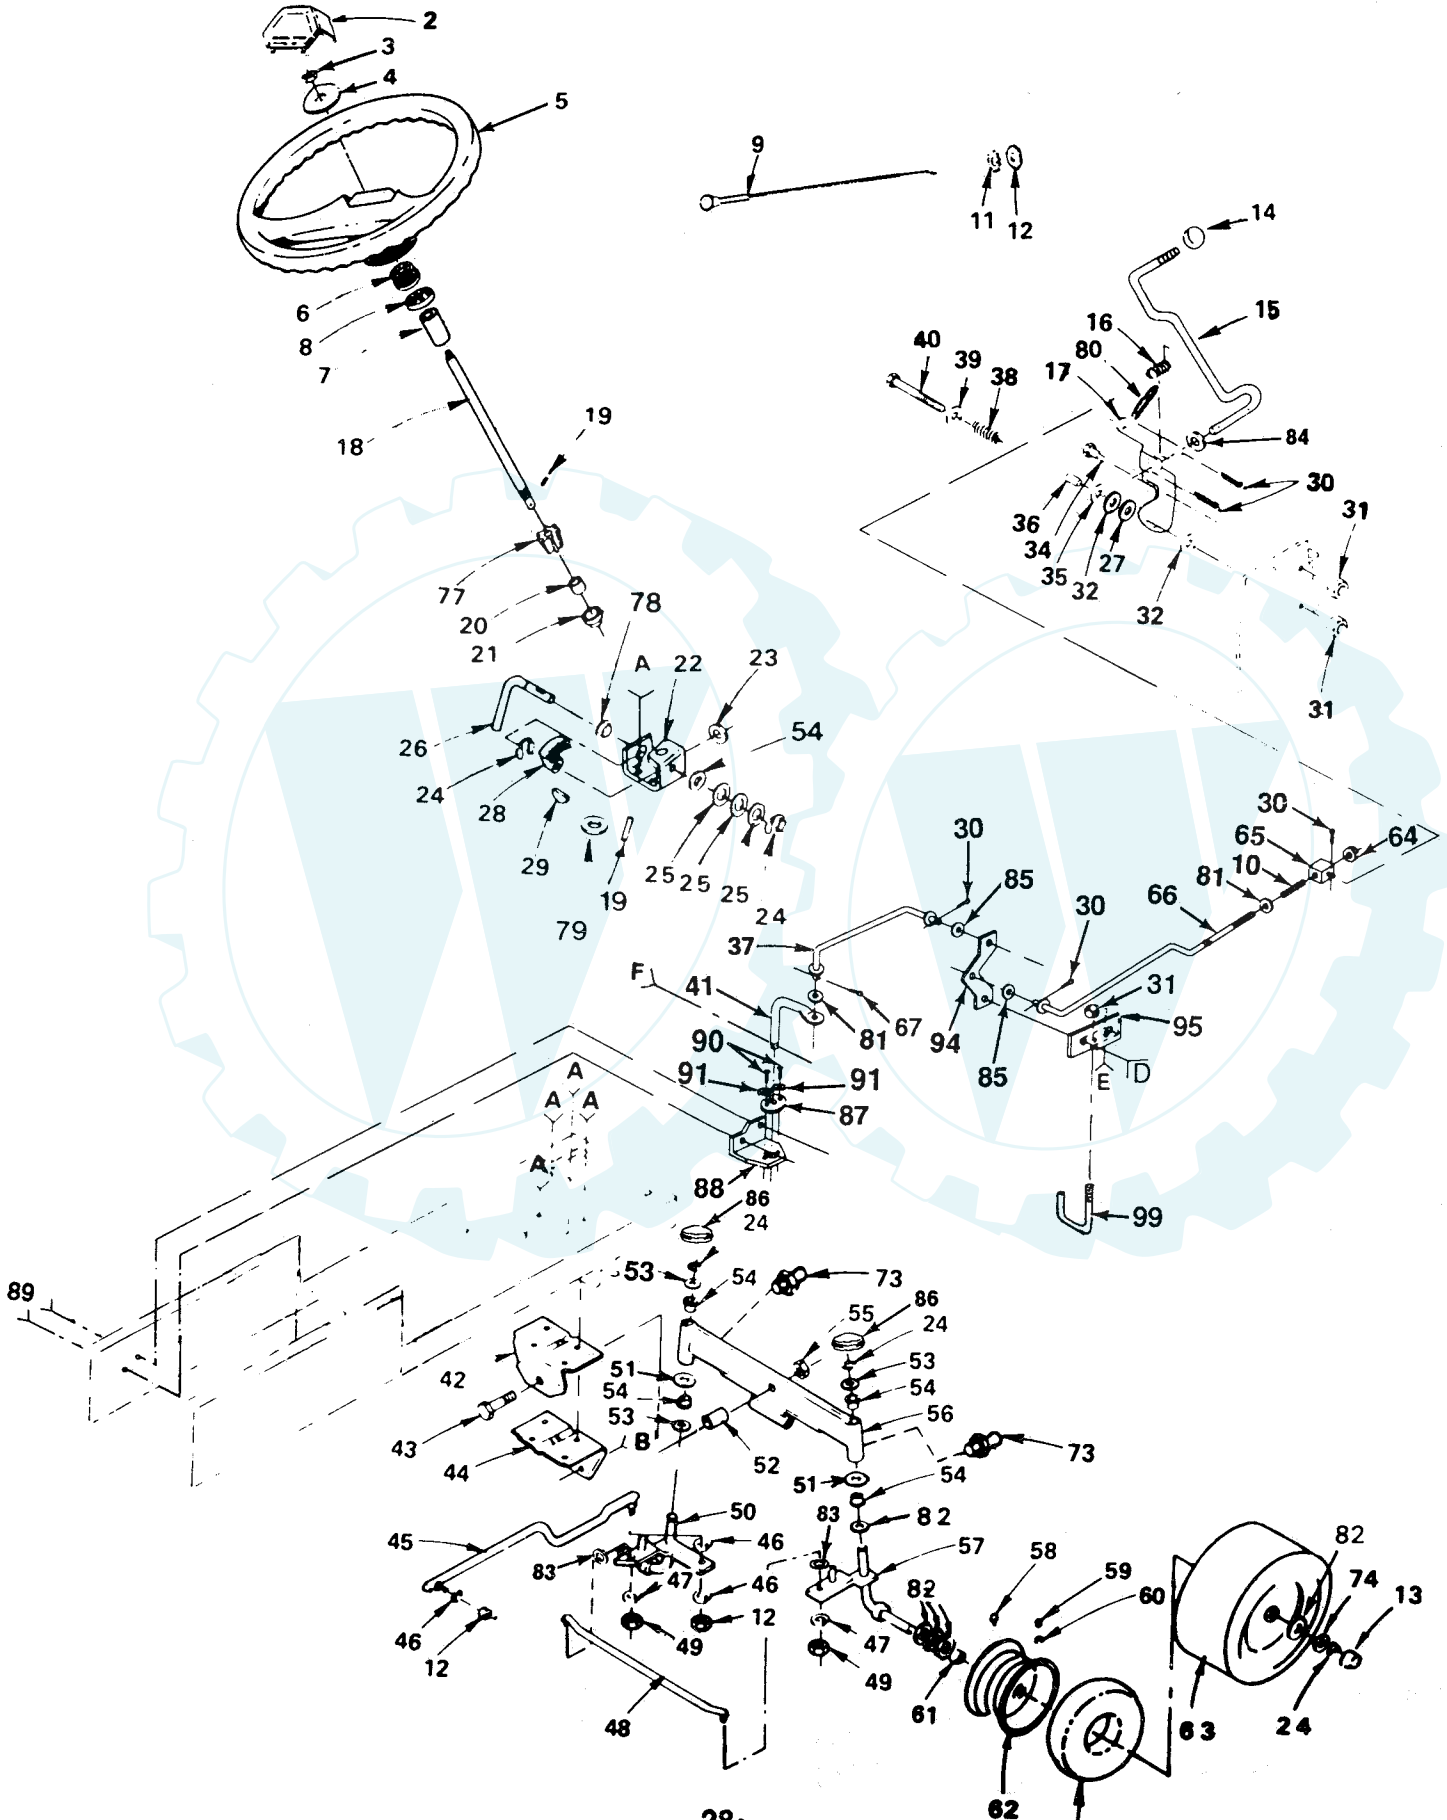


REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
2	121584X	Insert - Steering Wheel	48	121334X	Rod - Tie
3	73940800	*Nut - Hex 1/2 - 20	49	73810500	*Nut - Hex 5/16 - 24
4	100712K	Washer	50	105656X	Spindle - L.H.
5	121472X	Wheel - Steering	51	19272016	Washer 27/32 x 1 - 1/4 x 16 Ga.
6	100711L	Adapter - Steering Wheel	52	110438X	Spacer
7	106945X	Tube - Steering Shaft	53	6266H	Hardened Washer
8	106943X	Spacer - Shaft, Steering	54	3366R	Bearing
9	122232X	Control - Choke	55	73901000	Nut - Lock - Flange 5/8 - 11
10	102670X	Spring - Compression	56	108075X	Axle - Front
11	11050600	Washer - Lock, Ext. Tooth 3/8	57	105654X	Spindle - R.H.
12	73610600	*Nut - Hex 3/8 - 24	58	278H	Fitting - Grease
13	104757X	Cap - Hub - Front	59	65139	Stem - Valve
14	121274X	Knob - Control	60	59192	Cap - Valve
15	121201X	Rod - Control	61	9040H	Bearing
16	121631X	Spring - Torsion	62	106732X	Rim - 6" Front
17	108196X	Bracket - Control Rod	63	106222X	Tire - Front
18	109557X	Shaft - Steering	63A	59904	Tube - Tire - Front (not furnished with tractor)
19	2882J	Pin - Drive 3/16 x 1	64	73800600	*Nut - Toplock
20	74580	Spacer	65	108212X	Trunnion
21	71208	Bushing	66	121750X	Rod - Adjustable Control
22	109432X	Bracket - Steering	67	4497H	Clip, Hairpin
23	19212016	Washer 21/32 x 1 - 1/4 x 16 Ga.	71	17490508	Screw - Hex Washer Thread Rolling 5/16 - 18 x 1/2
24	12000029	Klip Ring	73	6855M	Fitting - Grease
25	6266H	Bearing - Thrust	74	121748X	Washer 25/32 x 1 - 5/8 x 16 Ga.
26	108683X	Rod - Steering	77	108685X	Gear - Pinion
27	108972X	Washer - Phenolic	78	109816X	Nyliner, Snap - In
28	108684X	Gear - Sector	79	101930X	Washer - Hardened
29	106126X	Key - Woodruff	80	4921H	Retainer Spring
30	76020412	Pin - Cotter 1/8 x 3/4	81	19131212	Washer, 13/32 x 3/4 x 12 Ga.
31	73680600	Nut - Lock 3/8 - 16	82	121749X	Washer, 25/32 x 1-1/4 x 16 Ga.
32	108200X	Washer - Friction	83	19111216	Washer 11/32 x 3/4 x 16 Ga.
34	108518X	Bolt - Hex Shoulder 3/8 - 16 x 1 - 3/8	84	19151516	Washer 15/32 x 15/16 x 16 Ga.
35	19212016	Washer 21/32 x 1 - 1/4 x 16 Ga.	85	110739X	Washer Spring
36	108201X	Spacer	86	121232X	Cap Spindle
37	121202X	Link - Control	87	121217X	Guide Control
38	108844X	Spring - Compression	88	121216X	Bracket Control Guide
39	19132012	Washer 13/32 x 1 - 1/4 x 12 Ga.	89	17490512	Scr. Hex Wsh. Thdrol 5/16 - 18 x 3/4 TYTT
40	74760648	*Bolt - Hex 3/8 - 16 x 3	90	17021008	Scr. Tap Hex Hd. #10-24 Inc. x 1/2 TYTT.
41	121209X	Arm Assembly - Pump Control	91	19070816	Washer 7/32 x 1/2 x 16 Ga.
42	105663X	Support - Saddle - Rear	92	71011012	Bolt 10 - 24 3/4
43	74761060	Bolt - Hex 5/8 - 11 x 3 - 3/4	93	73661000	Nut 10 - 24
44	105664X	Support - Saddle - Front	94	121204X	Bellcrank
45	105727X	Link Drag	95	121206X	Bracket Bellcrank Pivot
46	10040600	*Lockwasher 3/8	96	100536K	Bolt Shoulder
47	10040500	*Washer - Lock 5/16	97	74760612	Bolt Fin Hex 3/8 Inc. 16 x 3/4
			98	73680500	Nut Crownlock 5/16 - 18
			99	121190X	Keeper, Centerspan


*STANDARD HARDWARE--PURCHASE LOCALLY

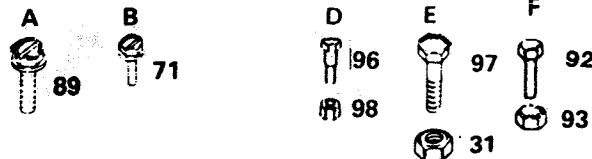

REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

LIFT ADJUSTMENT

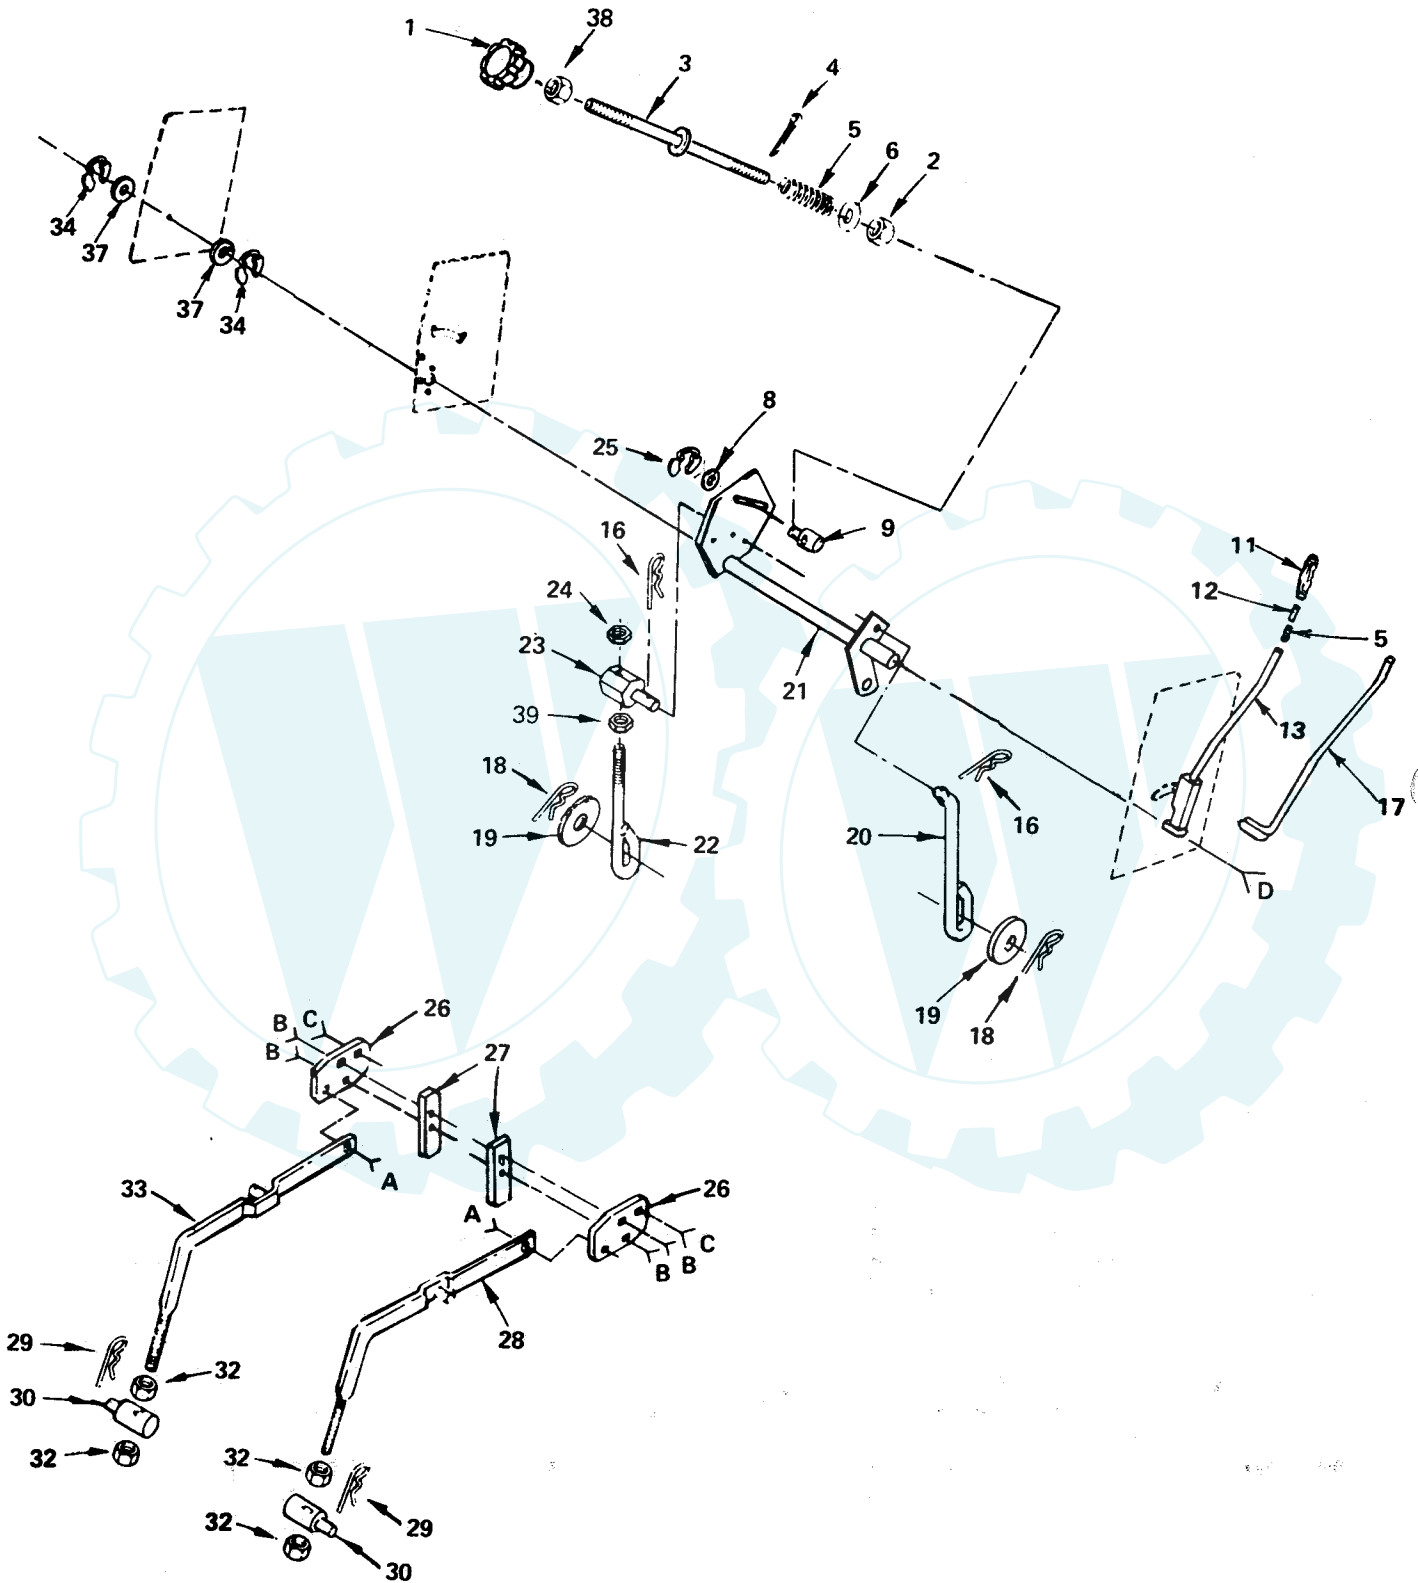


REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

LIFT ADJUSTMENT

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	121891X	Knob, Depth Adjustment	20	110029X	Link - Lift
2	110807X	*Nut - Hex Special	21	121001X	Shaft - Lift
3	110729X	Rod - Adjust - Lift	22	110448X	Link - Lift - Adjust
4	76020308	Pin - Cotter 3/32 x 1/2	23	110447X	Trunnion - Lift
5	2876H	Spring	24	73710700	Nut - Lock 7/16 - 20 UN F
6	19131016	Washer 13/32 x 5/8 x 16 Ga.	25	12000037	Klip Ring
7	73680600	Nut - Lock 3/8 - 16	26	105864X	Bracket - Suspension
8	19151216	Washer 15/32 x 3/4 x 16 Ga.	27	121252X	Upstop - Mower
9	110810X	Trunnion	28	121600X	Arm - Suspension - R.H.
10	105848X	Bolt - Shoulder 3/8 - 16	29	9135R	Retainer - Spring
11	109413X	Grip - Handle	30	106308X	Trunion - Lift - Lower
12	105723X	Plunger - Lever	32	73220800	*Nut - Hex Fin. 1/2 - 13
13	121004X	Lever - Lift (Includes Key No. 17)	33	121601X	Arm - Suspension - L.H.
14	110739X	Spring Washer	34	12000022	E-Ring
15	73980600	Center Lock Flangenut 3/8 x 16	35	72140608	Bolt - Carriage 3/8 - 16 x 1
16	4939M	Retainer - Spring	36	72140606	* Bolt - Carriage 3/8 - 16 x 3/4
17	121006X	Rod - Lever	37	19292016	Washer 29/32 x 1 - 1/4 x 16 Ga.
18	4921H	Retainer - Spring	38	73350600	Nut - Hex Jam 3/8 - 16
19	19171516	Washer 17/32 x 15/16 x 16 Ga.	39	73 36 0700	Nut - Hex Jam 7/16 - 20
			40	74780624	Bolt - Hex 3/8 - 16 x 1 - 1/2


*STANDARD HARDWARE--PURCHASE LOCALLY

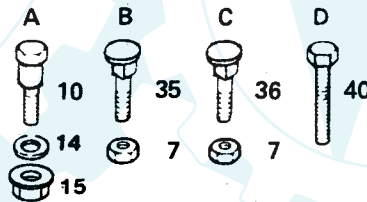

REPAIR PARTS

www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR MOWER

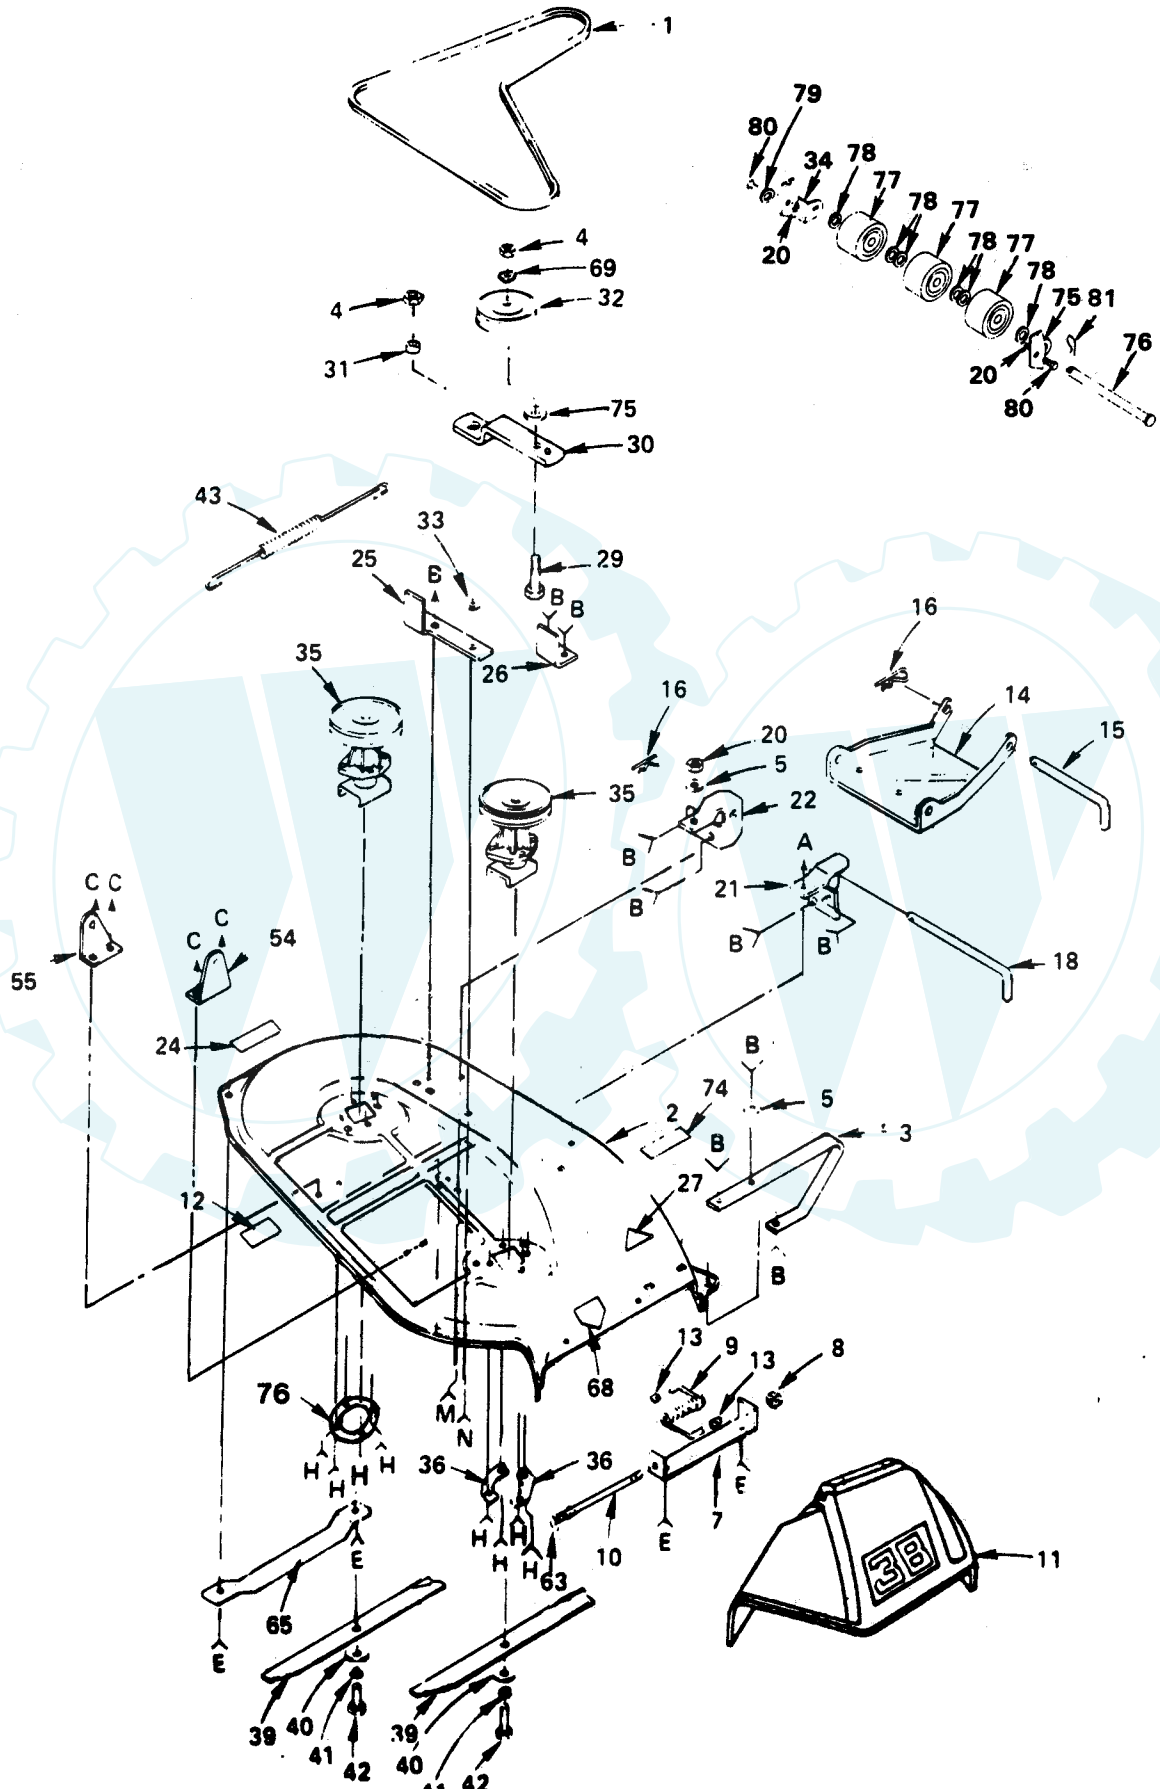


REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

MOWER

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	106085X	V-Belt	37	17490612	Screw, Hex Washer Hd. 3/8 - 16 x 3/4
2	108672X	Housing	39	121263X	Blade, 38"
3	8417J	Runner, R.H.	40	19132012	Washer 13/32 x 1-1/4 x 12 Ga.
4	73680600	Nut, Lock 3/8 - 16	41	10030600	Washer, Lock 3/8
5	19111216	Washer 11/32 x 3/4 x 16 Ga.	42	74610624	* Bolt, Hex 3/8 - 24 x 1-1/2 Gr. 5
6	72140505	Bolt, Carriage 5/16 - 18 x 5/8	43	102727X	Spring, Extension
7	105896X	Bracket, Deflector	50	72140606	* Bolt, Carriage 3/8 - 16 x 3/4
8	110452X	Nut	54	105857X	Bracket, Susp., Rear, R.H.
9	106734X	Spring, Deflector	55	108673X	Bracket, Susp., Rear, L.H.
10	106735X	Rod, Hinge	63	19111016	Washer 11/32 x 5/8 x 16 Ga.
11	106736X	Deflector, Shield	65	7631J	Runner, L.H.
12	108682X	Decal	67	72140610	Bolt, Carriage 3/8 - 16 x 1-1/4
13	105304X	Cap	68	121349X	Decal - Warning
14	105662X	Link, Parallel	69	19131316	Washer 13/32 x 13/16 x 16 Ga.
15	105744X	Pin - Hinge, Front	75	19131210	Washer 13/32 x 3/4 x 10 Ga.
16	4921H	Spring - Retainer	76	110445X	Plate, Support Mandrel
18	109835X	Pin - Hinge, Rear	77	109776X	Pin, Pivot
20	73680500	Nut, Lock 5/16 - 18	78	109729X	Roller, Nose
21	109598X	Bracket, Lift, R.H.	79	19151610	Washer 15/32 x 1 x 10 Ga.
22	109597X	Bracket, Lift, L.H.	80	19161616	Washer 1/2 x 1 x 16 Ga.
23	72140506	* Bolt - Carriage 5/16 - 18 x 3/4	81	74760512	Bolt, Hex 5/16 - 18 x 3/4
24	109820X	Instruction - Caution Decal	82	76020412	Cotter Pin 1/8 x 3/4
25	109503X	Support Arm	83	73680500	Nut, Lock 5/16 - 18
26	109504X	Stop, Deck, Front	84	109646X	Bracket, Nose Roller L.H.
27	---	** Decal - Safety Standard	85	109647X	Bracket, Nose Roller R.H.
29	74760637	* Bolt 3/8 - 16 x 2			
30	108674X	Arm, Idler			
31	106902X	Spacer			
32	121316X	Pulley, Idler			
33	106513X	Washer, Wear 1/16"			
35	121676X	Mandrel Assembly			
36	100668L	Plate, Support, Mandrel			

*STANDARD HARDWARE--PURCHASE LOCALLY
**NOT SERVICED

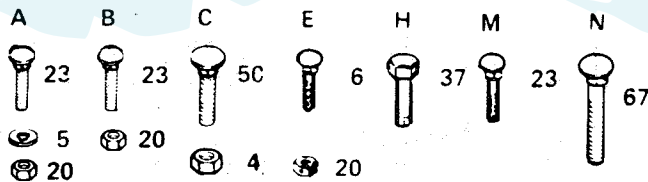


REPAIR PARTS

www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR

DIFFERENTIAL AND PUMP ASSEMBLY

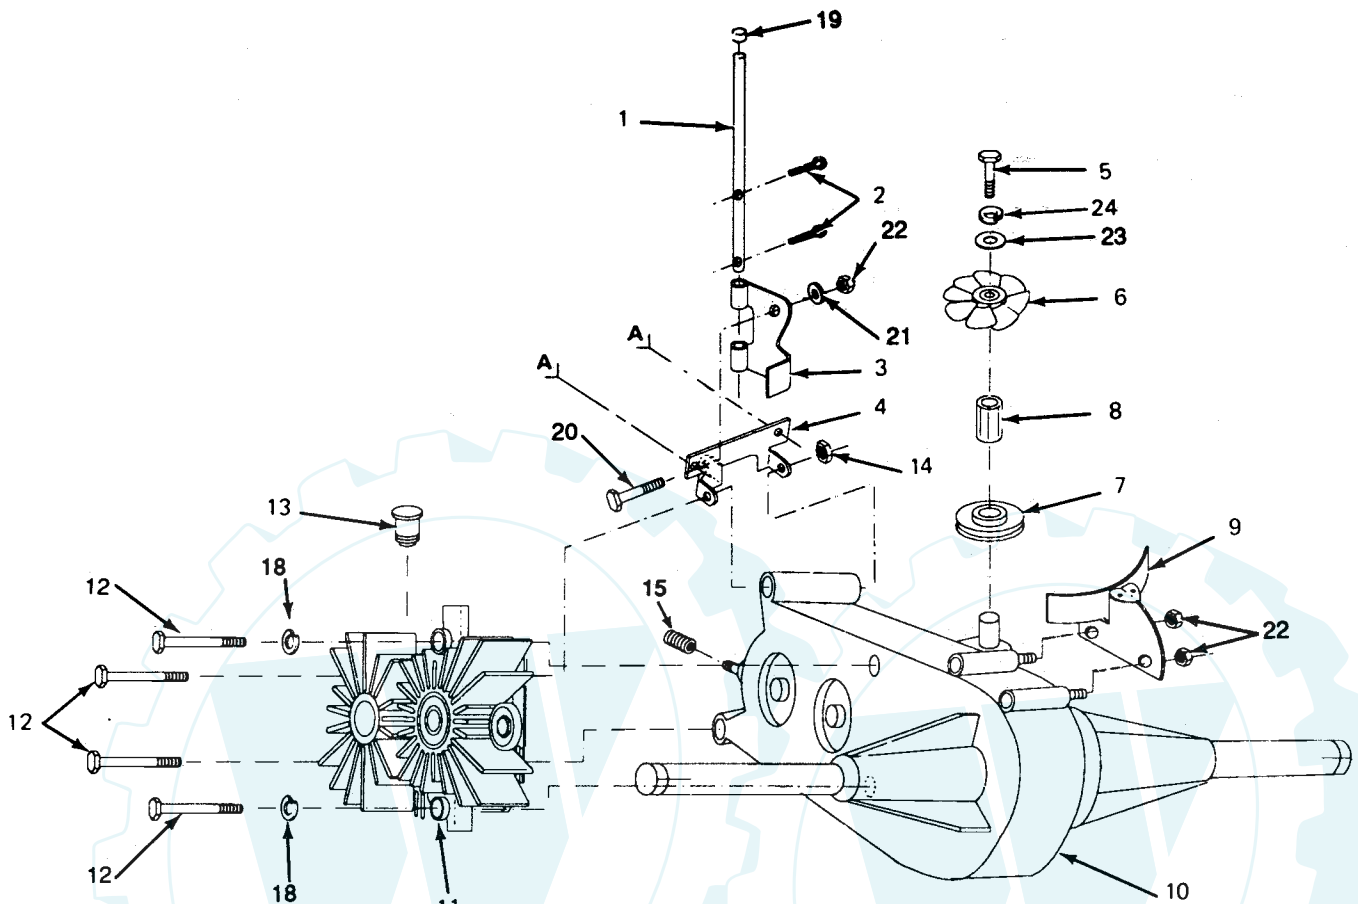


KEY NO.	PART NO.	DESCRIPTION
1	121192X	Rod, Free Wheel Control
2	76020312	Pin, Cotter 3/32 x 3/4
3	121193X	Control, Coast
4	121188X	Bracket, Pnt. Mounting Differential
5	74780412	Bolt, Hex Hd. 1/4" - 20 UNC x 3/4
6	121186X	Fan, Hydro 8"
7	121180X	Pulley, Transaxle
8	121211X	Standoff, Fan Hydro
9	121182X	Guard Assembly, Belt
10		Differential Assembly See pages 44 & 45
11		Pump Assembly See page 43
12	74760572	Bolt, Hex Fin. 5/16 - 18 UNC x 4.5
13	121323X	Reservoir Pump
14	73680500	Nut, Crown Lock 5/16 - 18
15	121250X	Spring, Compression
16	74760612	Bolt, 3/8 - 16 x 3/4
17	73680600	Nut 3/8 - 16 UNC
18	10040500	Lockwasher
19	71673	Cap
20	7605J	Bolt shoulder 1/4 - 20 UNC
21	120529X	Washer, nylon
22	73680400	Nut, Crown lock 1/4 - 20 UNC
23	19092016	Washer 9/32 x 1 - 1/4 x 16 ga.
24	10040400	Washer, Lock 1/4



REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR

PUMP

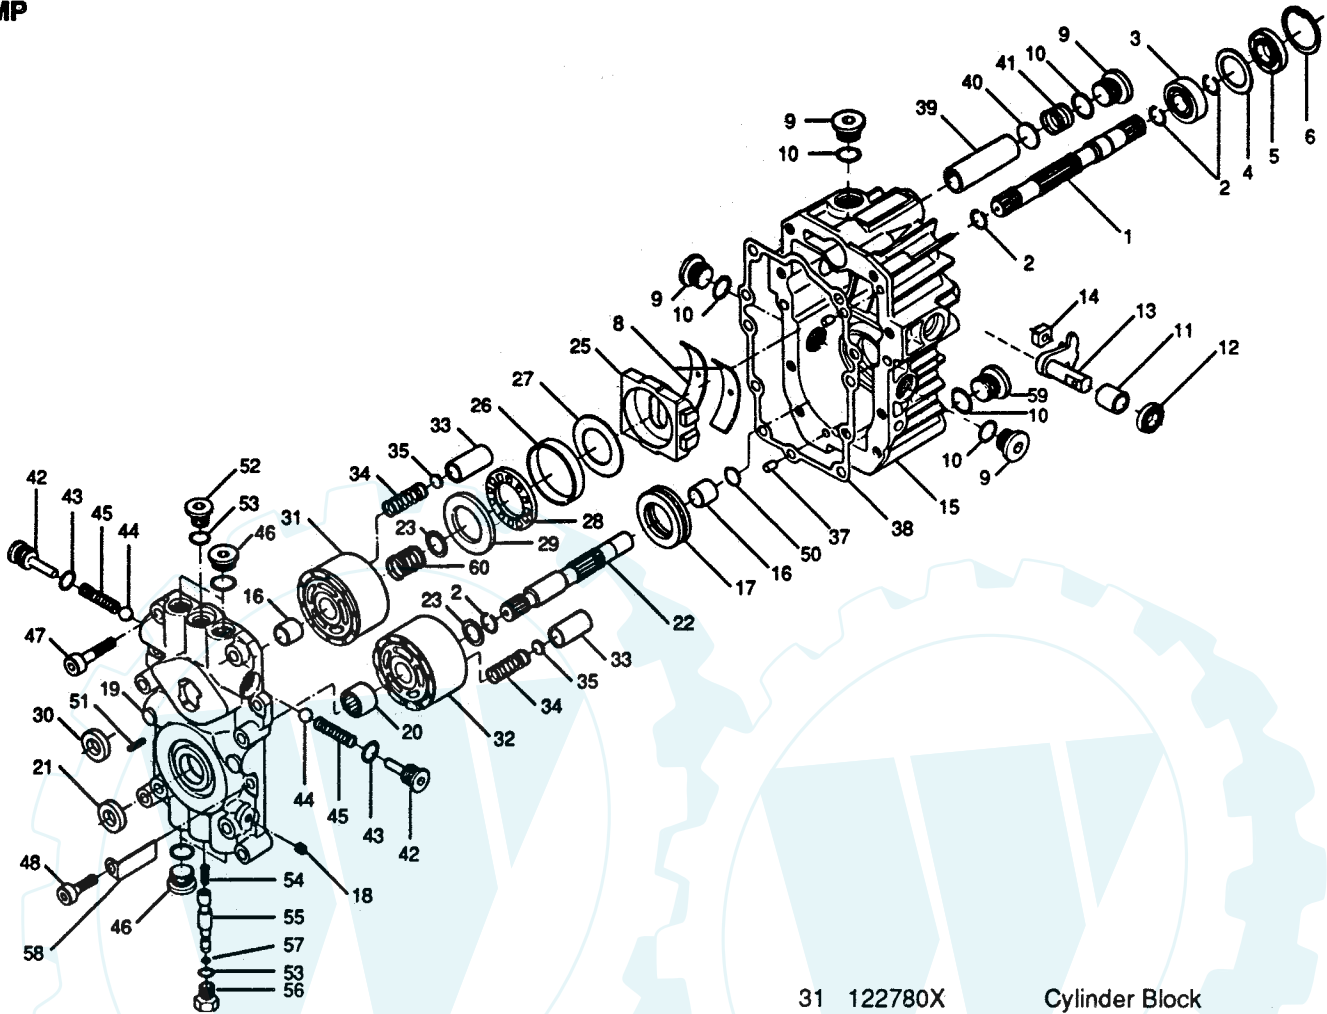


- | | | | | | |
|----|---------|-------------------------------|----|---------|---------------------------|
| 1 | 122756X | Shaft, Pump Splined 36T | 31 | 122780X | Cylinder Block |
| 2 | 122716X | Retaining Ring | 32 | 122781X | Cylinder Block |
| 3 | 122745X | Ball Bearing | 33 | 122782X | Piston |
| 4 | 122715X | Spacer | 34 | 122784X | Piston, Spring |
| 5 | 122700X | Seal, Lip, Pump Shaft | 35 | 122785X | Thrust Washer |
| 6 | 122699X | Retaining Pin | 37 | 122786X | Pin, Std. Hdls. |
| 8 | 122767X | Cradle Bearing | 38 | 122718X | Gasket |
| 9 | 122729X | Plug | 39 | 122731X | Filter |
| 10 | 122746X | O-Ring | 40 | 122730X | Washer, Filter |
| 11 | 122747X | Journal Bearing - Trunnion | 41 | 122728X | Spring, Filter |
| 12 | 122717X | Seal, Lip | 42 | 122706X | Plug, Check Valve |
| 13 | 122748X | Trunnion Arm | 43 | 122705X | O-Ring |
| 14 | 122749X | Slot Guide | 44 | 122702X | Ball |
| 15 | 122768X | Housing | 45 | 122704X | Spring, Check |
| 16 | 122769X | Journal Bearing | 46 | 122787X | Plug, Std. Thd. |
| 17 | 122770X | Ball Bearing Assembly | 47 | 122752X | Screw, Socket Hd. M8 x 35 |
| 18 | 122771 | Plug, Pipe | 48 | 122753X | Screw, Socket Hd. M8 x 20 |
| 19 | 122772X | Center Section | 50 | 122788X | Washer, Thrust |
| 20 | 122773X | Needle Bearing | 51 | 122789X | Pin, Spiral |
| 21 | 122722X | Seal, Lip, Motor Shaft | 52 | 122754X | Plug, Std. Thd. |
| 22 | 122750X | Shaft, Motor Splined 36 Tooth | 53 | 122711X | O-Ring Bypass Valve |
| 23 | 122774X | Washer | 54 | 122708X | Spring |
| 25 | 122775X | Swashplate | 55 | 122709X | Bypass Spool |
| 26 | 122776X | Bearing Guide | 56 | 122712X | Bypass Plug |
| 27 | 122777X | Thrust Washer | 57 | 122710X | O-Ring, Bypass Valve |
| 28 | 122778X | Thrust Roller | 58 | 122727X | Nameplate |
| 29 | 122779X | Thrust Plate | 59 | 122790X | Plug, Plastic |
| 30 | 122723X | Seal, Lip, Thru Pump Shaft | 60 | 122791X | Spring |
| | | | | 121430X | Pump Assy. Complete |

REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR AGRI - FAB TRANSAXLE NUMBER 486. R121431X

www.ersatzteil-service.de

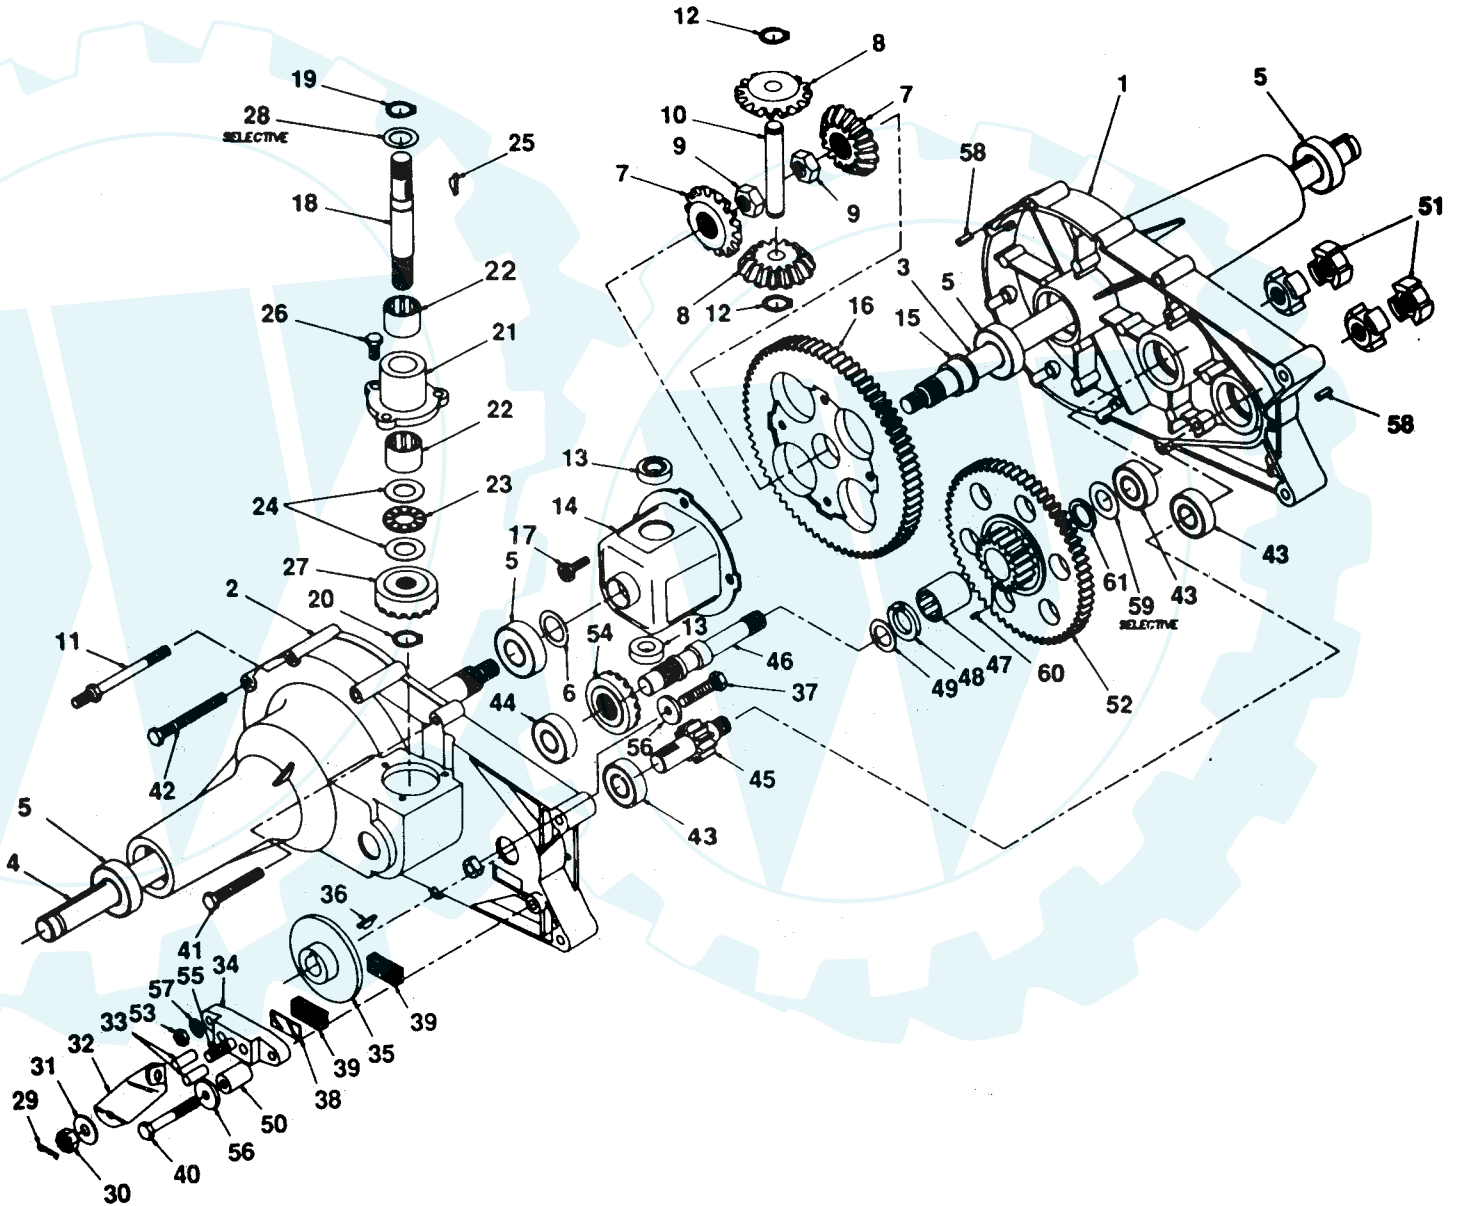

36

14 H.P. HYDROSTATIC YARD TRACTOR

TRANSAXLE 486.R121431X

37

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	122614X	Housing, Half L.H.	30	122658X	Nut, Castle 5/16 - 24
2	122615X	Housing, Half R.H.	31	122659X	Washer, Flat .343 x .88 x .062
3	122616X	Axle L.H.	32	122660X	Arm, Brake Actuator
4	122620X	Axle R.H.	33	122662X	Pin, Brake Actuating
5	122621X	Bearing, Ball	34	122663X	Brake, Yoke
6	122622X	Washer, Flat 3/4 x 1-1/8 x .030	35	122664X	Disc, Brake
7	122623X	Gear, Miter	36	123065X	Key 3/16 x 5/8
8	122624X	Gear, Miter	37	122666X	Screw, Hex 1/4 - 20 x 1.50
9	122625X	Nut, hex Jam W/ Patch 1/2 - 20	38	122667X	Plate, Puck
10	122626X	Shaft, Cross	39	122668X	Puck, Brake
11	122688X	Screw, Stud	40	123066X	Screw, Hex W/Patch 1/4 - 20 x 2.00
12	122629X	Snap Ring	41	122670X	Screw, Hex Self-Tap 1/4 - 20 x 2.00
13	122631X	Bearing, Thrust	42	122671X	Screw, Hex Self-Tap 1/4 - 20 x 3.00
14	122633X	Housing Assembly, Differential	43	122672X	Bearing, Ball
15	122634X	Bearing, Flange	44	122673X	Bearing, Ball
16	122640X	Gear, Differential 72 Tooth	45	122674X	Shaft, Pinion N/11 Tooth Gear
17	122641X	Screw, Pan hd. W/Patch 1/4 - 20 x .500 Lg.	46	122675X	Shaft, Drive
18	122642X	Shaft, Input	47	123059X	Bearing, Needle
19	122643X	Snap, Ring	48	123060X	Bronze Thrust Brg. 5/8 x 1-1/4 x 7/64
20	122644X	Retaining Ring 7/16"	49	122654X	Washer, Flat .62 - 1.0 x /040
21	122645X	Housing, Input Bearing	50	122689X	Spacer
22	122646X	Bearing, Needle	51	121839X	Coupling
23	122647X	Bearing, Thrust	52	122681X	Gear, 60 & 17 Tooth
24	122648X	Washer, Flat 5/8 x 1-1/8 x .030	53	122682X	Nut, Hex 1/4 - 20
25	122649X	Key #4, 3/32 x 5/8	54	122683X	Gear, Drive Pinion 17 Tooth
26	122650X	Screw, Hex W/Patch 1/4 x 3/4	55	122684X	Bolt, Square Head
27	122651X	Gear, Input Pinion 17 Tooth	56	122685X	Washer 15/16 x .265 x .125
28	122652X	Washer, Flat .62 - 1.0 x .030	57	122686X	Washer 1/4" Spring Lock
--	122653X	Washer, Flat .62 - 1.0 x .020	58	122687X	Pin, Roll 3/16" x 1/2" Lg.
--	122654X	Washer, Flat .62 - 1.0 x .040	59	122678X	Washer, Flat 5/8 x 1 - 1/8 x .060
29	122656X	Pin, Cotter	--	123061X	Washer, Flat 5/8 x 1 x .050
			60	123062X	Pin, Dowel 3/32 x 1/4
			61	123063X	Seal, Grease
			----	121431X	Transaxle Assy. Complete

REPAIR PARTS


www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR

ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

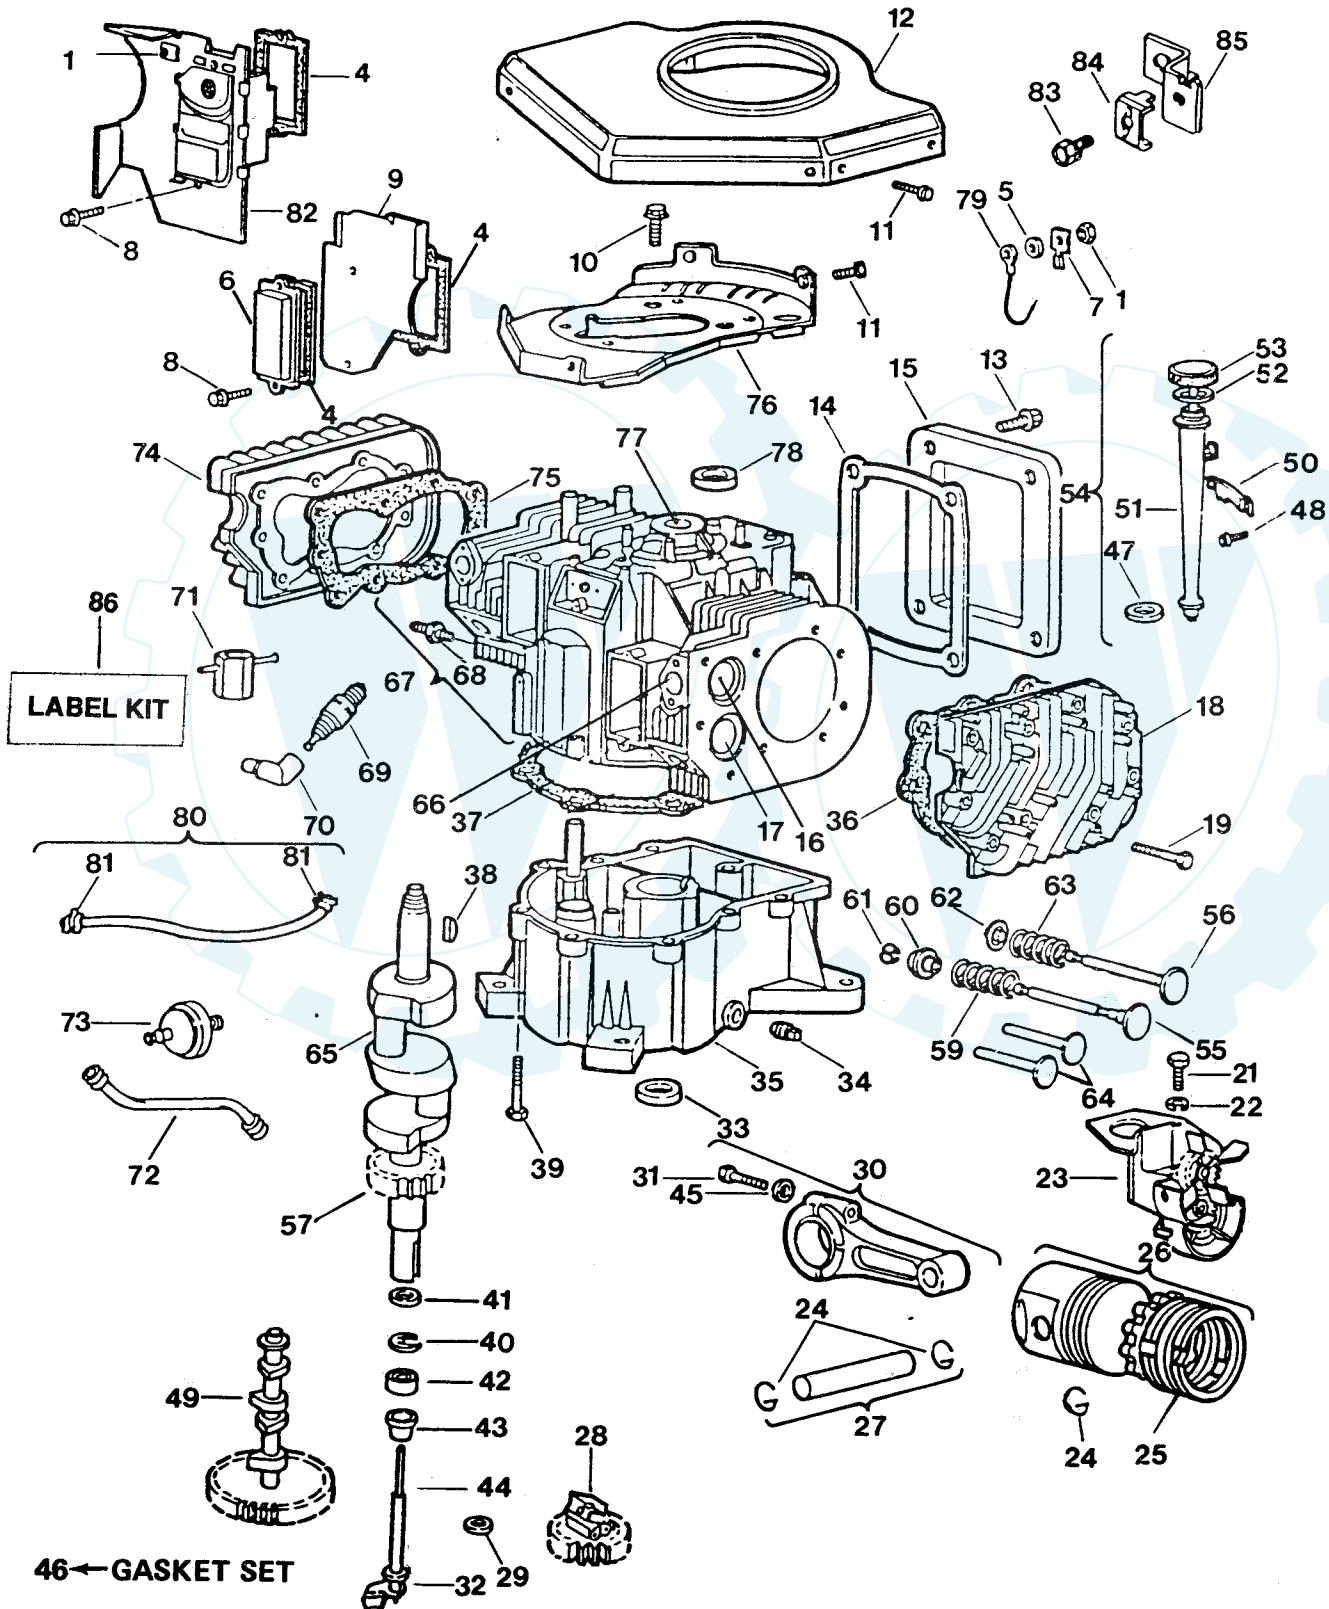

14 H.P. HYDROSTATIC YARD TRACTOR

ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

KEY NO	PART NO.	DESCRIPTION	KEY NO	PART NO.	DESCRIPTION
1	90576	Nut - Hex 8 - 32	40	94296	Retainer - E-Ring
4	27803	*Gasket - Valve Cover	41	491287	Foam Seal - Governor Shaft
5	92791	Washer - Lock, Shakeproof	42	261560	Upper Bushing - Governor
6	222892	Cover - Breather Cylinder No. 2	43	262332	Lower Bushing - Governor
7	93722	Terminal - Spade	44	491530	Crank - Governor
8	93394	Screw - Sem	45	220863	Washer - Governor Crank (Inside)
9	222912	Baffle - Air	46	394501	Gasket Set
10	93777	Screw - Hex Head (Back Plate to Cylinder)	47	271157	Seal - Filler Tube
11	93158	Screw - Sem	48	93469	Screw - Hex Head
12	491247	Housing - Blower	49	212968	Gear - Cam
13	93882	Screw - Crankcase Cover Mtg. Sem	50	222875	Clamp - Oil Filler
14	270981	*Gasket - Crankcase	51	280224	Tube - Oil Filler
15	222860	Cover Plate - Crankcase	52	271170	Seal - Oil Filler Cap
16	261463	+ Seat - Intake Valve (Standard)	53	394020	Cap and Dipstick - Oil Filler
17	210940	+ Seat - Exhaust Valve (Standard)	54	394394	Dipstick and Tube Assembly (Inc. Key No's. 47, 48, 50, 51, 52 & 53)
18	212462	Head - Cylinder No. 2	55	390420	Valve - Exhaust
19	93211	Screw - Cylinder Hd. (2 21/32 Lg.)	56	261528	Valve - Intake
21	93686	Screw - Hex Head (10 - 32 x 5/8)	57	231445	Gear - Timing
22	92290	Washer - Lock (No. 10 x 1/16 x 3/64)	59	26828	Spring - Exhaust Valve
23	393415	Oil Slinger Assembly	60	292260	Rotocoil - Exhaust Valve
24	260924	Lock - Piston Pin	61	93630	Retainer - Exhaust Valve Rotocoil (2)
25	394959	Ring Set - Piston (Standard)	62	221596	Retainer - Intake Valve
25	394960	Ring Set - Piston (.010" O.S.)	63	65906	Spring - Intake Valve
25	394961	Ring Set - Piston (.020" O.S.)	64	261368	Tappet - Valve
25	394962	Ring Set - Piston (.030" O.S.)	65	393382	**Crankshaft
26	394955	Piston Assembly (Standard) (Inc. Key No's. 24 & 25)	66	261961	+ Guide - Exhaust Valve
26	394956	Piston Assembly (.010" O.S.)	67	491730	Cylinder Assembly (Inc. Key No's 77&78)
26	394957	Piston Assembly (.020" O.S.)	68	230318	Connector - Impulse Pump
26	394958	Piston Assembly (.030" O.S.)	69	394539	Plug - Spark (Resistor)-Champion RJ-12 or equivalent
27	299691	Pin Assembly - Piston (Standard) (Inc. Key No. 24)	70	66538	Elbow - Spark Plug
27	391286	Pin Assembly - Piston (.005" O.S.)	71	89838	Wrench - Spark Plug
28	394348	Gear - Governor	72	280225	Tube Breather
29	222773	Washer - Thrust	73	394358	Filter - Fuel (In Fuel Line to Tank)
30	393270	Rod Assembly - Connecting (Inc. Key No's. 31 & 32)	74	212461	Head - Cylinder No. 1
31	92909	Screw - Connecting Rod	75	271867	*Gasket - Cylinder
32	223882	Washer, Governor Crank	76	491304	Back Plate Assembly
33	291675	Seal - Oil	77	399265	+ Bearing - Cylinder
34	91084	Plug - Oil Drain	78	391086	Seal - Oil
35	393552	Base Assembly - Crankcase	79	391115	Wire - Ground
36	271868	*Gasket - Cylinder Head No. 2	80	299146	Line - Fuel (Inc. Key No. 81)
37	271142	*Gasket - Crankcase Cover (1/64" thick)	81	93053	Clamp - Fuel Line
37	271188	*Gasket - Crankcase Cover (.005" thick)	82	393370	Breather Assembly No. 1
37	271189	*Gasket - Crankcase Cover (.009" thick)	83	93496	Screw - Hex Hd.
38	222698	Key - Flywheel	84	221535	Clamp - Casing
39	93585	Screw - Hex Hd. Sem	85	223890	Bracket - Choke Cable
			86	491260	Label Kit

*INCLUDED IN GASKET SET 394501
 +SPECIAL TOOLS REQUIRED TO INSTALL
 **Order 94196 Key for Timing Gear Retaining Device

Key 66 NOTE: 231218 Guide Intake (Brass)

REPAIR PARTS



www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR

ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

AIR CLEANER AND CARBURETOR


ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

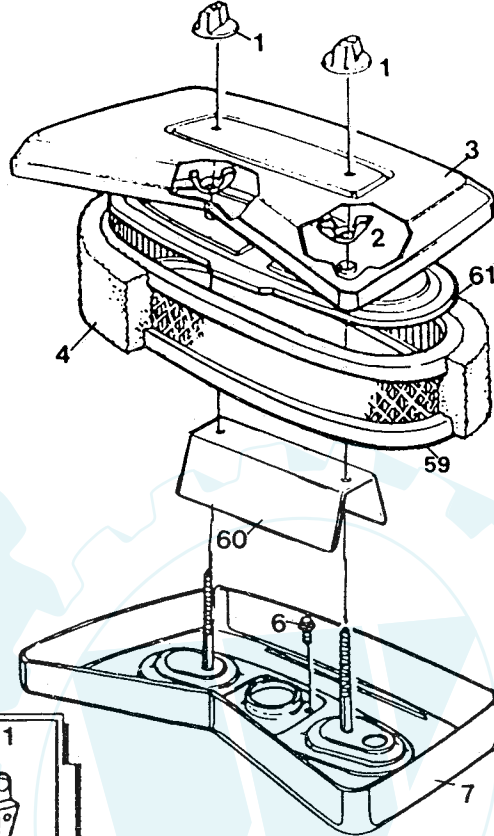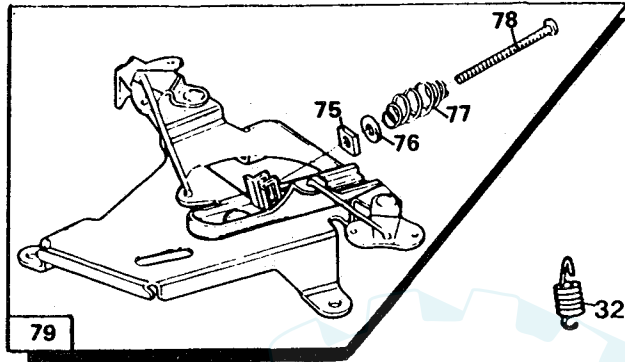

58 GASKET SET

73 PUMP REPAIR KIT

74 CARBURETOR OVERHAUL KIT

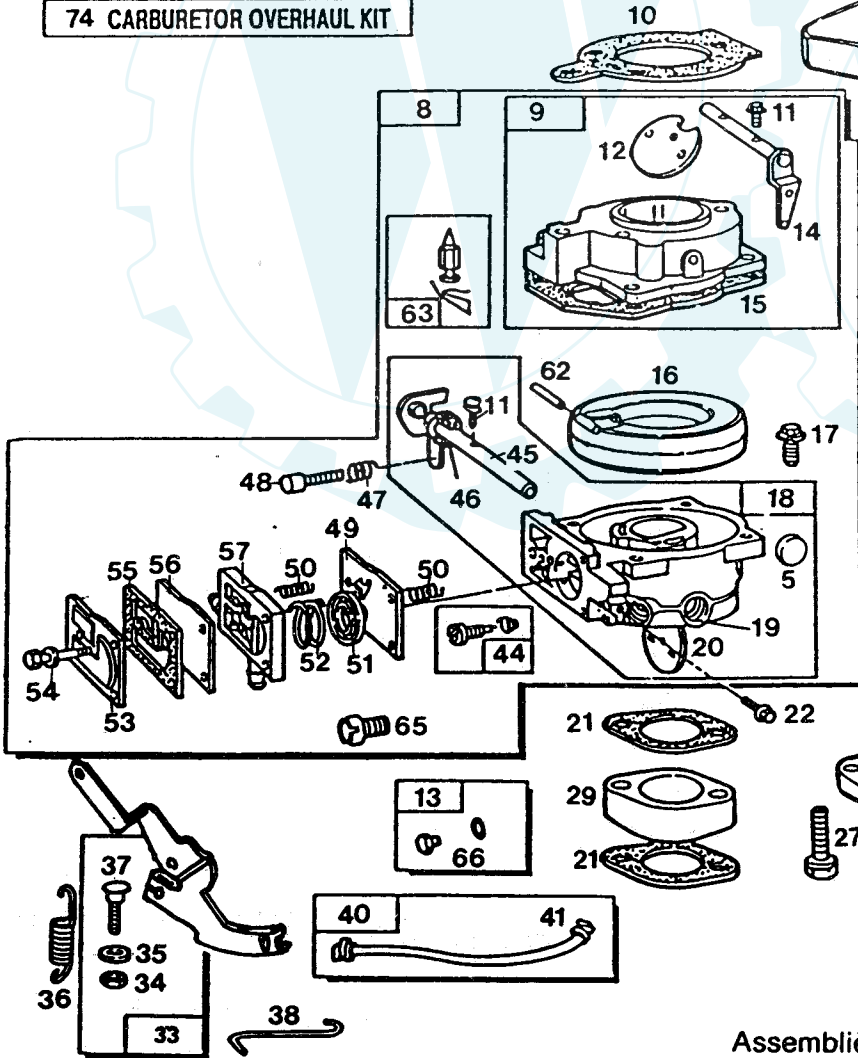

Assemblies include all parts shown in frames.

REPAIR PARTS

www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

AIR CLEANER AND CARBURETOR

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	212706	Knob - Air Cleaner	32	262351	Spring - Governor
2	94289	Nut Wing	33	491297	Lever Assembly - Governor (Inc. Key No's. 34, 35 & 37)
3	223579	Cover - Air Cleaner	34	92278	Nut Hex (10 - 24)
4	271271	Element - Air Cleaner	35	222289	Washer
5	223472	Plug - Welch	36	261563	Spring - Governor Idle
6	94166	Screw - Hex Head	37	93853	Bolt - Governor Lever
7	398826	Body - Air Cleaner	38	261586	Link - Governor
8	491427	Carburetor Assembly (Inc. Key No's 5, 9, 10, 11, 12, 14, 15, 16, 17, 18, 19, 20, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 63 & 63) (Remote Choke)	40	393815	Impulse Line and Clamp Assembly (Inc. Key No. 41)
9	399327	Body Assembly - Upper Carburetor (Inc. Key No's. 11, 12, 14 & 15)	41	93053	Clamp - Fuel Line
10	271411	+ *Gasket - Air Cleaner	44	491538	+ Valve Assembly - Carburetor Idle
11	93499	Screw - Throttle and Choke	45	392672	Shaft and Lever - Throttle
12	223534	Valve Mounting Sem	46	271013	+Washer - Throttle Shaft
13	397882	Valve - Choke	47	26157	Spring - Throttle Adjustment
14	392673	Plug and Seal - Solenoid (Inc. Key No. 66)	48	91920	Screw - Machine Fill. Hd. (8 - 32 x 5/8)
15	271609	Shaft and Lever - Choke	49	270988	x Diaphragm
16	298514	+Gasket - Carburetor Body	50	261358	x Spring
17	94152	Float - Carburetor	51	221377	x Cap - Spring
18	491531	Screw - Hex Head Sem (10 - 32 x 3/4)	52	261395	x Spring - Pump
19	231209	Body - Lower Carburetor (Inc. Key No's. 11, 19, 20, 45 & 46)	53	223688	Cover - Diaphragm
20	223370	Bushing - Throttle Shaft	54	93829	Screw - Diaphragm Cover
21	271412	Valve - Throttle	55	271025	x Gasket - Carburetor Pump
22	93897	+ *Gasket - Carburetor and Intake Elbow	56	270989	x Diaphragm - Damping
23	93971	Screw - Sem	57	280197	Body - Pump
24	280818	Screw - Hex Head (Carb to Manifold)	58	394501	Gasket Set
25	270884	Crank - Bell	59	394019	Cartridge - Air Cleaner
26	93208	+Gasket - Intake Manifold Mounting	60	224039	NOTE: USE 271197 GASKET BELOW CARTRIDGE
27	93970	Screw - Intake Manifold Mounting Sem	61	223714	Shield Spitback
28	261587	Screw - Hex Head	62	230896	Cartridge Plate - Air Cleaner
29	280319	Link - Throttle	63	394681	+Pin - Float Hinge
30	213290	Spacer - Carburetor	65	231339	+Valve - Fuel Inlet
31	93949	Manifold Assembly - Intake	66	280474	Jet - Needle Valve
		Screw - Sem	67	490207	O-Ring
			68	262375	Crank, Bell
			73	393397	Link
			74	491539	Repair Kit - Pump
			75	94298	Carburetor Overhaul Kit
			76	223882	Nut - Square
			77	262337	Washer
			78	94297	Spring - Compression
			79	491282	Screw - Panhead
					Bracket - Speed Control

*INCLUDED IN GASKET SET - PART NO. 394501

+INCLUDED IN CARBURETOR OVERHAUL KIT - PART NO. 491539

xINCLUDED IN CARBURETOR OVERHAUL KIT - PART NO. 491539 AND PUMP REPAIR KIT - PART NO. 393397

REPAIR PARTS


www.ersatzteil-service.de

14 H.P. HYDROSTATIC YARD TRACTOR

ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

ALTERNATOR AND STARTER MOTOR GROUP

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

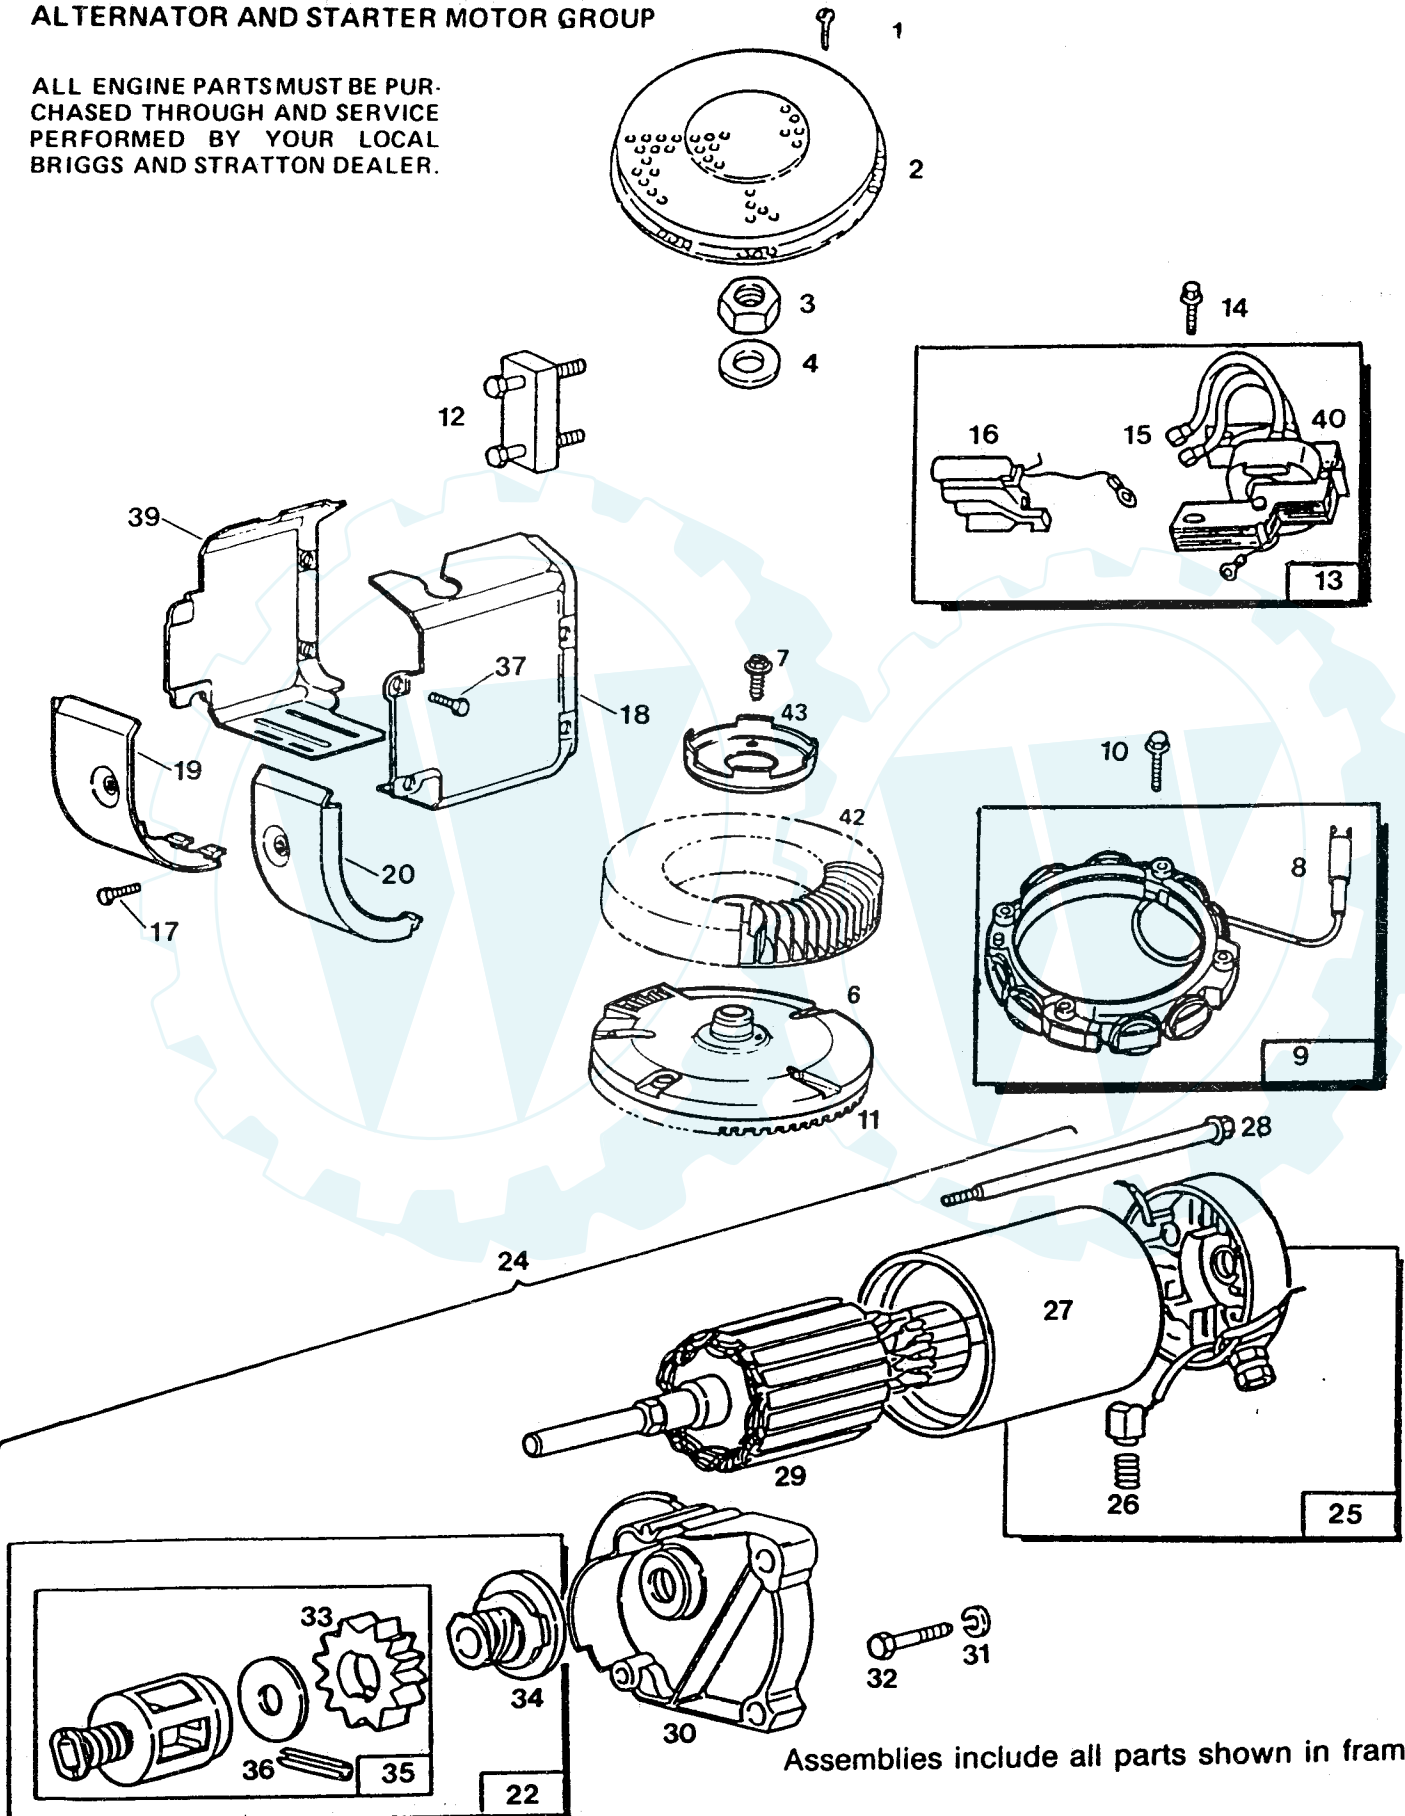

Assemblies include all parts shown in frames.

REPAIR PARTS

14 H.P. HYDROSTATIC YARD TRACTOR ENGINE--MODEL NUMBER 400707, TYPE NUMBER 1211-01

ALTERNATOR AND STARTER MOTOR GROUP

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	94326	Screw - Sem	18	222849	Cover Assembly - Air Guide (Cylinder No. 2)
2	222673	Screen - Flush Rotating	19	222846	Shield, Cylinder
3	230674	Nut - Hex	20	222847	Shield, Cylinder
4	222511	Washer - Spring	22	490421	Starter Drive Group (Inc. Key No's 33, 34 & 36)
5	222674	Cup - Screen Mounting	24	394808	Motor - Starting (Inc. Key No's, 25, 26, 27, 28, 29, 30, 33, 34, 35 & 36)
6	491180	Flywheel and Ring Gear Assembly - Magneto	25	395537	Commutator End Cap Assembly Starter (Inc. Key No. 26)
7	935535	Screw - Sem	26	395538	Brush Set
8	393537	Connector Assembly	27	393825	Housing Assembly
9	392595	Stator - Alternator (Tri Circuit) (Inc. Key No. 8)	28	94003	Thru Bolt
10	93621	Screw - Sem	29	390837	Armature Assembly (Motor)
11	391362	Gear - Flywheel Ring (Includes Mounting Parts)	30	394860	Drive End Cap Assembly - Starter
12	19203	Puller - Flywheel (Optional Accessory)	31	90366	Lockwasher
13	394891	Armature Group (Inc. Key No's, 15, 16 & 40)	32	91162	Screw - Hex Head (5 16 - 18 x 1 - 1 2)
14	93381	Screw - Armature Mounting Sem	33	280104	Gear - Starter
15	221798	Terminal - Ignition Cable	34	398003	Clutch Assembly - Starter
16	394970	Trigger Coil Assembly Magnatron Ignition	35	490467	Pinion Spring Kit (Inc. Key No's, 33 & 36)
17	93163	Screw - Sem	36	94288	Roll Pin
			37	93163	Screw - Sem
			39	222848	Cover Assembly - Air Guide (Cylinder No. 1)
			40	394988	Armature Assembly
			42	280815	Fan - Flywheel
			43	223726	Retainer - Fan