


42" Snow Blade Model No. LC010AR

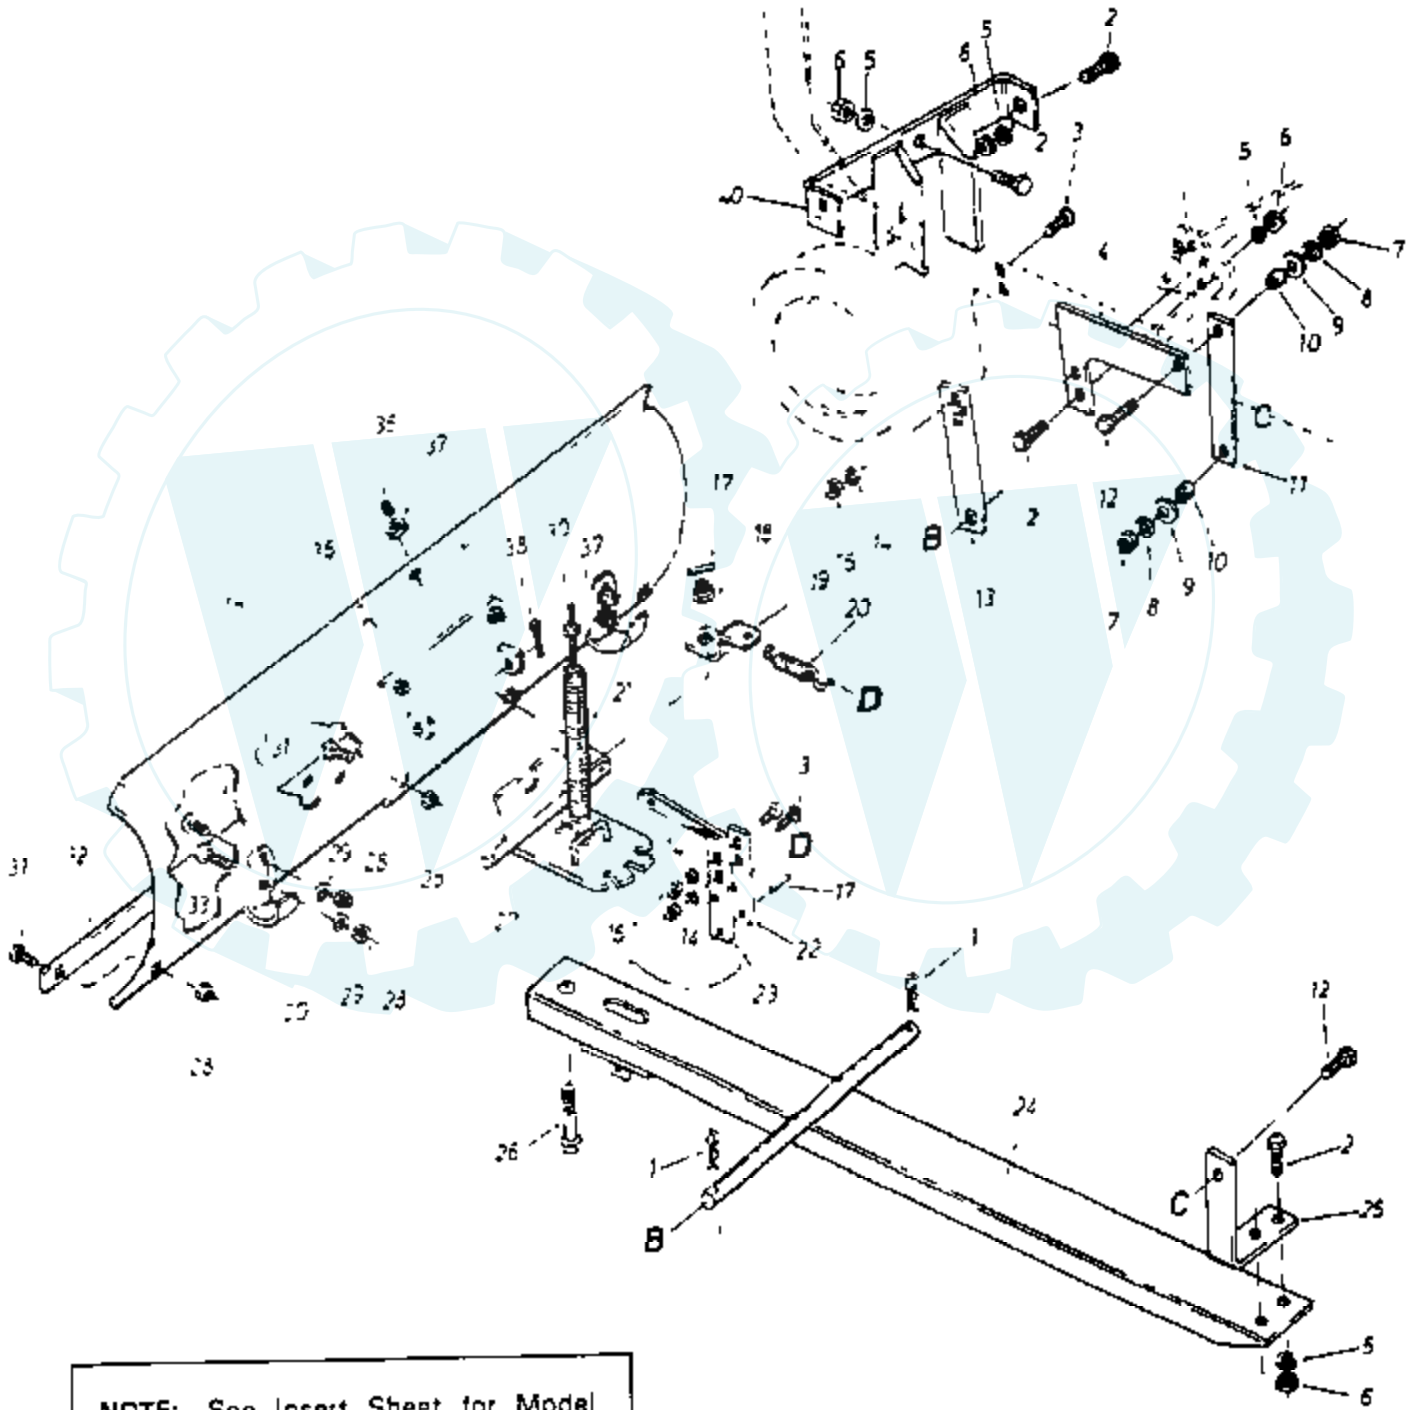

NOTE: See Insert Sheet for Model LC010BR, to use with 1985 and later models, Form No #43970

Ref #	Part Number	Qty	Description
1	43343		HAIR PIN COTTER
2	43001		BOLT
3	43350		BOLT
4	23217		ARM
5	43003		WASHER
6	43015		NUT
7	43015		NUT
8	43003		WASHER
9	43070		WASHER
10	23137		PIVOT BUSHING
11	23216		LINK LIFT
12	43087		BOLT
13	23318		PLATE
14	43003		WASHER
15	43015		NUT
17	43349		ROLL PIN
18	43262		NUT
19	23130		BRACKET
20	43348		SPRING
21	43263		SPRING
22	23151		BAR ANGLE LO
23	23129		BAR
24	62285		CHANNEL ASSY
25	23414		BRACKET
26	23131		BOLT
27	62143		PIVOT PLATE ASSY
28	43061		
29	43081		WASHER
30	23070		SHOE, SKID
31	43080		BOLT
32	23117		WEAR STRIP
33	43079		BOLT
34	23118		BLADE HEAD
35	62142		PLATE
36	43331		CAP
37	43083		NUT
38	43010		COTTER PIN
39	43264		BOLT
40	62334		GUIDE BRKT ASSY
	43762		OWNER'S MANUAL