



# AKKU-BOHRMASCHINE HP96K-----B

## TYPE 2



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
1	1	5100028-10	GEHAEUSEPAAR	
2	1	5100031-00	ANTRIEB	
3	1	148354-03	HALTER	
4	1	419581-01	KLINGE	
5	1	5100005-01	SCHALTER ZSB	
8	6	311993-00	SCHRAUBE	
9	1	419233-09	SPANNBOHRFUTTER	
10	1	149518-01	SCHRAUBE	
12	2	5100035-01	FEDER	
13	1	5100047-12	SCHILD	
14	1	486256-53	MOTOR + GETR.GEH.	
16	1	5100294-04	ACCU-PACK 9.6V	HP96K
16	2	5100294-04	ACCU-PACK 9.6V	HP96KB
17	1	5101182-00	LADEGERAET (EURO)	QW
17	1	5101182-05	LADEGERAET ZSB	GB
18	3	498511-01	SCHRAUBE	
20	1	5100032-01	ABDECKUNG	
21	1	5100003-02	GEHAEUSE	
23	1	5100017-00	SCHILD	
24	1	5100049-00	PLATTE	
25	2	5100060-01	SCHRAUBE	