



STICHSÄGE

KS630-----D

TYPE 4



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
1	1	576376-03	MOTOR ZSB	
2	1	580151-00	GEHAEUSEPAAR	
3	1	809483-04	SCHALTER	
4	1	807285-06	KONDENSATOR	A9
4	1	807285-06	KONDENSATOR	KR
6	1	770235	SCHUTZ	
7	1	330060-53	KABELSATZ	XD
7	1	372067-01	KABELSATZ	A9
7	1	330080-03	KABELSATZ (EURO)	B1
7	1	330080-03	KABELSATZ (EURO)	KR
8	1	369328	REGLER	
9	1	370282-00	FESTSTELLER ZSB	
10	1	748158	FEDER	
11	2	370966	UNTERLEGSCHEIBE	
12	2	847709	FEDER	
13	2	372523	KOHLE	
14	2	846076	KOHLEKASTEN	
15	1	373117	LITZE	
16	1	373116	LITZE ZSB	
17	2	828446	DROSSEL ZSB	
18	1	369620	MUTTER	
19	1	368564	GETR.GEH.	
20	1	368562	GETRIEBE	
21	2	812171	SCHRAUBE	
22	1	813480	ROLLER	
23	1	810897	KUGELLAGER	
24	1	368465	SCHAFT	
25	1	810893	KUGELLAGER	
26	1	847216	DICHTUNG	
27	2	330041-11	STIFT	
28	1	368382-00	KLAMMER	
29	2	797123	SCHRAUBE	
30	1	368587	ABDECKUNG	
31	1	369008	SCHUTZ	
32	1	370584	SCHUTZ	
33	1	580121-00	TYPENSCHILD	
34	1	368375-01	HALTERUNG ZSB	
35	1	368857-00	KLAMMER	
36	2	376409	SCHRAUBE	
37	1	369304-00	SCHUH ZSB	
39	9	747329	SCHRAUBE	
42	4	891024	SCHRAUBE	
821	1	580385-28	AUFKLEBER	B1
821	1	580385-29	AUFKLEBER	XD
821	1	580385-30	AUFKLEBER	KR