 







Ref-Nr.	Teilenummer	Menge	Beschreibung
24	222698S		Key-Flywheel
163	271139S		Gasket-Air Cleaner
188	692198		Screw
201	690347		Link-Air Vane
209	690254		Spring-Governor
211	691859		Spring-Governed Idle
222A	691446		Bracket-Control
265A	690798		Clamp-Casing
267	691044		Screw
268	691025		Casing-Control Wire
269	691026		Wire-Control
270	691027		Nut
271	691028		Lever-Control
333	793281		Armature-Magneto
334	691061		Screw
335	691107		Screw
356	692390		Wire-Stop
362	793351		Shield-Spark Plug
534	691417		Screw
535	272235S		Filter-Air Cleaner Foam
535A	698369		Filter-Air Cleaner Foam
536	698472		Cleaner-Air
621	692310		Switch-Stop
635	66538S		Boot-Spark Plug
643	691911		Retainer-Air Filter
851	493880S		Terminal-Spark Plug
851A	692424		Terminal-Spark Plug



1036 EMISSIONS LABEL

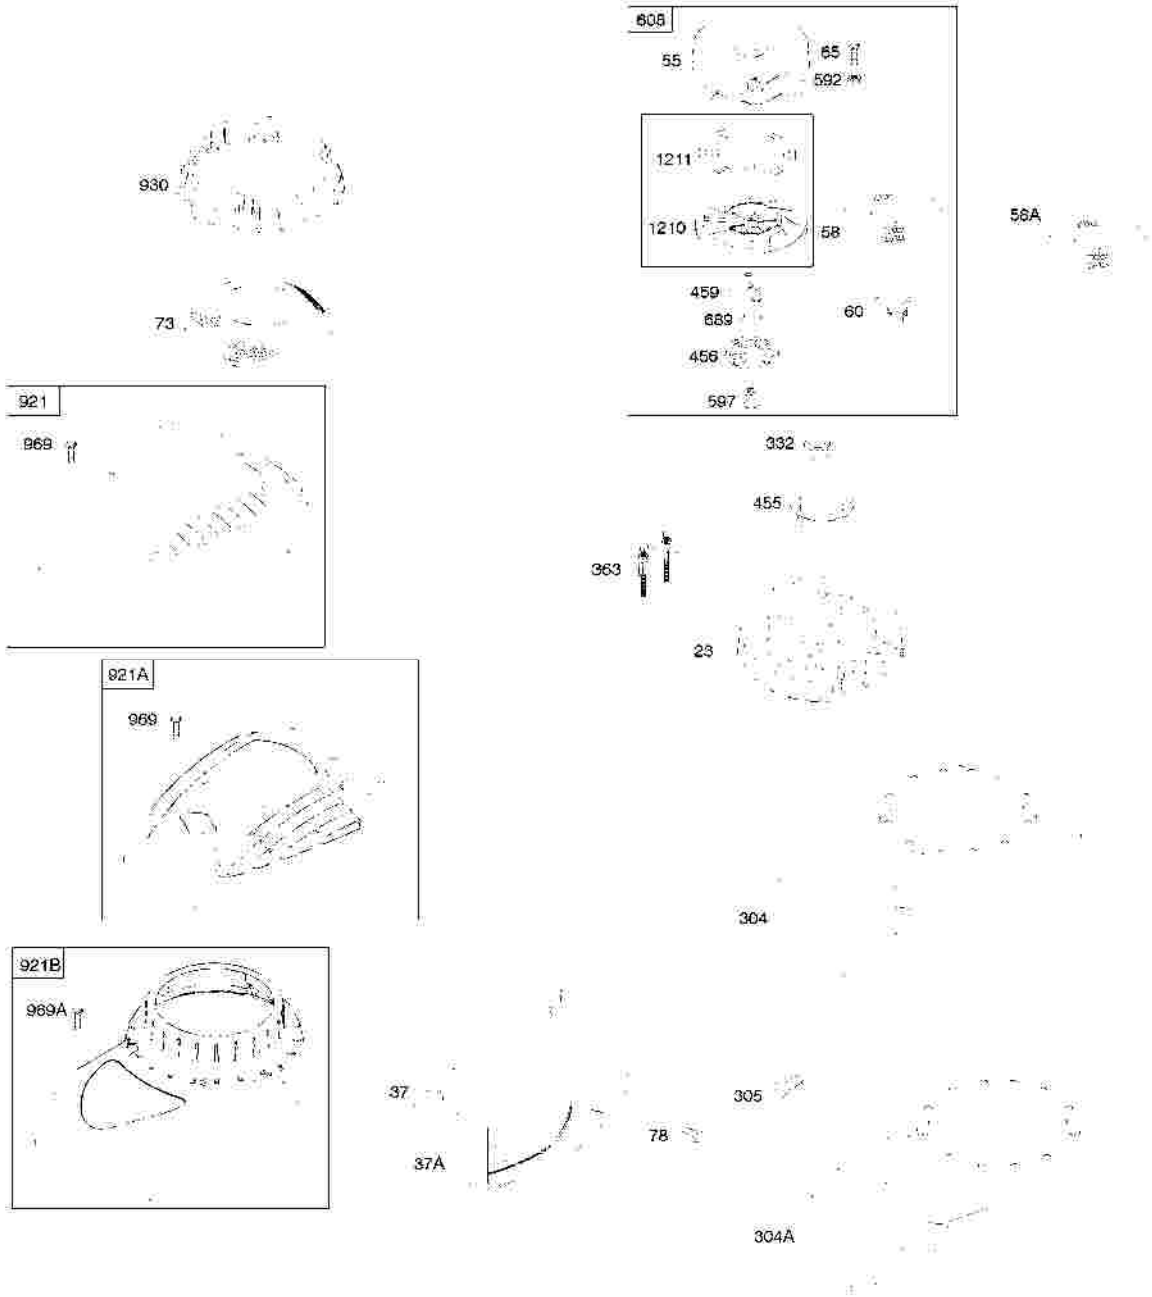

Ref-Nr.	Teilenummer	Menge	Beschreibung
23	795549		Flywheel
37	690482		Guard-Flywheel
37A	691209		Guard-Flywheel
55	692144		Housing-Rewind Starter
58	697316		Rope-Starter
60	691915		Grip-Starter Rope
65	690837		Screw
73	699850		Screen-Rotating
78	692198		Screw
304A	694236		Housing-Blower
305	692198		Screw
332	690662		Nut
363	19069		Puller-Flywheel
455	691236		Cup-Flywheel
456	692299		Plate-Pawl Friction
459	281505S		Pawl-Ratchet
592	690800		Nut
597	691696		Screw
608	499706		Starter-Rewind
689	691855		Spring-Friction
930	691348		Guard-Rewind
969	694046		Screw
1036			Label-Emissions
1210	499901		Pulley/Spring Assembly
1211	499901		Pulley/Spring Assembly

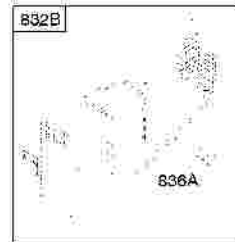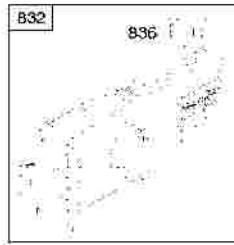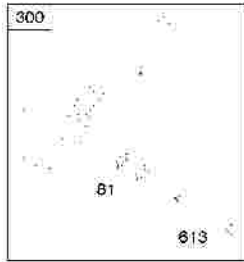   

836B

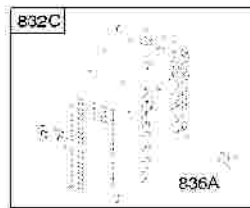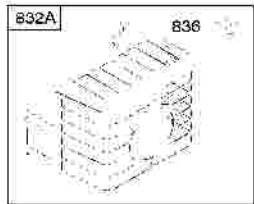  


236

925


729

745


 
745A

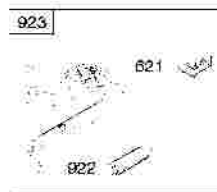


Ref-Nr.	Teilenummer	Menge	Beschreibung
81	691179		Lock-Muffler Screw
300	692307		Muffler
300A	394569S		Muffler
613	691413		Screw
621	692310		Switch-Stop
729	690586		Clip-Wire
745	691146		Screw
745A	690859		Screw
772	691111		Screw
832	699299		Guard-Muffler
832A	699670		Guard-Muffler
832B	790743		Guard-Muffler
836	690664		Screw
836A	790745		Screw
836B	691125		Screw
922	692135		Spring-Brake
923	691487		Brake
925	691349		Cover-Linkage

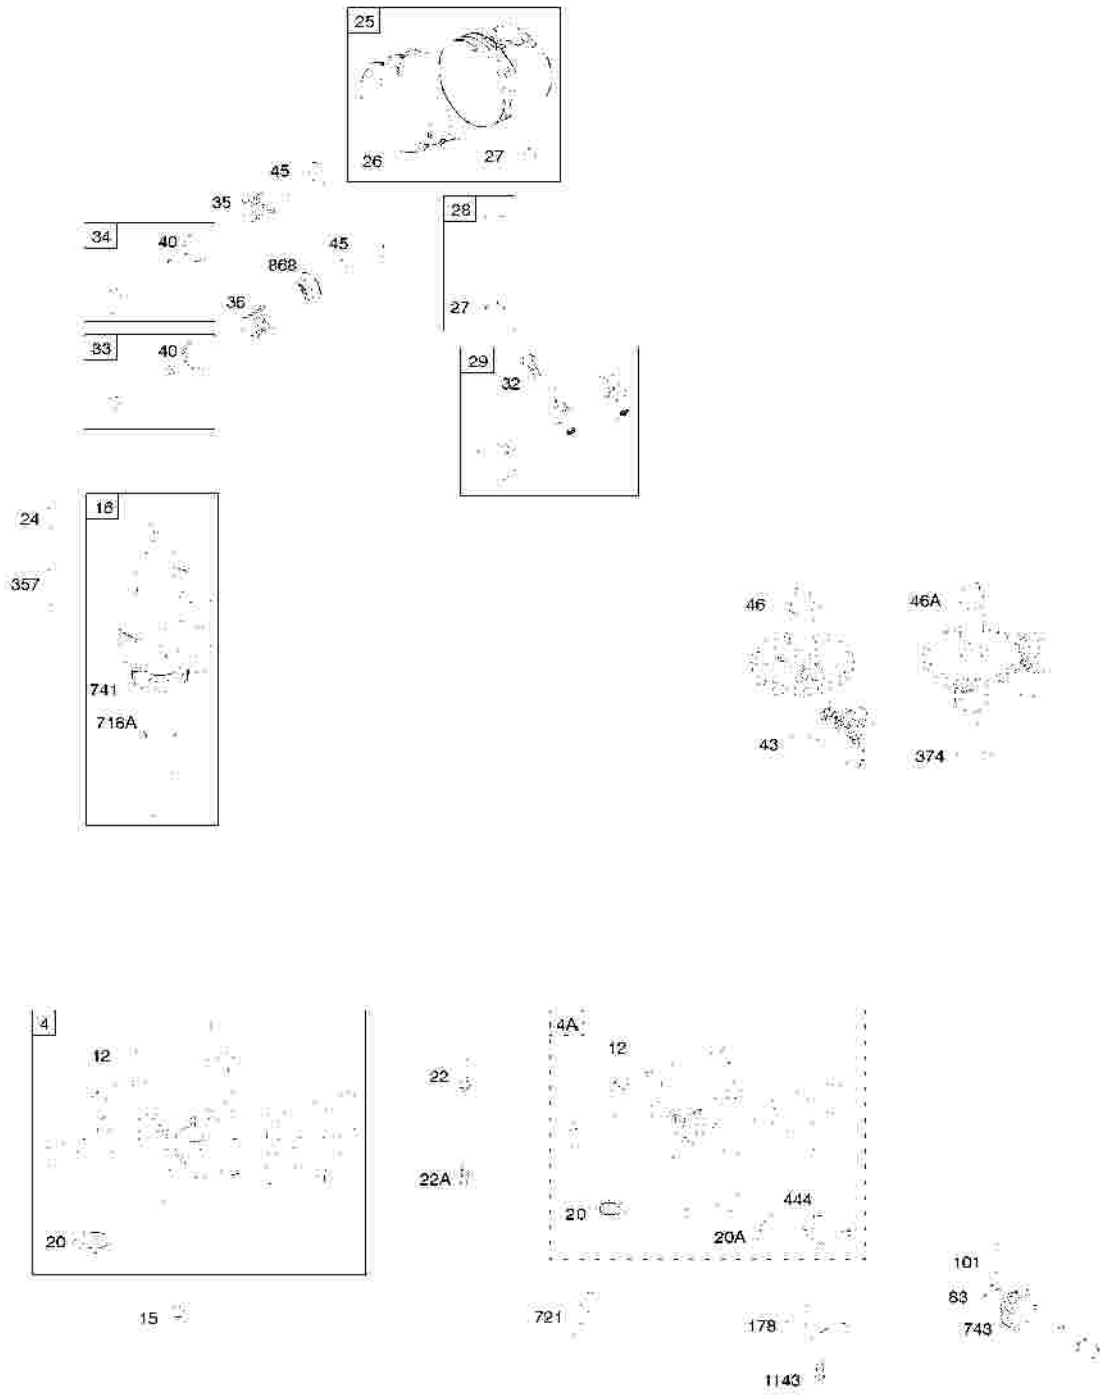 

Ref-Nr.	Teilenummer	Menge	Beschreibung
4	395384		Sump-Engine
4	698691		Sump-Engine
12	270895		Gasket-Crankcase
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
15	691680		Plug-Oil Drain
16	691471		Crankshaft
20	391483S		Seal-Oil
22	692551		Screw
22A	691108		Screw
24	222698S		Key-Flywheel
25	790908		Piston Assembly
25	792532		Piston Assembly
25	699657		Piston Assembly
26	498680		Ring Set
26	498682		Ring Set
26	498683		Ring Set
26	699658		Ring Set
26	795132		Ring Set
26	795134		Ring Set
27	691588		Lock-Piston Pin
28	298909		Pin-Piston
28	699659		Pin-Piston
28	298908		Pin-Piston
29	699654		Rod-Connecting
32	691664		Screw
33	296676		Valve-Exhaust
34	296677		Valve-Intake
35	690520		Spring-Valve
36	690520		Spring-Valve
40	692194		Retainer-Valve
43	691983		Slinger-Governor/Oil
43	698690		Slinger-Governor/Oil
45	691762		Tappet-Valve
46	691998		Camshaft
444	691868		Gasket-Drive Gear Cover
718A	499047		Pin-Locating
741	691805		Gear-Timing
868	697338		Seal-Valve
1143	691141		Screw

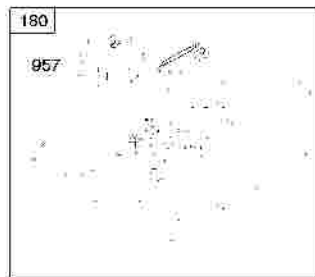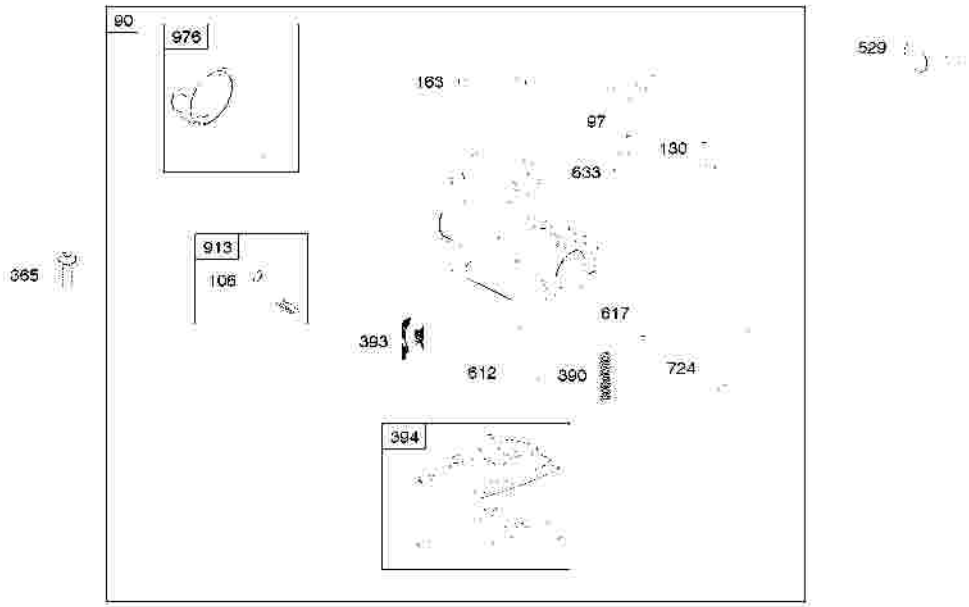  

Ref-Nr.	Teilenummer	Menge	Beschreibung
90	795477		Carburetor
97	691931		Shaft-Throttle
106	691901		Seat-Inlet
130	691190		Valve-Throttle
163	271139S		Gasket-Air Cleaner
180	494406		Tank-Fuel
190	691640		Screw
190A	691108		Screw
365	790029		Screw
390	691839		Spring-Choke Diaphragm
393	691837		Screen-Carburetor
394	795083		Diaphragm-Carburetor
529	692189		Grommet
612	496046S		Tube-Pick Up
617	270344S		Seal-O Ring
633	691321		Seal-Choke/Thr Shaft
670	691633		Spacer-Fuel Tank
724	697478		Retainer-Seal
913	494409		Seat-Check Valve
957	497929S		Cap-Fuel Tank
957B	792878		Cap-Fuel Tank
976	694394		Primer-Carburetor






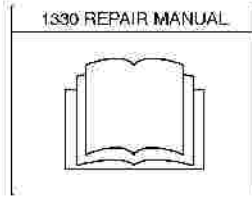 


1319 WARNING LABEL

WARNING


- Read and follow Operating Instructions before running engine.
- Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
- Engines emit carbon monoxide. **DO NOT** run in enclosed area.
- Muffler area temperature may exceed 150°F. Do not touch hot parts.

      REQUIRED when replacing parts with warning labels affixed.

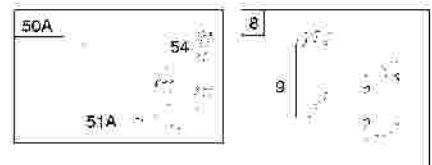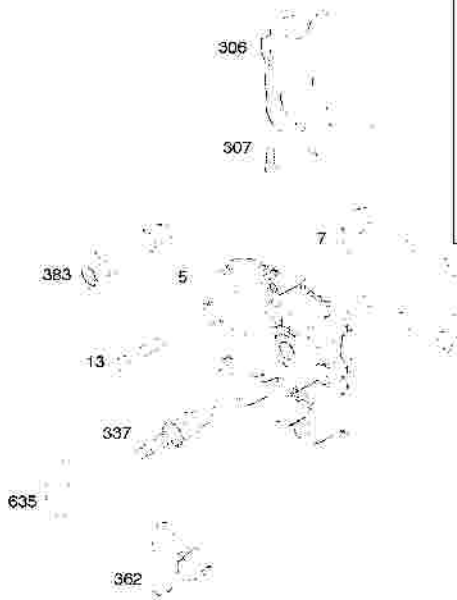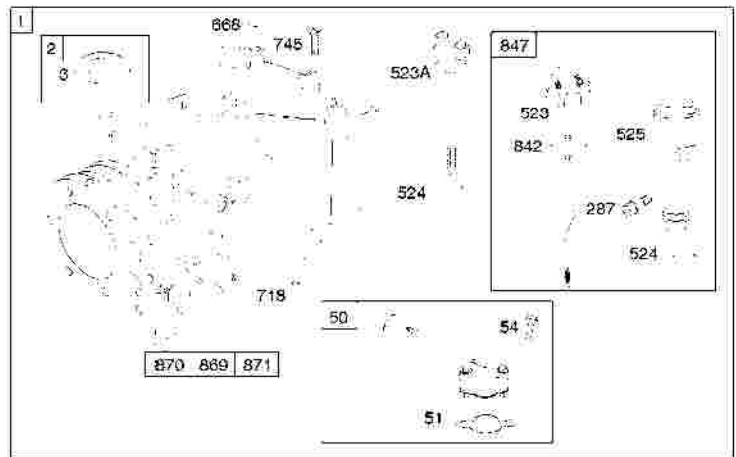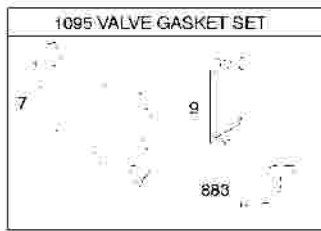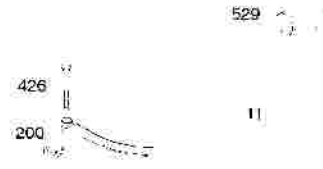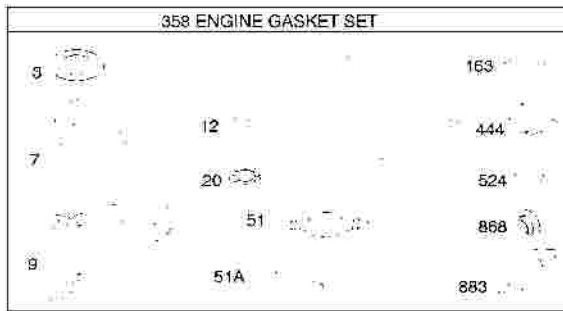

10

Ref-Nr.	Teilenummer	Menge	Beschreibung
1	699653		Cylinder Assembly
2	399269		Kit-Bushing/Seal
3	299819S		Seal-Oil
5	790169		Head-Cylinder
7	698717		Gasket-Cylinder Head
8	791781		Breather Assembly
9	695890		Gasket-Breather
10	691666		Screw
11	691245		Tube-Breather
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
12	270895		Gasket-Crankcase
13	691640		Screw
20	391483S		Seal-Oil
50	699644		Manifold-Intake
50A	693446		Manifold-Intake
51	699649		Gasket-Intake
51A	270345S		Gasket-Intake
54	691111		Screw
163	271139S		Gasket-Air Cleaner
200	691912		Blade-Governor
287	691002		Screw
306	690400		Shield-Cylinder
307	690345		Screw
337	697451		Plug-Spark
358	794209		Gasket Set-Engine
362	793351		Shield-Spark Plug
383	89838S		Wrench-Spark Plug
426	691107		Screw
444	691868		Gasket-Drive Gear Cover
523	692040		Dipstick
523A	691913		Dipstick
524	691876		Seal-Dipstick Tube
525	691320		Tube-Dipstick
529	692189		Grommet
635	66538S		Boot-Spark Plug
668	692889		Spacer
718	690959		Pin-Locating
745	691146		Screw
842	691870		Seal-O Ring
847	691440		Dipstick/Tube Assembly
868	697338		Seal-Valve
869	691701		Seat-Valve
869	699641		Seat-Valve
870	699642		Seat-Valve
870	691702		Seat-Valve
871	231348		Bushing-Valve Guide
871	699643		Bushing-Valve Guide
871	63709		Bushing-Valve Guide
883	691880		Gasket-Exhaust
1058	277038		Operator's Manual
1095	498526		Gasket Set-Valve
1319	794467		Label-Warning
1330	270962		Repair Manual






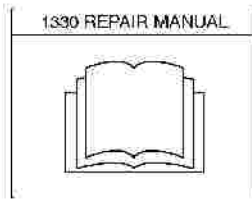 


1319 WARNING LABEL


WARNING

- Read and follow Operating Instructions before running engine.
- Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
- Engines emit carbon monoxide. DO NOT run in enclosed area.
- Muffler area temperature may exceed 150°F. Do not touch hot parts.

      REQUIRED when replacing parts with warning labels affixed.

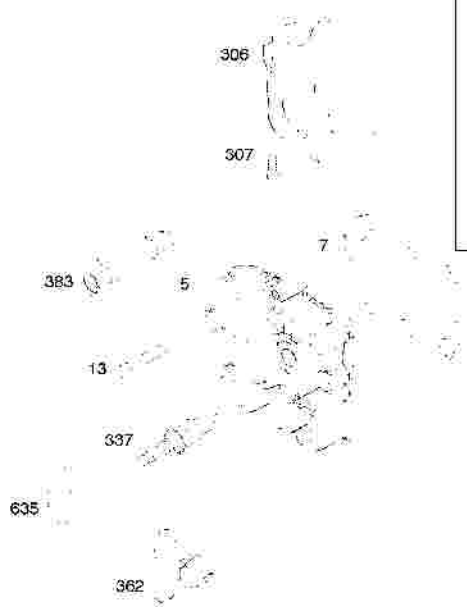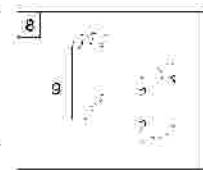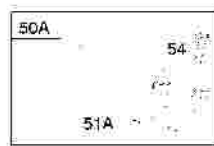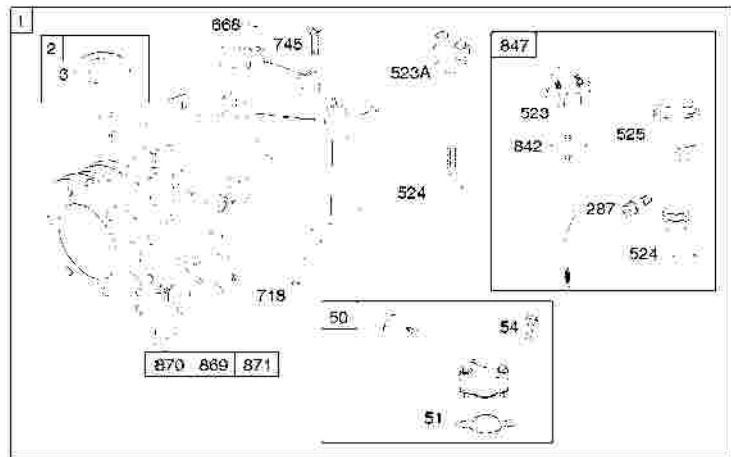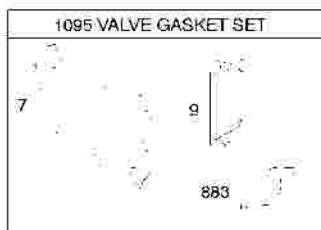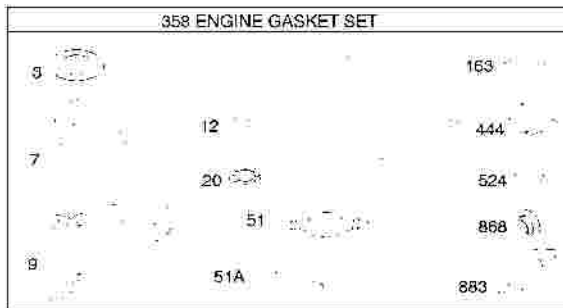

Ref-Nr.	Teilenummer	Menge	Beschreibung
1	699653		Cylinder Assembly
2	399269		Kit-Bushing/Seal
3	299819S		Seal-Oil
5	790169		Head-Cylinder
7	698717		Gasket-Cylinder Head
8	791781		Breather Assembly
9	695890		Gasket-Breather
10	691666		Screw
11	691245		Tube-Breather
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
12	270895		Gasket-Crankcase
13	691640		Screw
20	391483S		Seal-Oil
50	699644		Manifold-Intake
50A	693446		Manifold-Intake
51	699649		Gasket-Intake
51A	270345S		Gasket-Intake
54	691111		Screw
163	271139S		Gasket-Air Cleaner
200	691912		Blade-Governor
287	691002		Screw
306	690400		Shield-Cylinder
307	690345		Screw
337	697451		Plug-Spark
358	794209		Gasket Set-Engine
362	793351		Shield-Spark Plug
383	89838S		Wrench-Spark Plug
426	691107		Screw
444	691868		Gasket-Drive Gear Cover
523	692040		Dipstick
523A	691913		Dipstick
524	691876		Seal-Dipstick Tube
525	691320		Tube-Dipstick
529	692189		Grommet
635	66538S		Boot-Spark Plug
668	692889		Spacer
718	690959		Pin-Locating
745	691146		Screw
842	691870		Seal-O Ring
847	691440		Dipstick/Tube Assembly
868	697338		Seal-Valve
869	691701		Seat-Valve
869	699641		Seat-Valve
870	699642		Seat-Valve
870	691702		Seat-Valve
871	231348		Bushing-Valve Guide
871	699643		Bushing-Valve Guide
871	63709		Bushing-Valve Guide
883	691880		Gasket-Exhaust
1058	277038		Operator's Manual
1095	498526		Gasket Set-Valve
1319	794467		Label-Warning
1330	270962		Repair Manual





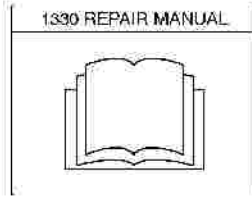 


1319 WARNING LABEL

WARNING


- Read and follow Operating Instructions before running engine.
- Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
- Engines emit carbon monoxide. DO NOT run in enclosed area.
- Muffler area temperature may exceed 150°F. Do not touch hot parts.

     REQUIRED when replacing parts with warning labels affixed.

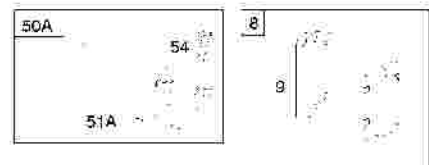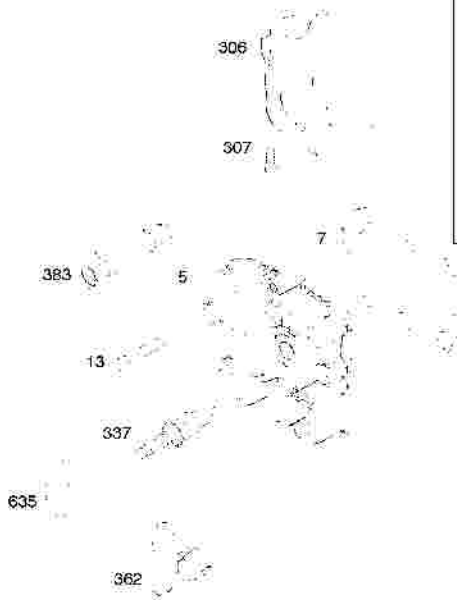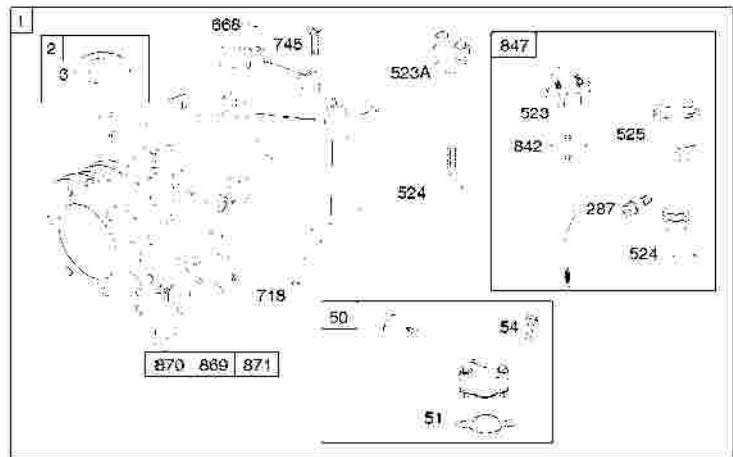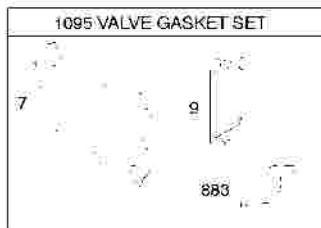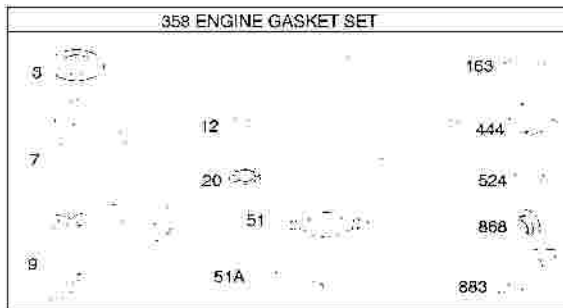

10

Ref-Nr.	Teilenummer	Menge	Beschreibung
1	699653		Cylinder Assembly
2	399269		Kit-Bushing/Seal
3	299819S		Seal-Oil
5	790169		Head-Cylinder
7	698717		Gasket-Cylinder Head
8	791781		Breather Assembly
9	695890		Gasket-Breather
10	691666		Screw
11	691245		Tube-Breather
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
12	270895		Gasket-Crankcase
13	691640		Screw
20	391483S		Seal-Oil
50	699644		Manifold-Intake
50A	693446		Manifold-Intake
51	699649		Gasket-Intake
51A	270345S		Gasket-Intake
54	691111		Screw
163	271139S		Gasket-Air Cleaner
200	691912		Blade-Governor
287	691002		Screw
306	690400		Shield-Cylinder
307	690345		Screw
337	697451		Plug-Spark
358	794209		Gasket Set-Engine
362	793351		Shield-Spark Plug
383	89838S		Wrench-Spark Plug
426	691107		Screw
444	691868		Gasket-Drive Gear Cover
523	692040		Dipstick
523A	691913		Dipstick
524	691876		Seal-Dipstick Tube
525	691320		Tube-Dipstick
529	692189		Grommet
635	66538S		Boot-Spark Plug
668	692889		Spacer
718	690959		Pin-Locating
745	691146		Screw
842	691870		Seal-O Ring
847	691440		Dipstick/Tube Assembly
868	697338		Seal-Valve
869	691701		Seat-Valve
869	699641		Seat-Valve
870	699642		Seat-Valve
870	691702		Seat-Valve
871	231348		Bushing-Valve Guide
871	699643		Bushing-Valve Guide
871	63709		Bushing-Valve Guide
883	691880		Gasket-Exhaust
1058	277038		Operator's Manual
1095	498526		Gasket Set-Valve
1319	794467		Label-Warning
1330	270962		Repair Manual






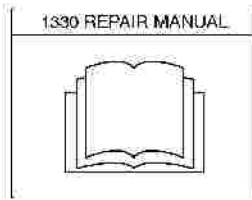 


1319 WARNING LABEL


WARNING

- Read and follow Operating Instructions before running engine.
- Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
- Engines emit carbon monoxide. **DO NOT** run in enclosed area.
- Muffler area temperature may exceed 150°F. Do not touch hot parts.

      REQUIRED when replacing parts with warning labels affixed.

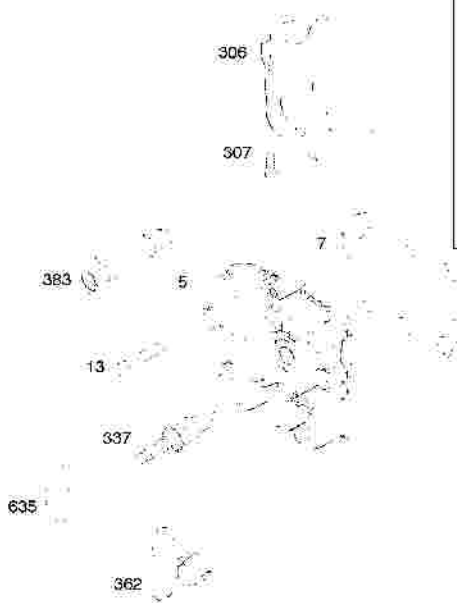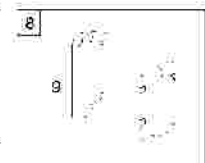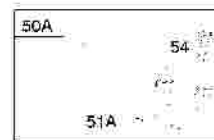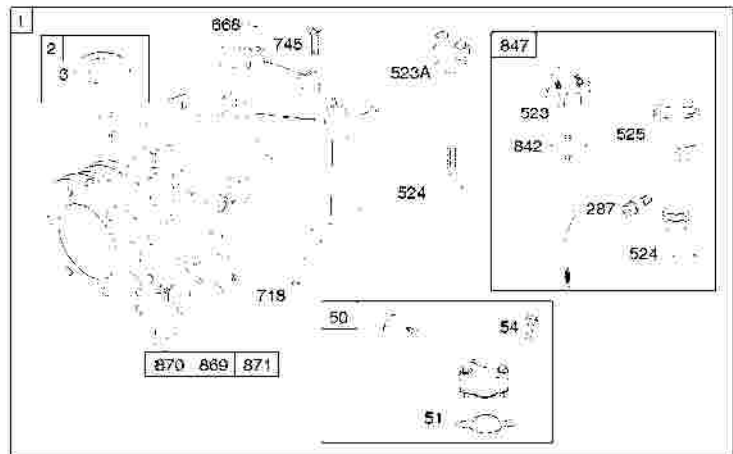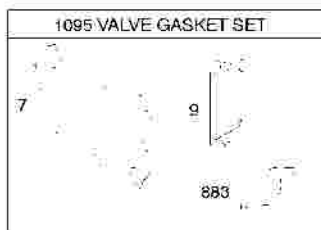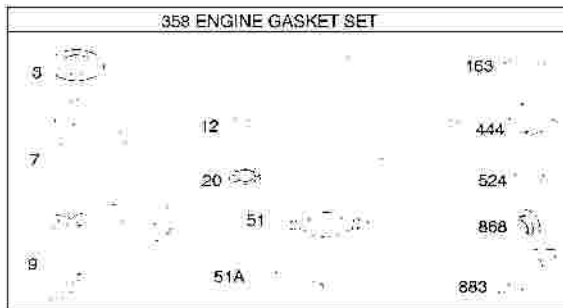

Ref-Nr.	Teilenummer	Menge	Beschreibung
1	699653		Cylinder Assembly
2	399269		Kit-Bushing/Seal
3	299819S		Seal-Oil
5	790169		Head-Cylinder
7	698717		Gasket-Cylinder Head
8	791781		Breather Assembly
9	695890		Gasket-Breather
10	691666		Screw
11	691245		Tube-Breather
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
12	270895		Gasket-Crankcase
13	691640		Screw
20	391483S		Seal-Oil
50	699644		Manifold-Intake
50A	693446		Manifold-Intake
51	699649		Gasket-Intake
51A	270345S		Gasket-Intake
54	691111		Screw
163	271139S		Gasket-Air Cleaner
200	691912		Blade-Governor
287	691002		Screw
306	690400		Shield-Cylinder
307	690345		Screw
337	697451		Plug-Spark
358	794209		Gasket Set-Engine
362	793351		Shield-Spark Plug
383	89838S		Wrench-Spark Plug
426	691107		Screw
444	691868		Gasket-Drive Gear Cover
523	692040		Dipstick
523A	691913		Dipstick
524	691876		Seal-Dipstick Tube
525	691320		Tube-Dipstick
529	692189		Grommet
635	66538S		Boot-Spark Plug
668	692889		Spacer
718	690959		Pin-Locating
745	691146		Screw
842	691870		Seal-O Ring
847	691440		Dipstick/Tube Assembly
868	697338		Seal-Valve
869	691701		Seat-Valve
869	699641		Seat-Valve
870	699642		Seat-Valve
870	691702		Seat-Valve
871	231348		Bushing-Valve Guide
871	699643		Bushing-Valve Guide
871	63709		Bushing-Valve Guide
883	691880		Gasket-Exhaust
1058	277038		Operator's Manual
1095	498526		Gasket Set-Valve
1319	794467		Label-Warning
1330	270962		Repair Manual

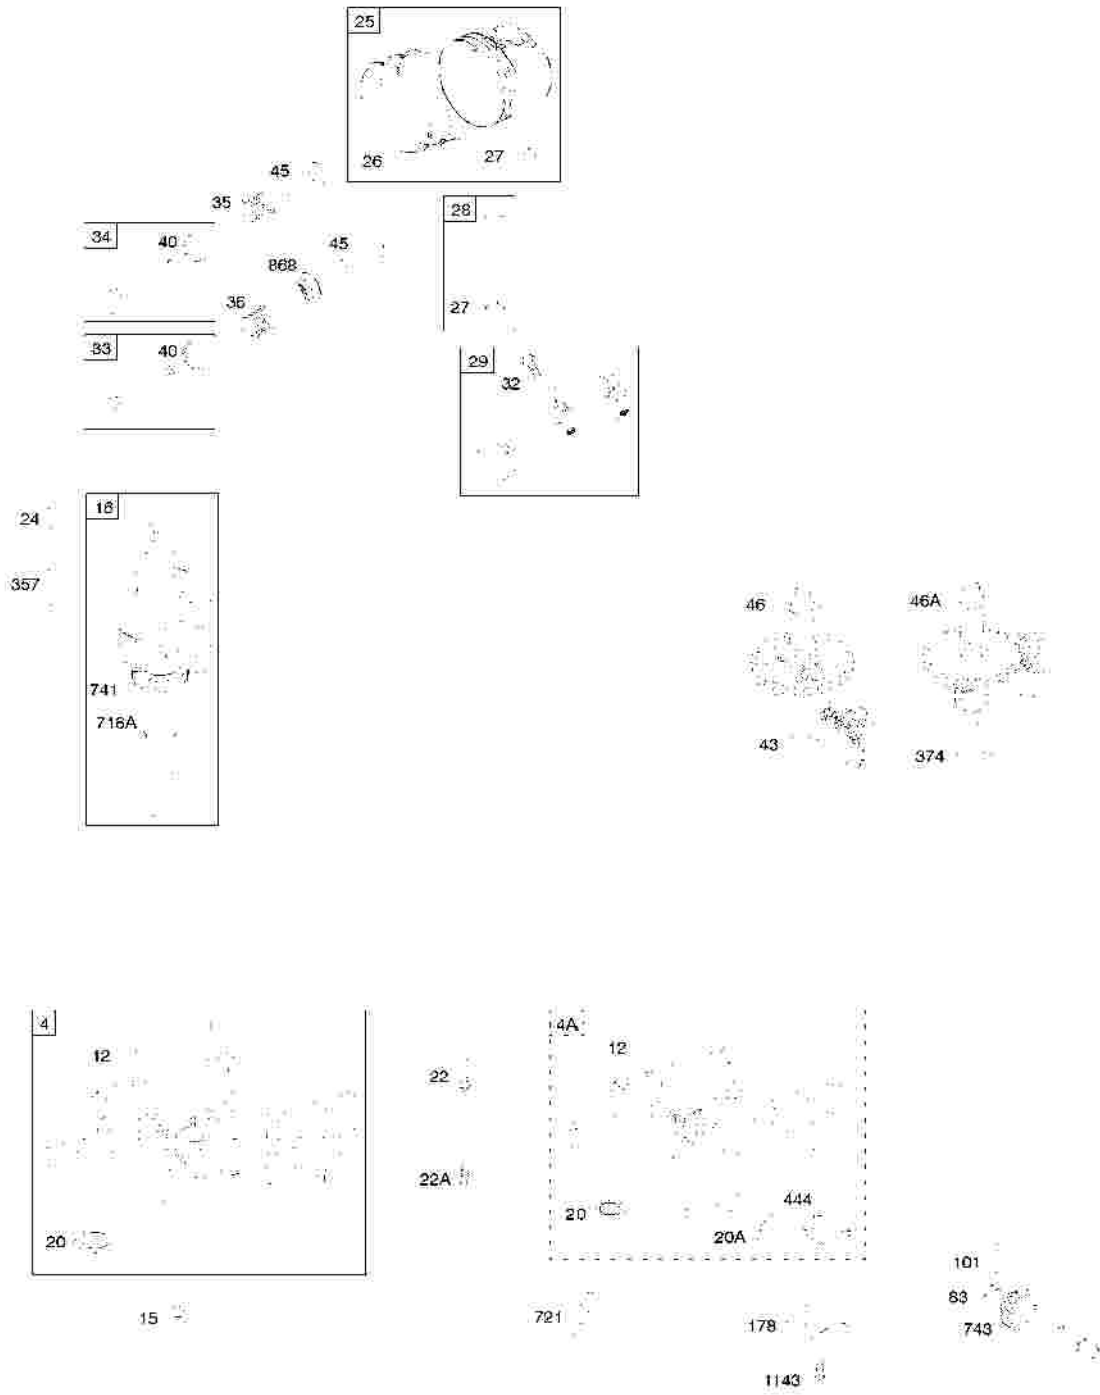 

Ref-Nr.	Teilenummer	Menge	Beschreibung
4	395384		Sump-Engine
4	698691		Sump-Engine
12	270895		Gasket-Crankcase
12	270896		Gasket-Crankcase
12	692218		Gasket-Crankcase
15	691680		Plug-Oil Drain
16	691471		Crankshaft
20	391483S		Seal-Oil
22	692551		Screw
22A	691108		Screw
24	222698S		Key-Flywheel
25	790908		Piston Assembly
25	792532		Piston Assembly
25	699657		Piston Assembly
26	498680		Ring Set
26	498682		Ring Set
26	498683		Ring Set
26	699658		Ring Set
26	795132		Ring Set
26	795134		Ring Set
27	691588		Lock-Piston Pin
28	298909		Pin-Piston
28	699659		Pin-Piston
28	298908		Pin-Piston
29	699654		Rod-Connecting
32	691664		Screw
33	296676		Valve-Exhaust
34	296677		Valve-Intake
35	690520		Spring-Valve
36	690520		Spring-Valve
40	692194		Retainer-Valve
43	691983		Slinger-Governor/Oil
43	698690		Slinger-Governor/Oil
45	691762		Tappet-Valve
46	691998		Camshaft
444	691868		Gasket-Drive Gear Cover
718A	499047		Pin-Locating
741	691805		Gear-Timing
868	697338		Seal-Valve
1143	691141		Screw