



BSQ1000

Parts List



Model No. HPP1714-0 (750 Watt AC Generator)


Manual No. 102017GS Revision 0 (14/05/02)

Visit our website: www.briggspowerproducts.com


Ihr Ersatzteilspezialist im Internet




BSQ1000 Illustrated Parts List

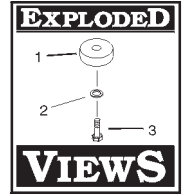

EXPLODED VIEW - MAIN UNIT

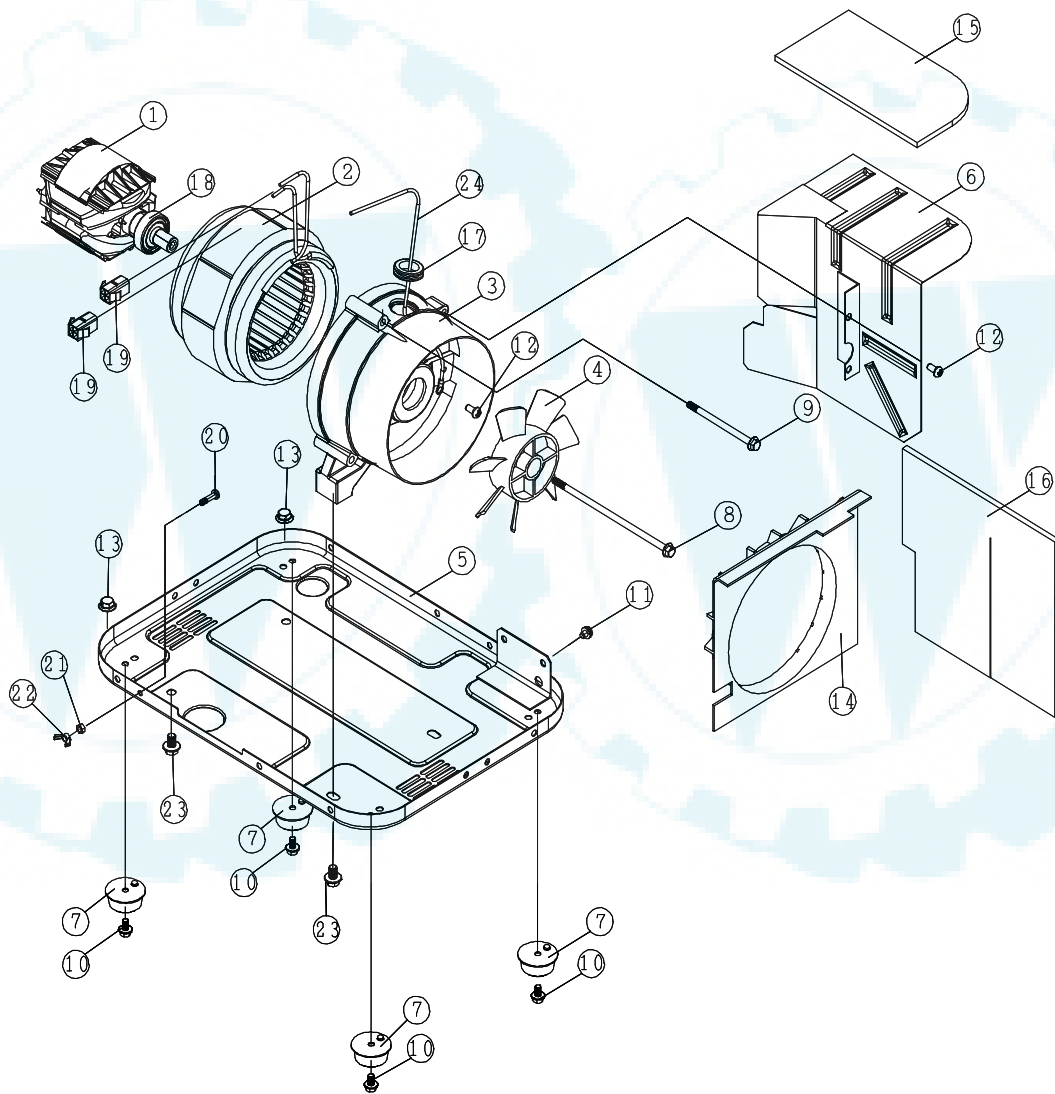

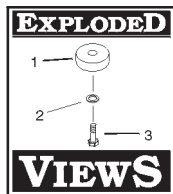

BSQ1000 Illustrated Parts List




PARTS LIST - MAIN UNIT


Item	Part #	Qty.	Description
0	187377GS	1	ENGINE GM82PN-801
1	102000GS	1	ROTOR ASSY
2	102001GS	1	STATOR ASSY
3	187381GS	1	BEARING CARRIER
4	187382GS	1	COOLING FAN
5	187383GS	1	GENERATOR BASE
6	187384GS	1	MUFFLER SHIELD
7	187385GS	4	VIBRATION MOUNT
8	187382GS	1	ROTOR BOLT (M6X160) WITH FLANGE
9	187389GS	3	STATOR BOLT (M6X90) WITH FLANGE
10	187390GS	4	BOLT , HEX HEAD (M6X10) WITH FLANGE
11	187392GS	2	SCREW, PAN HEAD (M6X10) WITH FLAT, LOCK
12	187399GS	3	SELF TAPPING SCREW (M6X12)
13	187401GS	2	NUT, HEX HEAD (M8X1.25) WITH FLANGE
14	187403GS	1	AIR DUCT
15	187405GS	1	HEAT SHIELD SPONGE #1
16	187407GS	1	HEAT SHIELD SPONGE #2
17	187409GS	1	BUSH, LEAD WIRE (G790B)
18	187411GS	1	BEARING
19	187413GS	2	CONNECTOR
20	187415GS	1	SCREW, PAN HEAD (M5X20)
21	187423GS	2	NUT, HEX HEAD (M5X0.8) WITH FLANGE
22	187424GS	2	NUT, WING (M5X0.8)
23	187427GS	4	BOLT, HEX HEAD (M8X12) WITH FLANGE
24	187430GS	1	LEAD WIRE ASSY GRAY




BSQ1000 Illustrated Parts List

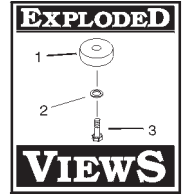

EXPLODED VIEW - ENCLOSURE

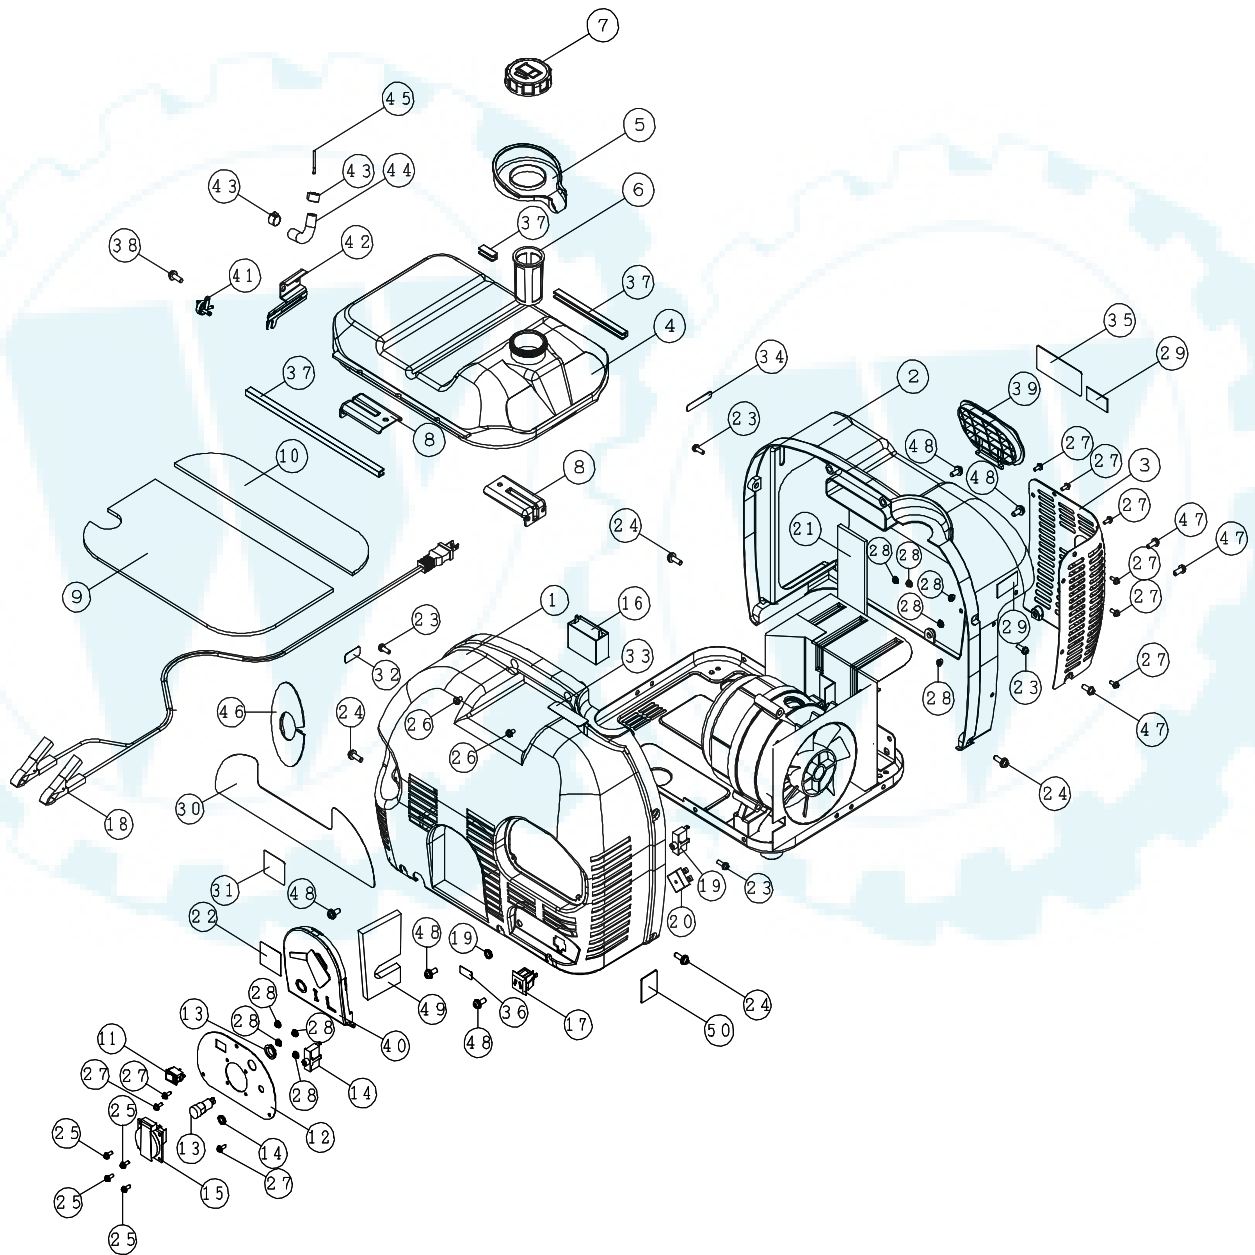

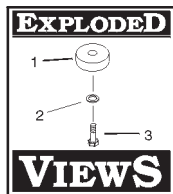

BSQ1000 Illustrated Parts List




PARTS LIST - ENCLOSURE

Item	Part #	Qty.	Description	Item	Part #	Qty.	Description
1	187432GS	1	COVER , GENERATOR PANEL	25	187760GS	4	SCREW, PAN HEAD (M4-12) WITH FLAT
2	187433GS	1	COVER , GENERATOR MUFFLER	26	187759GS	2	BOLT,COVER (M5-10)
3	187435GS	1	COVER , MUFFLER	27	102008GS	9	SCREW, PAN HEAD (M4-12) WITH FLAT,LOCK
4	187437GS	1	TANK , FUEL	28	187761GS	10	NUT, HEX HEAD (M4X0.6) WITH FLANGE
5	187439GS	1	PACKING , TANK	29	102009GS	2	LABEL ,WARNING EXHAUST
6	187438GS	1	FILTER , FUEL INLET	30	102010GS	1	LABEL , MODEL
7	187436GS	1	CAP , FUEL TANK	31	187763GS	1	LABEL , CAUTION OIL
8	187442GS	2	BRACKET , TANK	32	187764GS	1	LABEL , FUEL COCK
9	187447GS	1	SPONGE , HEAT SHIELD FOR TANK #1	33	187765GS	1	LABEL , CAUTION FUEL
10	187448GS	1	SPONGE , HEAT SHIELD FOR TANK #2	34	187766GS	1	LABEL , CHOKE
11	187450GS	1	SWITCH , ENGINE	35	102011GS	1	LABEL , DATA
12	102002GS	1	PANEL , CONTROL,BLANK (230V 50Hz)	36	102012GS	1	LABEL , DC OUTPUT
13	102003GS	1	LAMP , PILOT (250V)	37	187769GS	3	U-PACKING
14	102004GS	1	BREAKER , CIRCUIT (3.5A 250V)	38	187770GS	1	SCREW , PAN HEAD (M5-10) WITH FLAT
15	102005GS	1	RECEPTACLE, OUTLET (250V 16A)	39	187772GS	1	COVER , SPARK PLUG
16	102006GS	1	CAPACITOR (14µF 300V)	40	187773GS	1	COVER , OIL FILLER
17	090418GS	1	DC OUTPUT	41	187443GS	1	FUEL COCK
18	065787GS	1	BATTERY CHARGE CABLE	42	187758GS	1	BRKT, FUEL COCK
19	187460GS	1	BREAKER , CIRCUIT (10A 125V)	43	187579GS	2	HOSE CLIP f14
20	187462GS	1	BRIDGE DIODE	44	187578GS	1	FUEL HOSE
21	187463GS	1	HEAT SHIELD SPONGE FOR MUFFLER SHIELD	45	187440GS	1	FILTER
22	102007GS	1	LABEL , WARNING ELECTRICAL	46	102013GS	1	RECOIL PACKING
23	187756GS	4	BOLT,COVER (M5-16)	47	187775GS	3	BOLT, MUFFLER COVER (M6- 16)
24	187774GS	4	BOLT,COVER (M6-20)	48	187757GS	5	BOLT , COVER (M6-16)
				49	102014GS	1	OIL SIDE SPONGE
				50	102015GS	1	LABEL , SOUND POWER LEVEL
				*	102016GS	1	OWNER'S MANUAL




BSQ1000 Illustrated Parts List

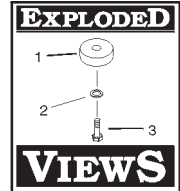


EXPLODED VIEW AND PARTS LIST – ENGINE

Cylinder Block, Cylinder Head

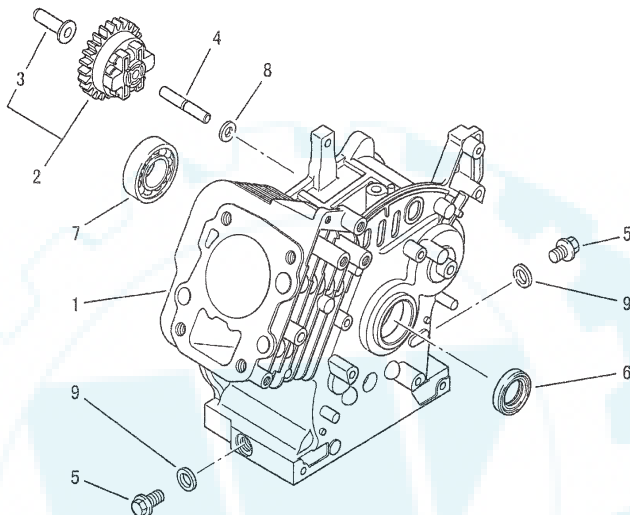


Item	Part #	Qty	Description
1	187380GS	1	BLOCK, CYL
2	187386GS	1	ASSY, GOV, GEAR
3	187387GS	1	SLIDER, GOV
4	187391GS	1	SHFT, GOV
5	187393GS	2	PLUG, DRAIN
6	187394GS	2	SEAL, OIL
7	187395GS	1	BRG, BALL
8	187400GS	1	WSHR, CYLBLOCK
9	187402GS	2	GSKT, CYLBLOCK

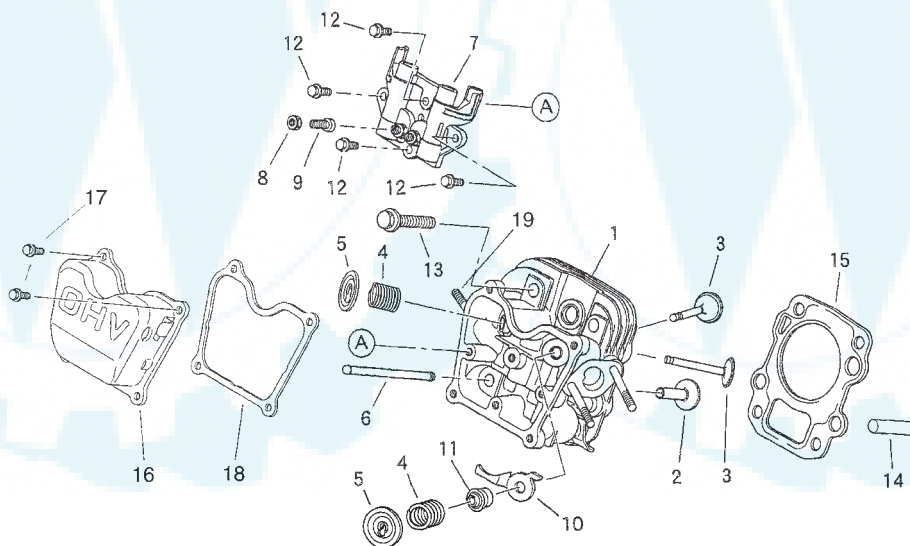

Item	Part #	Qty	Description
1	187404GS	1	ASSY, CYL HEAD
2	187406GS	2	TPPT, CYL HEAD
3	187408GS	2	VLV, EXH
4	187410GS	2	SPRNG, VLV
5	187412GS	2	RTNR, VLV SPG
6	187414GS	2	ROD, PUSH
7	187416GS	1	ASSY, RCKR, ARM
8	187417GS	2	NUT, CYL HEAD
9	187418GS	2	SCRW, ADJST
10	187421GS	1	PLT, CYL HEAD

Item	Part #	Qty	Description
11	187422GS	1	SEAL, VLV STEM
12	187423GS	4	BOLT, FLNG
13	187426GS	4	BOLT, FLNG
14	187428GS	2	PIN, DWL
15	187429GS	1	GSKT, HEAD
16	187468GS	1	CVR, VALVE
17	187470GS	4	BOLT, VALVE CVR
18	187472GS	1	GSKT, VALVE CVR
19	187569GS	2	BOLT, STUD

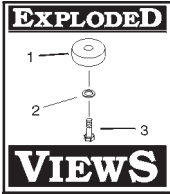


BSQ1000 Illustrated Parts List



EXPLODED VIEW AND PARTS LIST – ENGINE

Crankcase Cover, Crankshaft/Camshaft

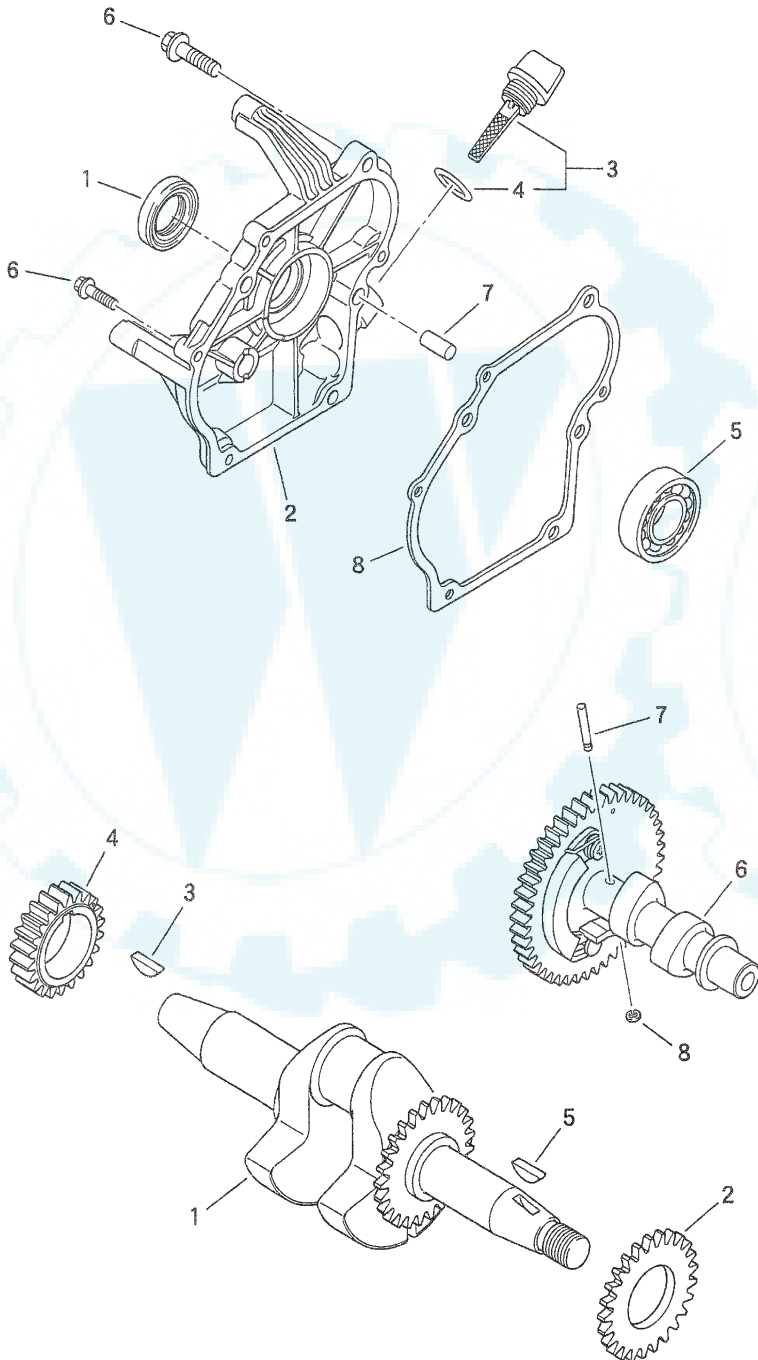


Item	Part #	Qty	Description
1	187394GS	2	SEAL, OIL
2	187473GS	1	CVR, CRANKCASE
3	187474GS	1	DIPSTICK, OIL
4	187475GS	1	O-RING, DIPSTICK
5	187477GS	1	BRG, PTO
6	187478GS	6	BOLT, CRANKCASE CVR
7	187428GS	2	PIN, DWL
8	187479GS	1	GSKT, CRANKCASE CVR

Item	Part #	Qty	Description
1	187481GS	1	ASSY, CRNKSHFT
2	187484GS	1	GEAR, CRNKSHFT
3	187486GS	2	KEY, WOODRFF
4	187487GS	1	GEAR, CRNKSHFT
6	187488GS	1	ASSY, CAMSHAFT
7	187489GS	1	PIN, CMPR REL
8	187490GS	1	RNG, SNP, CMPRSSN REL




BSQ1000 Illustrated Parts List

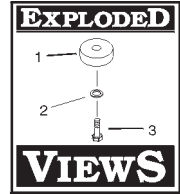


EXPLODED VIEW AND PARTS LIST – ENGINE


Piston/Rod, Magneto/Flywheel, Air Cleaner

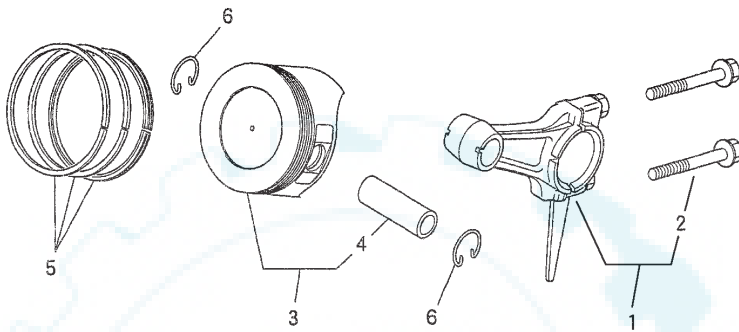


Item	Part #	Qty	Description
1	187526GS	1	ROD, CNNCTNG, STD
1	187527GS	1	ROD, CNNCTNG, US.25
1	187528GS	1	ROD, CNNCTNG, US.50
2	187529GS	2	BOLT, CNNCTNG ROD
3	187530GS	1	ASSY, PSTN, STD
3	187531GS	1	ASSY, PSTN, OS.25
3	187532GS	1	ASSY, PSTN, OS.50
4	187533GS	1	PIN, PISTON
5	187534GS	1	SET, RING, PSTN, STD
5	187535GS	1	SET, RING, PSTN, OS.25
5	187537GS	1	SET, RING, PSTN, OS.50
6	187539GS	2	CLIP, SPRING, PSTN PIN

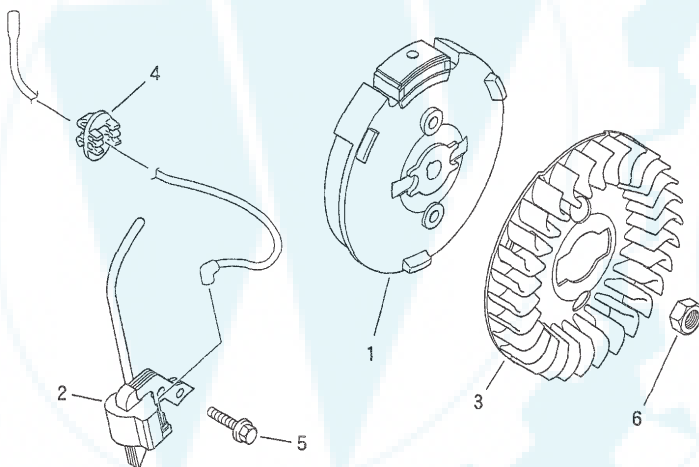

Item	Part #	Qty	Description
1	187540GS	1	FLYWHL
2	187541GS	1	COIL, IGNITION
3	187543GS	1	FAN
4	187544GS	1	CLIP, MAGNETO
5	187545GS	2	BOLT, MAGNETO
6	187546GS	1	NUT

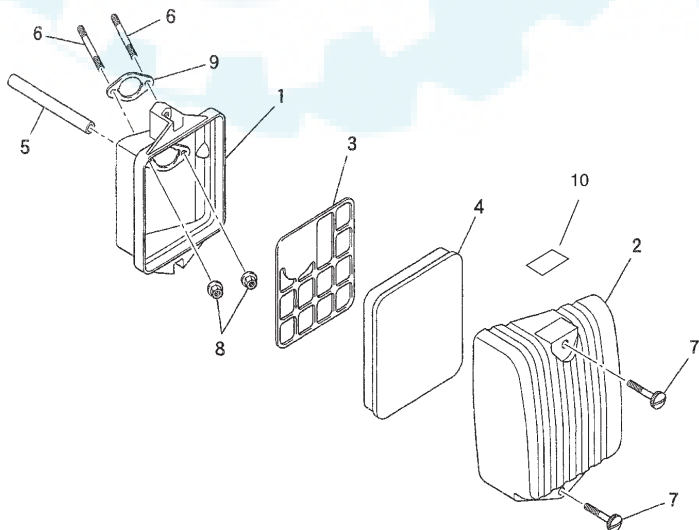

Item	Part #	Qty	Description
1	187492GS	1	HSNG, AIR CLNR
2	187494GS	1	CVR, AIR CLNR
3	187496GS	1	SPRT, AIR CLNR
4	187497GS	1	ELEMENT, AIR CLNR
5	187498GS	1	BRTHR, AIR CLNR
6	187500GS	2	STUD, AIR CLNR
7	187501GS	2	SCREW, AIR CLNR CVR
8	187503GS	2	NUT, AIR CLNR CVR
9	187504GS	1	GSKT, CARB
10	187576GS	1	DECAL, CHOKE

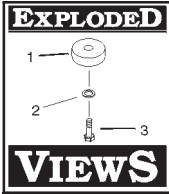


BSQ1000 Illustrated Parts List




EXPLODED VIEW AND PARTS LIST – ENGINE

Carburetor, Control/Linkages

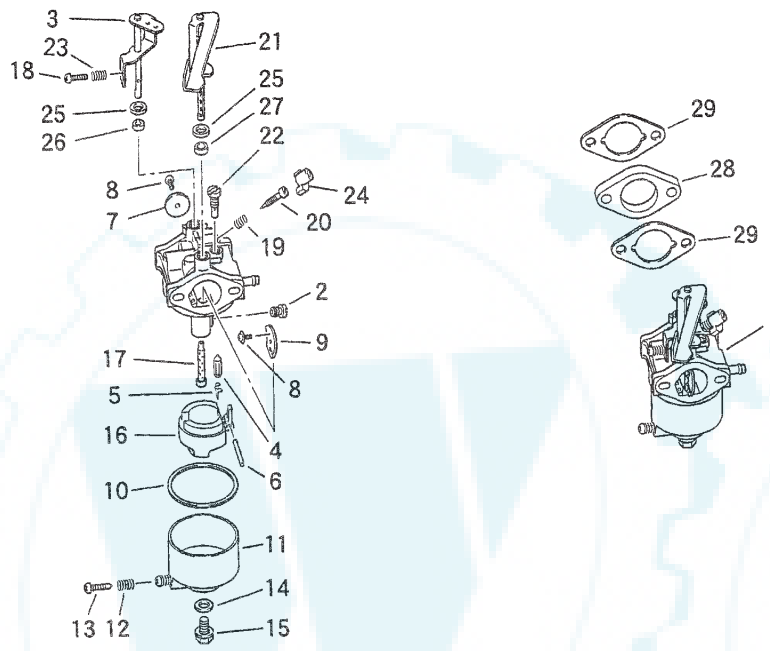


Item	Part #	Qty	Description
1	187469GS	1	CARB, COMPLETE
2	187471GS	1	JET, MAIN
3	187476GS	1	SHFT, THROTTL
4	187480GS	1	VLV, NEEDLE
5	187482GS	1	CLIP, CARB
6	187483GS	1	PIN, CARB
7	187485GS	1	VLV, THRTTL
8	187491GS	3	HHCS, CARB
9	187493GS	1	VLV, CHOKE
10	187495GS	1	GSKT, CARB
11	187499GS	1	CHMBR, FLOAT
12	187502GS	1	SPRING, CARB
13	187509GS	1	HHCS, CARB
14	187511GS	1	GSKT, CARB
15	187525GS	1	BOLT, CARB
16	187536GS	1	FLOAT, CARB
17	187538GS	1	NZZL, MAIN, CARB
18	187542GS	1	HHCS, CARB
19	187502GS	1	SPRING, CARB
20	187547GS	1	ADJSTR, CARB
21	187548GS	1	LEVER, CHOKE
22	187549GS	1	JET, PILOT
23	187550GS	1	SPRING, CARB
24	187551GS	1	CAP, CARB
25	187552GS	2	PACKING, CARB
26	187553GS	1	SEAL, CARB
27	187554GS	1	SEAL, CARB
28	187556GS	1	INSLTR, CARB
29	187504GS	2	GSKT, CARB

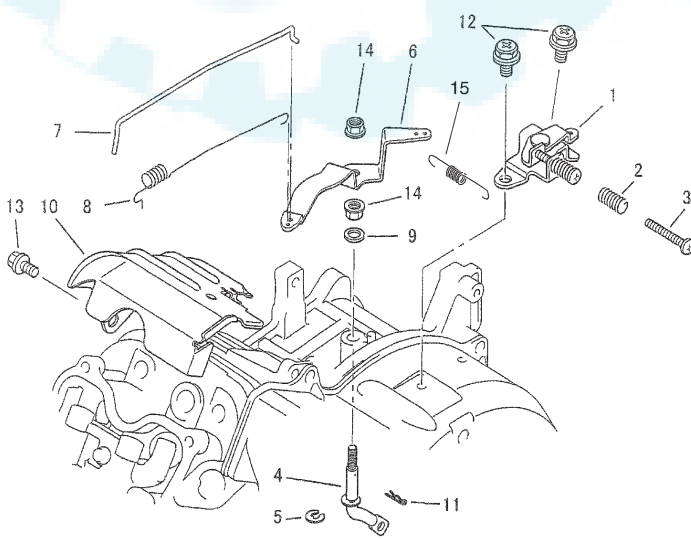

Item	Part #	Qty	Description
1	187505GS	1	BRKT, SPEED CNTRL
2	187506GS	1	SPRING, SPEED CNTRL
3	187507GS	1	SCREW, SPEED CNTRL
4	187508GS	1	SHFT, GOV
5	187510GS	1	RING, SNAP, GOV ROD
6	187512GS	1	LEVER, GOV
7	187513GS	1	ROD, GOV
8	187514GS	1	SPRING, GOV LEVER
9	187515GS	1	WSHR, GOV LEVER
10	187516GS	1	CVR, TOP
11	187517GS	1	CLIP, GOV ROD
12	187518GS	1	BOLT, SPEED CNTRL BKT
13	187519GS	1	BOLT, TOP CVR
14	187520GS	2	NUT, GOV LEVER
15	187570GS	1	SPRING, GOV




BSQ1000 Illustrated Parts List

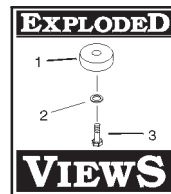


EXPLODED VIEW AND PARTS LIST – ENGINE


Fan Cover, Recoil Starter, Oil Sensor

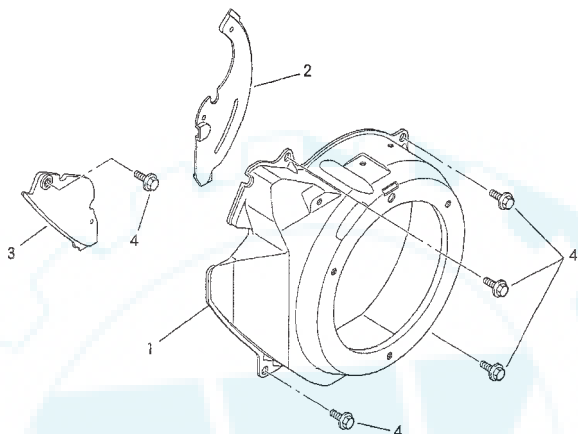


Item	Part #	Qty	Description
1	187521GS	1	CVR, FAN
2	187522GS	1	CVR, FAN
3	187523GS	1	CVR, FAN
4	187524GS	4	BOLT, FAN CVR

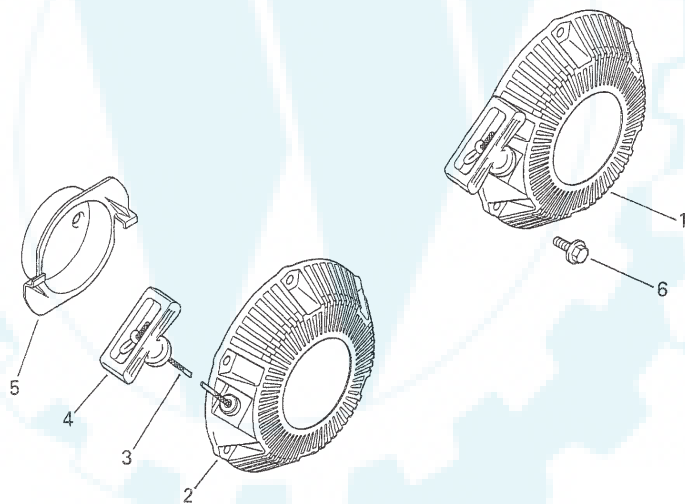

Item	Part #	Qty	Description
1	187557GS	1	ASSY, RECOIL, STRTR
2	187558GS	1	STRTR, RECOIL
3	187559GS	1	ROPE, RECOIL
4	187560GS	1	HNDL, RECOIL
5	187561GS	1	PULLEY, STRTR
6	187562GS	3	BOLT, FLNG

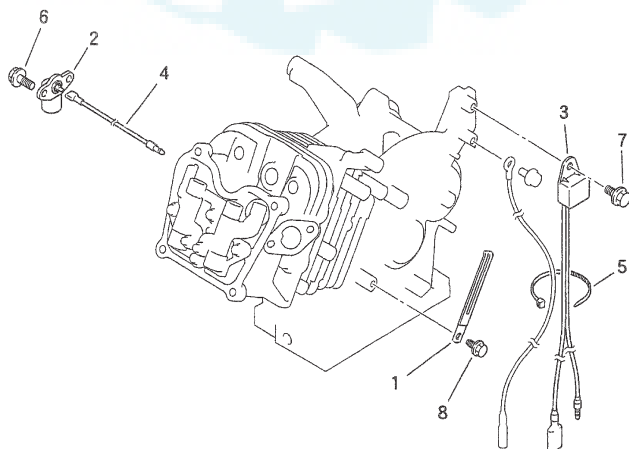

Item	Part #	Qty	Description
1	187563GS	1	CLAMP, OILSNSR
2	187564GS	1	SNSR, OIL
3	187565GS	1	UNIT, OILSNSR
4	187566GS	1	WIRE, LEAD
5	187567GS	1	BAND, OILSNSR
6	187470GS	2	BOLT, VALVE CVR
7	187524GS	1	BOLT, FAN CVR
8	187568GS	1	BOLT, FLNG

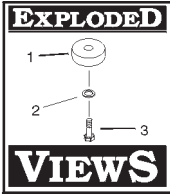


BSQ1000 Illustrated Parts List



EXPLODED VIEW AND PARTS LIST – ENGINE

Lead Wires, Muffler, Gasket Set

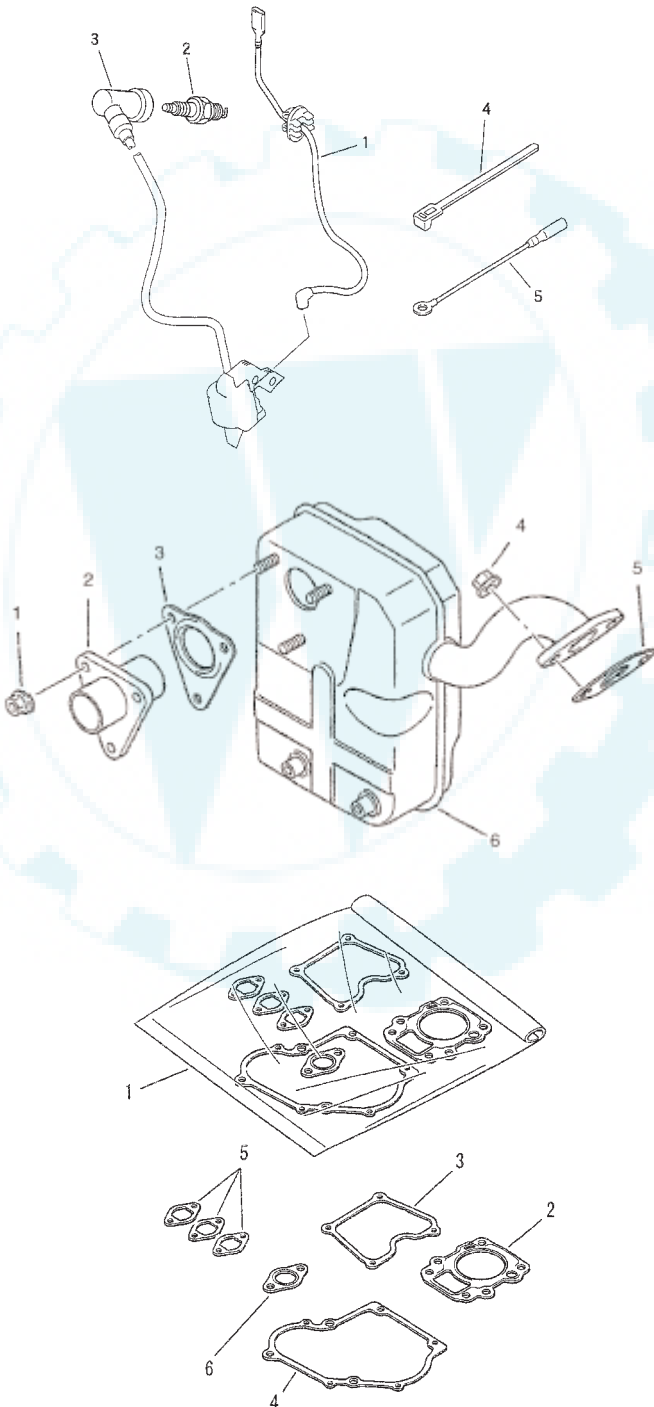

Item	Part #	Qty	Description
1	187571GS	1	WIRE, LEAD
2	187572GS	1	PLUG, SPARK
3	187573GS	1	CAP, PLUG
4	187574GS	1	TIEWRAP, LEAD WIRE
5	187575GS	1	WIRE, LEAD

Item	Part #	Qty	Description
1	187449GS	3	NUT, FLNG
2	187445GS	1	PIPE, TAIL
3	187446GS	1	NUT, MFFLR
4	187455GS	2	NUT, CONICAL
5	187451GS	1	GSKT, MFFLR
6	187444GS	1	MFFLR

Item	Part #	Qty	Description
1	187461GS	1	SET, GSKT (Includes items 2-6)
2	187429GS	1	GSKT, HEAD
3	187472GS	1	GSKT, VALVE CVR
4	187479GS	1	GSKT, CRANKCASE CVR
5	187504GS	3	GSKT, CARB
6	187451GS	1	GSKT, MFFLR



NOTES
