


B070

Ausgabe Issue		Bild Nr Picture No		SWING 45 EA		SWING 45 EA		Seite Page	
2003- 1		B070						10	
Pos. Fig.	Anzahl/Quantity			Artikel Nr. Part No	Bezeichnung	Description	Satz Kit	Anmerkung Notes	
	701 837	701 838							
X	1	1	1	1117-3262-03	Chassie- grün.....	Chassis- green .....			
	2	1	1	1117-1160-01	Hinterachse .....	Shaft- backside.....			
	3	2	2	9595-0212-00	Spannstift .....	Locating pin .....			
	4	2	2	1117-3256-01	Raddeckel .....	Wheel protection cap .....			
	5	1	1	1117-1174-01	Höheneinstellhebe .....	Height adjust lever .....			
	6	2	2	1111-2663-01	Rad .....	Wheel .....			
	7	2	2	9699-0037-02	Scheibe .....	Washer .....			
	8	1	1	1117-3008-01	Leitschiene- hintere .....	Baffle- rear .....			
	9	18	18	9836-9516-12	Schraube .....	Screw .....			
	10	1	1	1117-1156-02	Klappe- schwarz .....	Rear flap- black .....			
	11	1	1	1117-1143-01	Achse.....	Shaft .....			
	12	1	1	1117-1126-01	Feder .....	Spring- rear flap .....			
	13	1	1	1117-1155-02	Klapphalterung- schw. ....	Flap holder- black .....			
	14	1	1	1117-3007-01	Leitschiene- vordere .....	Baffle- front .....			
	15	2	2	1117-3223-01	Ansatzbolzen .....	Shoulder bolt .....			
	16	4	4	9716-0831-02	Mutter .....	Nut .....			
	17	2	2	1117-3009-01	Radplatte .....	Wheel plate .....			
	18	2	2	1117-3075-01	Druckstift .....	Press nail .....			
	19	1	1	1117-1157-02	Behälterdeckel- schwar. ....	Grassbag cover- black .....		Inkl. 37	
	20	2	2	1111-3163-01	Rad .....	Wheel .....			
	21	2	2	1117-3224-02	Nabenkapsel- weiß.....	Hub cap- white .....			
	22	2	2	1111-2815-03	Nabenkapsel- weiß.....	Hub cap- white .....			
	23	4	4	1117-1131-01	Mutter .....	Nut .....			
	24	5	5	9699-0028-02	Scheibe .....	Flat washer .....			
	25	1	1	9579-0009-00	• Kabelhalter .....	• Cable restrainer .....			
	26	2	2	1117-3194-01	Verriegelungsrads .....	Locking knob .....			
	27	2	2	1117-1192-01	Isolierplatte .....	Isolation .....			
	28	4	4	1117-3046-01	Bolzen .....	Bolt .....			
	29	2	2	9579-0008-00	Kabelhalter .....	Cable holder .....			
	30	1	1	1117-1355-01	Schlüssel .....	Socket wrench .....			
	31	6	6	9799-0831-02	Mutter .....	Nut .....			
	32	1	1	9799-0631-02	Mutter .....	Nut .....			
	33	1	1	1117-3047-01	Führungsholm- Untert. ....	Handlebar- lower part .....			
	34	1	1	1111-9724-01	Messer.....	Blade .....			
	35	1	1	1117-1218-01	Behälter- Unterteil .....	Lower grass bag .....			
	36	1	1	9595-0258-00	Spannstift .....	Locating pin .....			
	37	1	1	1117-1135-02	• Deckel- schwarz.....	• Cover- black .....			
	38	1	1	9997-0880-16	Schraube .....	Screw .....			
	39	2	2	1117-1161-01	Radschutz.....	Wheel protection .....			
	40	1	1	1117-1151-01	Messerhalter.....	Blade mount .....			
	41	2	2	9898-0855-12	Schraube .....	Screw .....			
	42	1	1	1117-1357-01	• Fenster .....	• Window for cap .....			
	43	2	2	9997-0870-16	Schraube .....	Screw .....			
	44	1	1	1117-1368-01	El.Motor .....	El. motor .....			
	45	1	1	1117-1299-01	Ventilator .....	Impeller .....			
	46	1	1	9400-0224-00	Kondensator .....	Capacitor .....			
	47	1	1	1117-1386-01	Motorhaube- grün.....	Motor cover- green .....		Inkl. 42	
	48	2	2	9997-0614-16	Schraube .....	Screw .....			
	49	2	2	1117-1175-01	Scheibe.....	Washer .....			
	50	1	1	1117-1120-01	Feder .....	Spring .....			
	51	2	2	9591-0011-00	Stift .....	Pin .....			
	52	2	2	1117-1083-01	Schließring .....	Safety ring .....			
	53	4	4	1111-2830-01	Stützscheibe .....	Support washer .....			
	54	2	2	1111-3075-01	Zahnrad- plastikrad .....	Pinion- plastic wheel .....			
	55	1	1	1117-1190-01	Kupplungsdraht .....	Clutch cable .....		Inkl. 72	
	56	1	1	1117-1114-01	Drahthalter.....	Support .....			
	57	1	1	1117-1372-02	Motorgehäuse- schwarz .....	Motor mount- black .....			
	58	1	1	9865-0616-16	Schraube .....	Screw .....			
X	59	1	1	1111-9725-01	Keilriemen .....	V- belt .....			
	60	3	3	9678-0009-02	Schloßscheibe .....	Lock washer .....			
	61	10	10	9699-0062-02	Scheibe.....	Flat washer .....			
	62	1	1	1117-1147-01	Riemenschutz.....	Transmission cap .....			
	63	1	1	1117-3266-01	Riemenscheibe .....	Pulley .....			

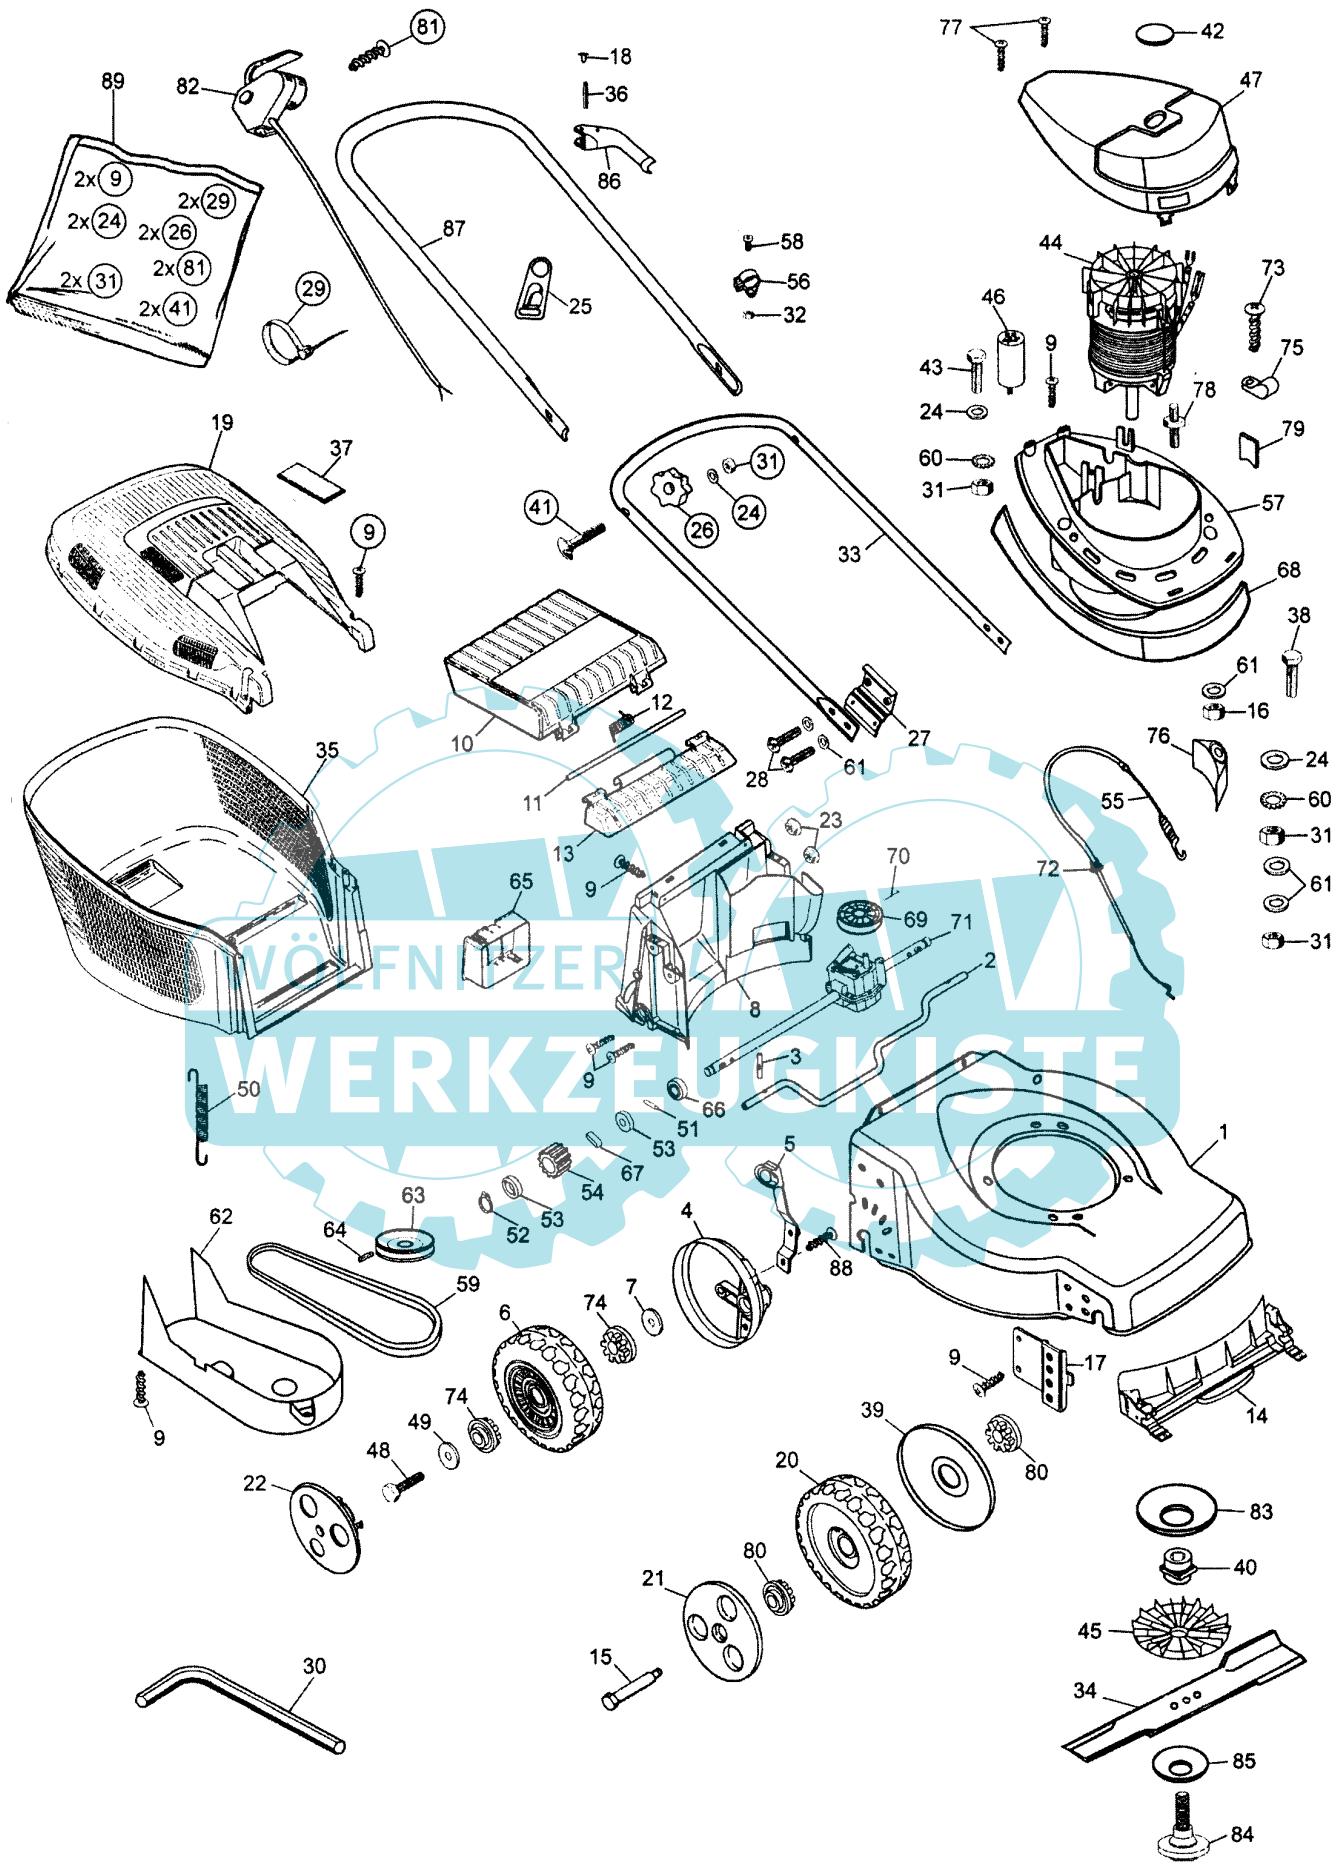

B070



Ausgabe Issue		Bild Nr Picture No		SWING 45 EA		SWING 45 EA		Seite Page	
2003- 1		B070						12	
Pos. Fig.	Anzahl/Quantity			Artikel Nr. Part No	Bezeichnung	Description	Satz Kit	Anmerkung Notes	
	701 837	701 838							
64	1	1		9907-0610-16	Schraube .....	Screw .....			
65	1	1		1111-2927-01	Batteriehalter .....	Battery holder .....			
66	2	2		9549-0053-00	Kugellager .....	Ball bearing .....			
67	2	2		1111-3256-01	Treibkeil .....	Drive key .....			
68	1	1		1117-1373-02	Motorschutz- schwarz .....	Motor cover- black .....			
69	1	1		1117-3018-01	• Riemenscheibe .....	• Pulley .....			
70	1	1		1111-2382-01	• Stift .....	• Pin .....			
X 71	1	1		1117-3376-01	Getriebe .....	Transmission .....		Inkl. 69, 70	
72	1	1		1134-3203-04	• Kabelhülse .....	• Cable protector .....			
73	1	1		9849-7819-16	Schraube .....	Screw .....			
74	4	4		1111-1273-01	Buchse .....	Bushing .....			
75	1	1		1117-1245-01	Kabelklemme .....	Cable clamp .....			
76	3	3		1117-1361-01	Motorstütz .....	Motor support .....			
77	2	2		9836-9116-12	Schraube .....	Screw .....			
78	4	4		1117-1112-01	Bolzen .....	Bolt .....			
79	1	1		1117-1359-01	Klemme .....	Clamp .....			
80	4	4		1117-3012-01	Lagerbuchse .....	Wheel bush .....			
81	2	2		9836-9225-12	Schraube .....	Screw .....			
82	1			1117-3094-01	Schalter .....	Switch .....			
82		1		1117-3372-01	Schalter .....	Switch .....		die Schweiz	
83	1	1		1117-1358-01	Schutz .....	Motor shaft protectio .....			
84	1	1		1111-9715-01	Messerbolzen .....	Blade bolt .....			
85	1	1		1117-1111-01	Messerscheibe .....	Disc washer .....			
86	1	1		1117-3222-01	Regulierbügel .....	Control lever .....			
X 87	1	1		1117-3161-01	Führungsholm- Oberteil .....	Handle- upper .....		Inkl. 25	
88	2	2		9836-9512-12	Schraube .....	Screw .....			
89	1	1		1117-3044-01	Montagesatz .....	Assy kit .....			