


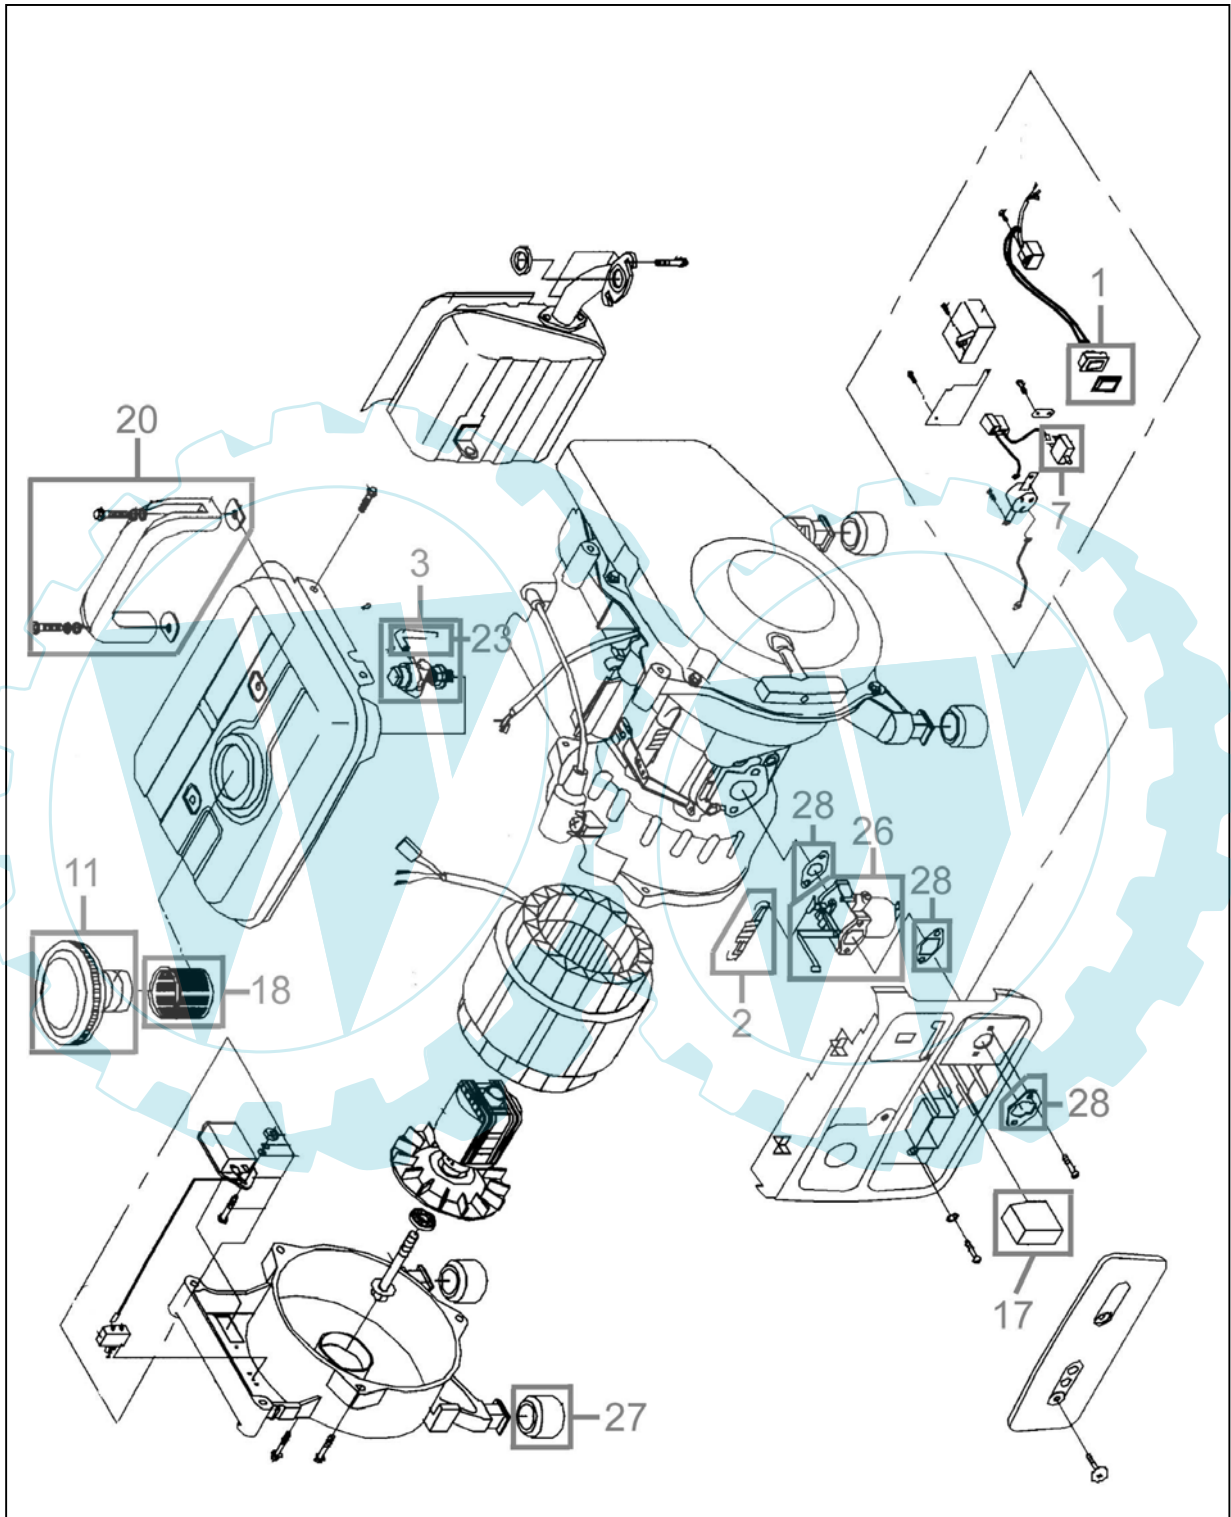

40626


Abb.1





40626

Abb.2

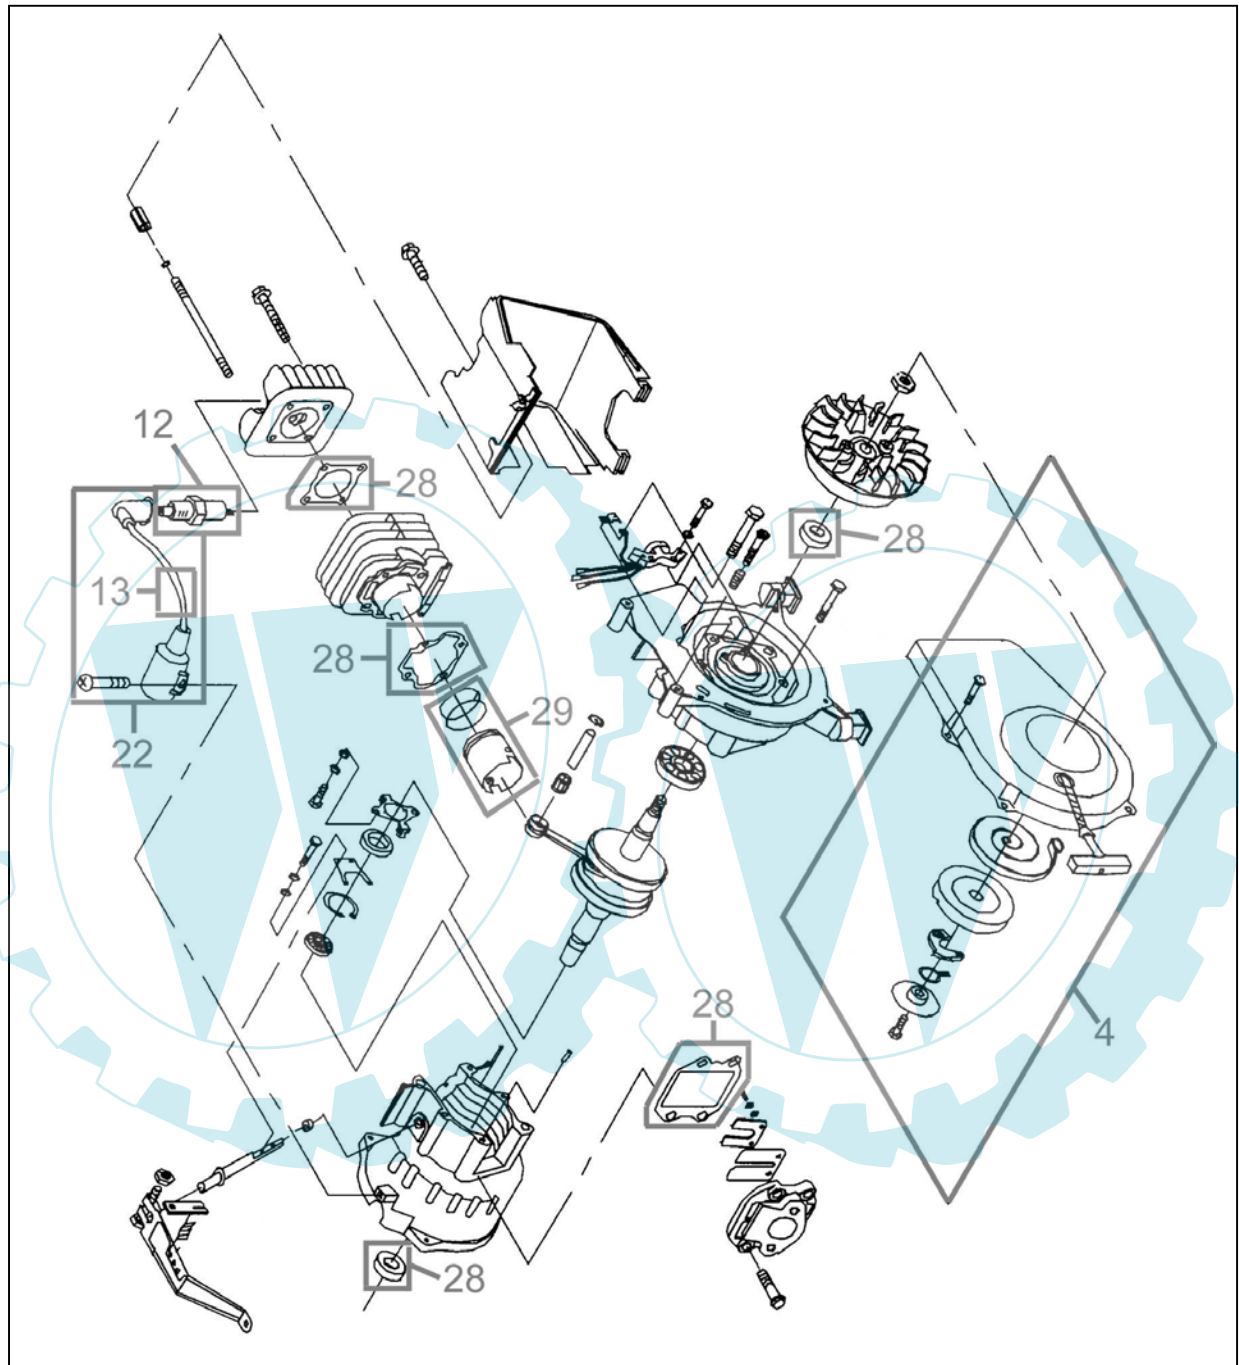



40626

Pos.-Nr.	Ersatzteil-Nr.	Bezeichnung <u>Abb.1</u>	Pos.-Nr.	Ersatzteil-Nr.	Bezeichnung <u>Abb.2</u>
001	40626-02001	Schalter	004	40626-02004	Seilzugstarter
002	40626-02002	Kaltstart	012	40626-02012	Zündkerze
003	40626-02003	Benzinhahn	013	40626-02013	Zündkabel
007	40626-02007	Überlastschalter	022	40626-02022	Zündspule
011	40626-02011	Tankdeckel	028	40626-02028	Dichtungssatz Motor kpl.
017	40626-02017	Luftfilter	029	40626-02029	Kolben kpl.
018	40626-02018	Benzinfilter	o.Abb.	40626-02005	Kontrollleuchte
020	40626-02020	Griff	o.Abb.	40626-02009	Steckdose
023	40626-02023	Benzinschlauch	o.Abb.	40626-02014	Zündkerzenschlüssel
026	40626-02026	Vergaser	o.Abb.	40626-02021	Kondensator
027	40626-02027	Gummifuß	o.Abb.	40626-02024	Ölbecher
028	40626-02028	Dichtungssatz Motor kpl.	o.Abb.	40626-02030	Zündwiderstand

