

BV32

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Note !

To identify correct part number, check trimmer type at the end of the serial number decal.

Example of serial number; 02134N401525-2

The -2 tells it is a type 2.

02 means it was build in 2002.

The 134 means it was built on the 134th day of that year.

The 401525 is the individual serial number for that particular unit.

PARTS LIST NO. 530068885 - 8/07/02	
PAGE NO. 1	REPLACES 530068885-9/13/01


Jonsered® PARTS LIST

MODEL:
BV32

Note: Illustrations may differ from actual models due to design changes

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

TYPE 1

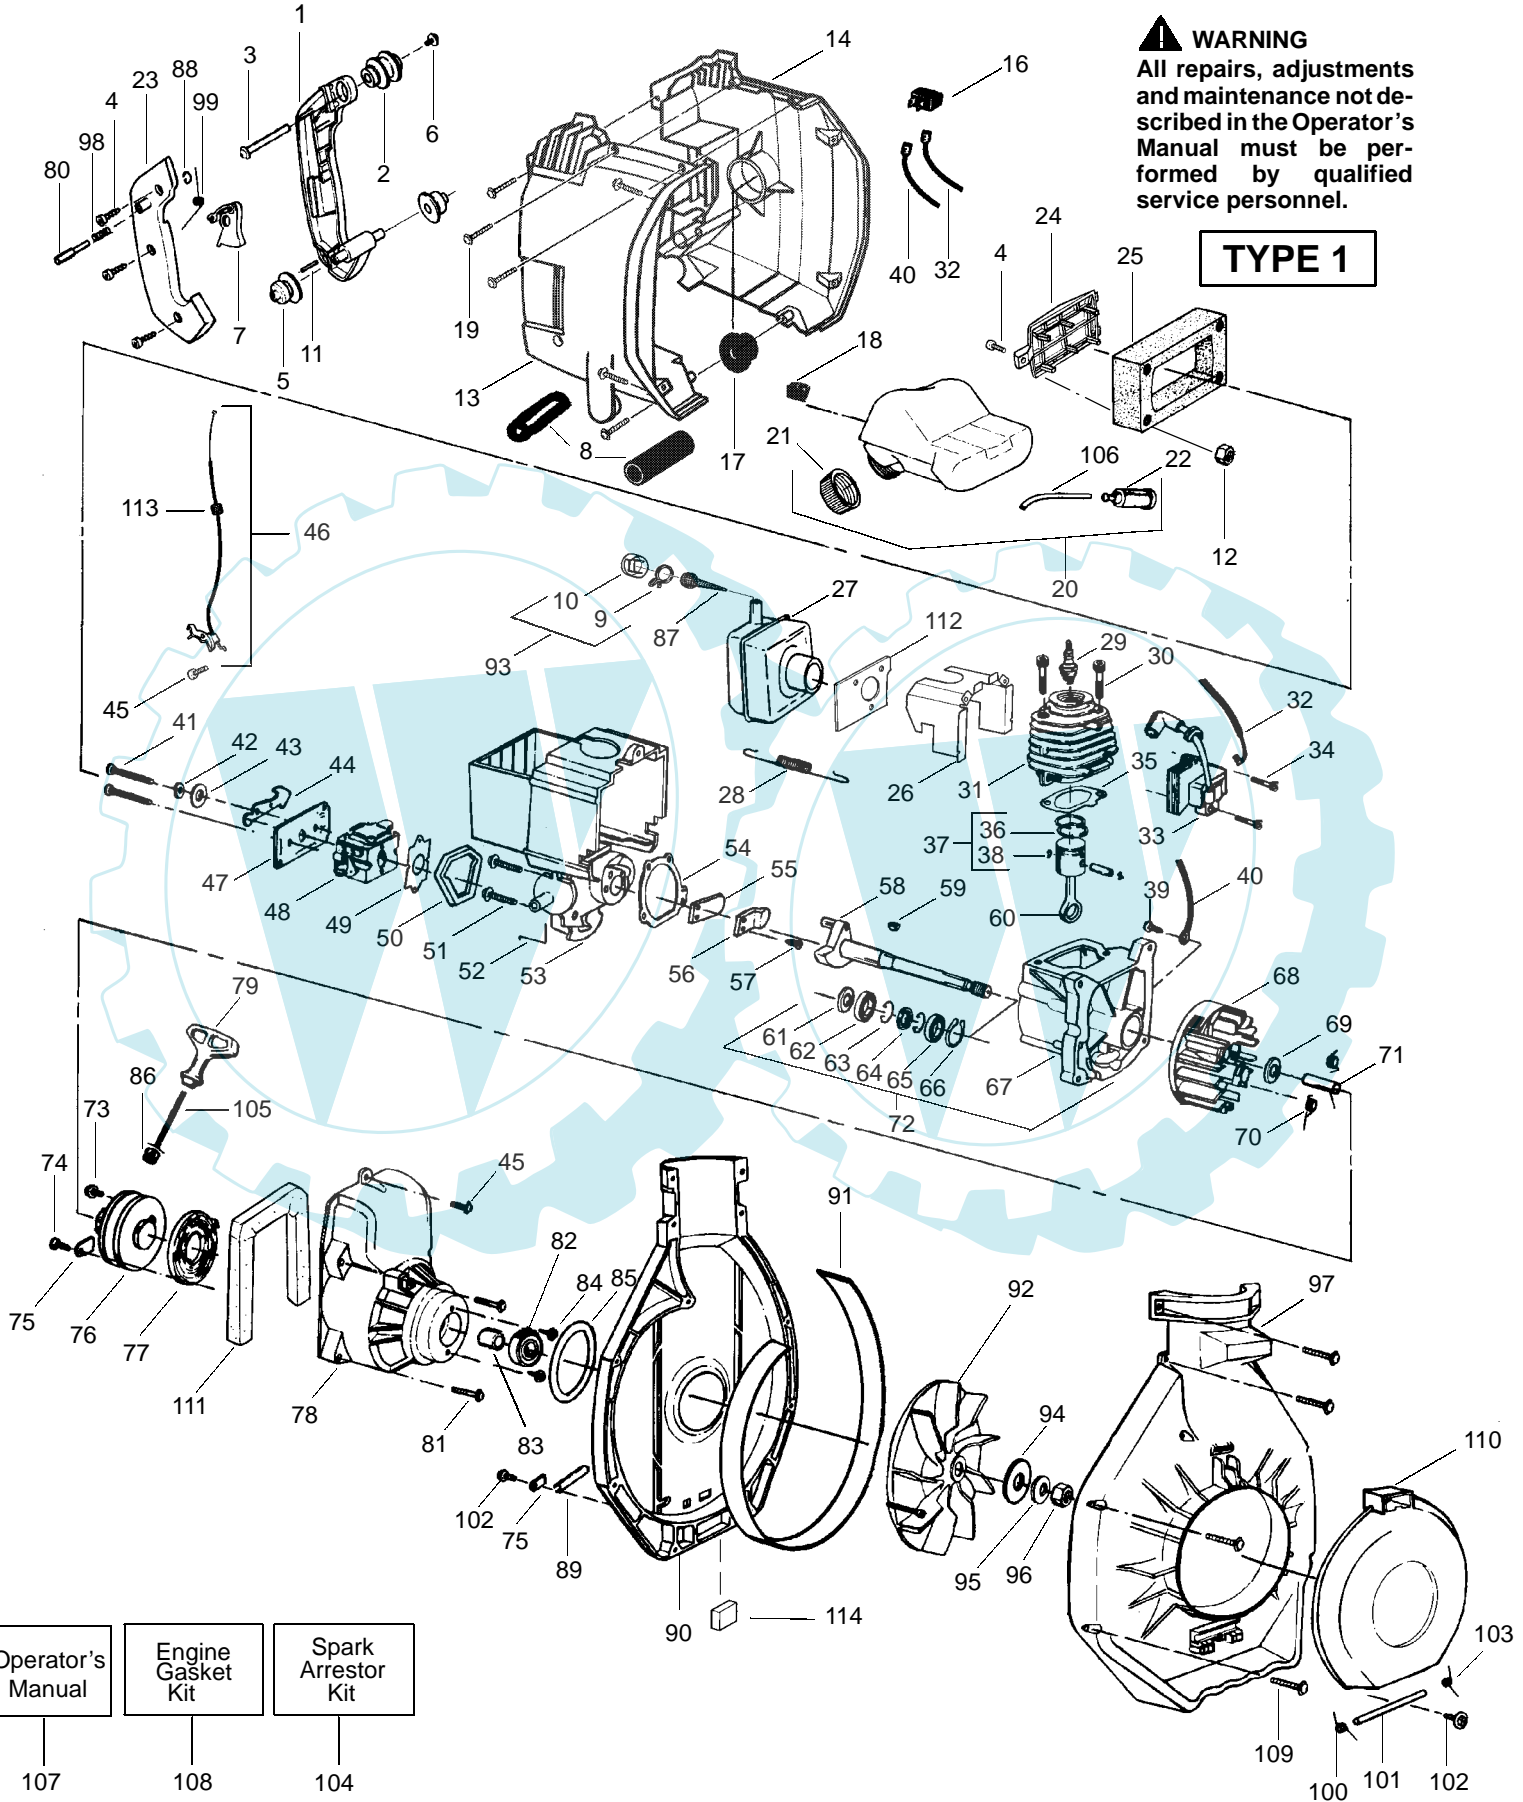

PARTS LIST NO. 530068885 - 8/07/02		Jonsered PARTS LIST	MODEL: BV32
PAGE NO. 2	REPLACES 530068885-9/13/01		Note: Illustrations may differ from actual models due to design changes

Key No.	Part No.	Description	TYPE 1	Key No.	Part No.	Description	TYPE 1
1	530094712	Handle		64	530019158	Crankshaft Seal	
2	530026994	Front Isolator		65	530032102	Outer Bearing	
3	530029111	Spacer - Isolator		66	530015789	Retaining Ring	
4	530015635	Screw		67	530014016	Crankcase Assy.	
5	530029130	Rear Isolator		68	530039189	Flywheel Assy.	
6	530015813	Screw		69	530347987	Washer	
7	530029072	Trigger		70	530023817	Starter Dog Spring	
8	530037595	Assist Handle Ass'y		71	★	Spacer- See Service Ref. 3	
9	530029228	Spark Arrestor Clamp		72	530014156	Crankcase/Crankshaft Assy.	
10	530029988	Exhaust Deflector Ass'y.		73	530016080	Screw	
11	530015840	Pin - Handle		74	530015496	Screw	
12	534790500	Nut		75	530027523	Retainer	
13	530037864	Shroud-Right		76	★	Starter Pulley (Incl.73) - See Service Ref. 1	
14	530037934	Shroud-Left		77	✓	530042085	Starter Spring
16	530069572	Switch Kit		78	530069714	Fan Housing Kit (Incl. 71, 73-77, 79, 82-84, 86 & 105)	
17	530029129	Isolator - Engine Mount		79	530027569	Starter Handle	
18	530029295	Isolator - Tank		80	530029117	Throttle Lock Button	
19	530015814	Screw		81	530015769	Screw	
20	530014162	Fuel Tank Ass'y. (Incl. #21, 22 & 106)		82	★	Bearing- See Service Ref. 3	
21	530014347	Fuel Cap (w/ retainer)		83	★	Spacer- See Service Ref. 3	
22	✓	530095646	Fuel Pick-up Ass'y.	84	★	Screw- See Service Ref. 3	
23	530014160	Handle Cover Assy.		85	530019167	"O" Ring	
24	530037865	Filter Cover		86	530029182	Eyelet	
25	530029112	Air Filter		87	530029227	Spark Arrestor Screen	
26	530029404	Air Baffle		88	530015702	"C" Clip	
27	530069293	Muffler Kit		89	530029119	Rope Retainer Tube (Roll Pin)	
28	530029116	Muffler Spring		90	530094710	Blower Housing (Upper)	
29	952030201	Spark Plug (RCJ-8Y)		91	530029173	Band	
30	530001624	Screw		92	✓	530047077	Impeller (Includes Hub)
31	530069628	Cylinder Kit		93	530014339	Deflector & Clamp Ass'y.	
32	530029145	Lead Wire Assy.		94	530015818	Washer - Impeller	
33	530039137	Ignition Module		95	530015441	Washer	
34	530015816	Screw		96	530001733	Nut	
35	530019178	Cylinder Gasket		97	530047736	Blower Housing (Lower) (Incl. 100-103 & door)	
36	530025875	Piston Ring		98	530024772	Spring - Throttle	
37	530069277	Piston Kit (Incl. #36,38, & Pin)		99	530027597	Spring - Lever Return	
38	530015162	Wrist Pin Retainer		100	530015667	Spring - Torsion (right)	
39	530015306	Screw		101	530015647	Pin - Pivot	
40	530029144	Ground Wire Assy.		102	530015815	Screw	
41	530015849	Screw		103	530015672	Spring - Torsion (left)	
42	530015254	Wave Washer		104	530069348	Spark Arrestor Kit	
43	530015852	Choke Spacer		105	530069232	Rope Kit	
44	530029114	Choke Shutter		106	530069247	Kit - Line Carb./Purge	
45	530015775	Screw		107		Operator's Manual	
46	530037492	Cable Assembly			530083432	Scandinavian	
47	530029115	Air Filter Plate			530083433	European	
48	530069644	Carburetor Kit (WT 141A w/ Limiter Cap)		108	530069294	Gasket Kit (Incl. 35, 49, 50 & 54)	
49	530019164	Carb. Gasket		109	530015814	Screw	
50	530019165	Foam Seal		110	★	Inlet Door- See Service Ref. 4	
51	530015771	Screw		111	530049185	Air Dam Sponge	
52	530029113	Ground Wire		112	✓	530053346	Heat Shield / Air Dam
53	530047696	Reed Block / Heat Shield		113	530019168	Grommet-Carb. Box	
54	530019166	Gasket		114	530019253	Seal Foam	
55	530027593	Reed Valve					
56	530027594	Reed Stop					
57	530016064	Screw					
58	530014033	Crankshaft- See Service Ref. 2					
59	530015126	Flywheel Key					
60	530010960	Connecting Rod Ass'y.			Not Shown		
61	★	Spacer- See Service Ref. 2					
62	530032103	Inner Bearing			530047885	Decal-Door Instruction	
63	530015787	Retaining Ring					

✓ =PART NUMBER CHANGE

★ =REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION.(LOCATED AT END OF IPL)

PARTS LIST NO. 530068885 - 8/07/02	
PAGE NO. 3	REPLACES 530068885-9/13/01


Jonsered® PARTS LIST

MODEL:
BV32

Note: Illustrations may differ from actual models due to design changes

WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

TYPE 2

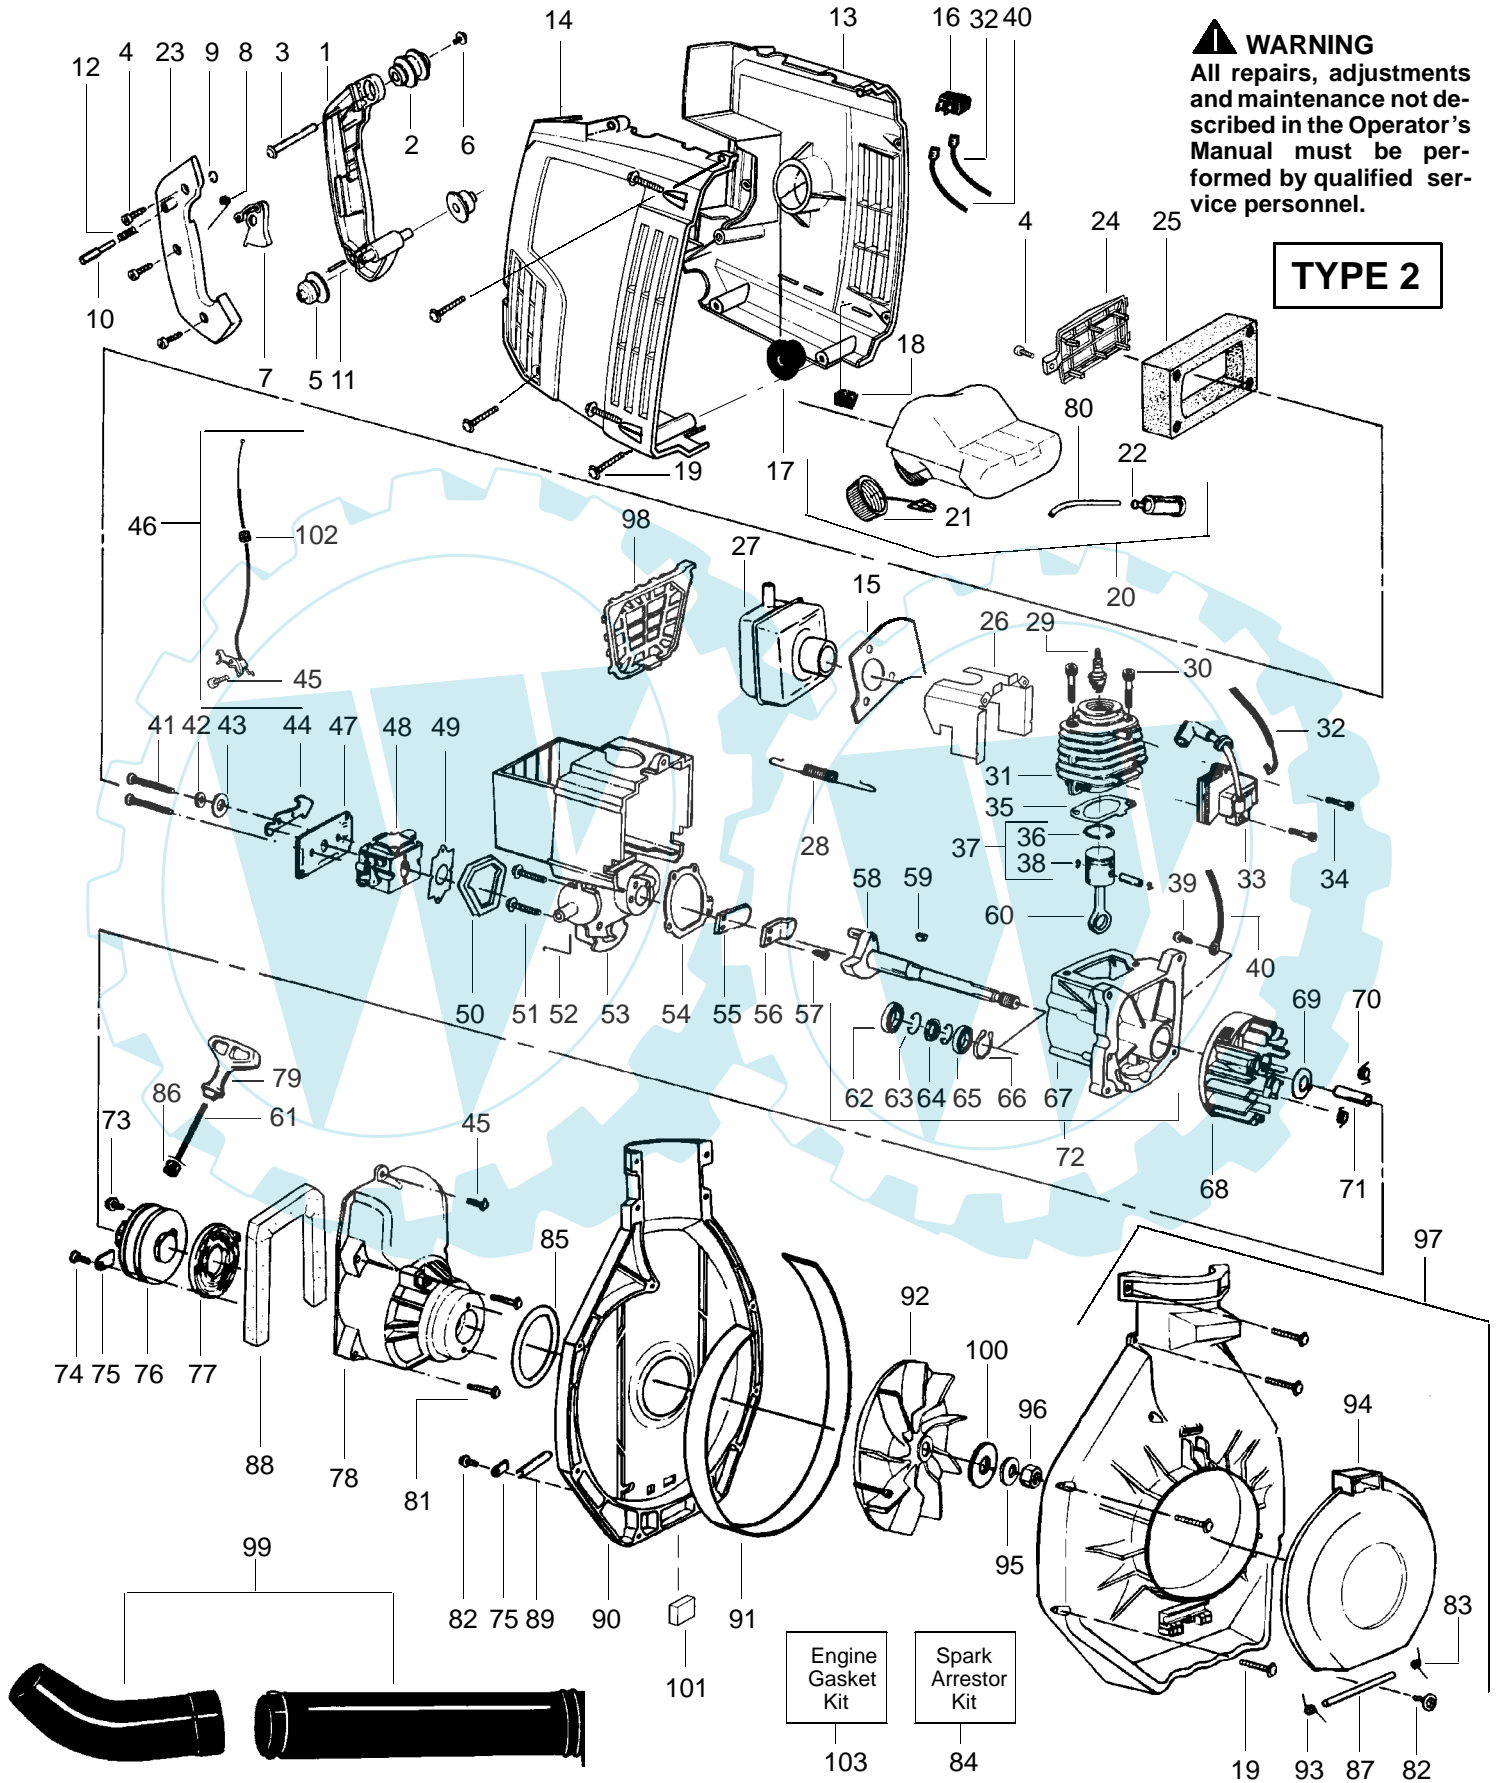


Key No.	Part No.	Description TYPE 2	Key No.	Part No.	Description TYPE 2
1	530069863	Kit-Handle	60	530010960	Assy-Connecting Rod
2	530026994	Isolator	61	530069232	Kit-Rope
3	530029111	Spacer-Isolator	62	530032103	Inner Bearing
4	530015635	Screw	63	530015787	Ring-Retaining (Crankcase)
5	530029130	Isolator-Handle (Rear)	64	530019158	Seal-Crankshaft
6	530015813	Screw	65	530032102	Outer Bearing
7	530029072	Trigger	66	530015789	Ring-Retaining (Crankshaft)
8	530027597	Spring-Lever Return	67	530014016	Assy-Crankcase
9	530015702	"C" Clip-Throttle Lock	68	530039189	Assy-Flywheel
10	530029117	Throttle Lock Button			(Incl. #70)
11	530015840	Pin-Handle	69	530347987	Washer
12	530024772	Spring-Throttle	70	530023817	Spring-Starter Dog
13	530056005	Shroud-Left	71	530038386	Spacer-Flywheel
14	530056006	Shroud-Right	72	530014156	Assy-Crankcase/Crankshaft
15	530053346	Heat Shield-Air Dam			(Incl. #58 & 62-67)
16	530069572	Kit-Switch	73	530016080	Screw
17	530029129	Isolator-Engine Mount	74	530015496	Screw
18	530029295	Isolator Tank	75	530027523	Retainer
19	530015814	Screw	76	530069486	Kit-Starter Pulley (Incl. #73)
20	530014162	Assy-Fuel Tank	77	530042085	Spring-Starter
		(Incl. #21, 22 & 80)	78	530069714	Kit-Fan Housing
21	530014347	Assy-Fuel Cap w/retainer			(Incl. #61, 71, 73-77, 79 & 86)
22	530095646	Assy-Fuel Pick-up	79	530027569	Handle-Starter
23	530014160	Assy-Handle Cover	80	530069247	Kit-Line
		(Incl. #9, 10 & 12)	81	530015769	Screw
24	530054877	Cover-Filter	82	530015815	Screw
25	530029112	Filter-Air (Foam)	83	530015672	Spring-Torsion (Left)
26	530029404	Baffle-Air	84	530069348	Kit-Spark Arrestor
27	530069293	Kit-Muffler	85	530019167	"O" Ring-Seal
28	530029116	Spring-Muffler	86	530029182	Eyelet-Flange
29	952030201	Spark Plug (RCJ-8Y)	87	530015647	Pin-Pivot
30	530001624	Screw	88	530049185	Sponge-Air Dam
31	530071581	Kit-Cylinder	89	530029119	Tube-Rope Retainer
32	530029425	Wire-Lead (Switch)	90	530094710	Blower Housing (Upper)
33	530039137	Ignition Module	91	530029173	Band-Blower Hsg.
34	530016357	Screw	92	530014157	Assy-Impeller (Incl. Hub)
35	530019178	Gasket-Cylinder	93	530015667	Spring-Torsion (Right)
36	530025875	Ring-Piston	94	530047700	Inlet Door
37	530069277	Kit-Piston (Incl. #36,38,& Pin)	95	530015441	Washer-Conical
38	530015162	Retainer	96	530016320	Nut
39	530015306	Screw	97	530047736	Blower Housing (Lower)
40	530029426	Wire-Ground (Switch)			(Incl. #82, 83, 87, 93 & 94)
41	530015849	Screw	98	530069692	Kit-Muffler Guard
42	530015254	Washer	99	530038508	Assy-Nozzle & Tube
43	530015852	Spacer-Choke	100	530015818	Washer-Impeller
44	530029114	Choke Shutter	101	530019253	Seal Foam
45	530015775	Screw	102	530019168	Grommet
46	530037492	Assy-Cable	103	530069294	Kit-Gasket (Incl. #35, 49, 50 & 54)
47	530029115	Plate-Air Filter Mtg.			
48	530069644	Kit-Carburetor Ass'y. (WT 141A w/ Limiter Cap)			
49	530019164	Gasket-Carb			
50	530019165	Seal-Foam/Reed Block			
51	530015771	Screw			
52	530029113	Ground Wire (Static)			
53	530047696	Reed Block/Heat Shield			
54	530019166	Gasket-Reed Block/C'case			
55	530027593	Reed Valve			
56	530027594	Reed Stop			
57	530016064	Screw			
58	530014033	Assy-Crankshaft			
59	530015126	Key-Flywheel			
					Not Shown

				530088113	Operator's Manual (Scan)
				530088114	(Euro)
				530047885	Decal-Door Instruction


↙ = NEW PART NUMBER FOR THIS IPL

★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION,(LOCATED AT END OF IPL)

PARTS LIST NO. 530068885 - 8/07/02		Jonsered PARTS LIST	MODEL: BV32
PAGE NO. 5	REPLACES 530068885-9/13/01		Note: Illustrations may differ from actual models due to design changes

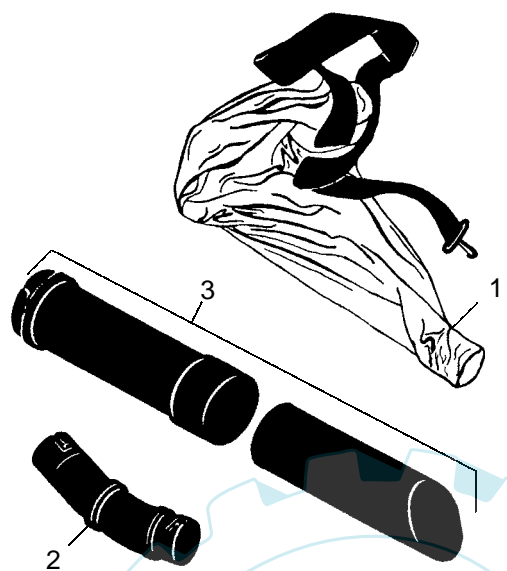


KEY NO.	PART NO.	DESCRIPTION
1	530095116	Collection Bag W/Strap
2	530095117	Collection Bag Elbow Tube
3	530069270	Vacuum Tube Ass'y
4	530038508	Tube and Nozzle Ass'y

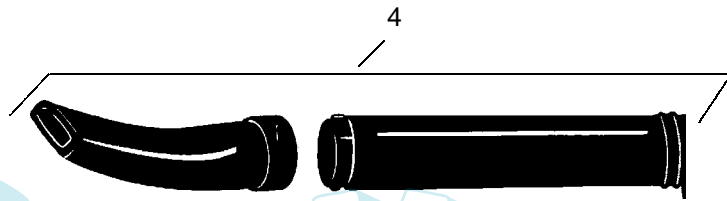


Carburetor Assembly

WT-141

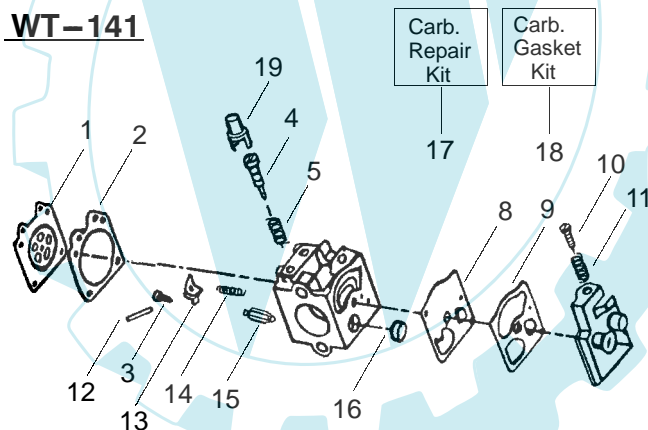

Key No.	Part No.	Description
1	530035014	*+ Metering Diaphragm
2	530035151	*+ Metering Diaphragm Gasket
3	530035016	* Metering Lever Pin Screw
4	530035268	Mixture Needle
5	530035293	Mixture Needle Spring
8	530035166	*+ Fuel Pump Diaphragm
9	530035164	*+ Fuel Pump Gasket
10	530035203	Idle Speed Screw
11	530035121	Idle Speed Spring
12	530035028	* Metering Lever Pin
13	530035031	* Metering Lever
14	530035188	* Metering Lever Spring
15	530035106	* Inlet Needle Valve
16	530035178	* Fuel Inlet Screen
17	530035264	Carb. Kwik Repair Kit (*Indicates Contents)
18	530069844	Carb. Gasket/Diaphragm Kit (*Indicates Contents)

WT-141A #530069644

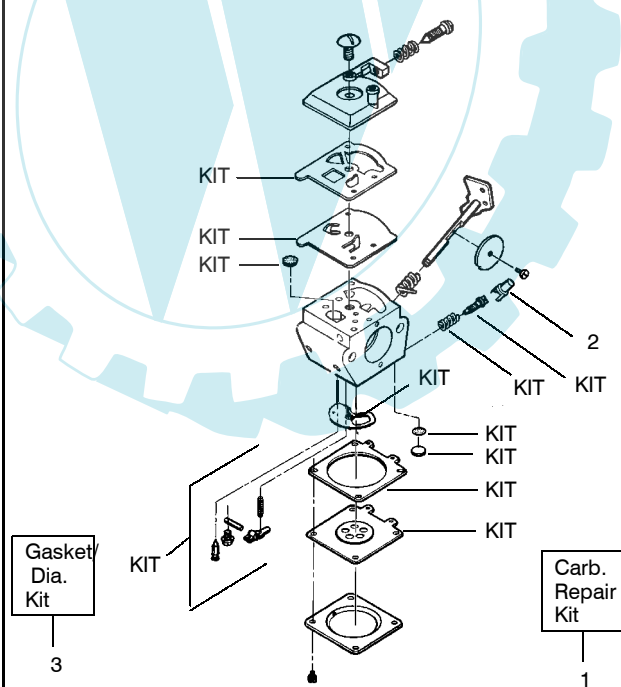

Ref.	Part No.	Description
1.	530035264	Kit - Carburetor Repair (KIT = Indicates Contents)
2.	530038403	Limiter Cap
3.	530069844	Kit - Gasket/Diaphragm


↗ =PART NUMBER CHANGE

★ =REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION.(LOCATED AT END OF IPL)

PARTS LIST NO. 530068885 - 8/07/02		Jonsered PARTS LIST	MODEL: BV32
PAGE NO. 6	REPLACES 530068885-9/13/01		Note: Illustrations may differ from actual models due to design changes

★SERVICE REFERENCE


1. Starter Pulley - When ordering a new starter pulley for your unit, please measure your existing pulley as shown by the dimensions in the illustrations below and order accordingly.

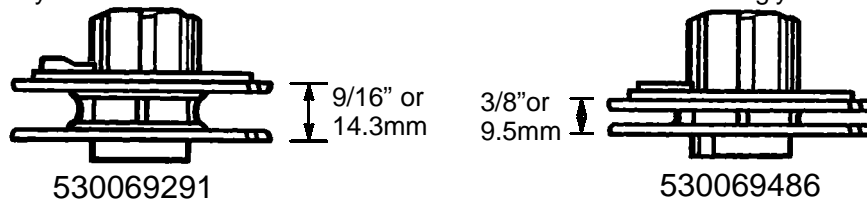

2. Crankshaft Spacer - Earlier models equipped with the laminated crankshaft (shown on the left) requires Spacer 530015788. Later models equipped with a step on the crankshaft (shown on the right), do not require the spacer.



3. Fan Housing Kit, Spacers, Bearing and Screws - The earlier fan housing was equipped with bearing (530032108), screws (530015805) and required two spacers (530029176 and 530029110) as shown below. The new fan housing does not require a bearing and uses one long spacer (530038386). Both sets of parts are included in the new fan housing kit 530069714.

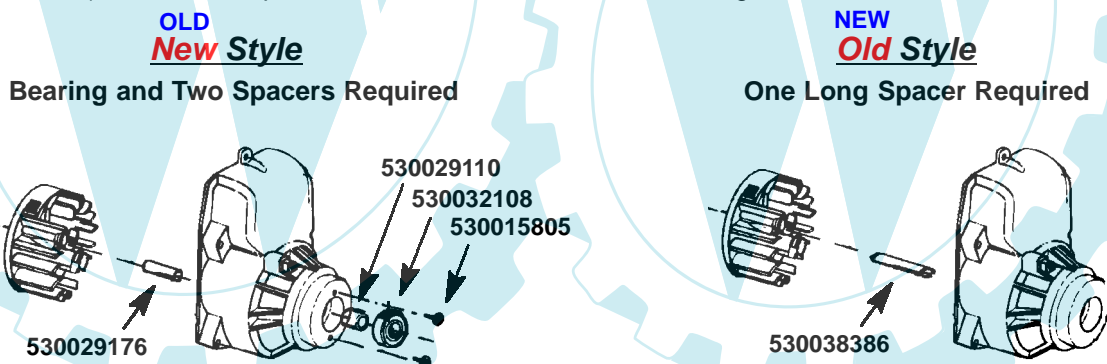

4. Inlet Door - The latch on the lower blower housing and door has changed. The new style can be identified by the tab found at the top of the latch on the door and the latch prongs on the housing as shown below. To replace the old door, order Lower Blower Fan Housing 530047736. To replace the door equipped on the new style housing, order 530047700.

