


**MODELS 247930x11A**

**REPAIR PARTS**

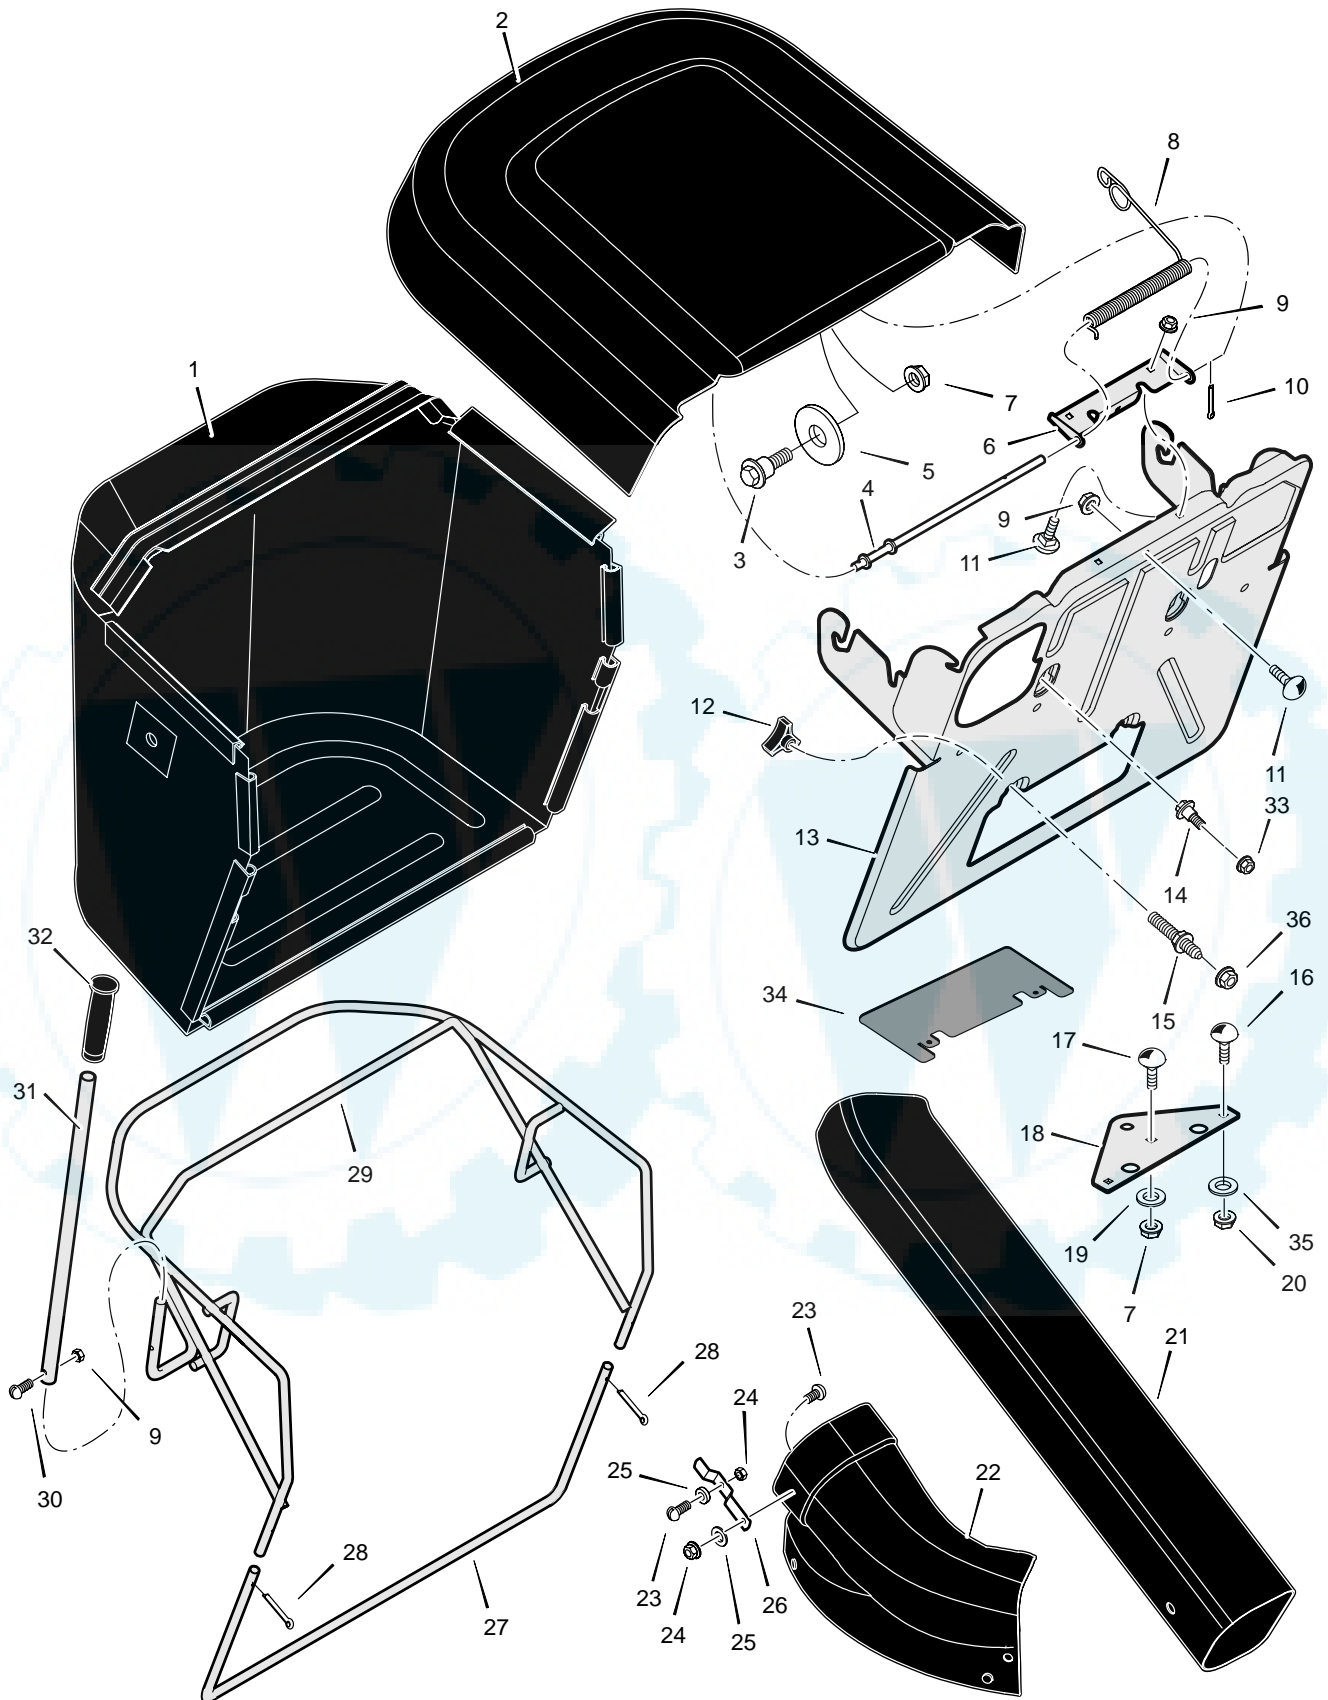

## MODELS 247930x11A

## REPAIR PARTS

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Bag, Cloth	1401246	20	Nut	015x88
2	Cover, Bag (Green)	1401188	21	Tube, Connecting	1401089
3	Bolt, Shoulder	009x13	22	Tube, Extension	1401088
4	Rod, Bag Lid	1401168	23	Bolt	006x91
5	Washer	17x152 Z	24	Acorn Nut	014x77
6	Hinge, Bag Top	1401190E701	25	Washer	17x180
7	Nut	015x84	26	Spring, Leaf	1401175
8	Spring, Torsion	166x47	27	Tube, Bag Frame	1401155E701
9	Nut	015x89	28	Pin, Cotter	030x20
10	Pin, Cotter	030x50	29	Frame, Bag	1401167E701
11	Bolt, Carriage	002x82	30	Bolt	001x94
12	Knob	740227	31	Lever, Dump	1401141E701
13	Assembly, Bag Plate & Hanger	1401182E701	32	Grip	1401176
14	Bolt, Shoulder	9x70	33	Nut, Flange	015x85
15	Stud, Double End	6x110	34	Baffle, Bag Plate	1401242
16	Bolt, Carriage	002x53	35	Washer	17x212
17	Bolt, Carriage	002x57	36	Nut	015x79
18	Bracket, Hitch Extension	1401178E701	—	Book, Instruction	F-020901L
19	Washer	17x104			