
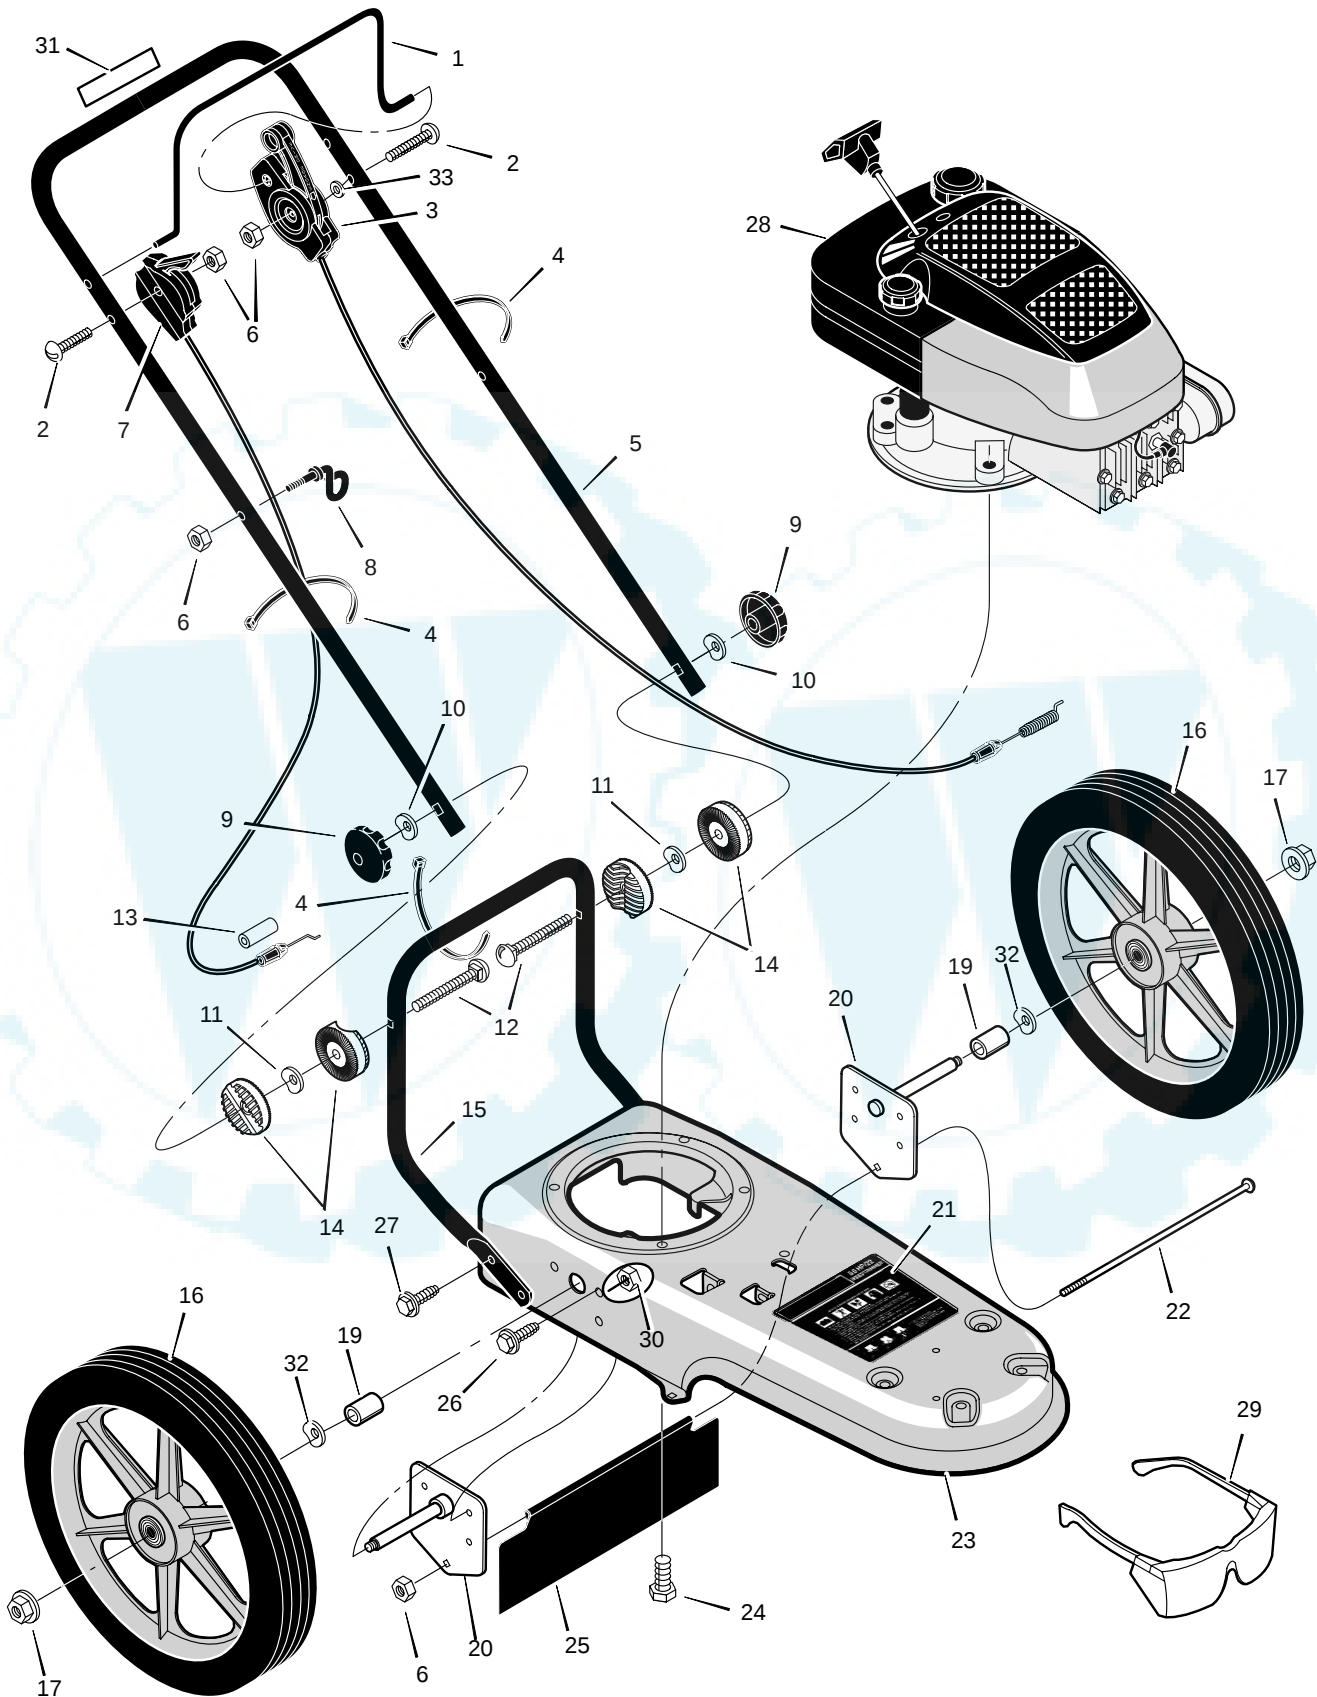


MODEL TM5000x51A

REPAIR PARTS

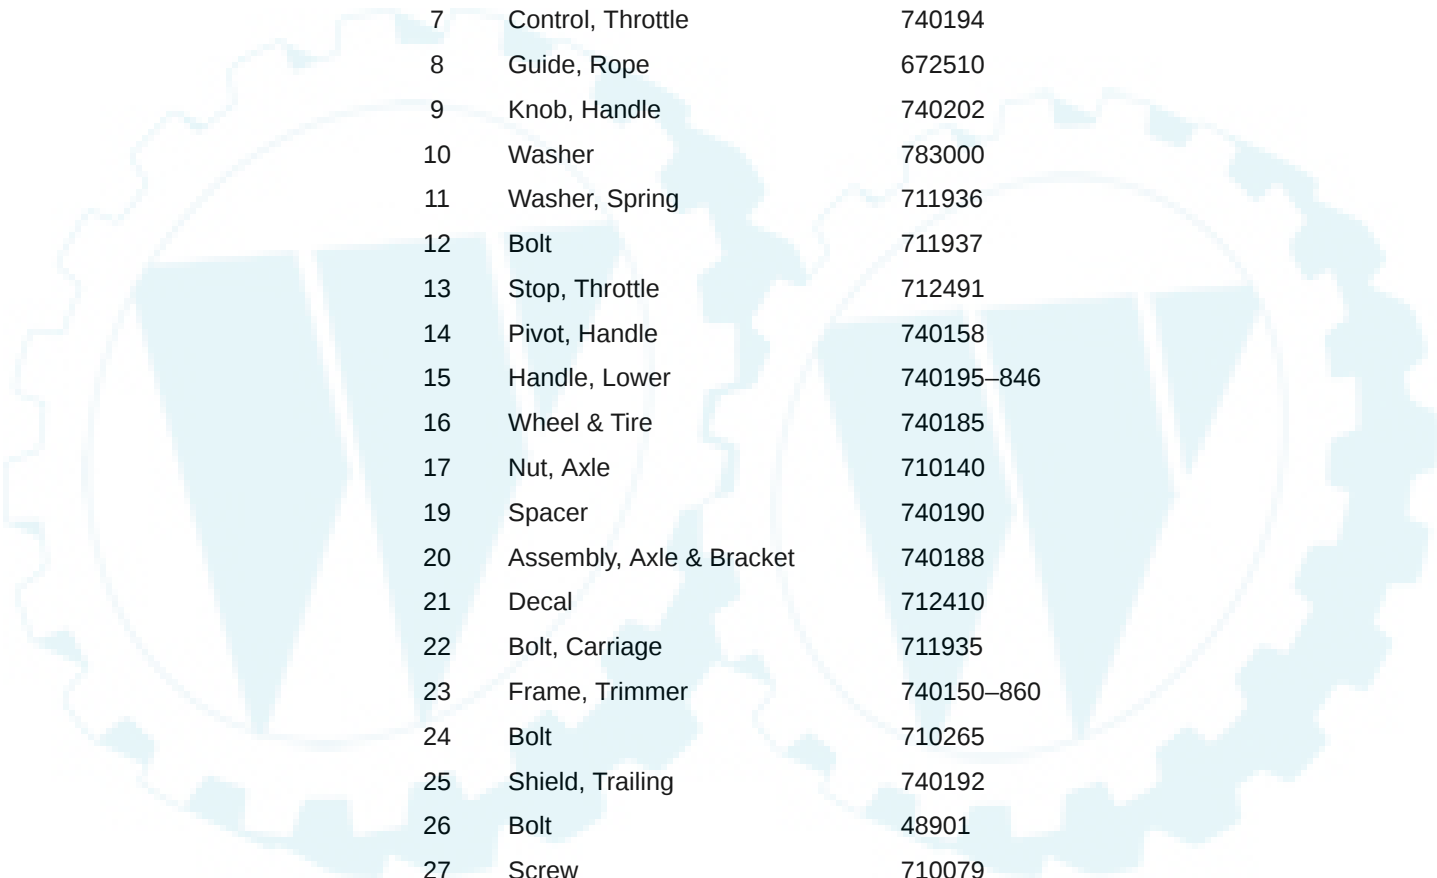


MODEL TM5000x51A**REPAIR PARTS**

Key No.	Description	Part No.
1	Lever, Stop	740198–860
2	Bolt	323035
3	Cable, Control Latching	740193
4	Tie, Cable	712267
5	Handle	740196–846
6	Nut	710203
7	Control, Throttle	740194
8	Guide, Rope	672510
9	Knob, Handle	740202
10	Washer	783000
11	Washer, Spring	711936
12	Bolt	711937
13	Stop, Throttle	712491
14	Pivot, Handle	740158
15	Handle, Lower	740195–846
16	Wheel & Tire	740185
17	Nut, Axle	710140
19	Spacer	740190
20	Assembly, Axle & Bracket	740188
21	Decal	712410
22	Bolt, Carriage	711935
23	Frame, Trimmer	740150–860
24	Bolt	710265
25	Shield, Trailing	740192
26	Bolt	48901
27	Screw	710079
28	Engine *	*
29	Protection, Eye	711890
30	Nut	710205
31	Decal	712409
32	Washer, Spring	710258
33	Spacer, PM .26x.5x.2	672292
—	Instruction Book & Parts List	712419

* Parts are available from an Authorized Service Center. See “Engines, Gasoline” or “Gasoline Engines” in the yellow pages of the telephone directory.


MODEL TM5000x51A

REPAIR PARTS

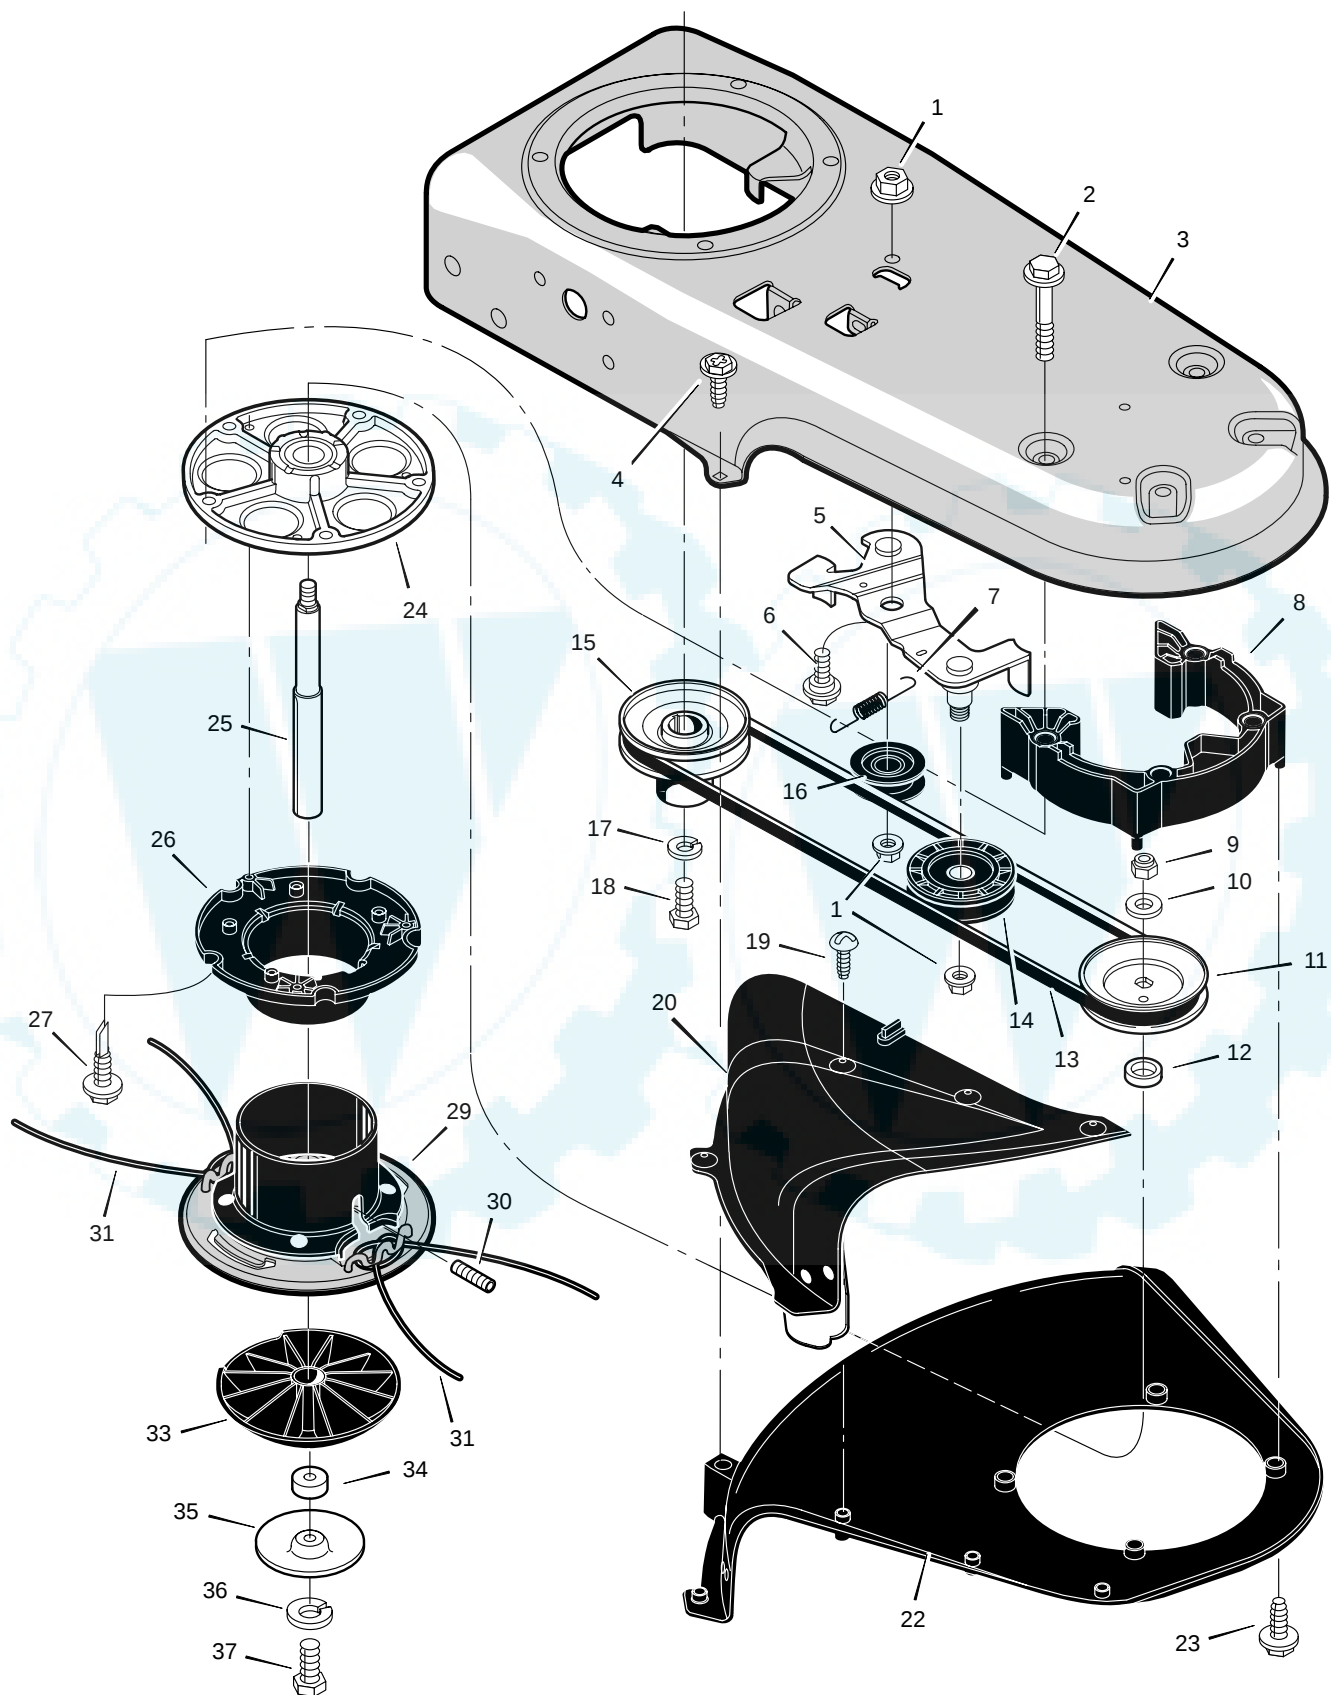

MODEL TM5000x51A

REPAIR PARTS

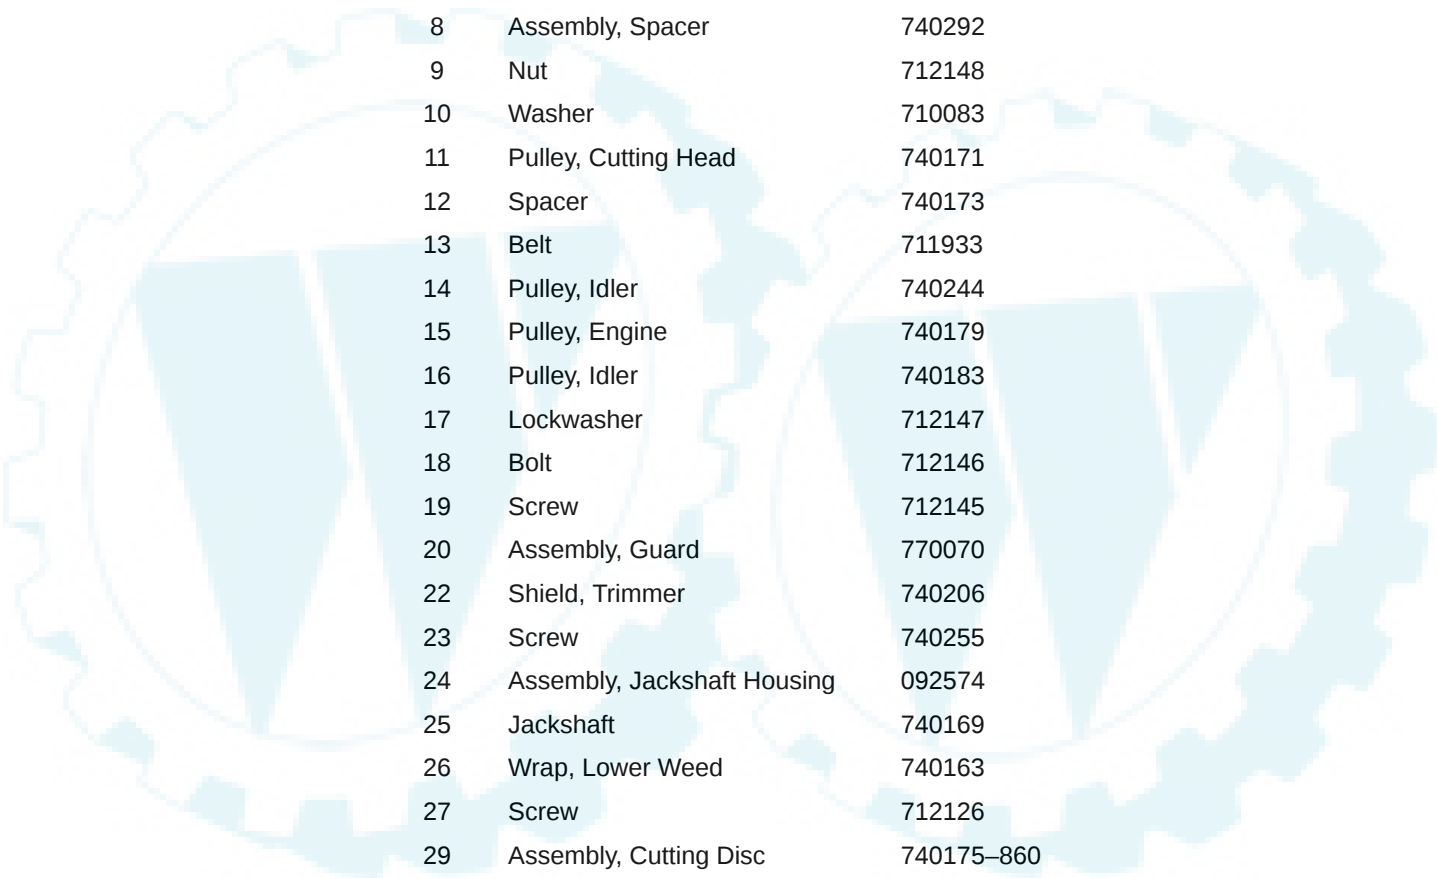

Key No.	Description	Part No.
1	Nut	710140
2	Bolt	711978
3	Housing, Trimmer	740150–860
4	Screw	710272
5	Assembly, Idler	740232
6	Bolt	710200
7	Spring	712403
8	Assembly, Spacer	740292
9	Nut	712148
10	Washer	710083
11	Pulley, Cutting Head	740171
12	Spacer	740173
13	Belt	711933
14	Pulley, Idler	740244
15	Pulley, Engine	740179
16	Pulley, Idler	740183
17	Lockwasher	712147
18	Bolt	712146
19	Screw	712145
20	Assembly, Guard	770070
22	Shield, Trimmer	740206
23	Screw	740255
24	Assembly, Jackshaft Housing	092574
25	Jackshaft	740169
26	Wrap, Lower Weed	740163
27	Screw	712126
29	Assembly, Cutting Disc	740175–860
30	Screw, Set	712127
31	Line, Cutting	740164
33	Guide, Height	740157
34	Spacer	740210
35	Shield, Abrasion	740209
36	Lockwasher	120380
37	Bolt	180022