

HTE 601 - Ersatzteilzeichnung (bis 5947020000)


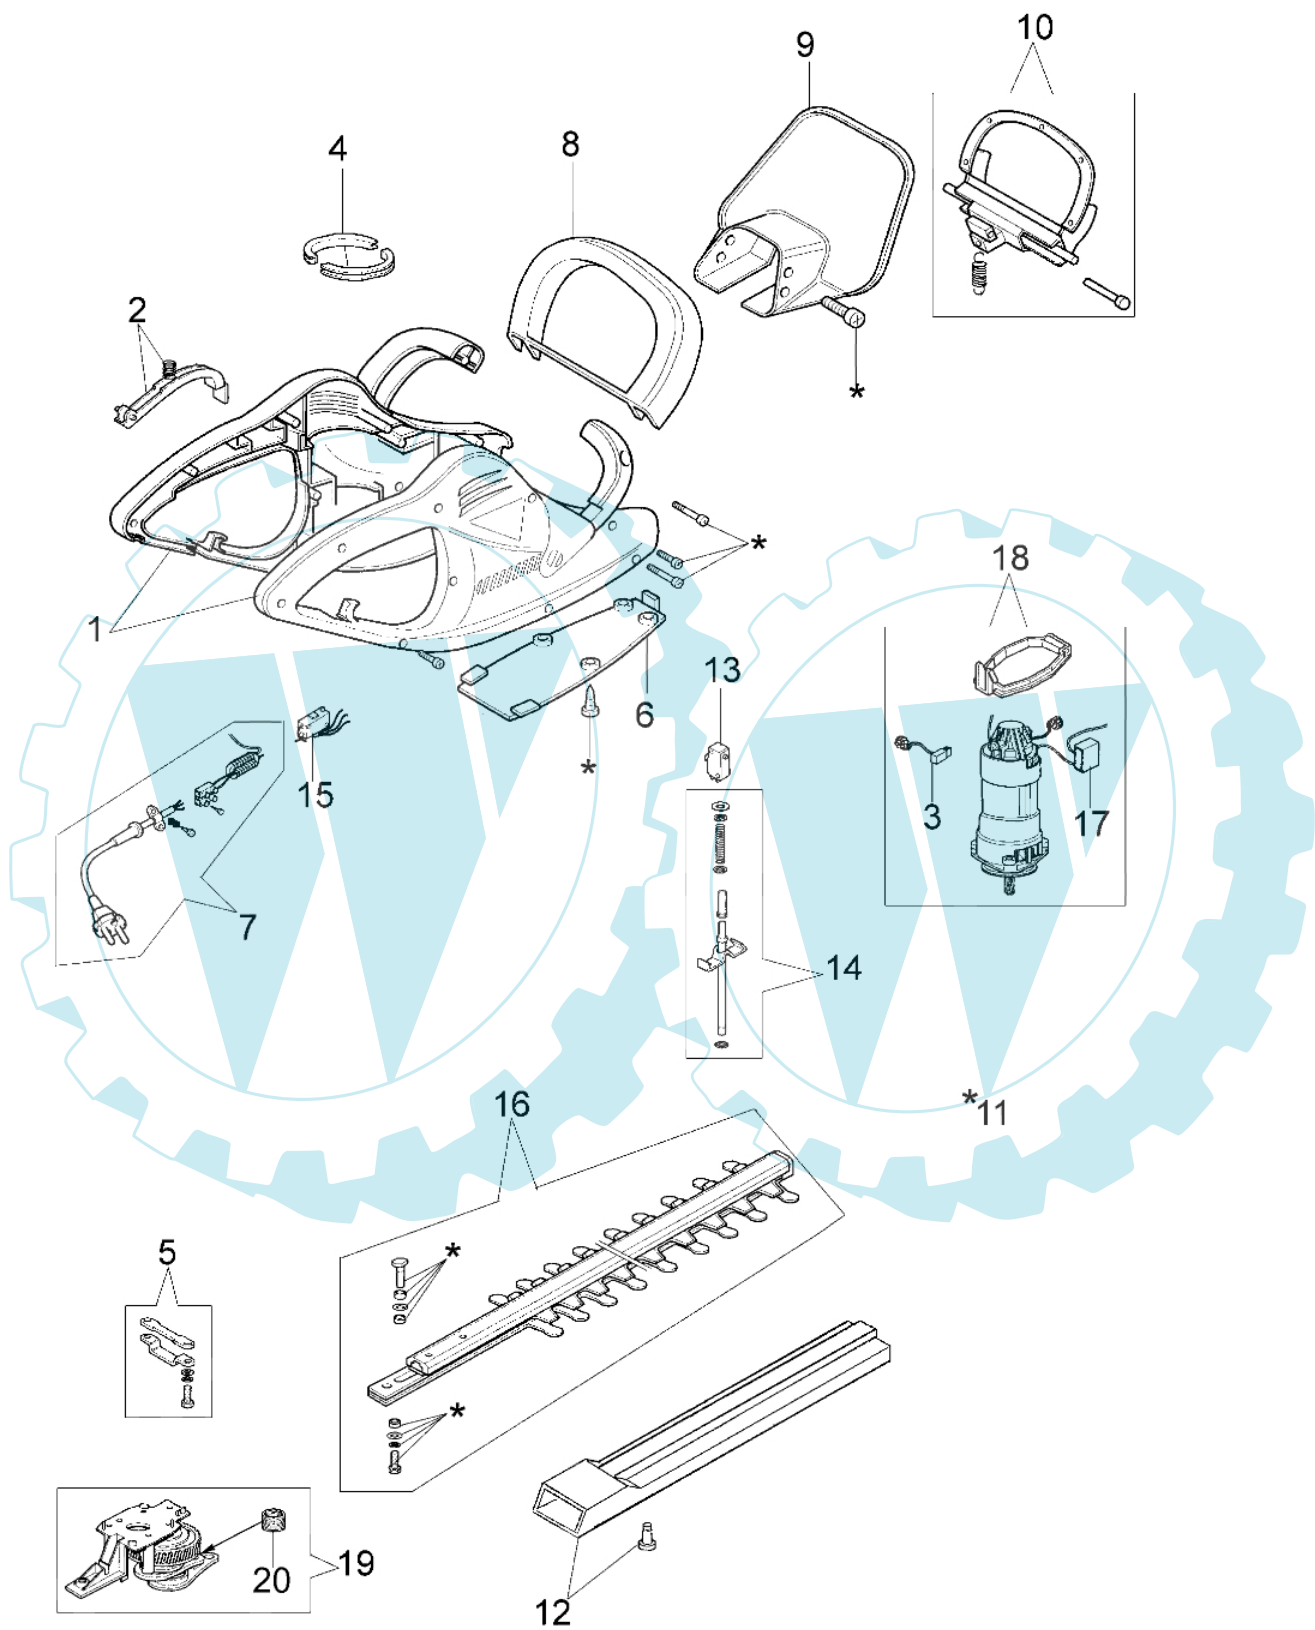


Bild Nr.	Anz.	Teilenummer	Beschreibung	Technische Nachricht
1	1	58020117	Gehäuse 601	
2	1	58020123	Hebel	
3	1	58020062	Burste	BT6-065-08/07
4	2	58020043	Schultz	
5	1	58020112	Schelle	BT6-065-08/07
6	1	58020042	Deckel	
7	1	58020124	Komplett kabel	
8	1	58020015	Hebel	
9	1	58020016	Handschutz	
10	1	58020125	Hebel	
11	1	58020121	Schraubekit	
12	1	58020126	Schultz	
13	1	58020022	Schalter	
14	1	58020028	Welle	
15	1	58020008	Inductor	
16	1	58020108	Blatt	BT6-065-08/07
17	1	58020009	Kondenser	BT6-065-08/07
18	1	58020111	Motor	BT6-065-08/07
19	1	58020110	Bride	BT6-065-08/07
20	1	58020034	Feder	BT6-065-08/07

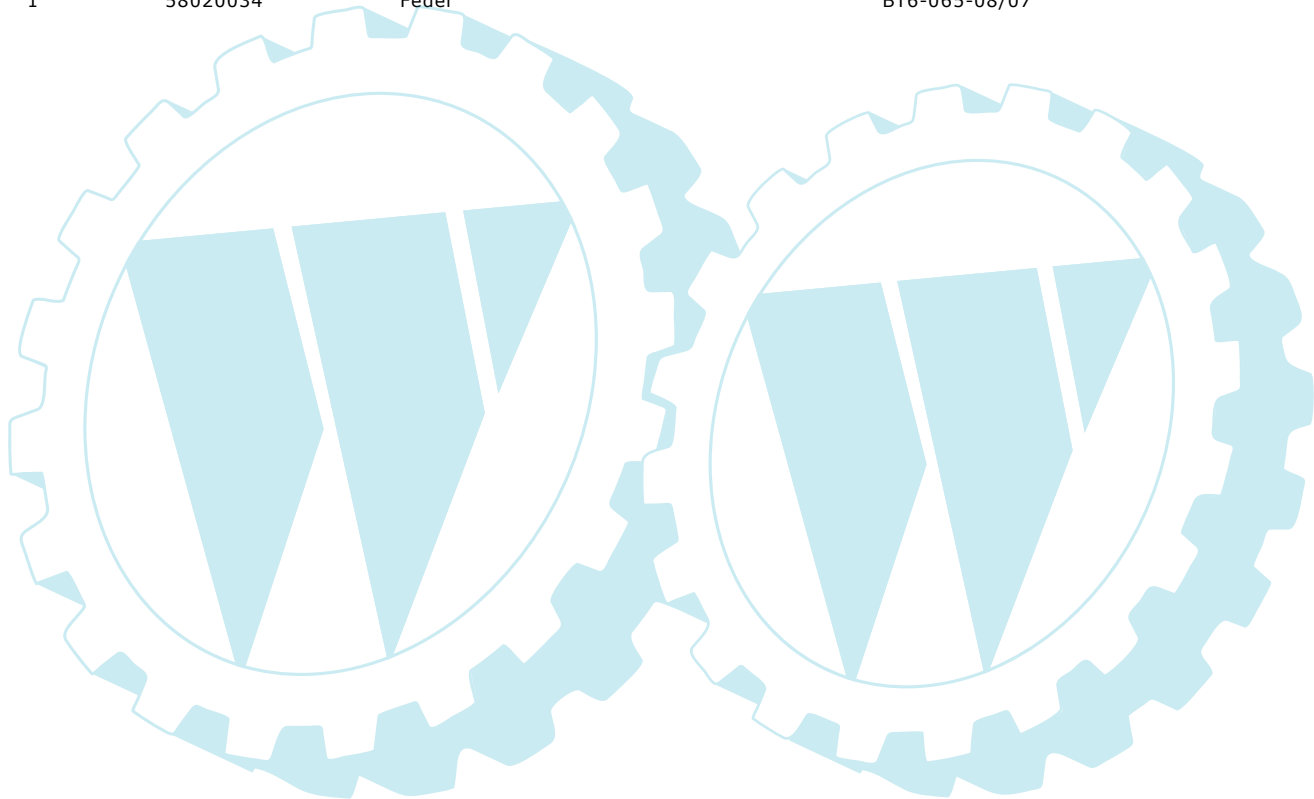

HTE 601 - Ersatzteilzeichnung (ab 5947020001)

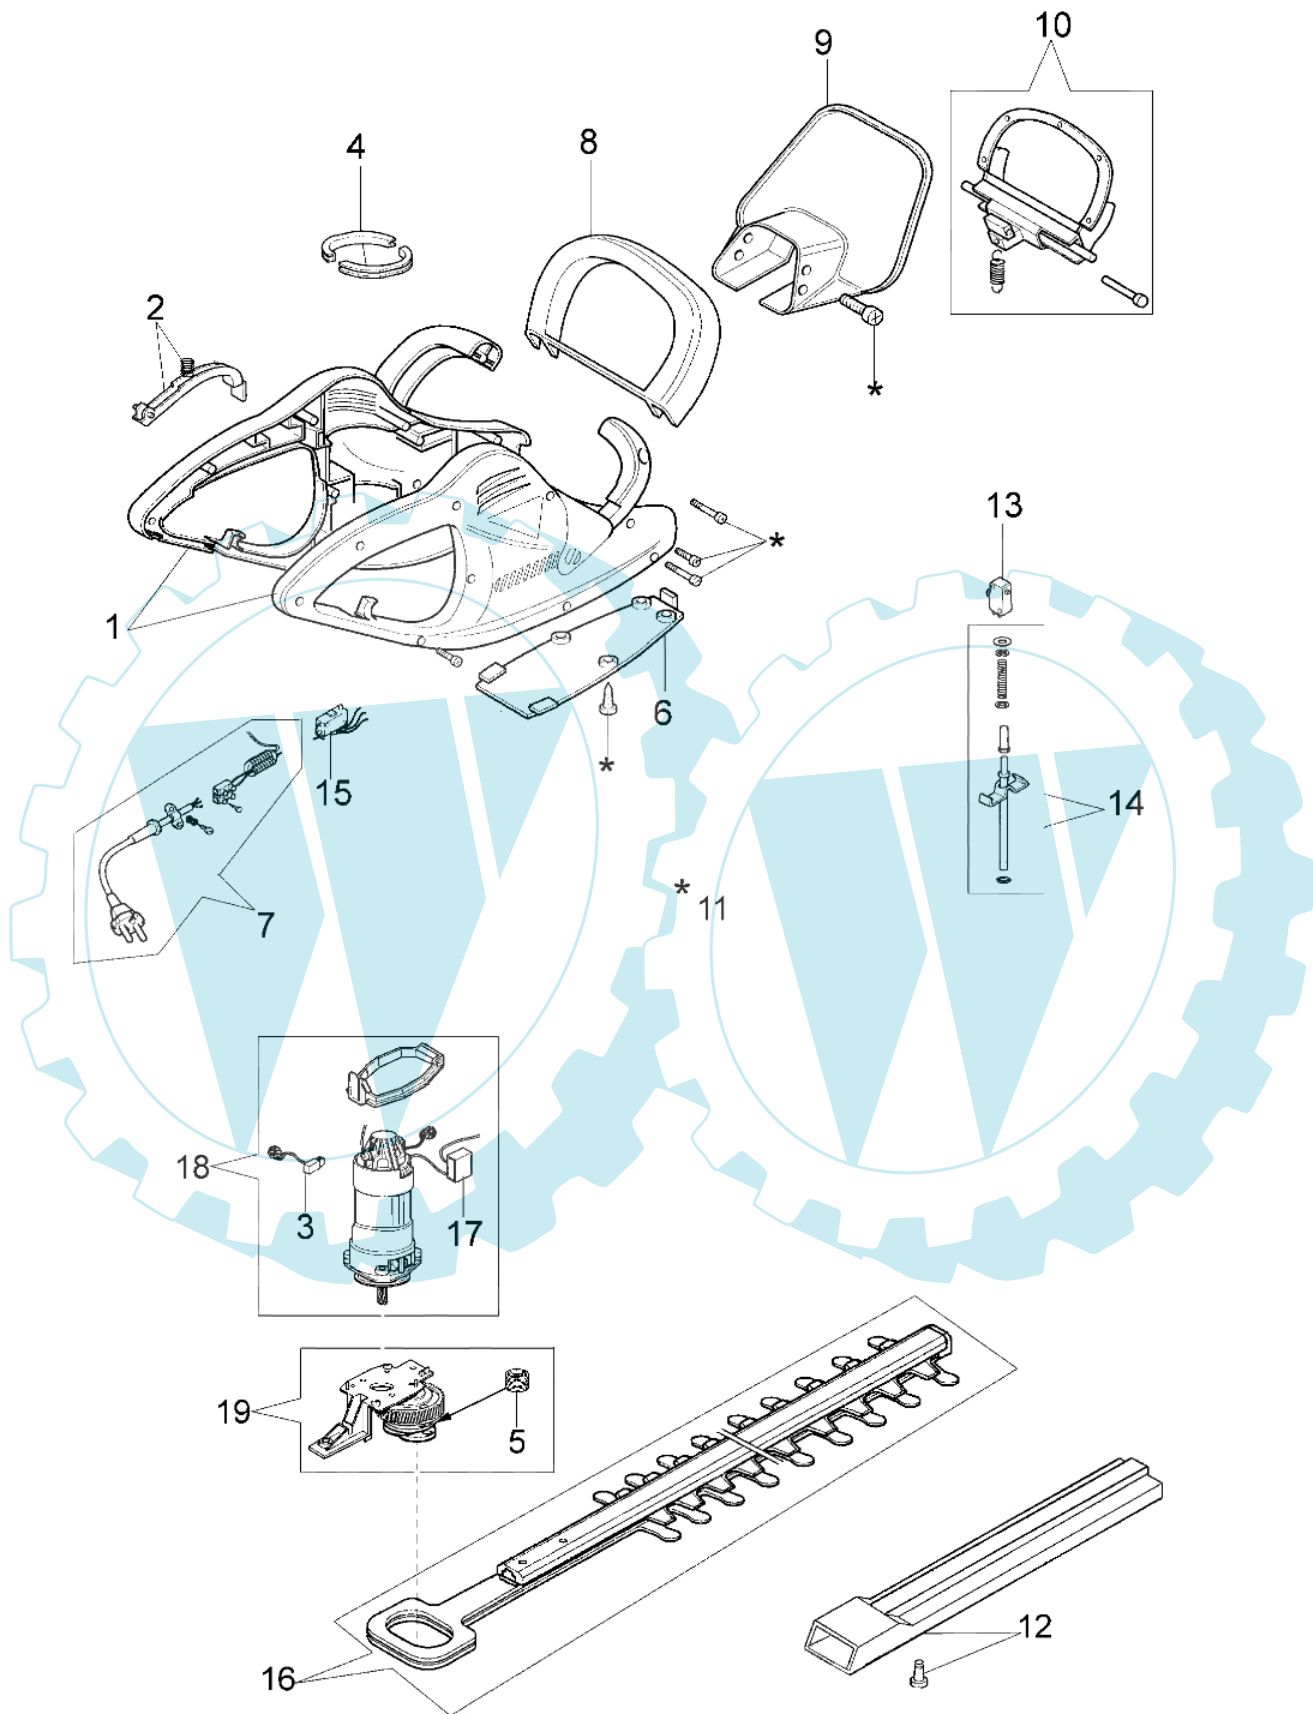


Bild Nr.	Anz.	Teilenummer	Beschreibung	Technische Nachricht
1	1	58020117	Gehäuse 601	
2	1	58020123	Hebel	
3	1	58020062	Burste	BT6-065-08/07
4	2	58020043	Schultz	
5	1	58020034	Feder	BT6-065-08/07
6	1	58020042	Deckel	
7	1	58020124	Komplett kabel	
8	1	58020015	Hebel	
9	1	58020016	Handschutz	
10	1	58020125	Hebel	
11	1	58020121	Schraubekit	
12	1	58020126	Schultz	
13	1	58020022	Schalter	
14	1	58020028	Welle	
15	1	58020008	Inductor	
16	1	58020132	Blatt kpl.	BT6-065-08/07
17	1	58020009	Kondenser	BT6-065-08/07
18	1	58020130	Motor compl.	BT6-065-08/07
19	1	58020131	Bride kpl.	BT6-065-08/07

