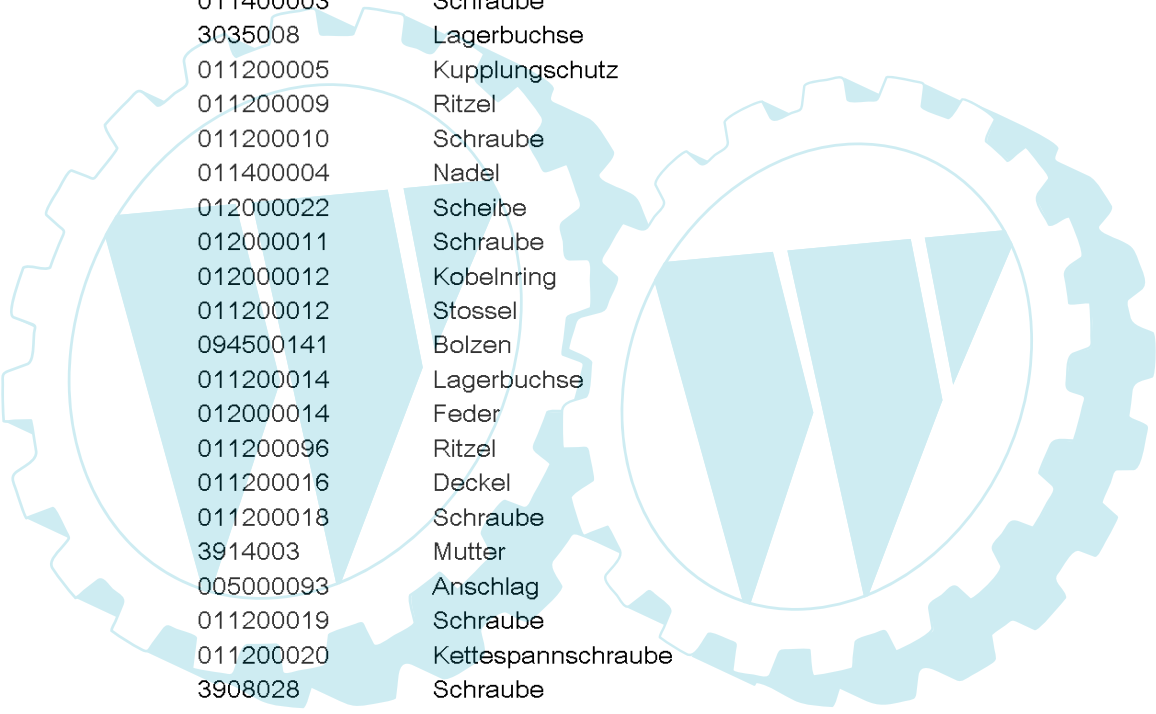
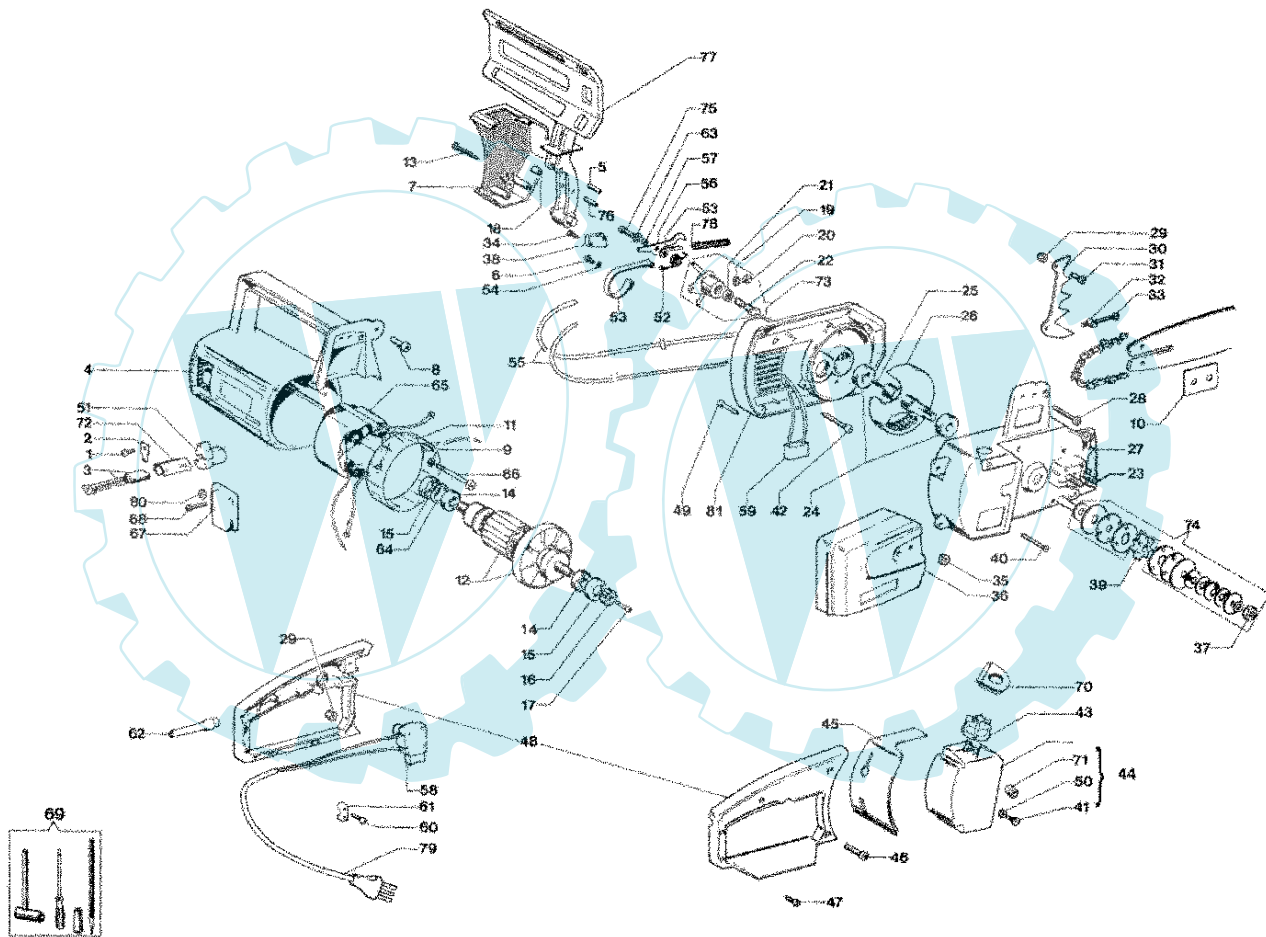


Bild №	St.-Zahl	Teile Nr.	Beschreibung
1		011200052	Schraube
2		011200051	Platte
3		011200050	Burste
4		011400019	Motorgehäuse
5		011400013	Stift
6		011400030	Schraube
7		011400002	Deckel
8		011200003	Schraube
9		011200104	Scheibe
10		011200075	Platte
11		011200004	Ring
12		011400015	Roto
13		011400003	Schraube
14		3035008	Lagerbuchse
15		011200005	Kupplungsschutz
16		011200009	Ritzel
17		011200010	Schraube
18		011400004	Nadel
19		012000022	Scheibe
20		012000011	Schraube
21		012000012	Kobelring
22		011200012	Stossel
23		094500141	Bolzen
24		011200014	Lagerbuchse
25		012000014	Feder
26		011200096	Ritzel
27		011200016	Deckel
28		011200018	Schraube
29		3914003	Mutter
30		005000093	Anschlag
31		011200019	Schraube
32		011200020	Kettespannschraube
33		3908028	Schraube
34		011400018	Schraube
35		094500155	Mutter
36		011200022	Kettenradschutz
37		006000167	Mutter
38		011400017	Schalter
39		011200094	Ritzel
39		011200103	Ritzel
40		011200027	Schraube
41		011200028	Schraube
42		011200046	Schraube
43		011200053	Stopfen
44		011200029	Oeltank
45		011200030	Schultz
46		011200031	Schraube
47		011200032	Schraube
48		011200088	Griff
49		011200041	Schraube





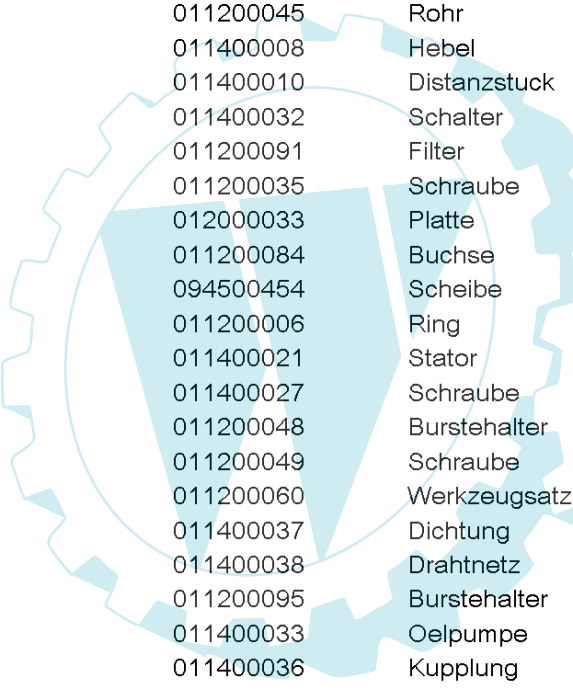


Bild №	St.-Zahl	Teile Nr.	Beschreibung
50		006000003	Mutter
51		011200081	Burstehalter
52		011400006	Feder
53		011400005	Bremsband
54		006000315	Kugelscheibe
55		011200045	Rohr
56		011400008	Hebel
57		011400010	Distanzstück
58		011400032	Schalter
59		011200091	Filter
60		011200035	Schraube
61		012000033	Platte
62		011200084	Buchse
63		094500454	Scheibe
64		011200006	Ring
65		011400021	Stator
66		011400027	Schraube
67		011200048	Burstehalter
68		011200049	Schraube
69		011200060	Werkzeugsatz
70		011400037	Dichtung
71		011400038	Drahtnetz
72		011200095	Burstehalter
73		011400033	Oelpumpe
74		011400036	Kupplung
75		093000139	Schraube
76		011400012	Stift
77		011400001	Schutz
78		011400007	Feder
79		011200077	Kabel
80		3916003	Kugelscheibe
81		011400016	Deckel