



Also on Tank

BRUSH CUTTERS

Model NB02-3A

(Pages 1 - 7)

Model NB04

(Pages 8 - 15)


Model NB16F

(Pages 16 - 17)

Model NB23F

(Pages 18 - 19)

PARTS MANUAL SUPPLEMENT 1

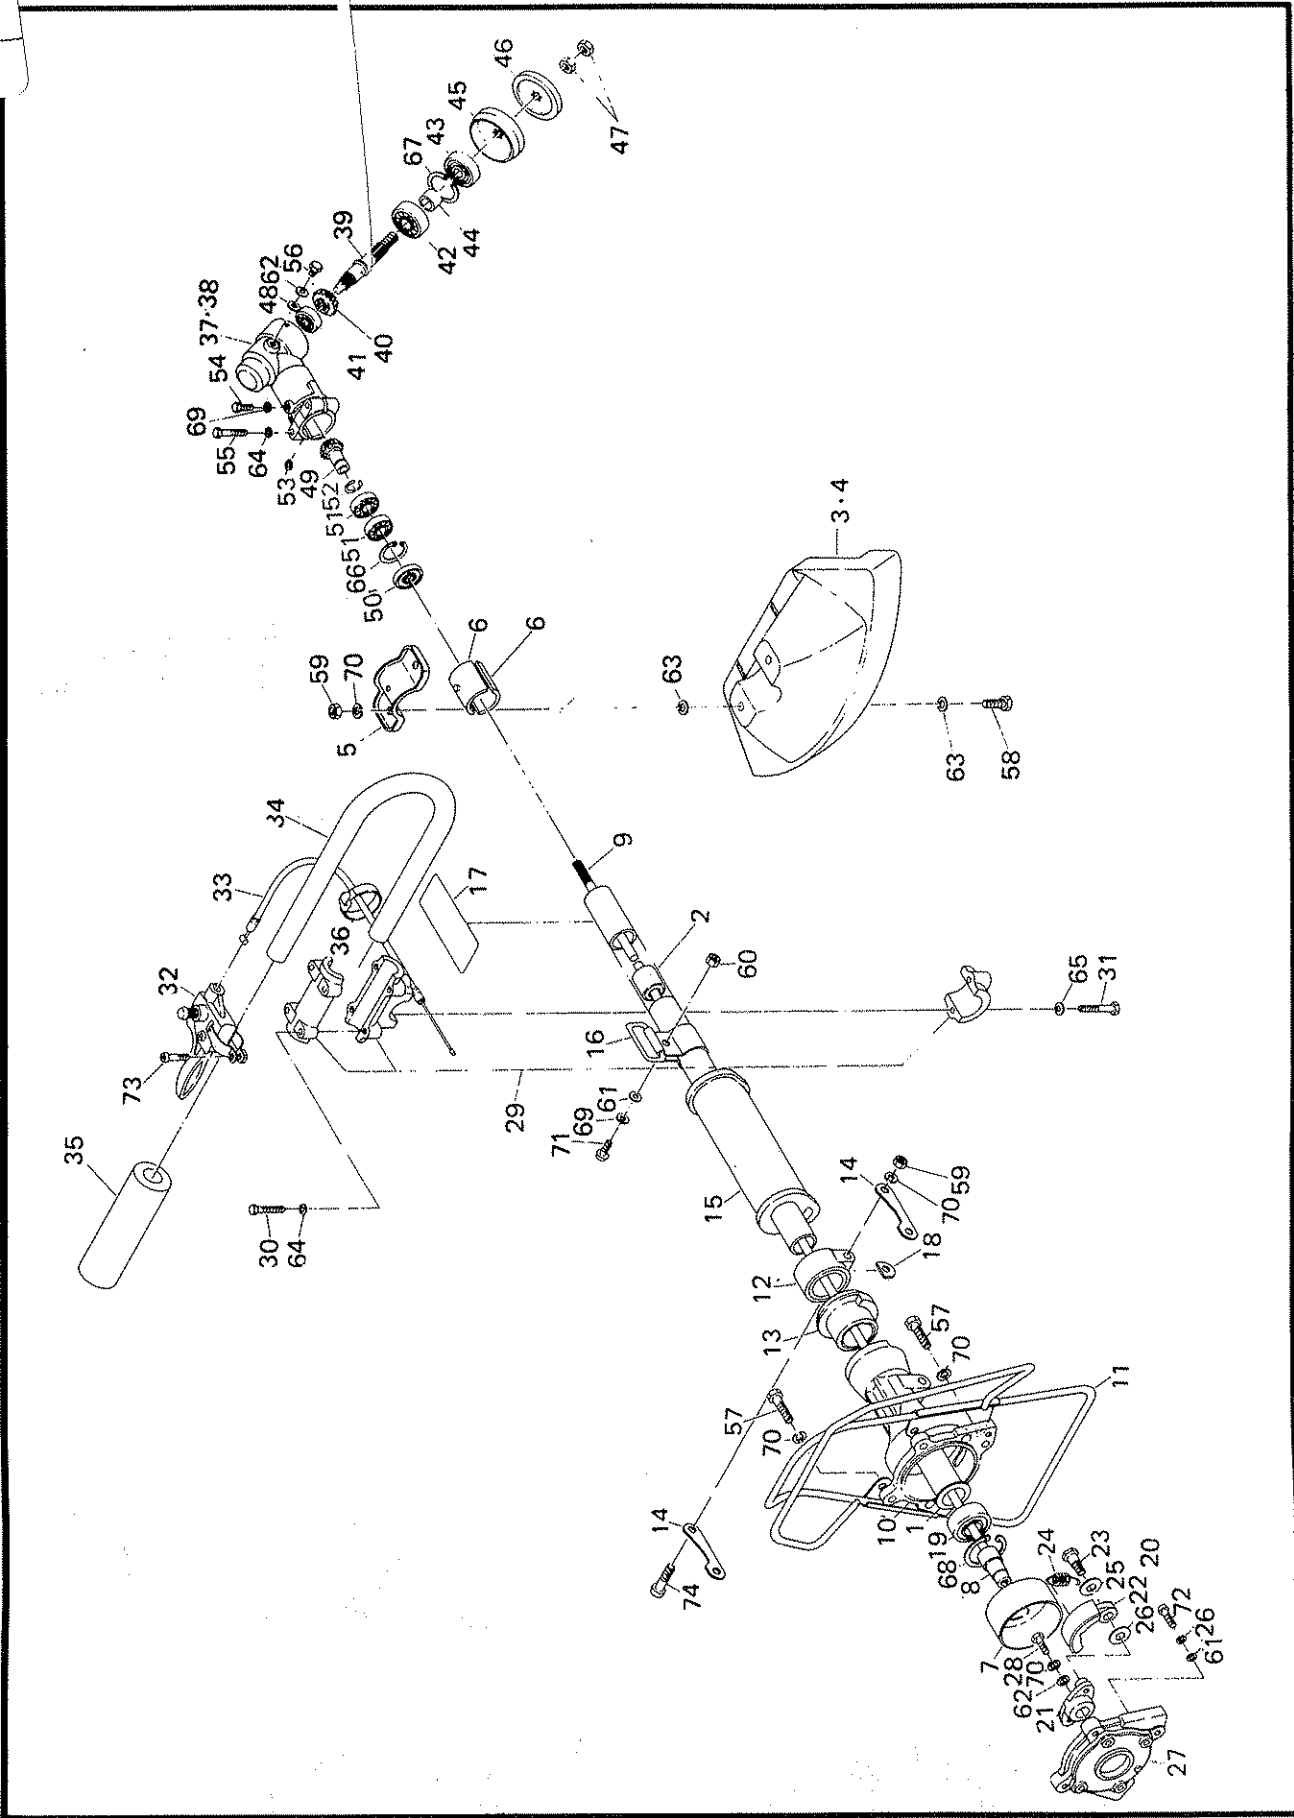


Machine body

NB02


Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	L122B-200	Main pipe ass'y (incl. 2)	3000	1	38	L122-301a	Gear box	1158	1
2	L122-208	Bearing (main shaft)	1120	5	39	L122-302b	Shaft (gear)	1159	1
3	NB02A-0501a	Safety cover unit (incl. 4-6, 58, 59, 63, 70)	3001	1	40	L122-303	Gear	1160	1
4	NB03D-5101a	Safety cover	3002	1	41	BB-627	Ball bearing	1161	1
5	NB03D-5102	Safety cover fixture	3003	1	42	BB-6200D	Ball bearing	1162	1
6	NB02A-5104	Spacer	3004	2	43	OS-D15307	Oil seal	1163	1
7	L122B-202a	Clutch drum ass'y	3005	1	44	LD15-310	Collar (oil seal)	1164	1
8	L122B-223a	Boss	3006	1	45	L122-304a	Disc washer (upper)	1165	1
9	L122B-224	Main shaft	3007	1	46	L122-305	Disc washer (lower)	1166	1
10	NB02A-111/2	Pipe case holder	3008	1	47	L122-307a	Hexagon nut (left) <i>n 312</i>	1167	2
11	NB02A-0530b	Stand compl.	3009	1	48	L122-308	Packing	1169	1
12	NB02A-1110	Stopper	3010	1	49	L122-209	Pinion	1170	1
13	NB02A-1111	Vibration-proof rubber	3011	1	50	L122-210	Oil seal	1171	1
14	NB02A-1112	Plate spring	3012	2	51	L122-212	Ball bearing (EE3)	1172	2
15	NB02A-1130	Grip (pipe case)	3013	1	52	L122-214	C-shaped snap ring for shaft	1173	1
16	LD122-204	Hanger	3014	1	53	L122-215	Distance piece	1174	2
17	NB03D-941	Label (caution)	3015	1	54	00165-0512-0	Bolt	3020	1
18	0210-06999-0	Gasket (fiber)	1370	1	55	00165-0528-0	Bolt	3021	2
19	BB-6201DD	Ball bearing	1123	1	56	00165-0608-0	Bolt	3022	1
20	NB02A-094	Clutch compl. <i>40/10</i> (incl. 21-26)	1138	1	57	00165-0625-0	Bolt	3023	4
21	NB02A-201	Holder	1139	1	58	00170-0625-0	Bolt (cross-recessed)	3024	2
22	NB02A-202a	Clutch shoe	1140	2	59	00218-0600-0	Nut	1290	4
23	NB02A-203	Clutch bolt	1141	2	60	00228-0500-0	Nut	1182	1
24	NB02A-204	Spring	1142	1	61	00310-0500-0	Washer	1183	5
25	NB02A-206	Washer (A)	1143	2	62	00310-0600-0	Washer	1184	2
26	NB02A-207	Washer (B)	1144	2	63	00312-0600-0	Washer	1395	4
27	NB02A-102	Locating plate	1146	1	64	TWA-5S	Toothed lock washer (internal)	1186	6
28	NB02A-205	Holder clamping bolt	1147	1	65	TWA-6S	Toothed lock washer (internal)	1419	2
29	L122A-400	Handle joint ass'y (inclu. 30, 31, 64, 65)	3016	1	66	00314-2400-0	Snap ring (inner)	1187	1
30	NB02B-407	Hexagon bolt	1149	4	67	00314-3000-0	Snap ring (inner)	1188	1
31	L122-408	Hexagon bolt	3017	2	68	00314-3200-0	Snap ring (inner)	1189	1
32	NB02A-0450a	Throttle lever ass'y	3018	1	69	00320-0500-0	Spring washer	1286	6
33	NB02A-098	Throttle wire compl.	1152	1	70	00320-0600-0	Spring washer	1294	9
34	NB02A-401b	Handle	1153	1	71	00431-0512-0	Screw (pan head)	1442	1
35	NB02A-404	Grip	1154	1	72	00431-0516-0	Screw (pan head)	1074	4
36	0566-08998-0	Clamp	1156	1	73	00431-0520-0	Screw (pan head)	1402	1
37	L122B-300	Gear box ass'y (incl. 38-56, 62, 64, 66, 67, 69)	3019	1	74	00431-0640-0	Screw (pan head)	3025	2

Engine body

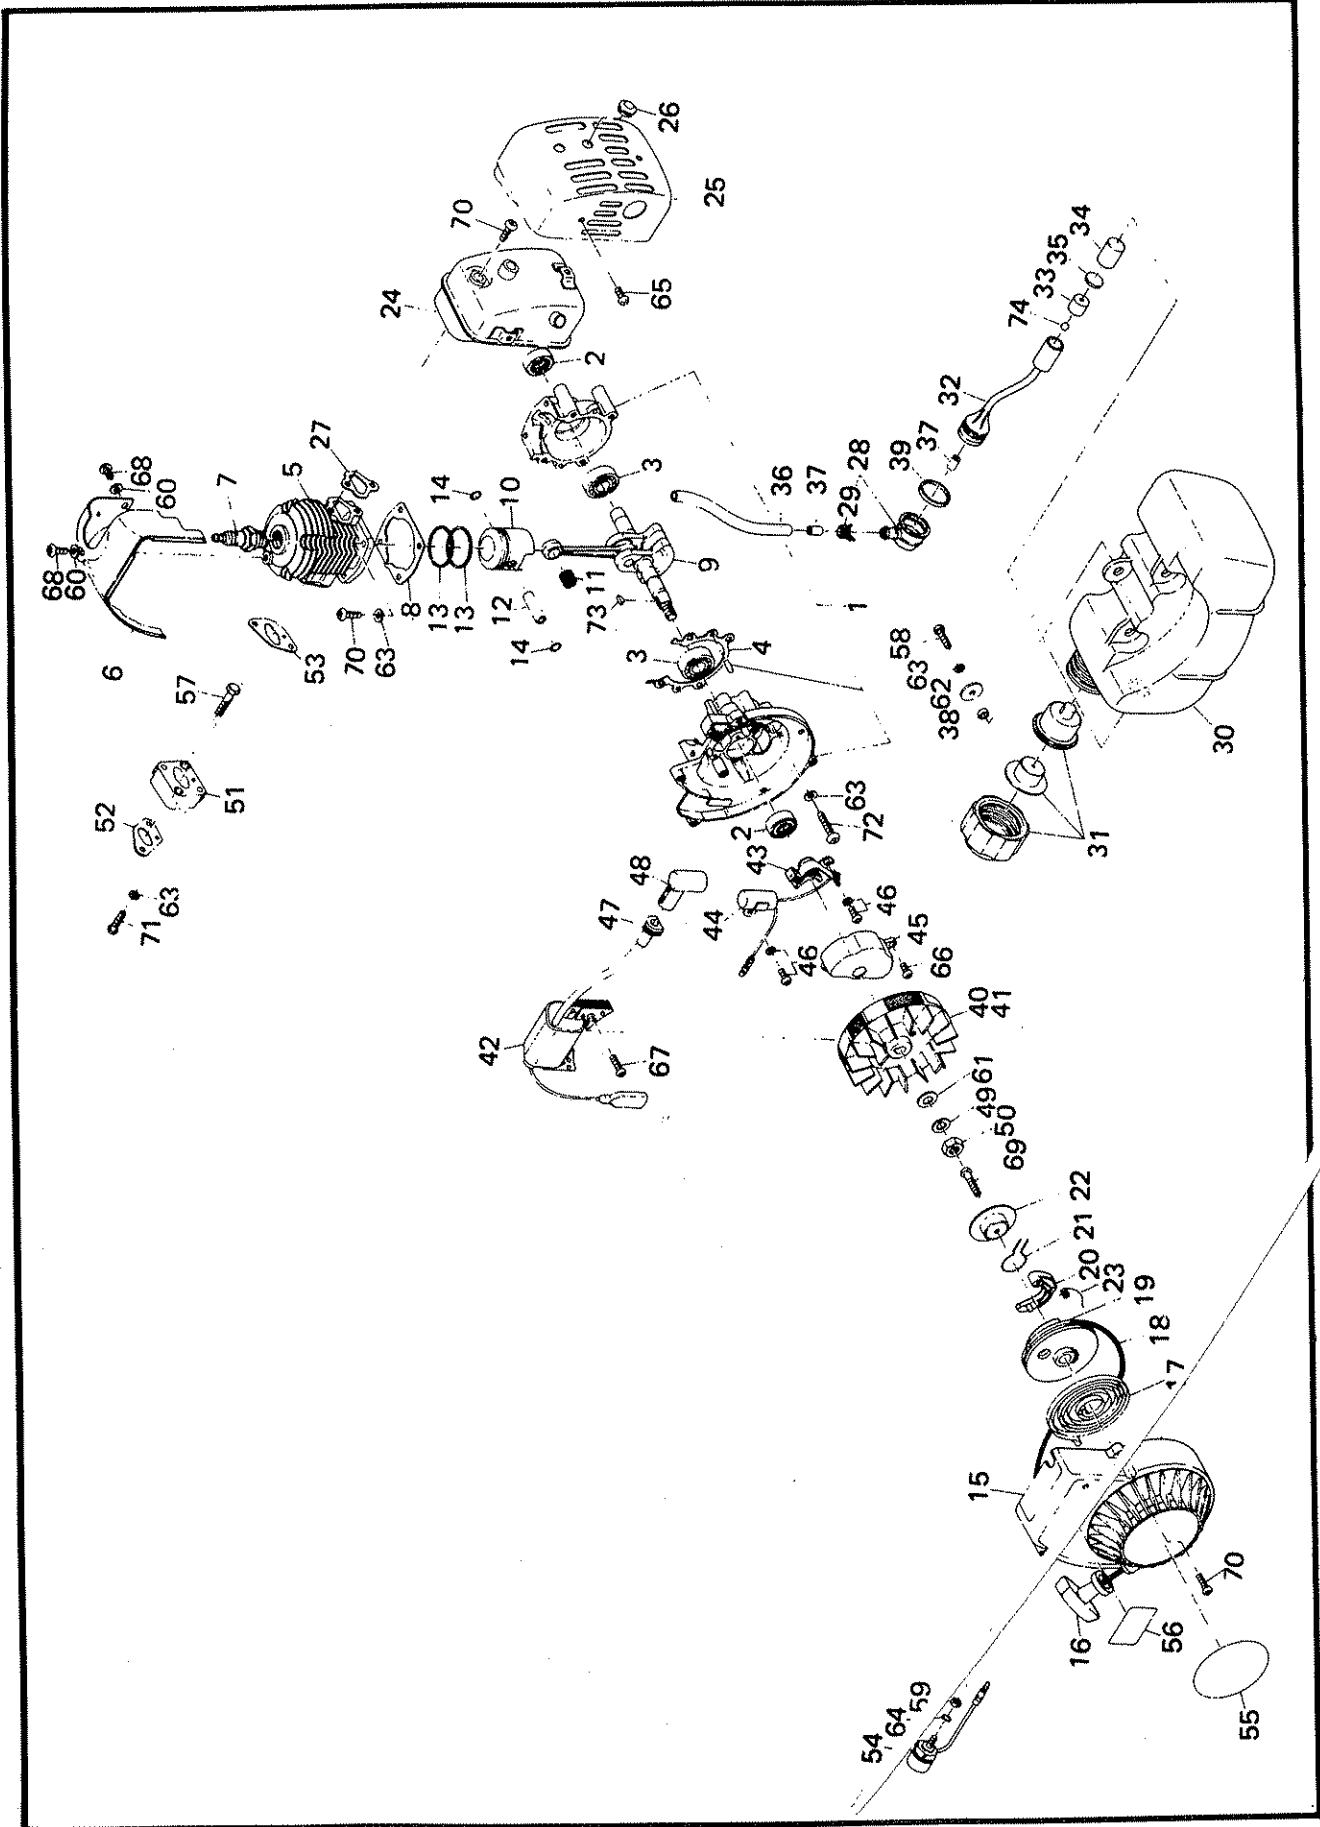

Engine body

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	EC02-006	Crank case compl. (incl. 2-4)	1001	5	38	0230-06999-1	Spacer	3031	3
2	0440-1299-1	Oil seal	1002	2	39	EC02-6601	Ring	1658	1
3	0600-12992-0	Ball bearing	1003	2	40	EC02-055b	Magneto compl. (incl. 41-45)	1039	1
4	EC02-120a	Crank case packing	1004	1	41	3M-42272	Flywheel	1041	1
5	EC02-110f	Cylinder	3026	1	42	4M-73118	Ignition coil	1043	1
6	EC02-501dA	Cylinder cover	1006	1	43	4M-14587	Breaker <i>NLA</i>	1045	1
7	0650-14981-0	Spark plug	1007	1	44	4M-03987	Condenser	1046	1
8	EC02-121b	Cylinder packing	1008	1	45	5M-41354	Cover	1047	1
9	EC02-089a	Crankshaft compl.	1641	1	46	0140-04998-0	Plus & minus threads with plain washer	1277	2
10	EC02-221c	Piston	1011	1	47	0241-05998-4	Gromet	1050	1
11	0610-08999-0	Needle bearing	1012	1	48	EC02-090b	Plug cap compl.	1051	1
12	EC02-211	Piston pin	1013	1	49	0203-08999-0	Spring washer (left)	1440	1
13	TG02-207a	Piston ring	1014	2	50	0170-08996-0	Nut (left)	3032	1
14	0565-07999-0	Clip	1015	2	51	EC02-020d	Heat insulator ass'y (incl. 57)	3033	1
15	EC02-058bA	Recoil starter compl. (inclu. 16-23, 72)	3027	1	52	EC02-320a	Heat insulator packing (cylinder)	1055	1
16	A57200100001	Starter knob	1018	1	53	EC02-321a	Heat insulator packing (cylinder)	1056	1
17	A60002600000	Spiral spring	1020	1	54	EC02-720	Stop button	1057	1
18	A57100890000	Starter rope	1021	1	55	0739-56995-0	Label	3034	1
19	A54102600100	Reel	1717	1	56	EC02-912	Label (caution)	3035	1
20	A55002610000	Ratchet	1023	1	57	00165-0522-0	Bolt	1424	2
21	A60126000000	Friction spring	1024	1	58	00170-0516-0	Bolt (cross-recessed)	1425	3
22	A56002600110	Friction plate	1025	1	59	00227-0400-0	Nut	1426	1
23	A60503210000	Return spring	1605	1	60	00310-0500-0	Washer	1183	2
24	EC02-015bTA	Muffler ass'y	3028	1	61	00310-0800-0	Washer	1428	1
25	EC02-039sA	Muffler cover ass'y	3029	1	62	00312-0500-0	Washer	1429	3
26	EC02-331	Muffler cover plug	1028	2	63	00320-0500-0	Spring washer	1286	13
27	EC02-315b	Muffler gasket	1646	1	64	00330-0400-0	Lock washer (external tooth)	1431	1
28	EC02-0098	Primary pump ass'y (incl. 29)	1642	1	65	00431-0506-0	Screw	1706	3
29	0561-08001-0	Hose clamp	1031	1	66	00431-0408-0	Screw	1297	2
30	EC02-6001	Fuel tank	1655	1	67	00431-0416-0	Screw	1298	2
31	EC02-0669	Fuel tank cap compl. <i>368</i>	1716	1	68	00431-0508-0	Screw	1072	2
32	EC02-6405	Rubber tube	1657	1	69	00431-0512-0	Screw	1442	1
33	EC02-627a	Weight	1035	1	70	00431-0516-0	Screw	1074	9
34	EC02-624	Felt	1036	1	71	00431-0520-0	Screw	1402	2
35	EC02-6701	Filter	1659	1	72	00431-0525-0	Screw	1076	4
36	EC02-6101a	Fuel pipe	3030	1	73	00532-0310-0	Woodruff key	1077	1
37	EC02-6706	Spacer	1660	2	74	00690-3160-0	Steel ball	1078	1

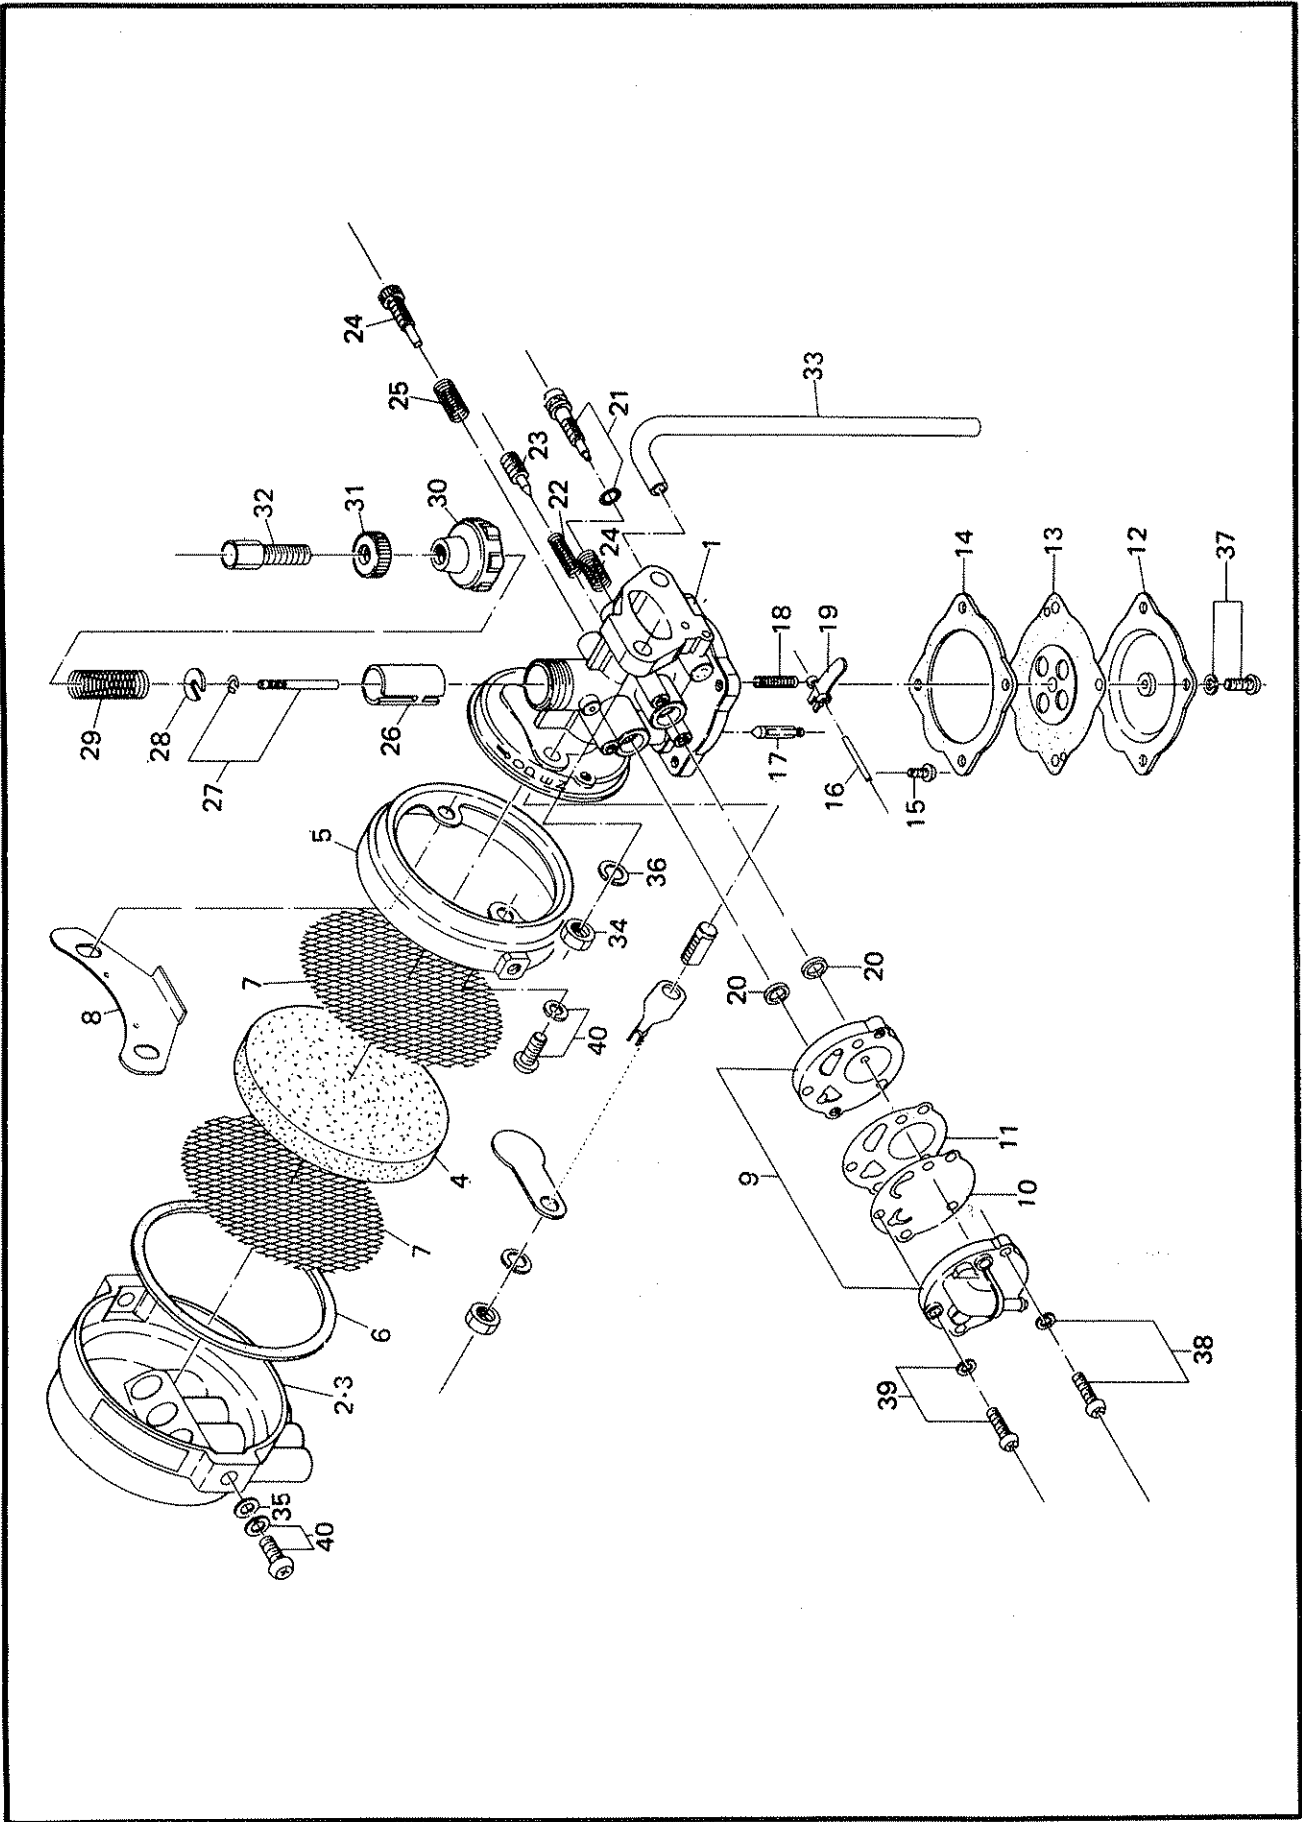


Carburetor

NB02


Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	EC02-076b	Carburetor compl. (incl. 2-32, 34-40)	3036	1	38	00435 0310 0	Screw ass'y (M3 x 10)	1116	2
2	EC02-035	Silencer ass'y (incl. 3-8, 35-40)	1080	1	39	00435 0316 0	Screw ass'y (M3 x 16)	1117	3
3	6012-1231-10-6	Cleaner cover	1081	1	40	00435 0410 0	Screw ass'y (M4 x 10)	1118	4
4	1502-7531-00-9	Cleaner	1082	1					
5	6007-1110-02-4	Cleaner body ass'y	1083	1					
6	6012-7351-00-9	Rubber seal	1084	1					
7	6007-7522-00-5	Back screen	1085	2					
8	1004-4711-00-2	Detent	1086	1					
9	5005-1400-10-5	Fuel pump ass'y (incl. 10, 11)	1087	1					
10	5006-8721-00-1	Diaphragm	1088	1	✓				
11	5006-7171-00-3	Diaphragm packing	1089	1	✓				
12	1102-1250-30-4	Diaphragm cover ass'y	1090	1	✓				
13	1102-8701-00-7	Diaphragm ass'y	1091	1	✓				
14	1102-7134-10-6	Diaphragm packing	1092	1					
15	9326-0130-06-8	Pan head machine screw (M3 x 6) (S30c)	1093	1					
16	1205-6742-03-1	Hinge pin	1094	1	✓				
17	1102-2132-00-2	Needle valve	1095	1	✓				
18	1001-8511-00-0	Valve spring	1096	1	✓				
19	1102-2721-01-9	Control lever	1097	1	✓				
20	1102-7154-00-1	Packing	1098	2	✓				
21	1102-6111-03-2	Main jet adjust screw	1099	1					
22	1107-8512-00-0	Spring	1100	1					
23	1001-5121-01-4	Slow air adjuster	1101	1					
24	1107-8511-00-6	Adjust screw spring	1102	2					
25	1001-5122-10-7	Slow stop screw	1103	1					
26	1001-2112-01-2	Throttle valve	1104	1					
27	1001-4311-10-3	Jet needle	1105	1					
28	1105-3511-02-7	Throttle spring receiver	1106	1					
29	1103-8511-00-0	Throttle valve spring	1107	1					
30	1110-1311-00-0	Bodycap	1108	1					
31	1106-8111-00-4	Cable adjuster lock nut	1109	1					
32	1113-6121-00-6	Cable adjuster	1110	1					
33	EC02-629	Vinyl pipe	1111	1					
34	00217 0500 0	Nut (M5)	1112	2					
35	00311 0400 0	Washer (M4)	1113	2					
36	00320 0500 0	Spring washer (M5)	1286	2					
37	00435 0308 0	Screw ass'y (M3 x 8)	1115	4					

Accessories

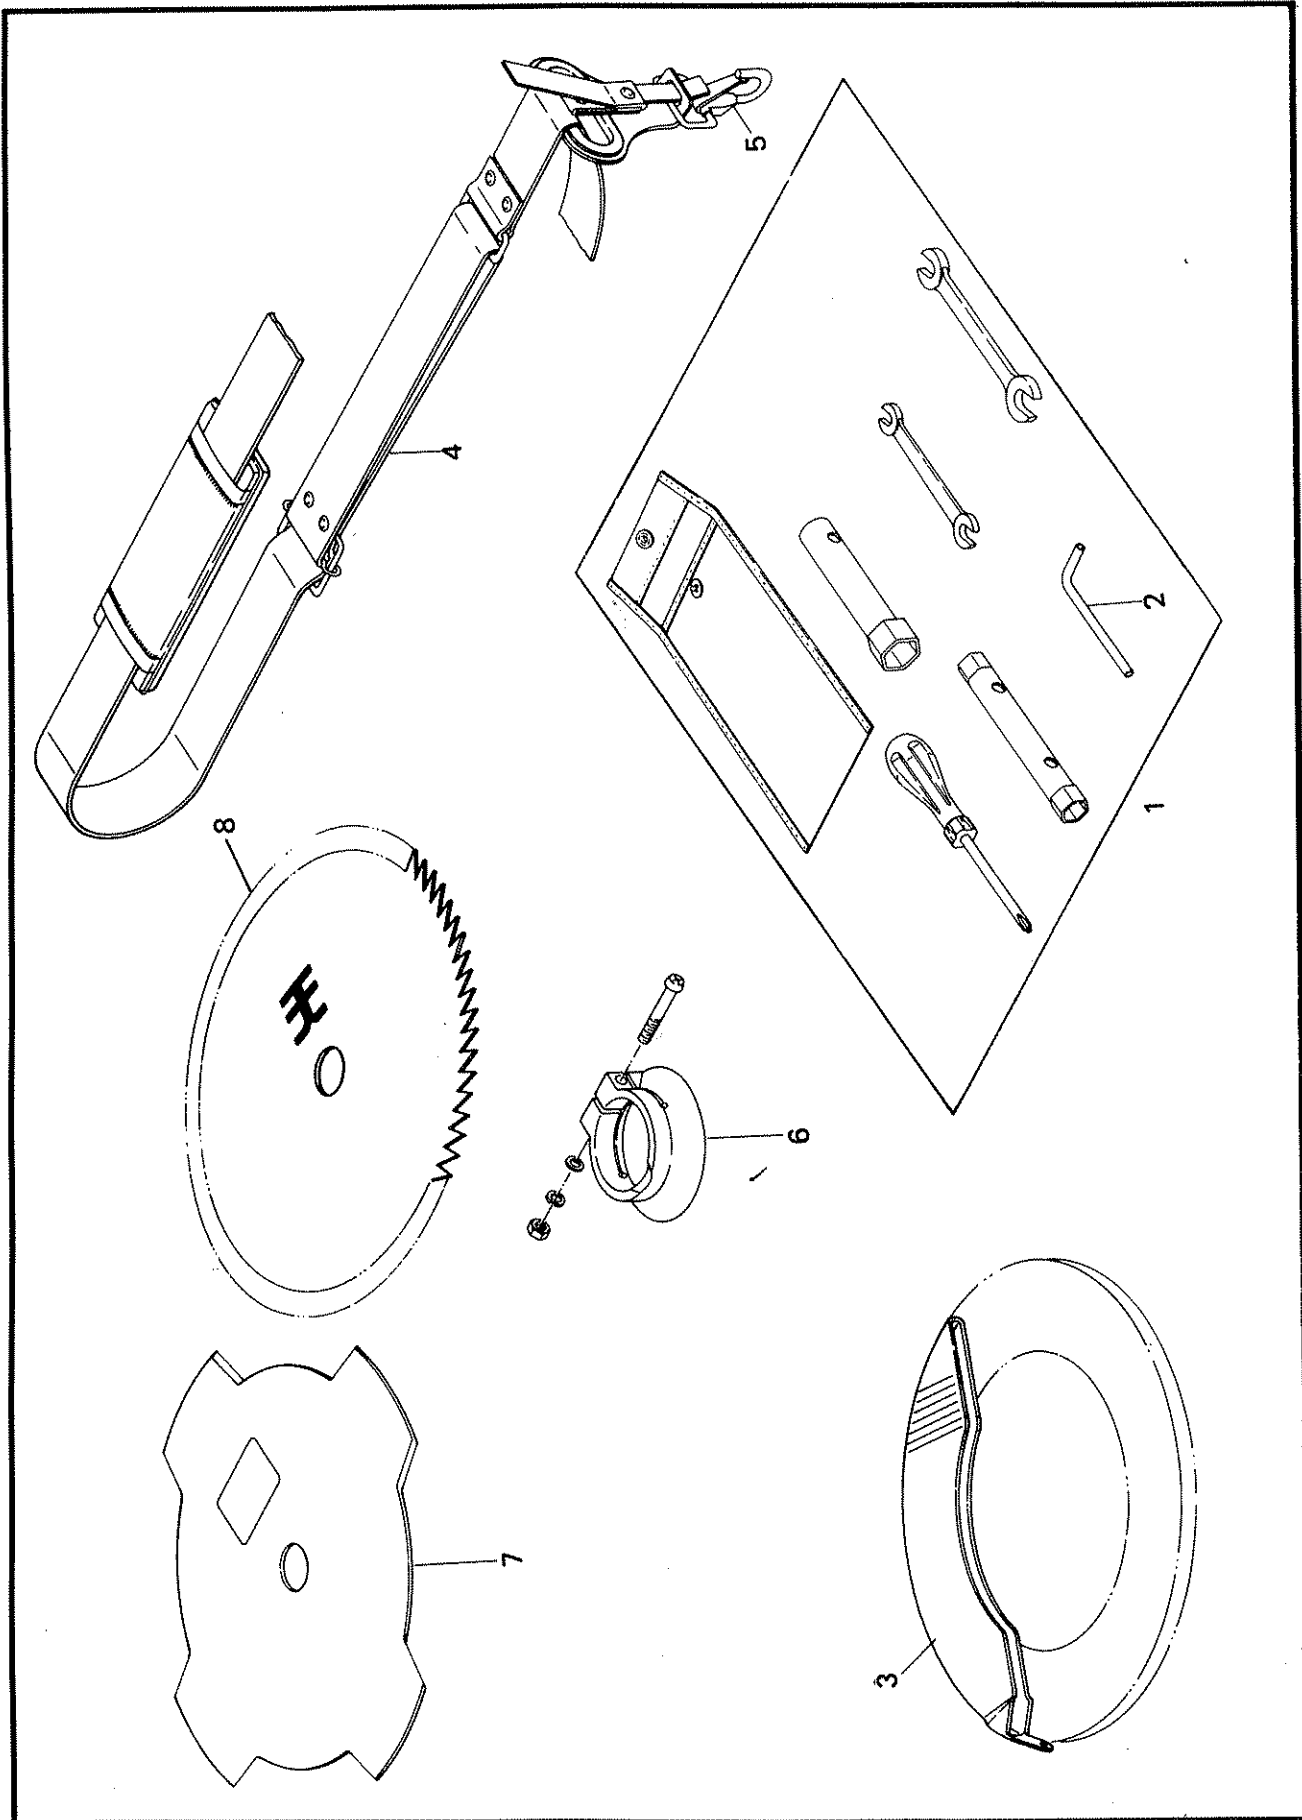


Accessories

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	NB02-097b	Tools kit compl. (incl. 2)	1206	1					
2	NB04G-920	Lock handle	1207	1					
3	NB03C-070b	Blade cover unit	1414	1					
4	NB02A-092c	Hanging band (incl. 5)	1204	1					
5	NB03D-937a	Hook	1406	1					
6	NB02A-0510b	Winding preventer B type	3037	1					

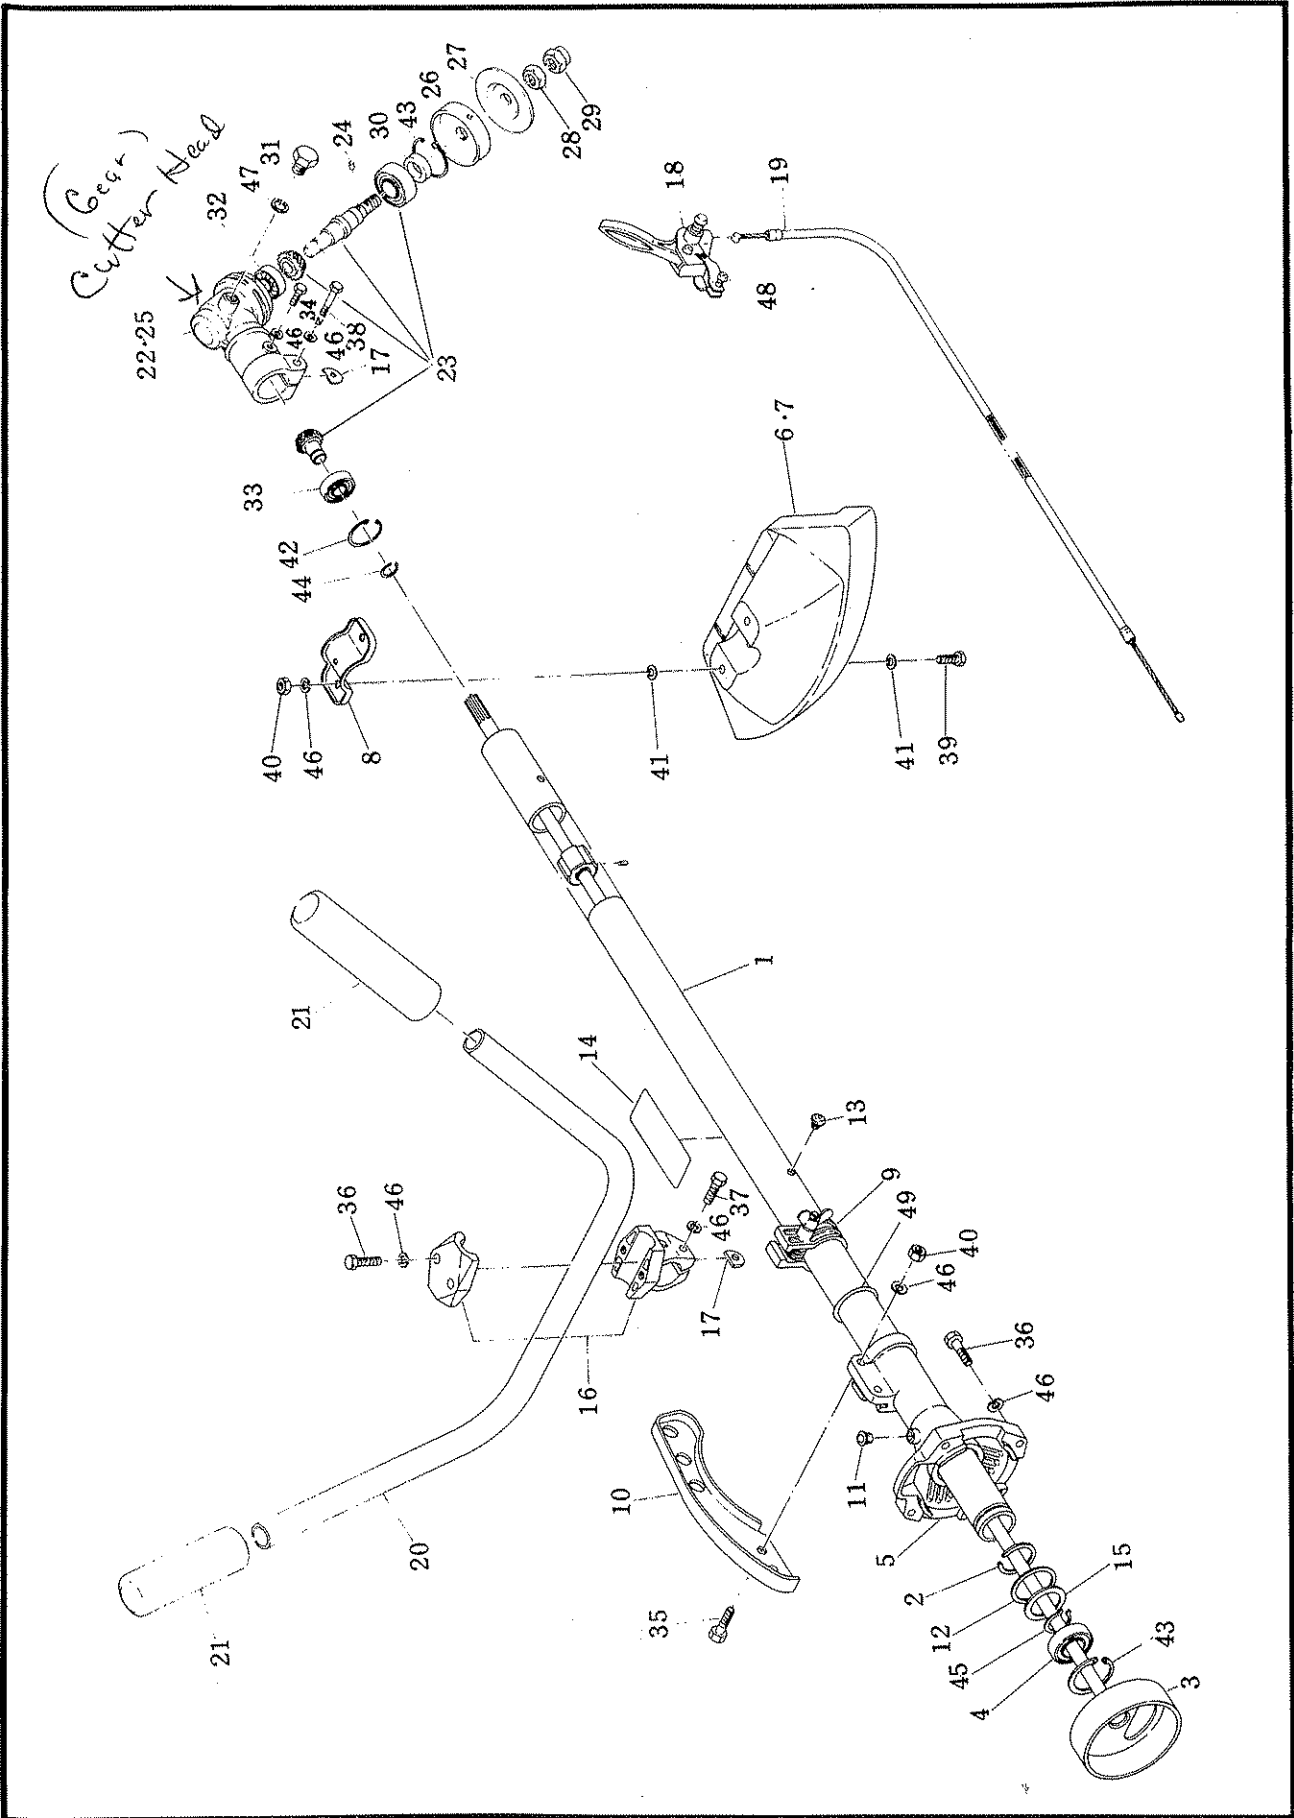


Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	NB03D-099/1	Pipe case compl. (incl. 2)	1352	1	38	00167-0635-0	Bolt (M6 x 35)	1392	1
2	NB03-121	Snap ring (outer)	1354	1	39	00170-0625-0	Bolt (cross-recessed) (M6 x 25)	3024	2
3	NB04D-098 a	Long shaft ass'y (incl. 4, 43, 45)	1355	1	40	00218-0600-0	Nut (M6)	1290	4
4	0600-17985-0	Ball bearing	4000	1	41	00312-0600-0	Washer (M6)	1395	4
5	NB03D-091/1	Pipe case holder compl. (incl. 49)	4001	1	42	00314-2800-0	Snap ring (inner)	1396	1
6	NB03D-0501a	Safety cover unit (incl. 7, 8, 39-41, 46)	4002	1	43	00314-3500-0	Snap ring (inner)	1397	2
7	NB03D-5101a	Safety cover	3002	1	44	00315-1200-0	Snap ring (outer)	1398	1
8	NB03D-5102	Safety cover fixture	3003	1	45	00315-1700-0	Snap ring (outer)	1399	1
9	NB03D-057	Detent unit	1363	1	46	00320-0600-0	Spring washer (M6)	1294	14
10	NB03-109/2	Hanging metal	1364	1	47	00371-1000-0	Gasket (fiber) (M10)	1401	1
11	NB03-110	Oil cup	1365	1	48	00431-0520-0	Screw (pan head) (M5 x 20)	1402	1
12	NB03-122	Washer	1448	1	49	00626-3028-0	O-ring	1404	1
13	NB03D-133a	Blank plug	1449	1					
14	NB03D-941	Label (caution)	4005	1					
15	0230-25999-0	Spacer	1451	0-1					
16	NB03-087a	Handle fixture compl. (incl. 17, 36, 37, 46)	1369	1					
17	0210-06999-0	Gasket (fiber)	1370	2					
18	NB03D-014b	Throttle lever ass'y	4006	1					
19	NB03-094a	Throttle wire compl.	1372	1					
20	NB04-401D	Handle	1373	1					
21	0638-18999-0	Grip	1374	2					
22	NB04-058e	Cutter head unit (incl. 17, 23-34, 38, 42-44, 46, 47)	4007	1					
23	NB04D-068a	Cutter shaft set (incl. 24)	4008	1					
24	0310-04999-0	Dowel pin	1377	1					
25	NB03-301/7aG	Gear case	4009	1					
26	NB03D-3110	Receiver washer	4010	1					
27	NB03D-3111	Clamp washer	4011	1					
28	NB03-310/2	Clamping unit	1381	1					
29	NB03-311/1	Cap nut	1382	1					
30	0230-15998-0	Spacer	1454	1					
31	0400-10998-0	Plug	1385	1					
32	0600-10998-0	Ball bearing	1386	1					
33	0600-12994-0	Ball bearing	1357	1					
34	00166-0612-0	Bolt (M6 x 12)	1388	2					
35	00166-0620-0	Bolt (M6 x 20)	1455	2					
36	00166-0625-0	Bolt (M6 x 25)	1390	6					
37	00166-0635-0	Bolt (M6 x 35)	1391	1					

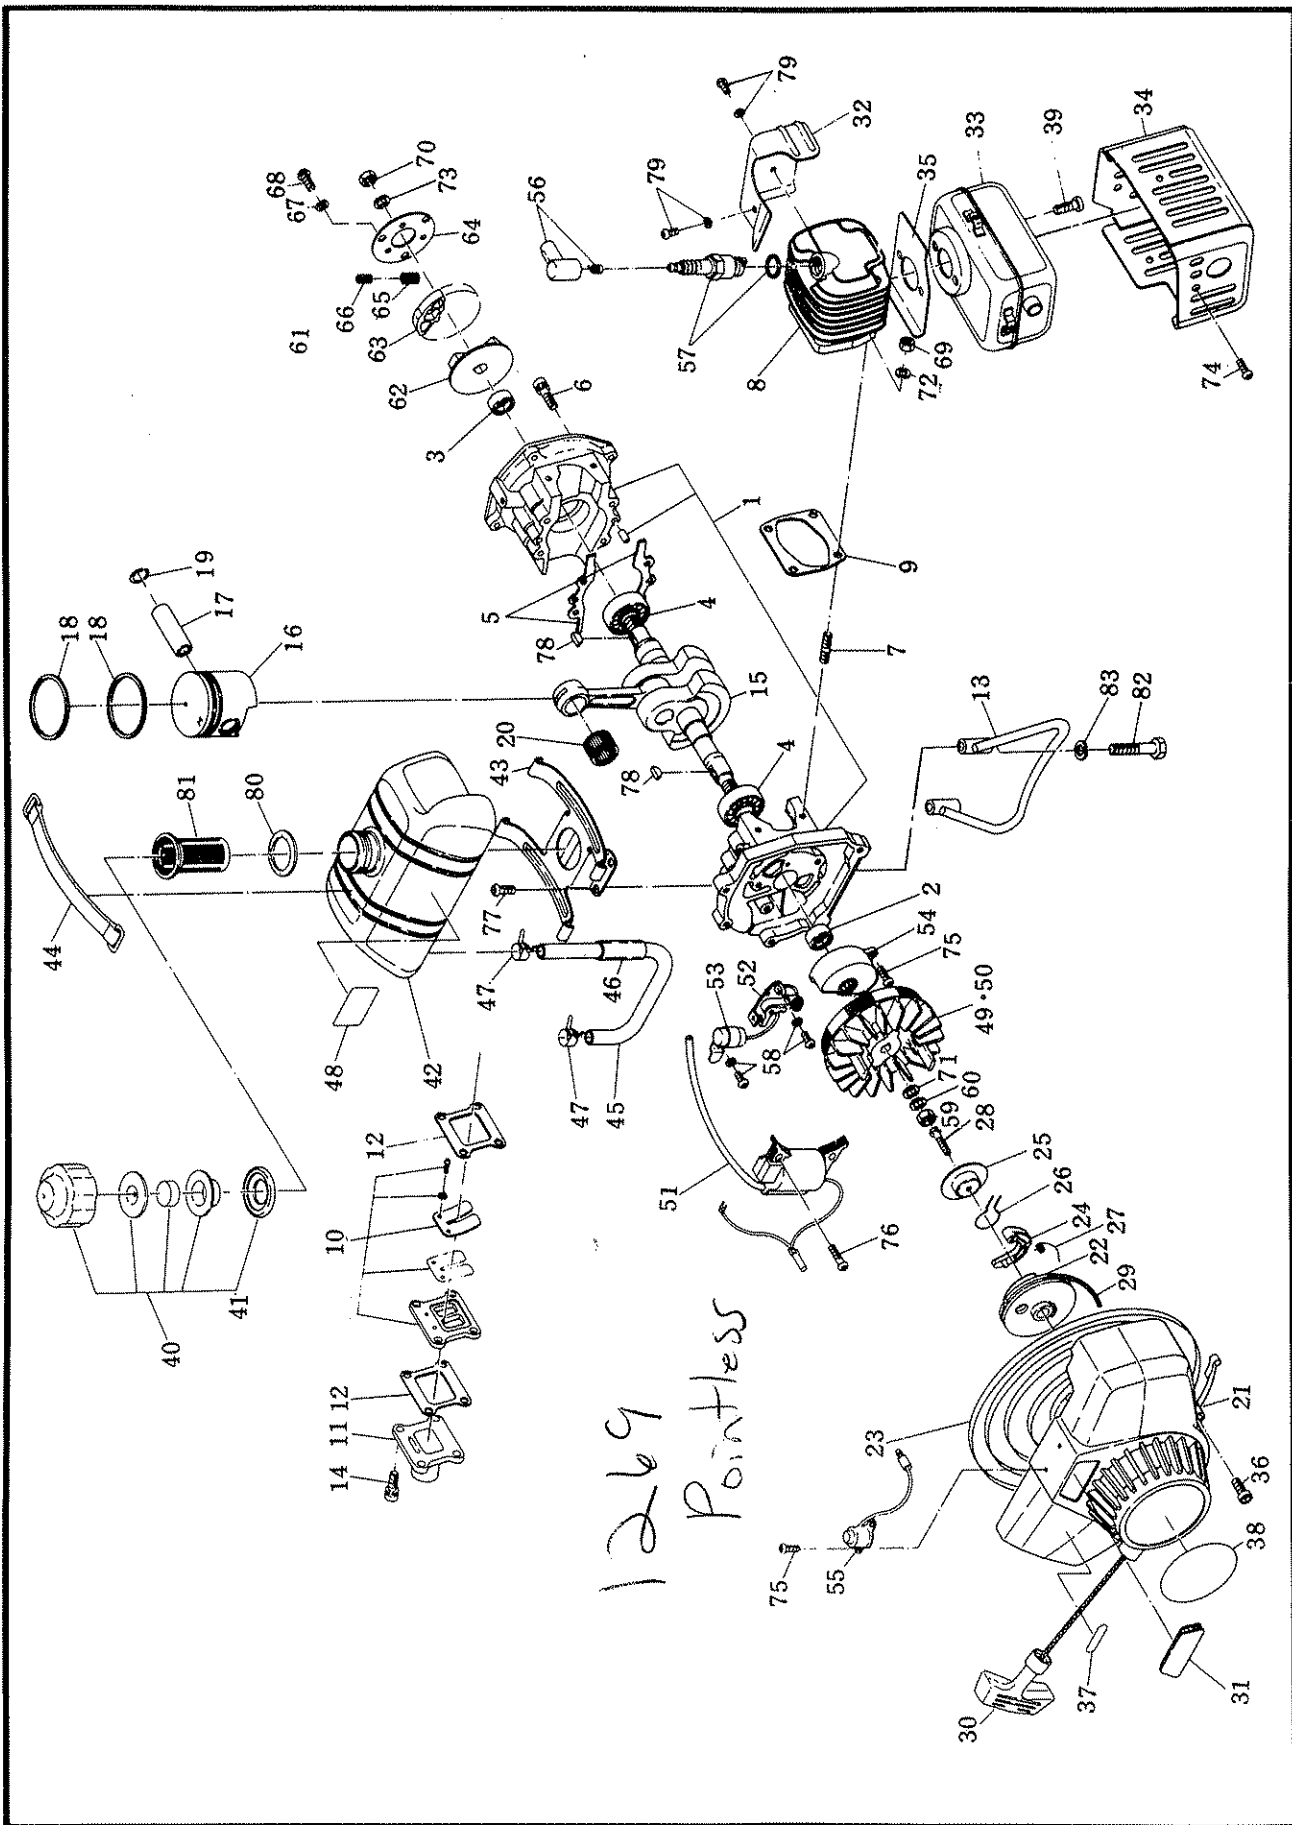


Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	EC04-072	Crank case compl. (incl. 2-7)	1210	1	43	EC03-303d	Fuel tank stand	4031	1
2	0440-12999-1	Oil seal (front)	1002	1	44	EC04-304a	Tank band	1259	2
3	0440-15997-1	Oil seal (rear)	1212	1	45	EC03-6101	Fuel pipe	1260	1
4	0600-15988-0	Ball bearing	1213	2	46	EC03-6103	Protective pipe	1261	1
5	EC03-071	Crank case packing set	1214	1	47	0561-13998-2	Hose clamp	1262	2
6	0119-05994-0	Bolt (socket head) (M5 x 30)	1215	4	48	EC02-912	Label (caution)	1653	1
7	0105-06994-0	Stud (M6)	1216	4	49	EC04-0701a	Magneto compl. (incl. 50-54)	1265	1
8	EC04-105i	Cylinder	4013	1	50	11100070020	Flywheel	4032	1
9	EC03-109a	Cylinder packing	1218	1	51	11400041000	Ignition coil	4033	1
10	EC03-091	Reed compl.	1219	1	52	11320052000	Breaker	4034	1
11	EC03-104b	Carburetor bracket	1220	1	53	11380040010	Condenser	1272	1
12	EC03-115	Reed bracket packing	4014	2	54	11390000000	Cover	1273	1
13	NB03D-523	Stand	1338	1	55	EC04-0711	Stop button compl.	1274	1
14	0119-05995-0	Bolt (socket head) (M5 x 18)	1223	4	56	KM61-088c	Plug cap compl.	1275	1
15	EC04-096c	Crankshaft compl.	1225	1	57	0650-14995-0	Spark plug NGKB7HS	1276	1
16	EC04-206/2b	Piston	1227	1	58	0140-04998-0	Plus & minus thread with plain wash (M4 x 8)	1277	2
17	EC04-207a	Piston pin	1228	1	59	0170-08996-0	Nut (left) (M8)	1278	1
18	EC04-210a	Piston ring	1229	2	60	0203-08999-0	Spring wash (left) (M8)	1440	1
19	0565-11999-0	Clip	1230	2	61	NB03D-0201a	Clutch compl. (incl. 62-68)	4035	1
20	0610-129961	Needle bearing	4015	1	62	NB03-203	Retainer	1281	1
21	EC04-0510G	Recoil starter compl. (incl. 22-30)	4016	1	63	NB03D-2101	Clutch shoe	4036	3
22	A54103200100	Reel	4017	1	64	NB03D-204a	Shoe keep plate	4037	1
23	A60003200000	Spiral spring	4018	1	65	NB03-208	Spring A	1284	3
24	A55003210001	Ratchet	4019	1	66	NB03-209	Spring B	1285	3
25	A56003200090	Friction plate	4020	1	67	00320-0500-0	Spring washer (M5)	1286	3
26	A60102600000	Friction spring	1024	1	68	00431-0510-0	Screw (pan head) (M5 x 10)	1287	3
27	A60503210000	Return spring	1605	1	69	00218-0600-0	Nut (M6)	1290	4
28	141051251002	Bind screw	4021	1	70	00228-0800-0	Nut (M8)	1291	1
29	A57120950000	Starter rope	4022	1	71	00310-0800-0	Washer (M8)	1428	1
30	A30501100001	Starter knob compl.	1241	1	72	00320-0600-0	Spring washer (M6)	1294	4
31	EC04-5108	Rubber plug	4023	1	73	00320-0800-0	Spring washer (M8)	1295	1
32	EC03-5121G	Cylinder cover	1340	1	74	0140-05996-0	Screw (M5 x 6)	4038	4
33	EC03-0320/1a	Muffler	4024	1	75	00431-0408-0	Screw (pan head) (M4 x 8)	1297	4
34	EC03-0301a	Muffler cover compl.	4025	1	76	00431-0416-0	Screw (pan head) (M4 x 16)	1298	2
35	EC03-3122	Muffler gasket	1341	1	77	00431-0512-0	Screw (pan head) (M5 x 12)	1442	3
36	0119-05999-0	Bolt (socket head) (M5 x 18)	1248	3	78	00532-0310-0	Woodruff key	1077	2
37	P301-E-511a	Name plate	4026	1	79	00435-0408-0	Screw ass'y (M4 x 8)	4039	2
38	0739-669810	Label	4027	1	80	EC05A-6111	Packing B	4040	1
39	0119-06999-0	Bolt (socket head) (M6 x 18)	1253	2	81	0641279990	Fuel filter	4041	1
40	EC02-083	Fuel tank cap compl. (incl. 41)	4028	1	82	0016606400	Bolt (M6 x 40)	1444	2
41	EC02-644	Packing A	4029	1	83	00320-06-000	Spring washer (M6)	1294	2
42	EC04-6131	Fuel tank	4030	1					

Carburetor

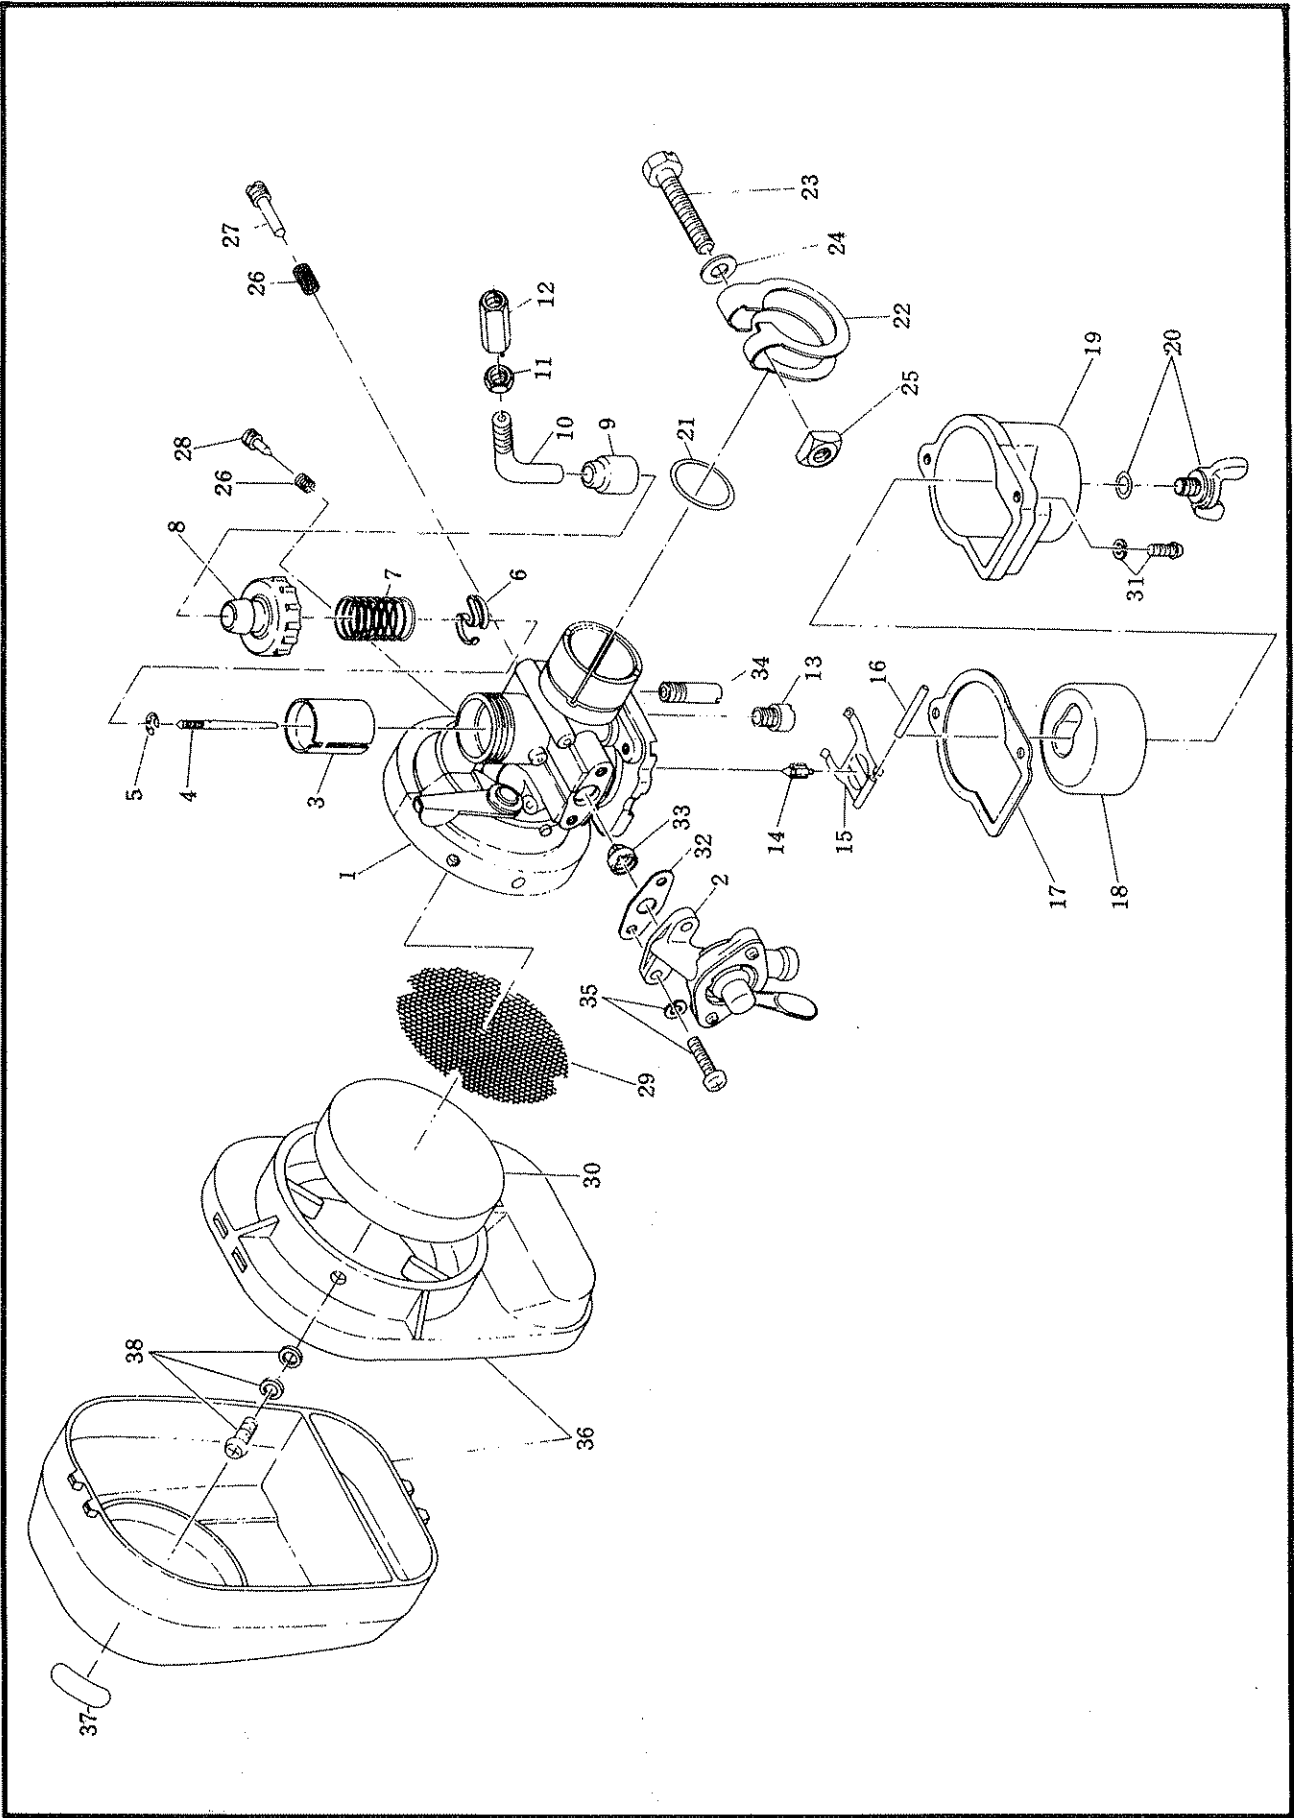


Carburetor

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	EC03-0663a	Carburetor compl. (incl. 2-35)	4042	1					
2	CK/31	Cock body ass'y	4043	1					
3	VM15/151b	Piston valve (# 1.5)	4044	1					
4	J8-3N06	Jet needle	4045	1					
5	MD14/40	E ring	1305	1					
6	VM14C1/38b	Spring seat	1306	1					
7	VM15/24a	Spring	1307	1					
8	VM16/200	Top	4046	1					
9	VM12/43	Cap	4047	1					
10	MD13/44	Cable guide	4048	1					
11	M21/15	Cable adjuster lock nut	4049	1					
12	VM24/148	Cable adjuster	1312	1					
13	N102-221	Main jet (# 70)	4050	1					
14	VM15/173	Needle ass'y	4051	1					
15	VM15/353	Float arm	4052	1					
16	VM15/264	Float pin	1317	1					
17	VM15/351	Gasket	4053	1					
18	VM13/139	Float	4054	1					
19	VM13/185	Float chamber body	4055	1					
20	EC03-S0010	Guide screw compl.	4056	1					
21	VM13/68a	O ring	1323	1					
22	VM13/211	Clip	4057	1					
23	B2=0630	Bolt	1325	1					
24	B34/83	Washer	1326	1					
25	389/067	Square nut	1327	1					
26	M12F/46a	Spring	4058	2					
27	VM15/30	Throttle stop screw	1329	1					
28	MD16/15a	Air screw	4059	1					
29	VM13/98a	Net	1331	1					
30	VM13/121	Filter	1332	1					
31	CWZ=0416	Spring washer cross screw	4060	2					
32	VM15/348	Gasket	4061	1					
33	VM13/210	Filter	4062	1					
34	VM13/164	Pilot jet (# 35)	4063	1					
35	CW2=0414	Spring washer cross screw	1333	2					
36	EC03-0338	Silencer compl. (incl. 37)	4064	1					
37	0737-30995-0	Label	1335	1					
38	00436-0410-0	Screw ass'y (M4 x 10)	4065	4					

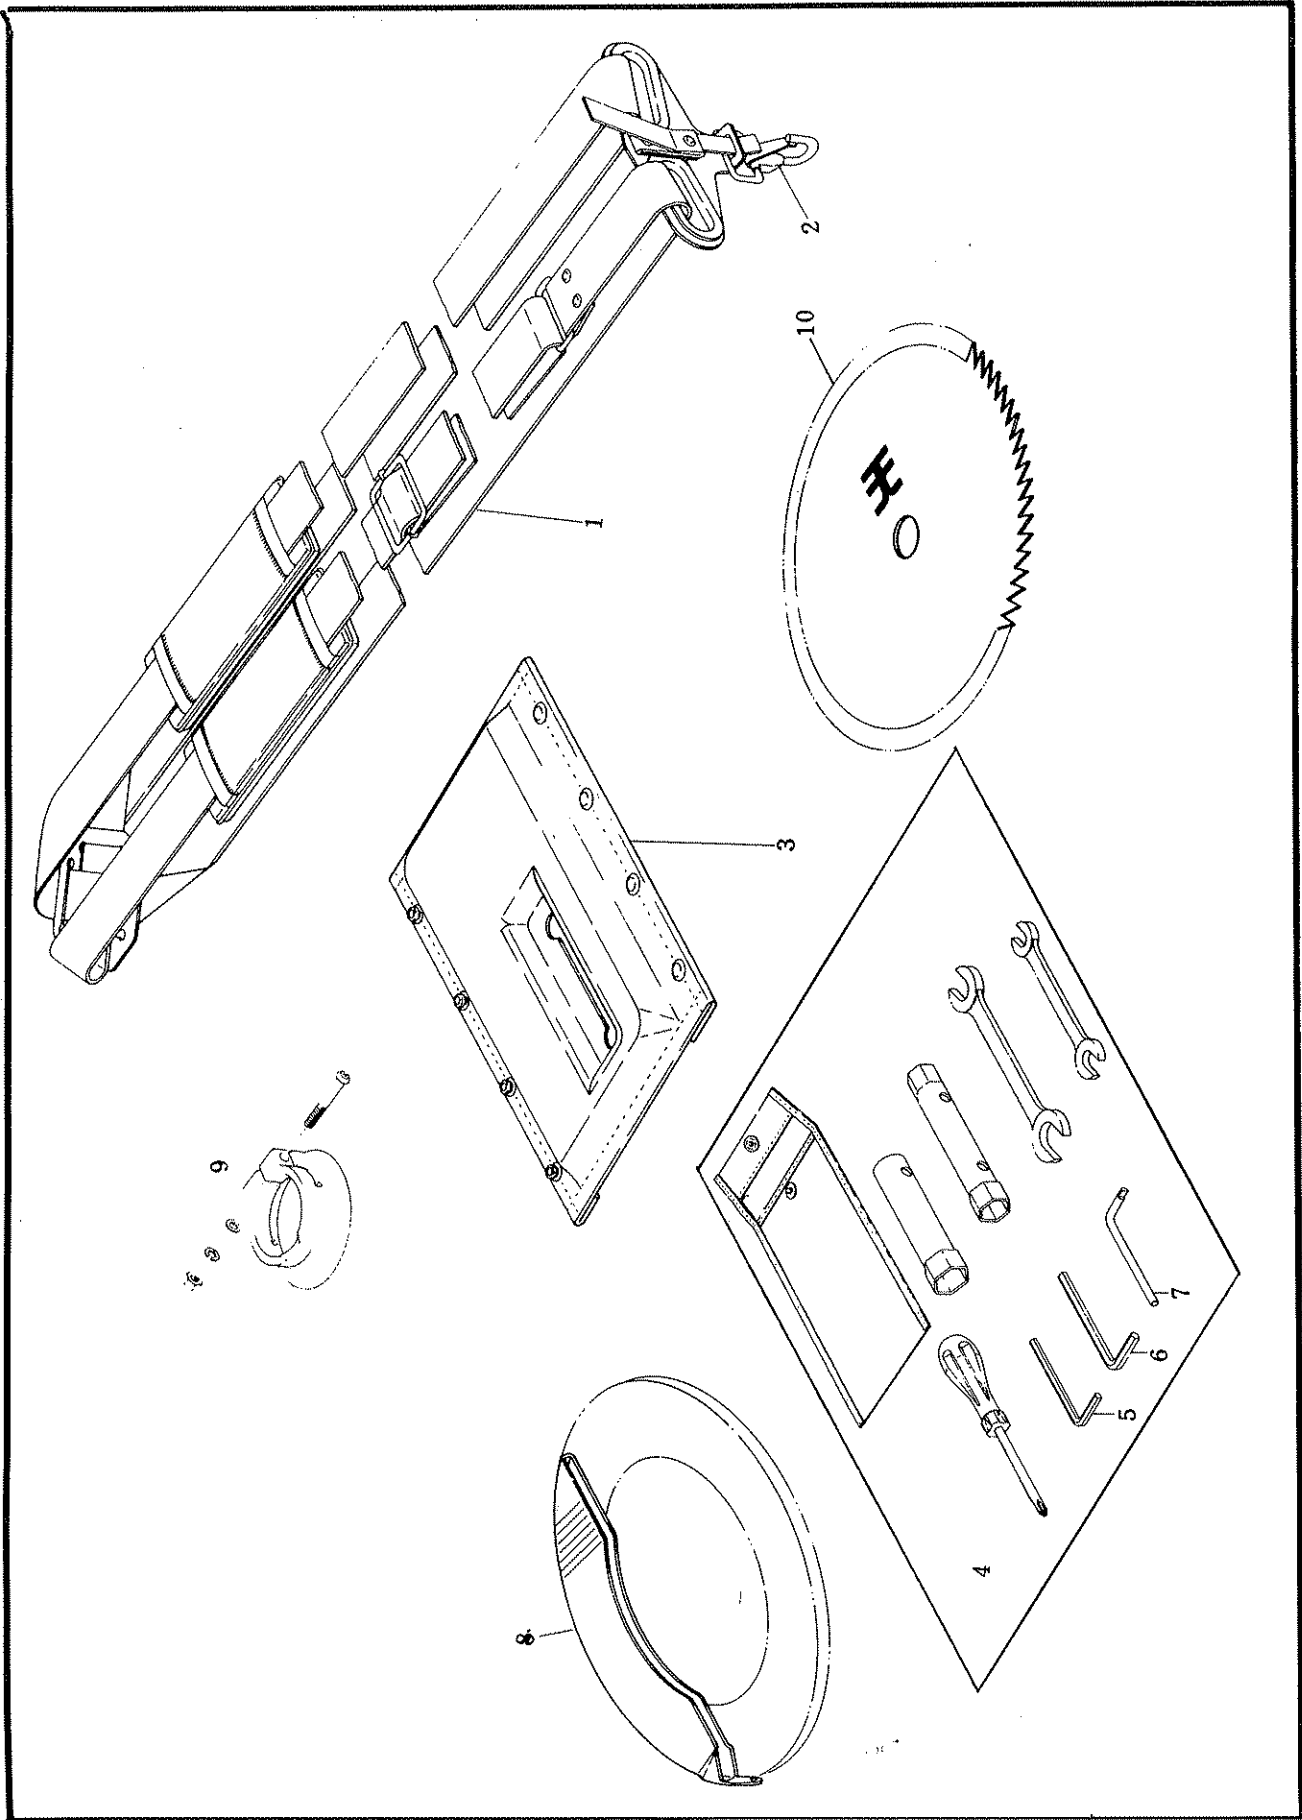


Accessories

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
1	NB03D-092c	Hanging band compl. (incl. 2)	1405	1					
2	NB03D-937A	Hook	1406	1					
3	NB04CII-908C	Waist pad	1407	1					
4	NB03-093/2f	Tools kit (incl. 5-7)	1410	1					
5	0717-04999-0	Wrench (socket head) (for M5)	1411	1					
6	0717-05999-0	Wrench (socket head) (for M6)	1412	1					
7	NB03-920	Lock handle	1413	1					
8	NB03C-070a	Blade cover unit	1414	1					
9	NB03C-066/1a	Winding preventer (B) type	4066	1					

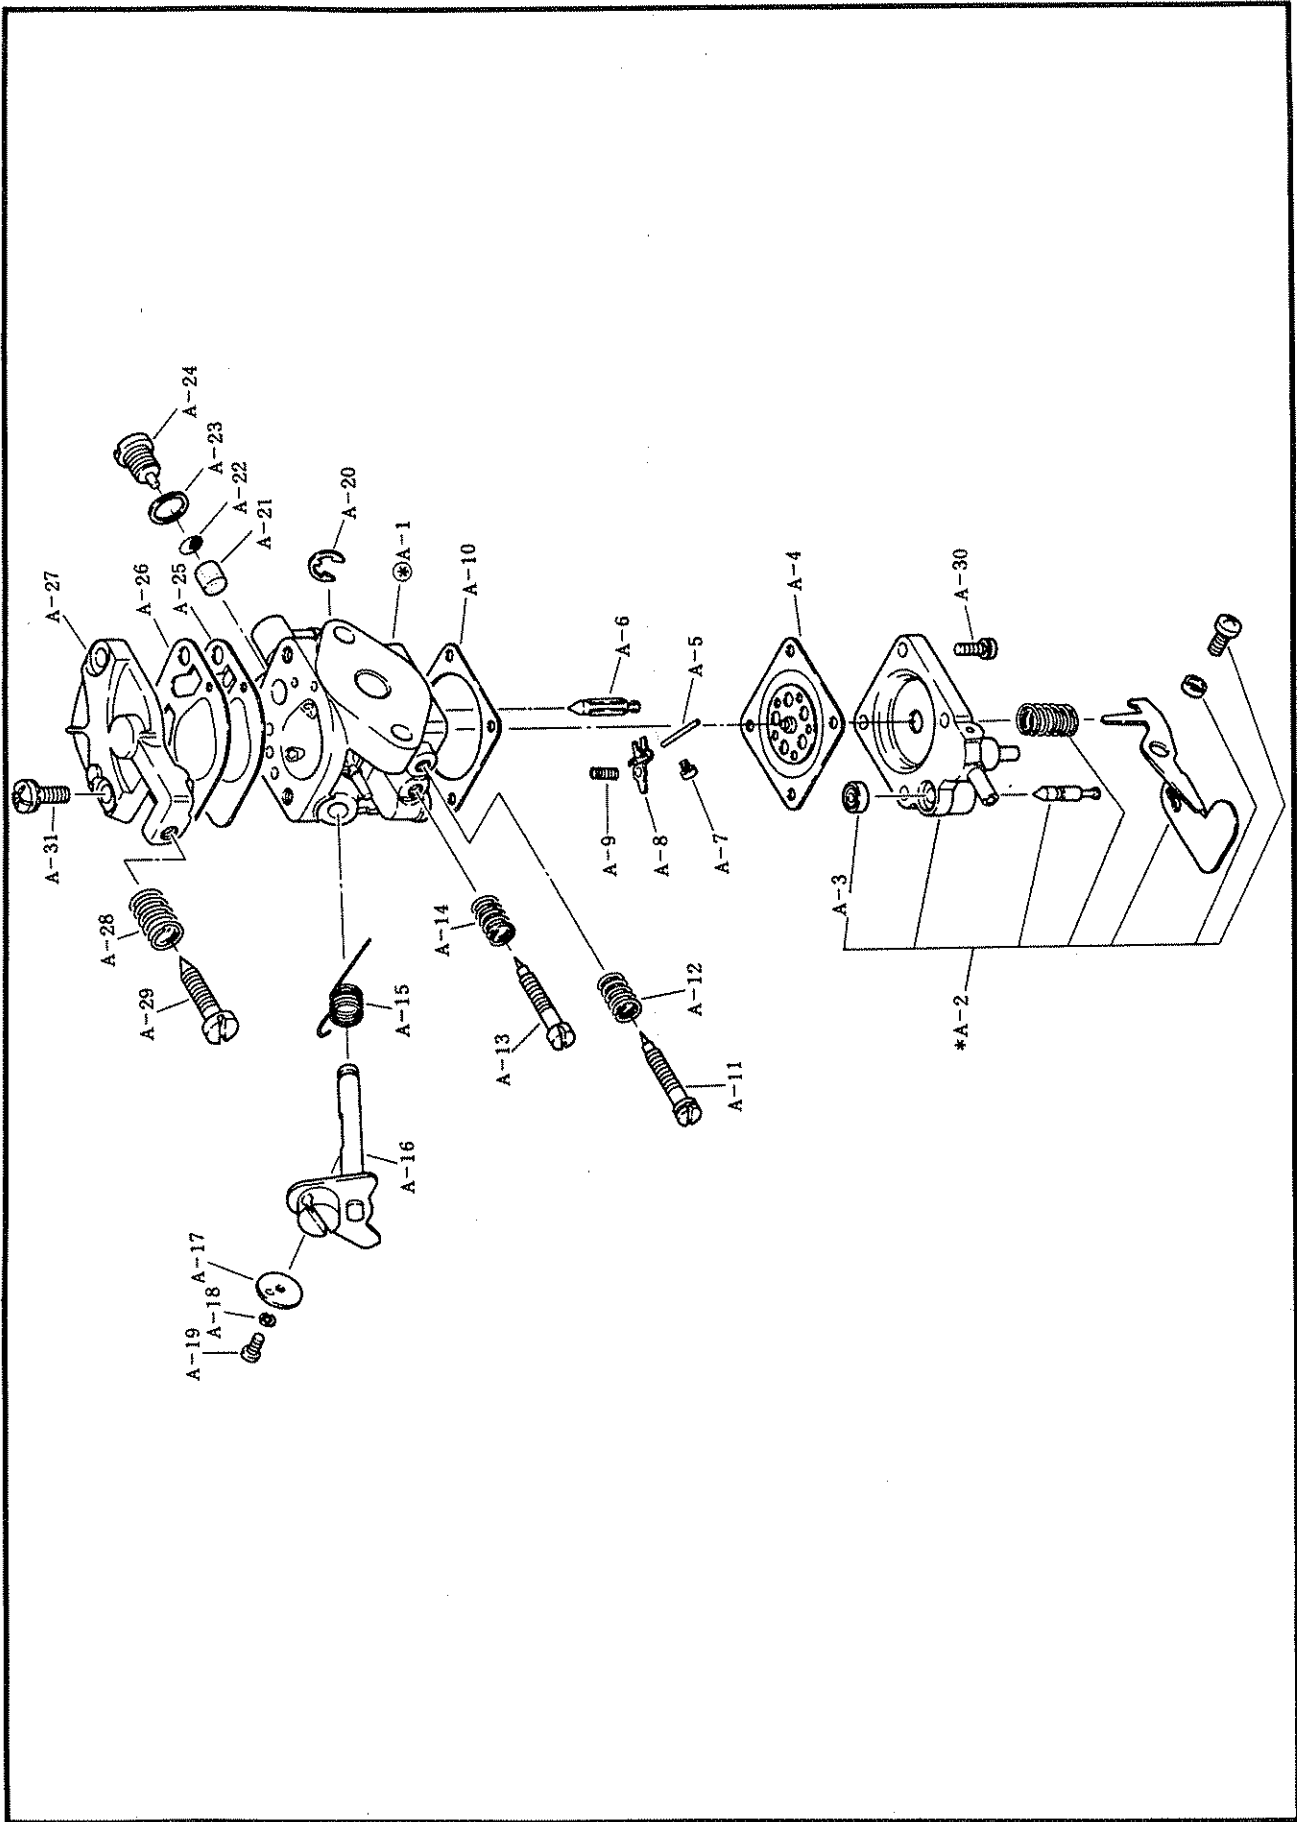

Carburetor

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
A-1	EC01A-0601/1	Carburetor compl.	4067	1					
A-2	1009-1250-20-9	Diaphragm cover ass'y	4068	1					
A-3	1001-3261-01-6	Rubber seat	4069	1					
A-4	1625-8720-20-9	Main diaphragm ass'y	4070	1					
A-5	1625-6742-10-0	Hinge pin	4071	1					
A-6	1102-2132-00-2	Needle valve	1095	1					
A-7	9326-0130-04-4	Screw (pan head)	4072	1					
A-8	1625-2721-00-5	Control lever	4073	1					
A-9	1625-8512-10-9	Needle valve spring	4074	1					
A-10	1625-7134-10-4	Main diaphragm packing	4075	1					
A-11	1625-6111-10-5	Main jet adjusting screw	4076	1					
A-12	1603-8511-00-0	Adjusting spring	4077	1					
A-13	1625-5121-20-8	Slow idle screw	4078	1					
A-14	1625-8513-00-2	Adjusting spring	4079	1					
A-15	1625-8511-11-7	Throttle return spring	4080	1					
A-16	1625-2304-10-4	Throttle shaft ass'y	4081	1					
A-17	1625-2113-21-2	Throttle valve	4082	1					
A-18	9451-1024-00-9	Spring washer	4083	1					
A-19	9311-0123-04-0	Screw (pan head)	4084	1					
A-20	9616-0603-06-4	E-ring	4085	1					
A-21	1625-7515-00-9	Felt	4086	1					
A-22	1625-7551-31-0	Filter net	4087	1					
A-23	1625-7125-00-4	Packing	4088	1					
A-24	1625-5141-00-2	Drain plug	4089	1					
A-25	1625-8721-21-5	Pump diaphragm	4090	1					
A-26	1625-7171-20-5	Pump packing	4091	1					
A-27	1625-1242-11-7	Pump cover	4092	1					
A-28	1311-8515-02-9	Adjusting spring	4093	1					
A-29	1625-5122-00-0	Slow stop screw	4094	1					
A-30	00435 0310 0	Screw ass'y	1116	4					
A-31	00435 0410 0	Screw ass'y	1118	2					

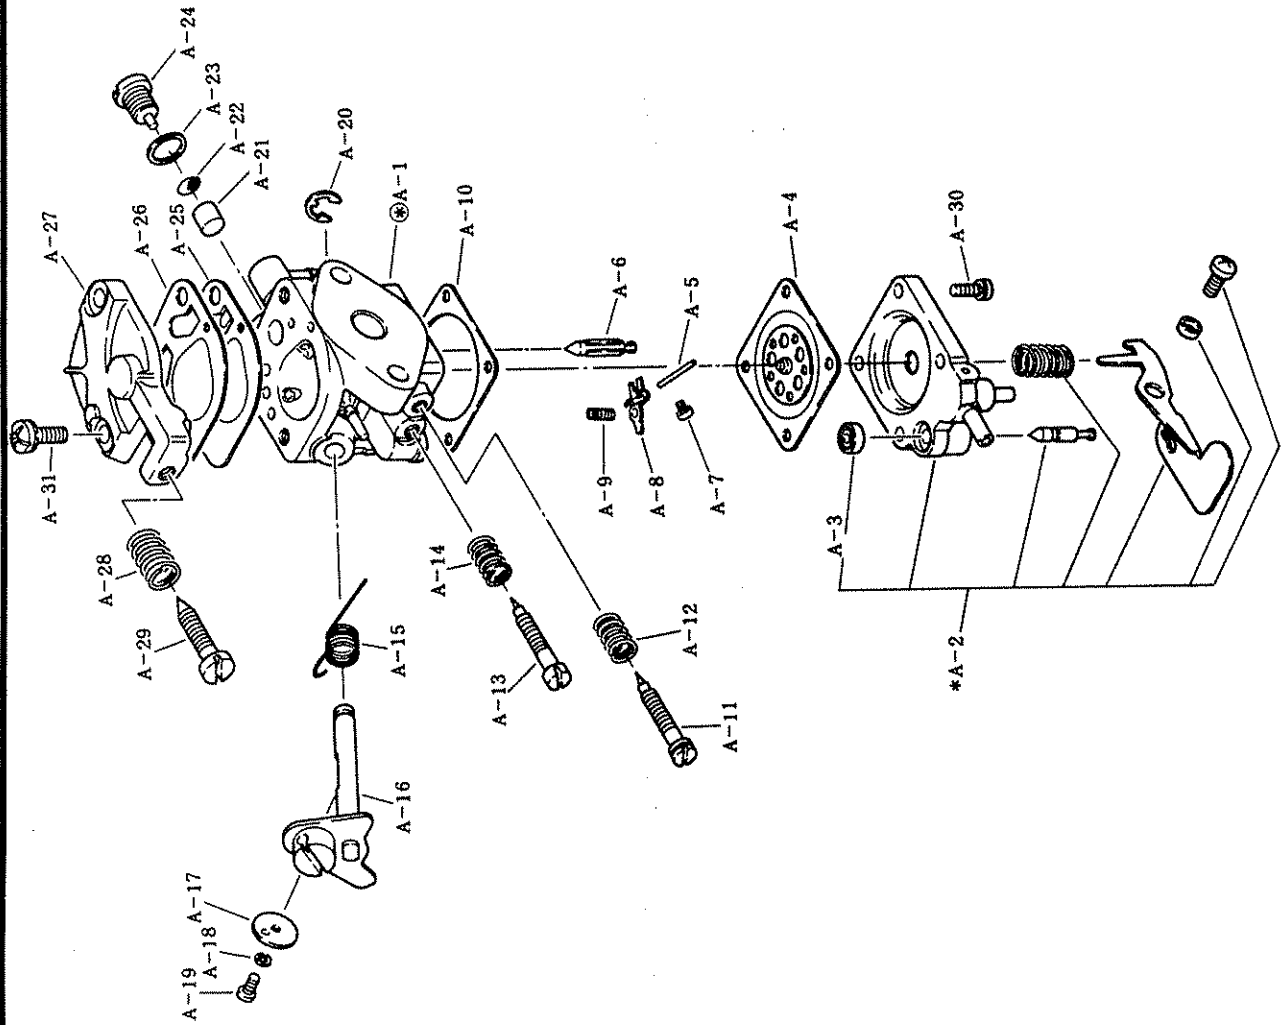

Carburetor

Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.	Ref. No.	Mfg.'s No.	Part Name	Our Part No.	Qty.
A-1	EC02-696	Carburetor compl.	1652	1					
A-2	1009-1250-20-9	Diaphragm cover ass'y	4068	1					
A-3	1001-3261-01-6	Rubber seat	4069	1					
A-4	1625-8720-20-9	Main diaphragm ass'y	4070	1					
A-5	1625-6742-10-0	Hinge pin	4071	1					
A-6	1102-2132-00-2	Needle valve	1095	1					
A-7	9326-0130-04-4	Screw (pan head)	4072	1					
A-8	1625-2721-00-5	Control lever	4073	1					
A-9	1625-8512-10-9	Needle valve spring	4074	1					
A-10	1625-7134-10-4	Main diaphragm packing	4075	1					
A-11	1625-6111-10-5	Main jet adjusting screw	4076	1					
A-12	1603-8511-00-0	Adjusting spring	4077	1					
A-13	1625-5121-20-8	Slow idle screw	4078	1					
A-14	1625-8513-00-2	Adjusting spring	4079	1					
A-15	1625-8511-11-7	Throttle return spring	4080	1					
A-16	1625-2303-50-4	Throttle valve	4095	1					
A-17	1625-2113-21-2	Throttle valve	4082	1					
A-18	9451-1024-00-9	Spring washer	4083	1					
A-19	9311-0123-04-0	Screw (pan head)	4084	1					
A-20	9616-0603-06-4	E-ring	4085	1					
A-21	1625-7515-00-9	Felt	4086	1					
A-22	1625-7551-31-0	Filter net	4087	1					
A-23	1625-7125-00-4	Packing	4088	1					
A-24	1625-5141-00-2	Drain plug	4089	1					
A-25	1625-8721-21-5	Pump diaphragm	4090	1					
A-26	1625-7171-20-5	Pump packing	4091	1					
A-27	1625-1242-11-7	Pump cover	4092	1					
A-28	1311-8515-02-9	Adjusting spring	4093	1					
A-29	1625-5122-00-0	Slow stop screw	4094	1					
A-30	00435 0310 0	Screw ass'y	1116	4					
A-31	00435 0410 0	Screw ass'y	1118	2					