




MASTER PARTS VIEWER

©2003 The Toro Company

Model: 38601 Year: 2004 Serial Range: 240000001 - 240999999

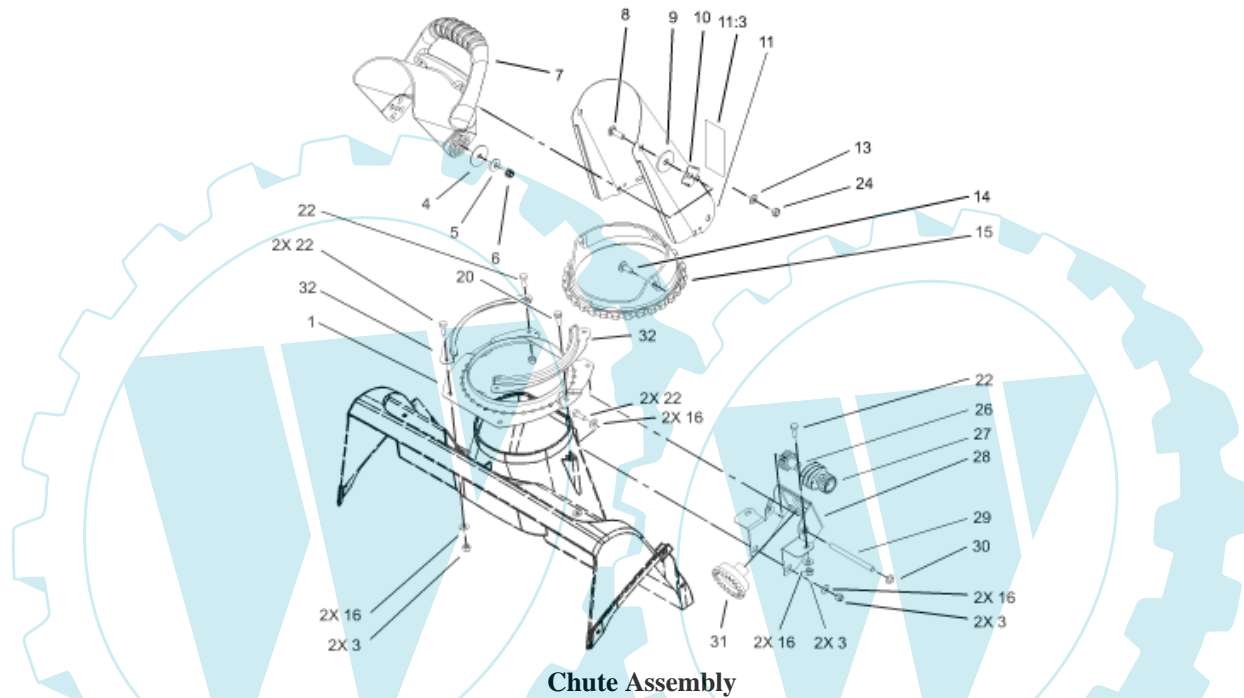


Chute Assembly

No.	Part	Qty.
1	55-8921-03 RING-SUPPORT, CHUTE	1
3	3296-42 NUT-LOCK, NI	6
4	3256-68 WASHER-FLAT	2
5	3290-456 WASHER-BELLEVILLE	2
6	3296-29 NUT-LOCK, NI	2
7	104-0882 CHUTE-DEFLECTOR	1
8	3230-22 SCREW-CARR	2
9	20-4320 WASHER-RUBBER	2
10	55-8950 PLATE-FRICTION	2
11	94-2791 CHUTE ASM	1
11:3	94-2901 DECAL-DANGER	1
13	3256-70 WASHER-FLAT	3
14	100-5486 SCREW-TRUSS HD, PHILLIPS	3

No.	Part	Qty.
15	55-8720 RING-GEAR, CHUTE	1
16	3256-22 WASHER-FLAT	8
20	46-8091 SCREW-HWH	2
22	321-4 SCREW-HH	6
24	3296-47 NUT-LOCK, NI	3
26	55-8750 GEAR-SPUR, SPACER	1
27	105-3512 GEAR-SPUR/WORM	1
28	104-8660-03 BRACKET-CHUTE GEARS	1
29	55-9150 SHAFT-GEAR, WORM	1
30	32112-11 NUT-PUSH	2
31	55-8740 GEAR-FACE	1
32	55-8910-03 RING-RETAINER, CHUTE	2

Ihr Ersatzteilspezialist im Internet!

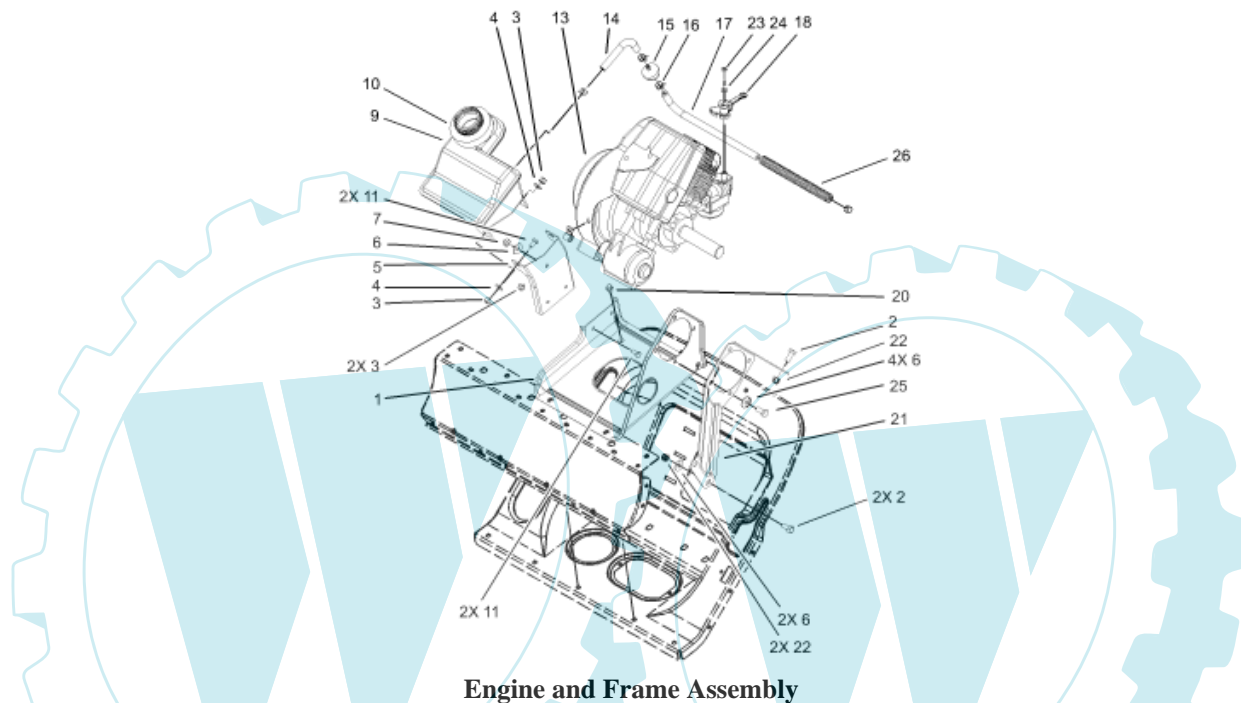

Engine and Frame Assembly

No.	Part	Qty.
1	105-3515-03 SUPPORT-ENGINE	1
2	322-3 SCREW-HH	3
3	3296-42 NUT-LOCK, NI	4
4	3256-22 WASHER-FLAT	2
5	100-9899-03 SUPPORT-RECOIL	1
6	3290-456 WASHER-BELLEVILLE	7
7	3296-42 NUT-LOCK, NI	1
9	105-8953 Tank-Gas	1
10	55-9310 SEAL-FOAM	1
11	321-2 SCREW-HH	4
13	Engine-Briggs and Stratton, 084332-0130-E1	1
14	94-9932 HOSE-FUEL	1


No.	Part	Qty.
15	56-6360 FILTER-FUEL	1
16	2412-98 CLAMP	4
17	49-2482 LINE-FUEL	1
18	104-0878 LEVER-CHOKE	1
20	32144-44 SCREW-HWH	3
21	104-0875-03 BRACE-ENGINE	1
22	3296-29 NUT-LOCK, NI	3
23	32144-97 SCREW-PPH, PLASTITE	1
24	104-4143 WASHER	1
25	322-4 SCREW-HH	4
26	104-4149 CONDUIT	1



MASTER PARTS VIEWER

©2003 The Toro Company

Model: 38601 Year: 2004 Serial Range: 240000001 - 240999999

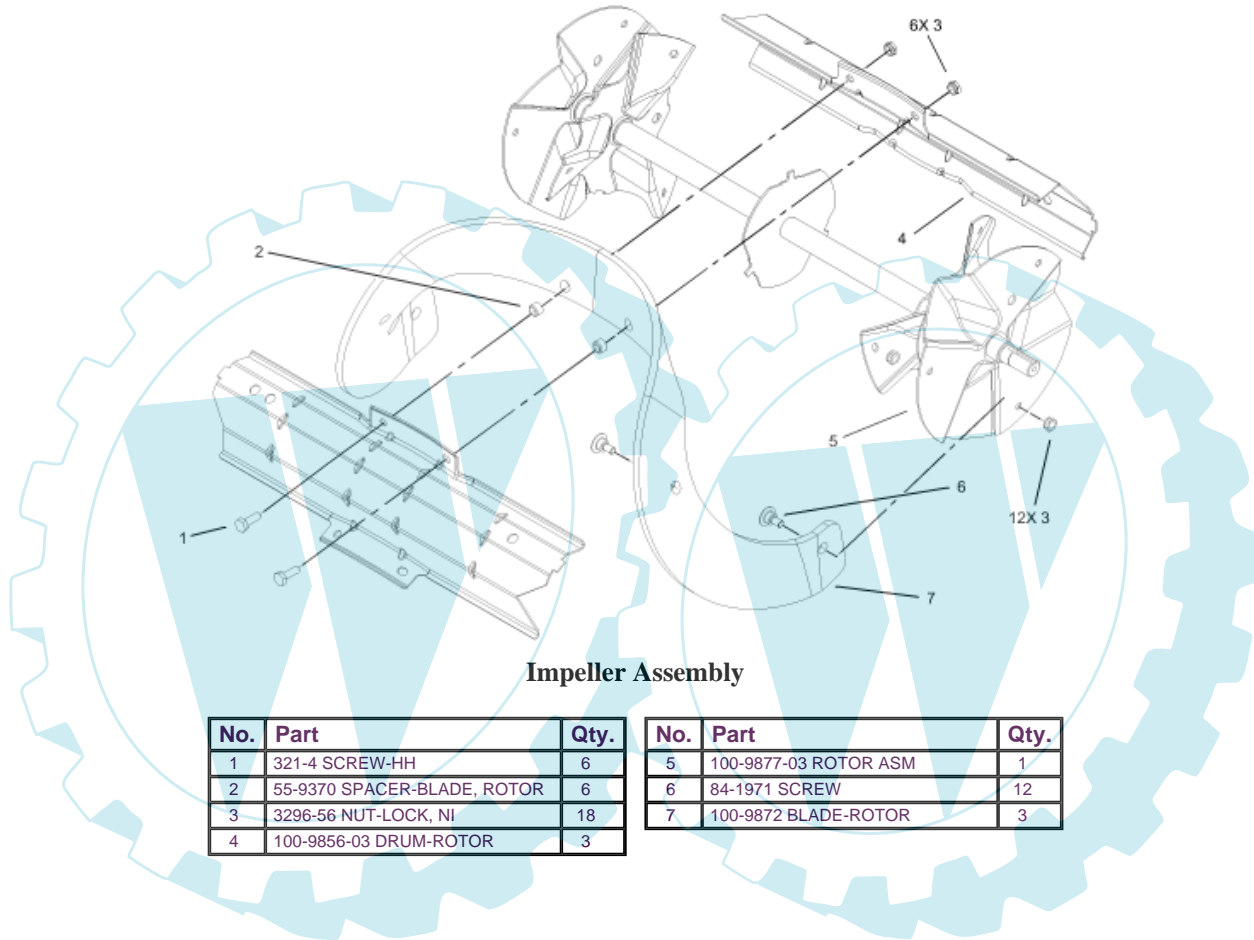

Impeller Assembly

No.	Part	Qty.
1	321-4 SCREW-HH	6
2	55-9370 SPACER-BLADE, ROTOR	6
3	3296-56 NUT-LOCK, NI	18
4	100-9856-03 DRUM-ROTOR	3


No.	Part	Qty.
5	100-9877-03 ROTOR ASM	1
6	84-1971 SCREW	12
7	100-9872 BLADE-ROTOR	3



MASTER PARTS VIEWER

©2003 The Toro Company

Model: 38601 Year: 2004 Serial Range: 24000001 - 24099999

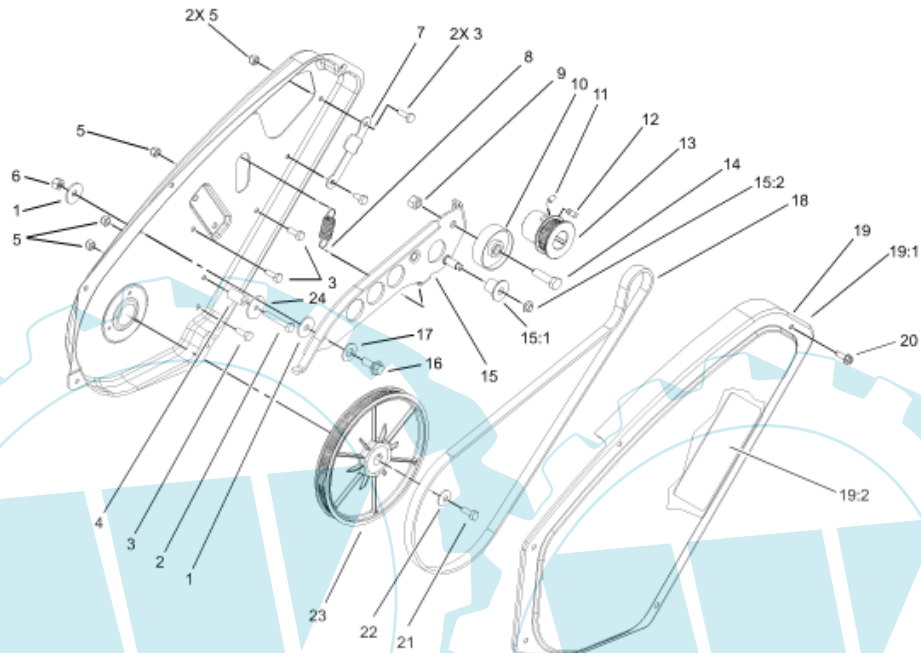

Impeller Drive Assembly

No.	Part	Qty.
1	5-4460 WASHER-PIVOT	2
2	321-10 SCREW-HH	1
3	321-4 SCREW-HH	5
4	55-9530 SLEEVE-GUIDE, BELT	1
5	3296-42 NUT-LOCK, NI	5
6	3296-29 NUT-LOCK, NI	1
7	104-0868 BELT-GUIDE	1
8	104-0869 SPRING-BRAKE	1
9	32152-2 NUT-LOCK, CONE	1
10	55-9290 PULLEY-IDLER	1
11	3245-41 SCREW-HSH	1
12	3241-7 SCREW-SQH	1
13	104-4108 PULLEY	1
14	323-29 SCREW-HH	1


No.	Part	Qty.
15	104-4113 BRAKE-ARM	1
15:1	104-4114 ROLLER-BRAKE	1
15:2	32112-11 NUT-PUSH	1
16	27-0410 SCREW-SHOULDER	1
17	25-5640 WASHER	1
18	104-0851 BELT-DRIVE	1
19	104-8669 COVER-DRIVE W/DECAL CE	1
19:1	94-2561 DECAL-HOT	1
19:2	104-4125 DECAL-ROUTING, BELT	1
20	49-2040 SCREW-HWHTF	1
21	321-30 SCREW-HH	1
22	3290-456 WASHER-BELLEVILLE	1
23	100-9871 PULLEY-ROTOR	1
24	3256-55 WASHER-FLAT	1



MASTER PARTS VIEWER

©2003 The Toro Company


Model: 38601 Year: 2004 Serial Range: 240000001 - 240999999

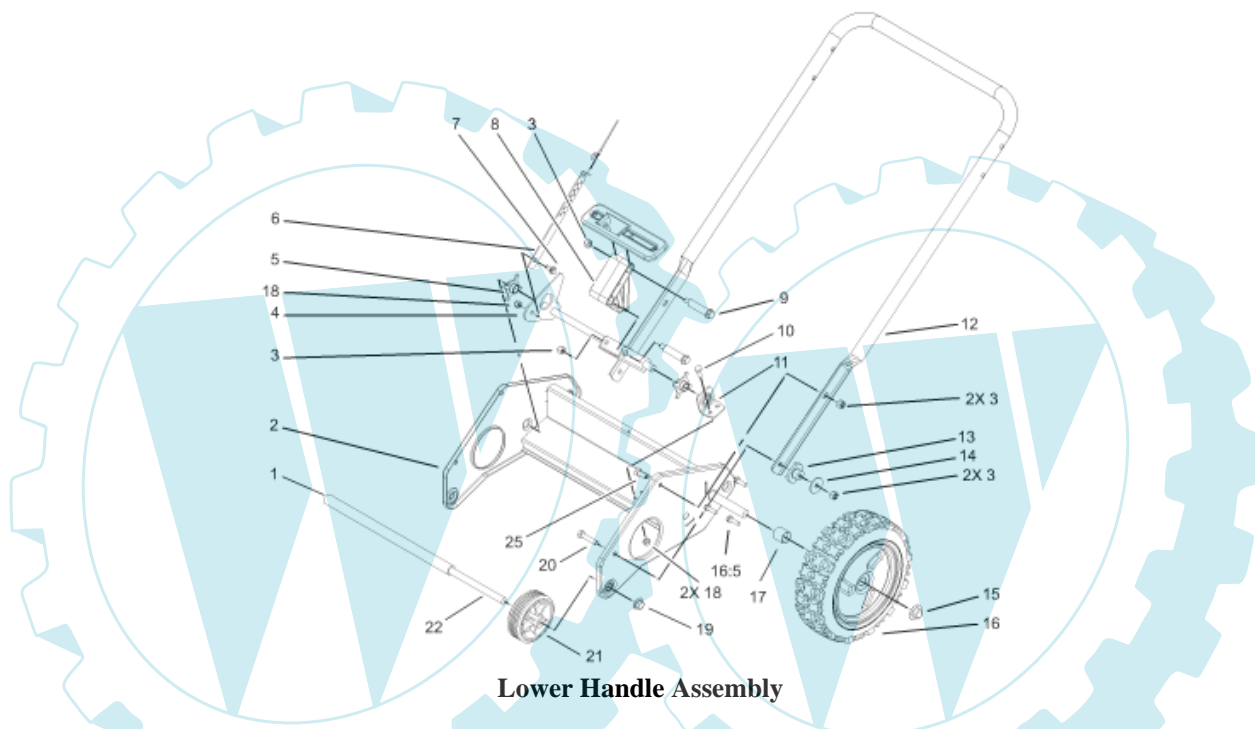

Lower Handle Assembly

No.	Part	Qty.
1	100-9878 SPACER-PLASTIC	1
2	100-9887-03 WHEELFRAME ASM	1
3	3296-29 NUT-LOCK, NI	6
4	104-0853 PIVOT ASM	1
5	104-0855 BUSHING-ROD, PIVOT	2
6	104-0899 ADJUSTER-CABLE, PIVOT	1
7	104-4102 SCREW-SHOULDER	1
8	100-9896 BLOCK-PIVOT	1
9	100-9880 BOLT-SHOULDER	2
10	321-4 SCREW-HH	2
11	100-9879 SUPPORT-ROD, PIVOT	1
12	100-9890-03 HANDLE LOWER	1


No.	Part	Qty.
13	100-9883 BUSHING-PIVOT	2
14	3256-57 WASHER-FLAT	2
15	104-4111 NUT-PUSH	2
16	105-3549 WHEEL ASM	2
16:5	46-8091 SCREW-HWH	3
17	104-0892 SPACER-AXLE, REAR	2
18	3296-42 NUT-LOCK, NI	3
19	32112-14 NUT-PUSH	2
20	322-7 SCREW-HH	2
21	100-9864 TIRE AND WHEEL ASM	2
22	100-9875 Axle-Front	1
25	322-3 SCREW-HH	2

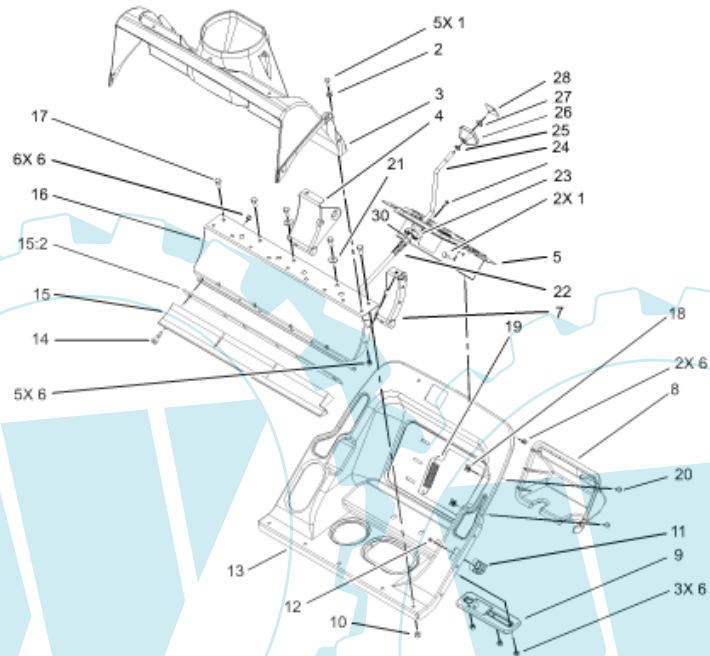

Lower Housing Assembly

No.	Part	Qty.
1	321-4 SCREW-HH	7
2	3256-22 WASHER-FLAT	5
3	100-9894 HOUSING-ROTOR, UPPER	1
4	104-0865 BRACKET-PIVOT, RH	1
5	104-0887-03 CONTROL PANEL SUPPORT ASM	1
6	3296-42 NUT-LOCK, NI	16
7	104-0864 BRACKET-PIVOT, LH	1
8	104-8663 COVER-CARB CE	1
9	100-9897 BRACKET-PIVOT, CENTER	1
10	3296-29 NUT-LOCK, NI	5
11	104-0880 GUIDE-CABLE, CLUTCH	1
12	95-4234 SCREW-PPH	1
13	105-3514-03 HOUSING-LOWER	1
14	104-0858 BOLT-SHOULDER	6
15	104-4138 SCRAPER ASM	1

No.	Part	Qty.
15:2	104-0879 FOAM-SCRAPER	1
16	100-9893-03 HOUSING-ROTOR, LOWER	1
17	322-3 SCREW-HH	5
18	100-9889 NUT-SPEED	2
19	104-4130 SPRING-EXTENSION, PIVOT	1
20	32144-112 SCREW-HWH	2
21	3290-456 WASHER-BELLEVILLE	2
22	104-8664 SPRING-COMPRESSION	1
23	104-8659 BUSHING-CHUTE CRANK	1
24	104-8658 ROD-CHUTE CRANK	1
25	104-8665 WASHER-CHUTE CRANK	1
26	62-1320 KNOB-CONTROL, CHUTE	1
27	3290-320 RETAINER-PUSH ON	1
28	62-1520 COVER-KNOB	1
30	105-3540 Washer	1

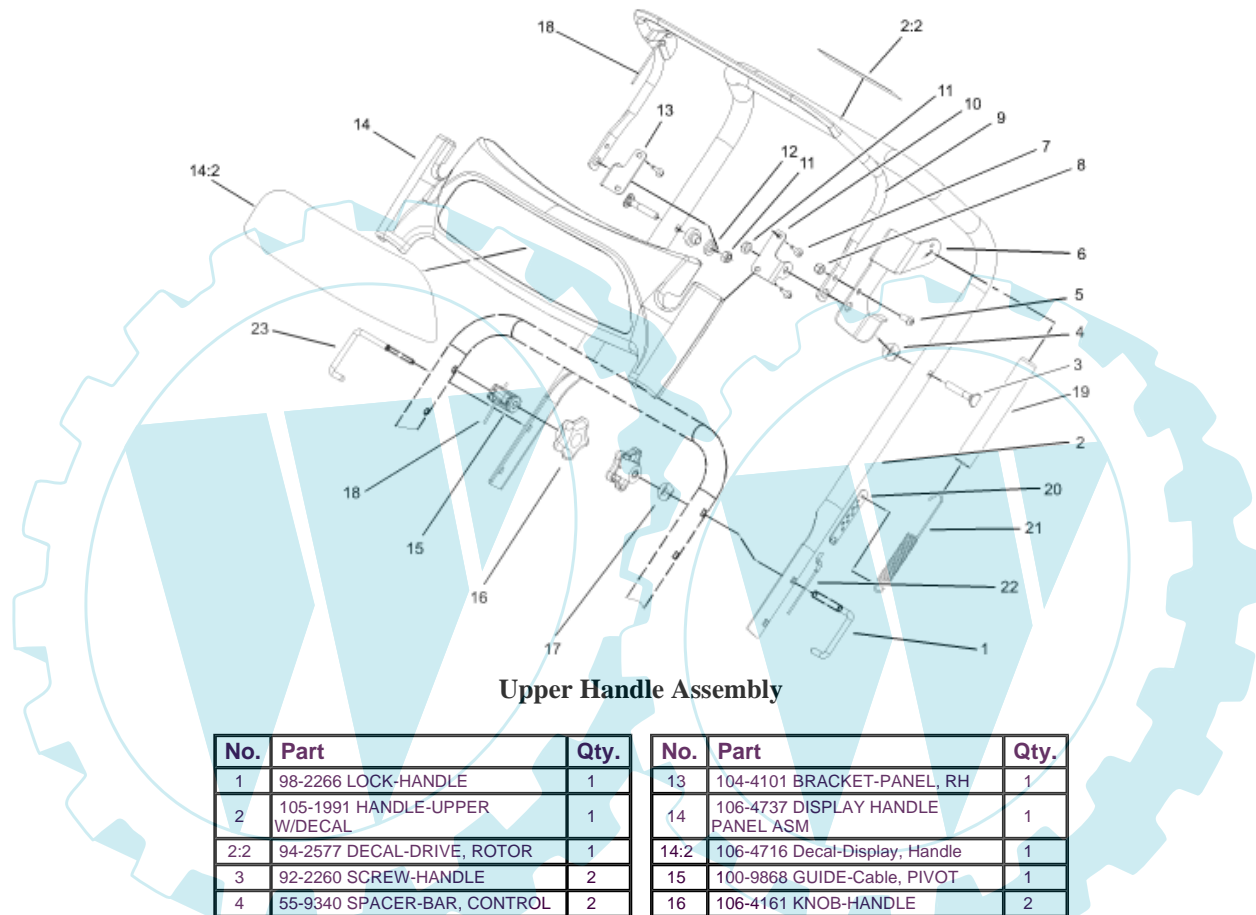
Upper Handle Assembly

No.	Part	Qty.
1	98-2266 LOCK-HANDLE	1
2	105-1991 HANDLE-UPPER W/DECAL	1
2:2	94-2577 DECAL-DRIVE, ROTOR	1
3	92-2260 SCREW-HANDLE	2
4	55-9340 SPACER-BAR, CONTROL	2
5	3274-31 SCREW-HSBH	1
6	100-9882-03 ARM-CLUTCH, HANDLE	1
7	98-1375 SCREW-HWH	4
8	3296-42 NUT-LOCK, NI	1
9	104-4104-03 BAR-CONTROL	1
10	104-4100 BRACKET-PANEL, LH	1
11	3296-47 NUT-LOCK, NI	2
12	55-9670 WASHER	1


No.	Part	Qty.
13	104-4101 BRACKET-PANEL, RH	1
14	106-4737 DISPLAY HANDLE PANEL ASM	1
14:2	106-4716 Decal-Display, Handle	1
15	100-9868 GUIDE-Cable, PIVOT	1
16	106-4161 KNOB-HANDLE	2
17	75-9130 WASHER-CURVED	1
18	104-0895 CABLE-PIVOT	1
19	104-4145 COVER-SPRING	1
20	71-5330 ADJUSTER-CABLE, CLUTCH	1
21	104-0894 SPRING-CABLE	1
22	104-0896 CABLE-CLUTCH	1
23	104-4126 LOCK-HANDLE, RH	1



MASTER PARTS VIEWER

©2003 The Toro Company

Model: 38601 Year: 2004 Serial Range: 240000001 - 240999999

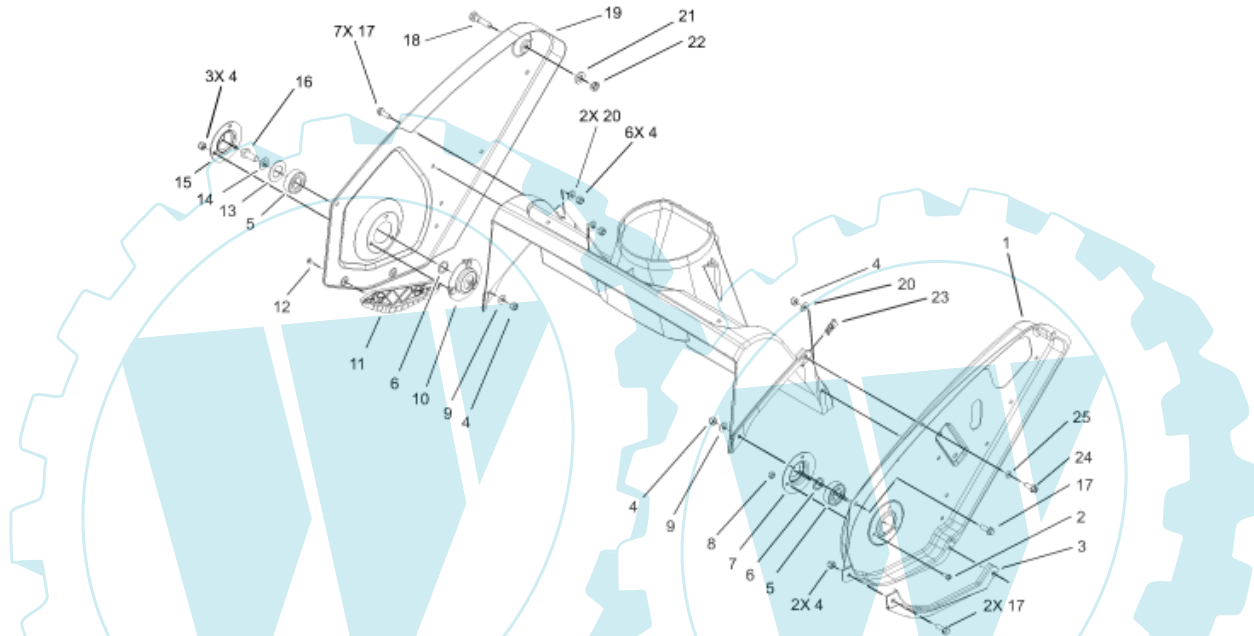

Upper Housing and Side Plate Assembly

No.	Part	Qty.
1	100-9865-03 SIDEPLATE-LH	1
2	32105-8 SCREW-SHH	3
3	104-0871 GUARD-ROTOR, LH	1
4	3296-42 NUT-LOCK, NI	14
5	100-1048 BEARING-BALL	2
6	52-7280 WASHER-THRUST	2
7	38-8620 FLANGE-BEARING	1
8	3296-2 NUT-LOCK, NI	3
9	3256-1 WASHER-FLAT	2
10	52-9110 FLANGE-BEARING	1
11	104-0872 GUARD-ROTOR, RH	1
12	95-4234 SCREW-PPH	2
13	52-7270 WASHER-RUBBER	1

No.	Part	Qty.
14	3256-24 WASHER-FLAT	1
15	52-7290-03 RETAINER-BEARING	1
16	3234-25 SCREW-HHF	1
17	32105-15 SCREW	10
18	38-8211 PIN-ROTOR	1
19	100-9870-03 SIDEPLATE-RH	1
20	3256-22 WASHER-FLAT	3
21	3256-24 WASHER-FLAT	1
22	32152-8 NUT-LOCK, CONE	1
23	702552 NUT-SPEED	1
24	49-2040 SCREW-HWHTF	1
25	104-8657 O-RING	1


Ihr Ersatzteilspezialist im Internet!



MASTER PARTS VIEWER

©2003 The Toro Company

Model: 38601 Year: 2004 Serial Range: 240000001 - 240999999

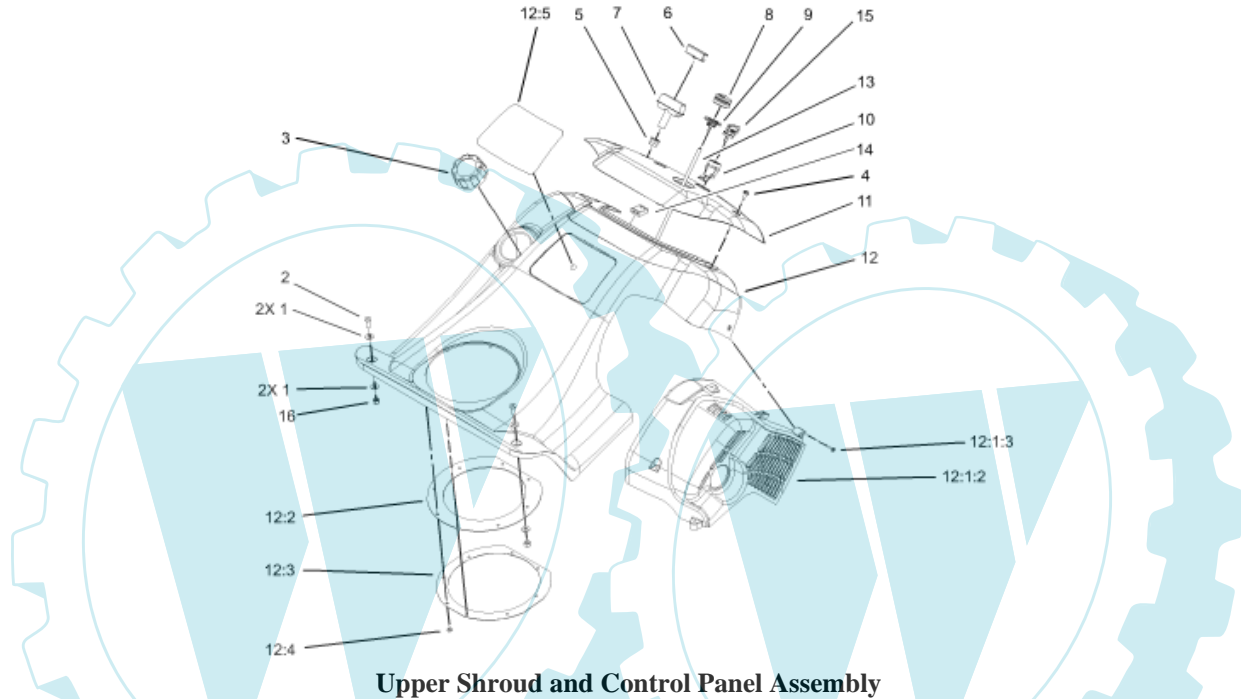

Upper Shroud and Control Panel Assembly

No.	Part	Qty.
1	3256-22 WASHER-FLAT	4
2	3250-32 SCREW-PPH	2
3	104-4133 GAS CAP ASM	1
4	32144-112 SCREW-HWH	2
5	55-9410 GUIDE-ROPE, STARTER	1
6	612824 CLIP-STARTER	1
7	612825 HANDLE-START	1
8	66-7460 BULB-PRIMER	1
9	44-2750 BODY-PRIMER	1
10	40-5940 SWITCH	1
11	104-8662 PANEL-CONTROL R, CE	1

No.	Part	Qty.
12	106-4735 UPPER SHROUD ASM	1
12:1:2	104-0860 SHIELD-HEAT	1
12:1:3	94-4496 SCREW-PPH	5
12:2	105-3543 Seal-Chute	1
12:3	55-9540-03 RETAINER-SEAL, CHUTE	1
12:4	3290-474 PALNUT	8
12:5	106-4717 Decal-Shroud Recoil	1
13	95-1861 HOSE-PRIMER	1
15	63-8360 KEY-IGNITION	1
16	3296-42 NUT-LOCK, NI	2