





| Ausgabe Issue 2005- 1 | | Bild Nr Picture No B101 | | VARIOLUX 38 H Alu | | VARIOLUX 38 H Alu | | Seite Page 28 | |
|-----------------------------|-----------------|-------------------------------|--|-------------------|------------------------|-----------------------------|------------------------------|---------------------|--------------------|
| Pos. Fig. | Anzahl/Quantity | | | | Artikel Nr. Part No | Bezeichnung | Description | Satz Kit | Anmerkung Notes |
| | | | | | | | | | |
| 1 | 1 | | | | 1122-0328-01 | Stiel- Unterteil..... | Handle- lower part..... | | |
| 2 | 4 | | | | 9865-0630-16 | Schraube | Screw | | |
| 3 | 4 | | | | 9799-0631-02 | Mutter | Nut | | |
| 4 | 2 | | | | 1122-0335-01 | Lenkrohr- mittlere..... | Handle tube- middle | | |
| 5 | 1 | | | | 9865-0640-16 | Schraube | Screw | | |
| 6 | 1 | | | | 9799-0631-02 | Mutter | Nut | | |
| 8 | 2 | | | | 1122-0336-01 | Stiel- Oberteil | Handle- upper part | | |
| 9 | 2 | | | | 9865-0630-16 | Schraube | Screw | | |
| 10 | 2 | | | | 9799-0631-02 | Mutter | Nut | | |
| 11 | 1 | | | | 1122-0337-01 | Distanz..... | Handle spacer | | |
| 12 | 1 | | | | 1122-0338-01 | Schraube | Screw | | |
| 13 | 1 | | | | 1122-0339-01 | Schraube | Screw | | |
| 14 | 2 | | | | 9799-0631-02 | Mutter | Nut | | |
| 15 | 2 | | | | 1122-0340-01 | Griff | Handle grip | | |
| 20 | 1 | | | | 1122-0302-01 | Messerzylinder- schw. | Cylinder- black | | |
| 21 | 2 | | | | 1122-0307-01 | Mitnehmer | Drive key | | |
| 22 | 4 | | | | 1122-0334-01 | Scheibe..... | Washer..... | | |
| 23 | 2 | | | | 1122-0303-01 | Wickelschutz | Guard | | |
| 24 | 2 | | | | 1122-0304-01 | Distanzhülse | Spacer..... | | |
| 25 | 2 | | | | 1122-0311-01 | Kugellager | Ball bearing | | |
| 26 | 1 | | | | 1122-0309-02 | Giebel R- rot | Flange RH- red | | |
| 27 | 1 | | | | 1122-0308-02 | Giebel L- rot..... | Flange LH- red..... | | |
| 28 | 1 | | | | 1122-0306-01 | Ritzel- rechts | Gear- RH | | |
| 29 | 1 | | | | 1122-0305-01 | Ritzel- links | Gear- LH | | |
| 30 | 2 | | | | 1122-0312-01 | Scheibe..... | Washer..... | | |
| 31 | 2 | | | | 1122-0314-01 | Reifen + Felge Kpl..... | Tyre + rim assy | | |
| 32 | 2 | | | | 1122-0315-01 | Sicherungsring | Lock ring..... | | |
| 33 | 2 | | | | 1122-0316-01 | Radkappe..... | Hub cap..... | | |
| 34 | 2 | | | | 1122-0312-01 | Scheibe..... | Washer..... | | |
| 35 | 2 | | | | 1122-0310-01 | Lauftradachse | Wheel axle..... | | |
| 36 | 2 | | | | 9678-0011-02 | Verriegelungsscheibe | Lock washer..... | | |
| 37 | 2 | | | | 9799-1031-02 | Mutter | Nut | | |
| 38 | 1 | | | | 1122-0300-02 | Vorderblech- rot..... | Front plate- red..... | | |
| 39 | 3 | | | | 1122-0301-01 | Verbindungsstange..... | Connection rod | | |
| 40 | 6 | | | | 9683-0030-02 | Scheibe..... | Lock washer..... | | |
| 41 | 6 | | | | 9799-0831-02 | Mutter | Nut | | |
| 42 | 1 | | | | 1122-0318-02 | Untermesser- rot | Lower blade- red | | |
| 43 | 2 | | | | 1122-0320-01 | Druckfeder..... | Compression spring..... | | |
| 44 | 2 | | | | 1122-0319-01 | Stellschraube..... | Adjust screw | | |
| 45 | 2 | | | | 1122-0322-01 | Scheibe..... | Washer..... | | |
| 46 | 2 | | | | 1122-0321-01 | Mutter..... | Nut- adjust screw | | |
| 47 | 1 | | | | 1122-0324-01 | Laufrollen | Roller | | |
| 48 | 1 | | | | 1122-0323-02 | Laufrollenarm- rechts | Roller holder- RH | | |
| 49 | 1 | | | | 1122-0323-01 | Laufrollenarm- links..... | Roller holder- LH..... | | |
| 50 | 2 | | | | 1122-0322-01 | Scheibe..... | Washer..... | | |
| 51 | 2 | | | | 1122-0326-01 | Höheneinstellrad..... | Height adjust knob | | |
| 52 | 2 | | | | 1122-0327-01 | Schraube | Screw | | |
| 98 | 1 | | | | 1122-0341-01 | Montagesatz | Assembly kit | | |
| 99 | 1 | | | | 1129-0019-01 | Kette- Grassammler..... | Chain- grass collector | | |

X