



Tractor Chassis, PTO, Brake & Cutter Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
115	9349	Layshaft Assembly	1
116	9383	Centralising Plate	1
117	3539	Bush	2
118	8672	Centralising Rod	1
119	8686	Bush (Nylon)	2
120	8674	Compression Spring	1
121	3329	Spacer	1
122	8731	Cable, Dump Valve	1
123	8767	Vent Hose	1
124	8765	Hose Clip SNP.14	2
125	8684	Bracket, Dump Valve	1
126	8720	Spring	1
127	8683	TX Support Bkt., RH Front	1
128	2589	"E" Clip	2
129	1312	Bolt	1
130	1318	Bolt	1
131	1962	Washer	1
132	9302	Hanger Bkt., Left Hand Rear	1
*	9303	Hanger Bkt., Right Hand Rear	1
133	8915	Lifting Link	4
134	6213	Setscrew	4
135	RCL017-1003	Washer	30
136	RCL048-1035	Setscrew	8
137	RCL090-10	Nut	16
138	RCL061-10	Nut	8
139	5850	Setscrew	4
140	9304	Hanger Bkt., Front	2
141	RCL090-0808	Nut	4
142	1422	Nut	1
143	RCL013-1001	Washer	10
* Not Shown			

ITEM	PART NO.	DESCRIPTION	QTY

ITEM	PART NO.	DESCRIPTION	QTY

A L L Y E A R R O U N D P E R F O R M A N C E