


www.ersatzteil-service.de

www.ersatzteilplan.de

Westwood

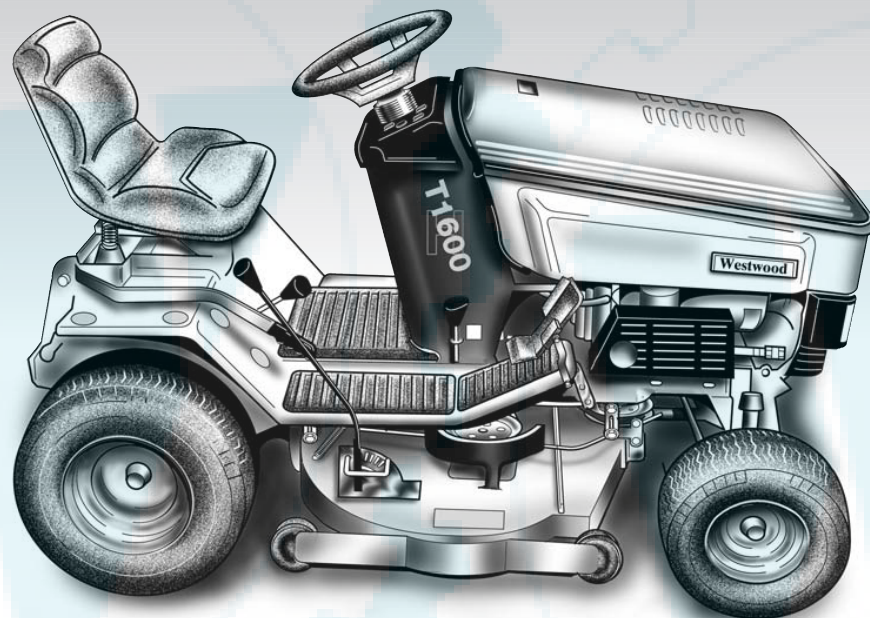


Westwood

Garden Tractor Parts Catalogue 1999-2000

A C U T A B O V E T H E C O M P E T I T I O N

Ihr Ersatzteilspezialist im Internet

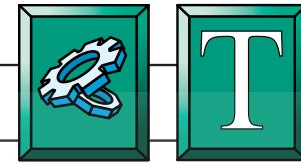

Westwood 1999-2000

Contents

Illustration


Table

<i>36" (91cm) Triple Blade Cutter Deck.....</i>	<i>page 3</i>		<i>..... page 4</i>	
<i>42" (106cm) Contra-Rotating Cutter Deck.....</i>	<i>page 5</i>		<i>..... page 6</i>	
<i>48" (122cm) Contra-Rotating Cutter Deck.....</i>	<i>page 7</i>		<i>..... page 8</i>	
<i>Tractor Chassis and Upper Body Panels.....</i>	<i>page 9</i>		<i>..... pages 10 - 11</i>	
<i>Steering and Electrical Controls.....</i>	<i>page 12</i>		<i>..... pages 13 - 14</i>	
<i>Tractor Chassis, P.T.O., Brake and Cutter Controls - S1300H, S1600H ..</i>	<i>page 15</i>		<i>..... pages 16 - 17</i>	
<i>Tractor Chassis, P.T.O., Brake and Cutter Controls - S1300M, S1600M ..</i>	<i>page 18</i>		<i>..... pages 19 - 20</i>	
<i>Tractor Chassis, P.T.O., Brake and Cutter Controls - T1600H</i>	<i>page 21</i>		<i>..... pages 22 - 23</i>	
<i>Tractor Chassis, P.T.O., Brake and Cutter Controls - T1800H</i>	<i>page 24</i>		<i>..... pages 25 - 26</i>	
<i>Tractor Chassis, P.T.O., Brake and Cutter Controls - T1600M, T1800M..</i>	<i>page 27</i>		<i>..... pages 28 - 29</i>	


A C U T A B O V E T H E C O M P E T I T I O N



36" (91cm) Triple Blade Cutter Deck

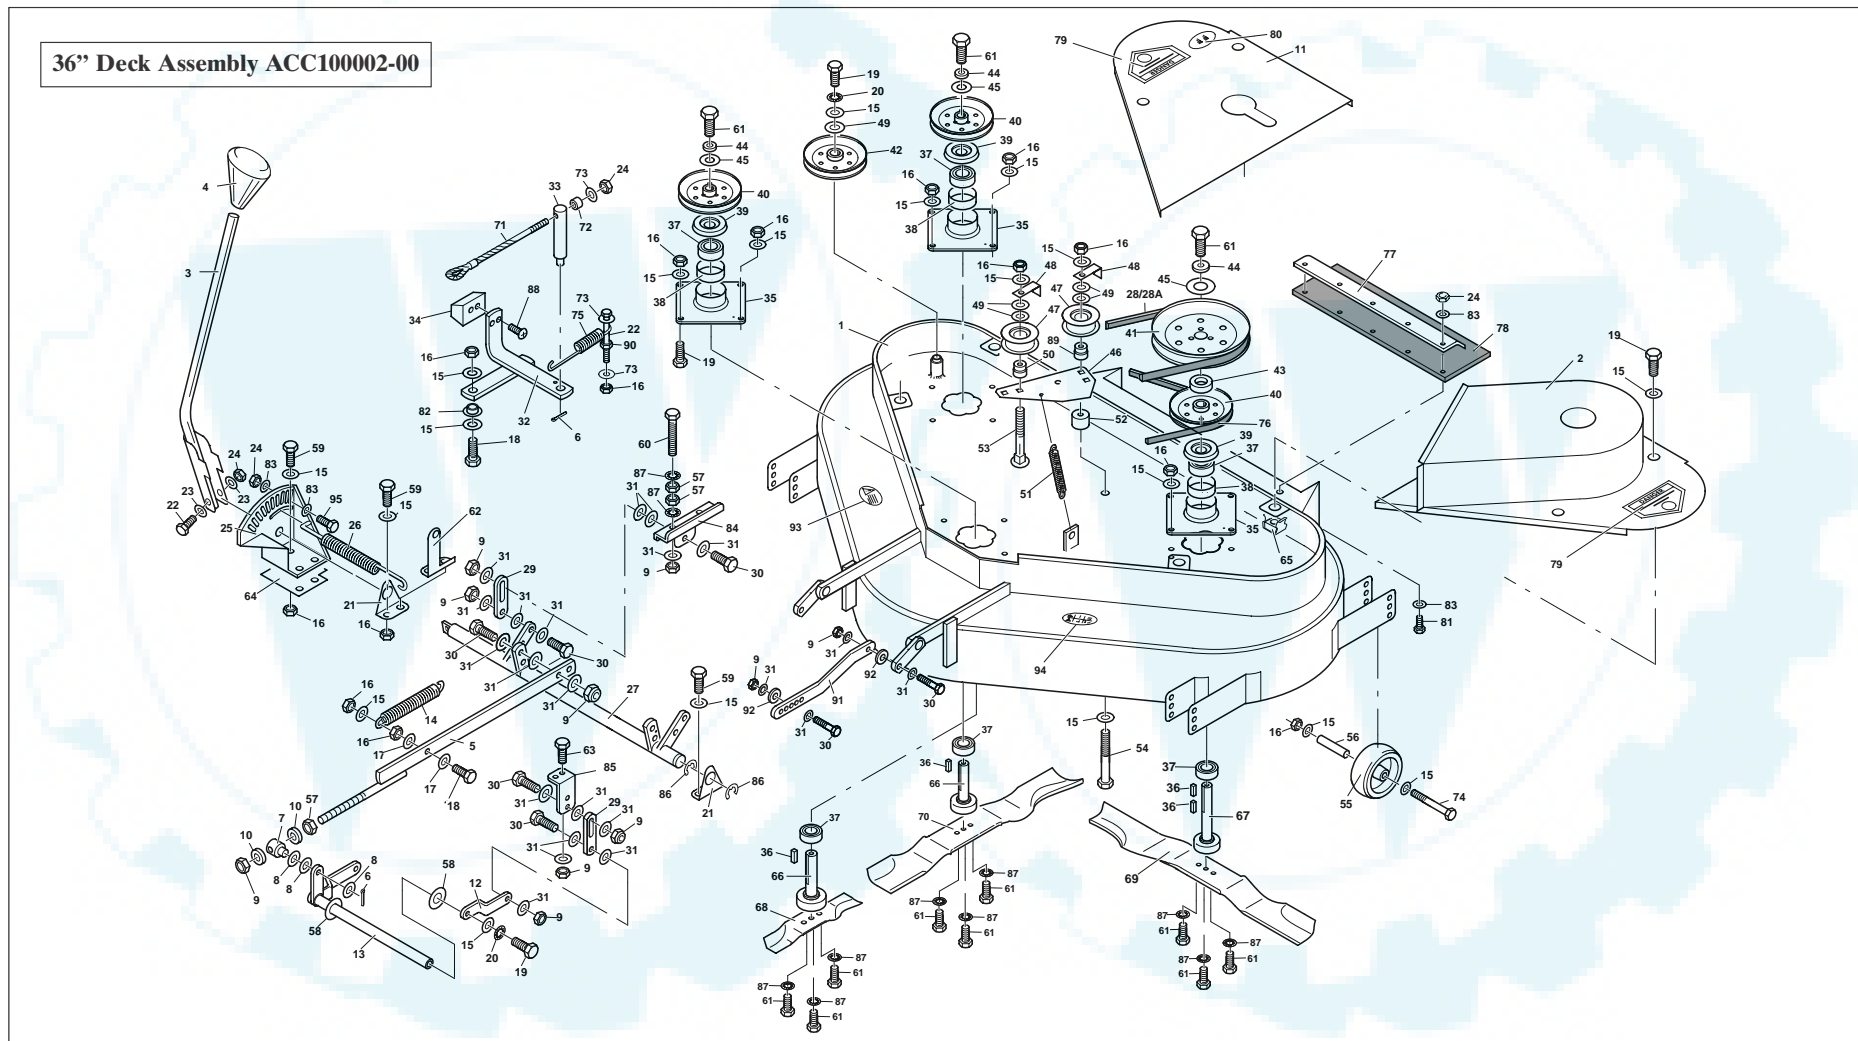

A C U T A B O V E T H E C O M P E T I T I O N

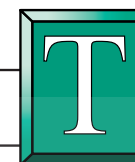

36" (91cm) Triple Blade Cutter Deck

ITEM	PART NO.	DESCRIPTION	QTY
1	RCL564034-00	Deck Shell	1
2	RCL564045-00	Belt Guard Assy. 'S', Large	1
*	RCL564047-00	Belt Guard Assy. 'T', Small	1
3	7646	Lever, Height Adjuster	1
4	2649	Knob	1
5	RCL564041-00	Hitch Rod	1
6	1233	Split Pin	2
7	8639	Pivot	1
8	RCL011-1001	Washer	3
9	RCL090-10	Nut	24
10	3683	Spacer	2
11	RCL584059-00	Belt Guard Assy.	1
12	RCL584056-00	Lifting Spindle Link, Left Hand	1
13	RCL564039-00	Lifting Spindle Assy.	1
14	3142	Spring, Tension	1
15	011-0801	Washer	52
16	RCL090-08	Nut	27
17	009-0817	Washer	10
18	RCL030-0835	Bolt	2
19	RCL048-0820	Setscrew	18
20	RCL013-08	Washer	2
21	8922	Pivot Bkt.	2
22	RCL030-0635	Bolt	2
23	RCL009-0612A	Washer	2
24	RCL089-0608	Nut	9
25	RCL564040-00	Height Adj. Quadrant	1
26	2595	Spring, Long Arm	1
27	9067	Hanger Bkt. Assy.	1
28†	RCL218003-00	Drive Belt, B57 (Manual Engage)	1
28A	RCL218002-00	Drive Belt, B52 (Electric Clutch)	1
29	8915	Lifting Link	4
30	RCL048-1035	Setscrew	13
31	RCL017-1003	Washer	30
32†	RCL564042-00	Brake Arm Assy.	1
33†	RCL584039-00	Brake Arm Cable Pillar	1

ITEM	PART NO.	DESCRIPTION	QTY
34†	RCL104000-00	Brake Block	1
35	RCL564035-00	Bearing Housing Assy.	3
36	RCL812022-19	Key	4
37	1180	Bearing	6
38	8913	Bearing Spacer	3
39	8437	Pulley Shroud	3
40	RCL838001-00	Pulley Split Steel	3
41	RCL838003-00	Pulley 'S', Large	1
*	RCL838002-00	Pulley 'T', Small	1
42	RCL838000-00	Pulley	1
43	RCL584041-00	Spacer	1
44	M1922	Washer	3
45	M1923	Washer	3
46	8236	Jockey Plate	1
47	9488	Jockey Pulley	2
48	5735	Belt Guide Clipper	2
49	3613	Washer	4
50	8220	Shouldered Spacer	2
51	M7125	Spring, Tension	1
52	RCL584082-00	Spacer, Jockey Plate	1
53	RCL074-0845	Bolt	1
54	RCL030-0870	Bolt	1
55	7320	Wheel, Anti-Scalp	4
56	4774	Wheel Sleeve	4
57	RCL061-10	Nut	9
58	1976	Washer	2
59	RCL030-0825	Setscrew	7
60	6213	Setscrew	4
61	RCL094-1025	Setscrew	12
62	RCL584043-00	Spring Post	1
63	5850	Setscrew	4
64	RCL584046-00	Spacer Plate	1
65	RCL116-0802	Cage Nut	4
66	RCL564038-00	Cutter Shaft, Short	2
67	RCL564037-00	Cutter Shaft, Long	1

ITEM	PART NO.	DESCRIPTION	QTY
68	RCL246005-00	Cutter Blade, Central	1
69	RCL246004-00	Cutter Blade, Left Hand	1
70	RCL246003-00	Cutter Blade, Right Hand	1
71†	3783	Brake Cable	1
72†	3397	Spacer, Long	1
73†	1331	Washer	2
74†	RCL030-0875	Bolt	1
75†	2594	Spring, Tension	1
76	RCL218001-00	Hex V-Belt, AA 105	1
77	3287	Retaining Strip	1
78	3286	Rubber Flap	1
79	MTM1009	Label, Danger	2
80	RCL766135-00	Decal, Height of Cut	1
81	RCL050-0616	Setscrew	7
82	RCL584040-00	Spacer	1
83	RCL009-0501	Washer	14
84	9303	Hanger Bkt., Right Hand Rear	1
*	9302	Hanger Bkt., Left Hand Rear	1
85	9304	Hanger Bkt., Front	2
86	1663	'E' Clip (A1500-75)	2
87	RCL013-1001	Washer	17
88†	114-0875	Screw	2
89	RCL584036-00	Spacer	1
90†	3765	Nut	1
91	RCL584196-00	Hitch Bar	1
92	4124	Washer	4
93	RCL766178-00	Decal, Warning Label	1
94	RCL766177-00	Decal, Warning Label (Graphical)	1
95	RCL048-0612	Setscrew	2
*	ACC100002-00	36" Deck Assembly, complete	1

† Not fitted to Tractors with an Electric Clutch


* Not Shown

A C U T A B O V E T H E C O M P E T I T I O N




42" (106cm) Contra-Rotating Cutter Deck

42" Deck Assembly ACC100005-00

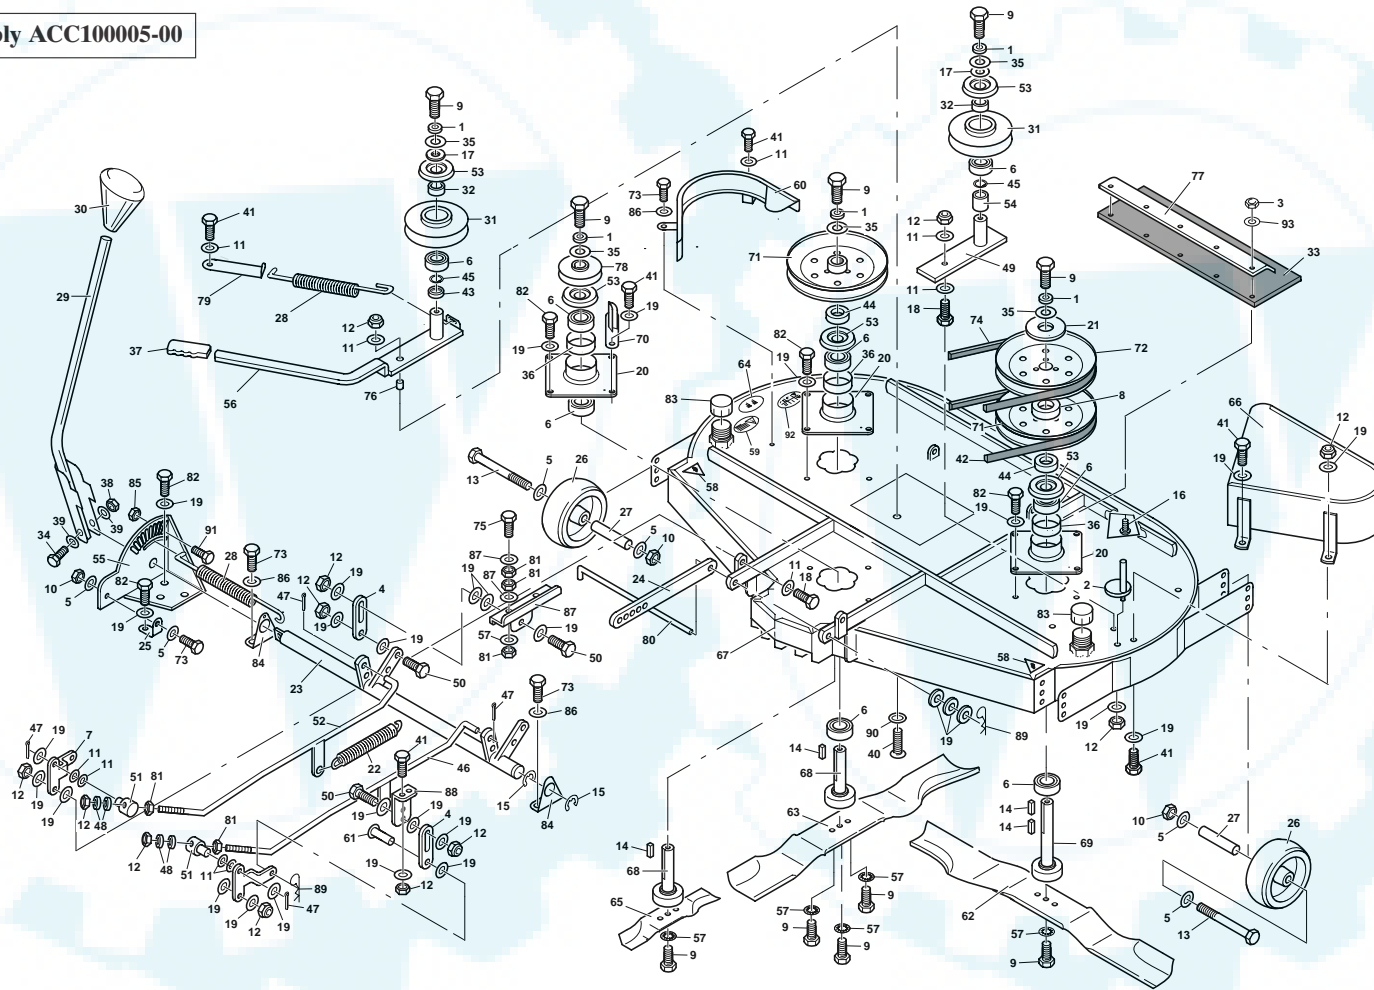

A C U T A B O V E T H E C O M P E T I T I O N

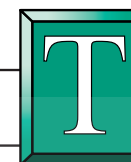

42" (106cm) Contra-Rotating Cutter Deck

ITEM	PART NO.	DESCRIPTION	QTY
1	M1922	Washer, Clamp	5
2	6748	Shaft, Cam Adjuster	1
3	RCL084-05	Nut	5
4	8915	Lifting Link	4
5	6122	Washer	19
6	1180	Bearing, NSK. 6205-RS	8
7	8894	Plate, Front Link	2
8	8846	Spacer	1
9	RCL094-1025	Setscrew	14
10	RCL090-08	Nut	18
11	6125	Washer	32
12	2761	Nut	24
13	7046	Bolt	4
14	3841	Drive Key	4
15	1663	"E" Clip (A1500-75)	2
16	RCL081-0516	Screw	5
17	3618	Spacer	2
18	7340	Bolt	3
19	6124	Washer	12
20	8384	Bearing Housing	3
21	3635	Spacer	1
22	1076	Spring, Tension	2
23	9067	Hanger Bracket Assembly	1
24	8907	Hitch Bar	2
25	4876	Quadrant Bracket	1
26	7320	Wheel, Anti-Scalp	4
27	4774	Sleeve	4
28	2595	Spring	2
29	7646	Lever Height Adjuster	1
30	2649	Knob	1
31	9101	Idler Pulley	2
32	9103	Spacer	2
33	3286	Rubber Flap	1
34	RCL030-0635	Bolt	1
35	M1923	Washer, Disc Spring	5

ITEM	PART NO.	DESCRIPTION	QTY
36	8913	Spacer, Bearing	3
37	6083	Handgrip	1
38	RCL089-06	Nut	1
39	019-0601	Washer	2
40	RCL074-1035	Bolt	1
41	6213	Setscrew	12
42	MX1281	Belt	1
43	9102	Spacer	1
44	8572	Spacer	2
45	MX1320	Circlip	2
46	9061	Hitch Rod, Left Hand	1
47	1233	Split Pin Steel	4
48	3683	Spacer	3
49	8428	Idler Shaft Assembly	1
50	RCL048-1035	Bolt	8
51	8639	Pivot, Lift Rod	2
52	9062	Hitch Rod, Right Hand	1
53	8437	Pulley Shroud	5
54	9105	Idler Spacer	2
55	8889	Quadrant	1
56	8848	Engine Idler Assembly	1
57	RCL013-1001	Washer	9
58	RCL766178-00	Warning Label	2
59	RCL766194-00	Label, Hazard Warning	1
60	8425	Guard, Right Hand	1
61	3349	Rivet (Clevis Pin)	2
62	8768	Blade, Left Hand	1
63	8769	Blade, Right Hand	1
64	RCL766135-00	Label, Height Adjuster	1
65	8770	Blade, Centre	1
66	8926	Guard, Left Hand	1
67	8928	Cutter Deck	1
68	8774	Cutter Shaft (Short)	2
69	8844	Cutter Shaft (Long)	1
70	8426	Guard Central	1


ITEM	PART NO.	DESCRIPTION	QTY
71	8499	Pulley Assembly	2
72	8500	Pulley Assembly	1
73	2764	Setscrew	8
74	5672	Drive Belt	1
75	6213	Setscrew	4
76	8576	Spacer Tube	1
77	3287	Retaining Strip	1
78	8385	Pulley	1
79	8571	Bracket, Spring Retaining	1
80	9065	Bar, Hitch Pivot	1
81	6116	Nut	16
82	6117	Setscrew	9
83	MX1319	Cap	2
84	8922	Hanger Bkts	2
85	1270	Nut	1
86	2048	Washer	16
87	9303	Hanger Bracket, Right Hand Rear	1
*	9302	Hanger Bracket, Left Hand Rear	1
88	RCL584300-00	Hanger Bracket, Front	2
89	1225	"R" Clip	4
90	1956	Washer	1
91	2022	Bolt	1
92	RCL766177-00	Label, Warning (Graphical)	1
93	RCL009-0501	Washer	10
*	ACC100005-00	42" Deck Assembly, complete	1

* Not Shown


A C U T A B O V E T H E C O M P E T I T I O N



48" (122cm) Contra-Rotating Cutter Deck

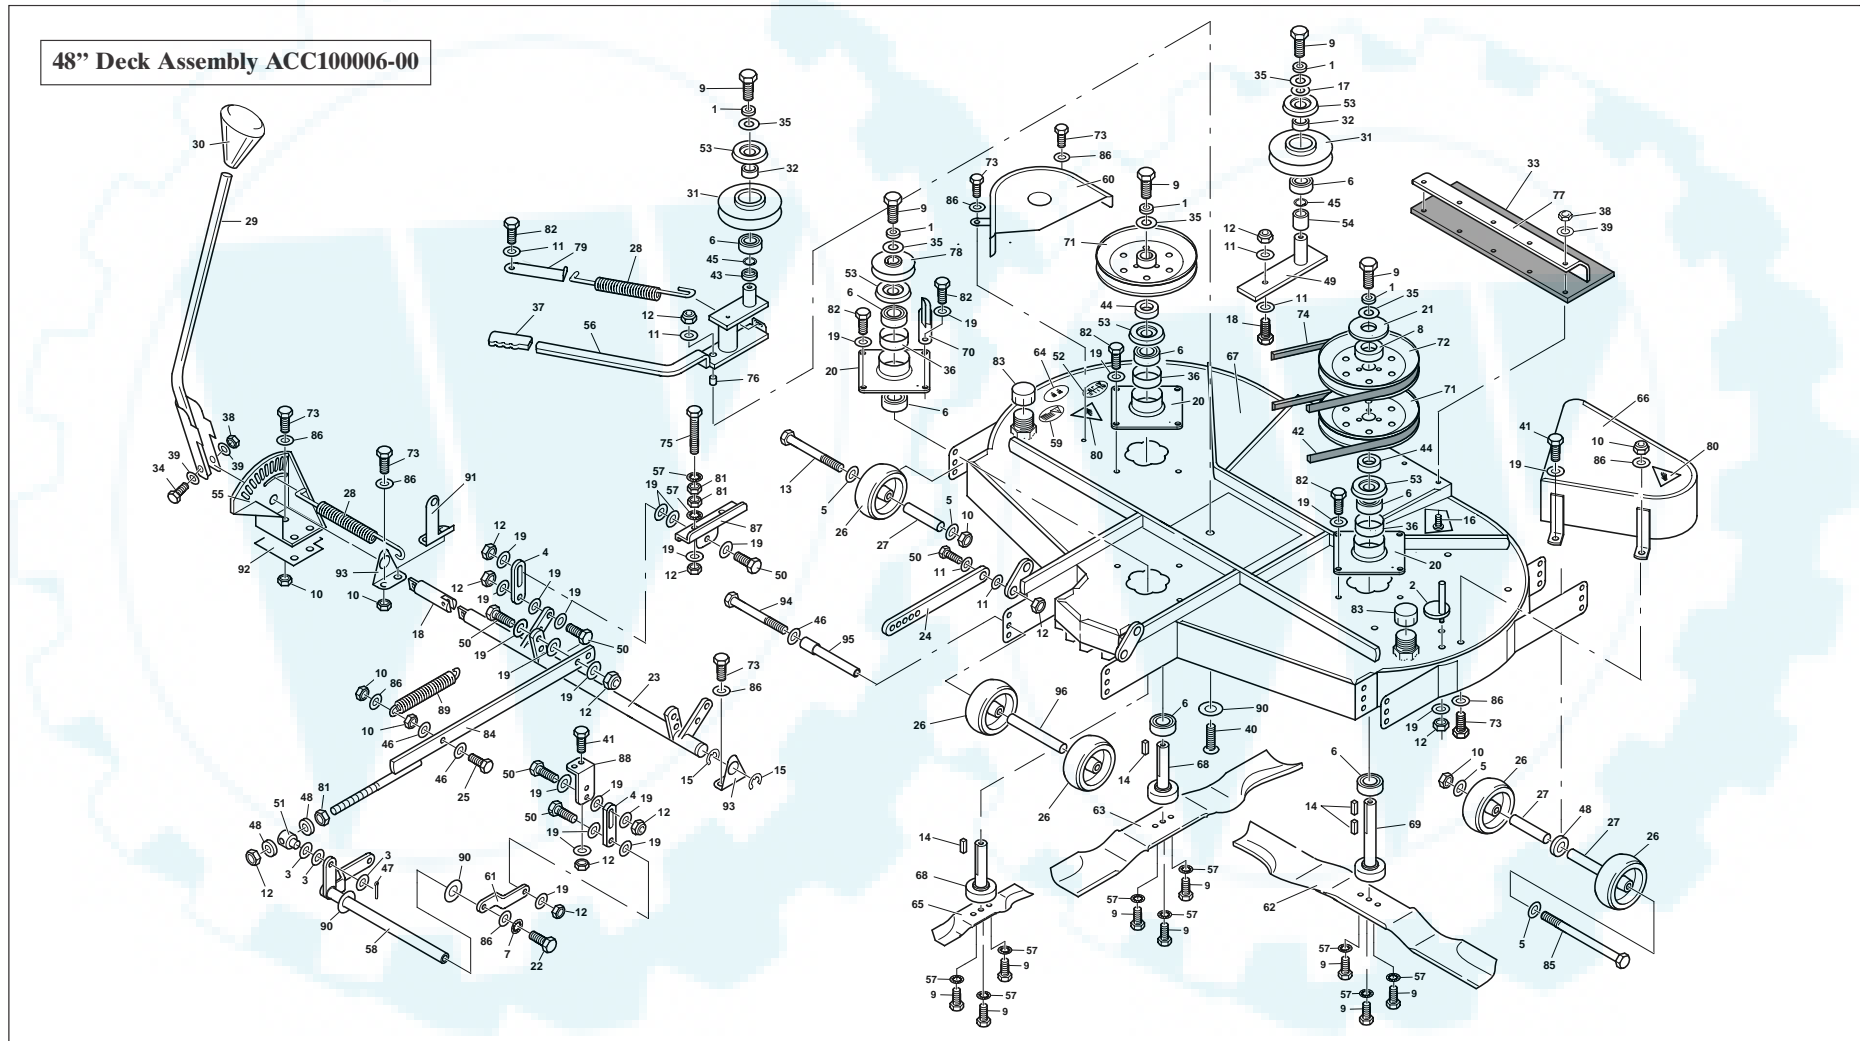

A C U T A B O V E T H E C O M P E T I T I O N

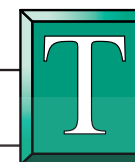

48" (122cm) Contra-Rotating Cutter Deck

ITEM	PART NO.	DESCRIPTION	QTY
1	M1922	Washer	5
2	6748	Shaft, Cam Adjuster	1
3	RCL011-1001	Washer	3
4	8915	Lifting Link	4
5	6122	Washer	17
6	1180	Bearing, NSK. 6205-RS	8
7	RCL013-08	Washer	1
8	8846	Spacer	1
9	RCL094-1025	Setscrew	14
10	RCL090-08	Nut	18
11	6125	Washer	32
12	RCL090-10	Nut	24
13	7046	Bolt	2
14	3841	Drive Key	4
15	1663	"E" Clip (A1500-75)	2
16	RCL050-0616	Setscrew	5
17	3618	Spacer	1
18	RCL584199-00	Hanger Bkt. Shaft Extension	1
19	RCL017-1003	Washer	16
20	8384	Bearing Housing	3
21	3635	Spacer	1
22	RCL048-0820	Setscrew	1
23	9067	Hanger Bracket Assembly	1
24	8907	Hitch Bar	2
25	RCL030-0835	Bolt	1
26	7320	Wheel, Anti-Scalp	8
27	4774	Sleeve	6
28	2595	Spring	2
29	7646	Lever Height Adjuster	1
30	2649	Knob	1
31	9101	Idler Pulley	2
32	9103	Spacer	2
33	3286	Rubber Flap	1
34	RCL030-0635	Bolt	1
35	M1923	Washer, Disc Spring	5

ITEM	PART NO.	DESCRIPTION	QTY
36	8913	Spacer, Bearing	3
37	6083	Handgrip	1
38	RCL089-06	Nut	6
39	RCL009-0611	Washer	12
40	RCL074-1035	Bolt	1
41	6213	Setscrew	5
42	MX1304	Belt	1
43	9102	Spacer	1
44	8572	Spacer	2
45	MX1320	Circlip	2
46	009-0817	Washer	2
47	1223	Split Pin, Steel	1
48	3683	Spacer	3
49	8428	Idler Shaft Assembly	1
50	RCL048-1035	Setscrew	10
51	8639	Pivot, Lift Rod	1
52	RCL766177-00	Decal, Warning Label (Graphical)	1
53	8437	Pulley Shroud	5
54	9105	Idler Spacer	1
55	RCL564040-00	Height Adjuster Quadrant	1
56	9002	Engine Idler Assembly	1
57	RCL013-1001	Washer	17
58	9067	Hanger Bracket Assembly	1
59	RCL766178-00	Label, Hazard Warning	1
60	RCL564093-00	Guard, Right Hand	1
61	RCL584056-00	Lifting Spindle Link, Left Hand	1
62	8886	Blade, Left Hand	1
63	8887	Blade, Right Hand	1
64	RCL766135-00	Label, Height Adjuster	1
65	8770	Blade, Centre	1
66	8926	Guard, Left Hand	1
67	RCL564095-00	Cutter Deck	1
68	8774	Cutter Shaft (Short)	2
69	8844	Cutter Shaft (Long)	1
70	8426	Guard Central	1


ITEM	PART NO.	DESCRIPTION	QTY
71	5435	Pulley Assembly	2
72	8890	Pulley Assembly	1
73	2764	Setscrew	10
74	5672	Drive Belt	1
75	6213	Setscrew	4
76	8576	Spacer Tube	1
77	3287	Retaining Strip	1
78	8385	Pulley	1
79	8571	Bracket, Spring Retaining	1
80	RCL766194-00	Warning Label	2
81	RCL061-10	Nut	9
82	6117	Setscrew	12
83	MX1319	Cap	2
84	RCL564041-00	Hitch Rod	1
85	RCL030-8140	Bolt	2
86	011-0801	Washer	16
87	9303	Hanger Bkt., Right Hand, Rear	1
*	9302	Hanger Bkt., Left Hand Rear	1
88	RCL584300-00	Hanger Bkt., Front	2
89	RCL900010-00	Spring	1
90	1976	Washer	3
91	RCL584043-00	Spring Post	1
92	RCL584046-00	Spacer Plate	1
93	8922	Hanger Bkts.	2
94	RCL030-0810	Bolt	2
95	RCL584206-00	Sleeve, Anti Scalp Wheel	2
96	RCL584203-00	Axle, Anti Scalp Wheel	1
*	ACC100006-00	48" Deck Assembly, complete	1

* Not Shown


A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis and Upper Body Panels

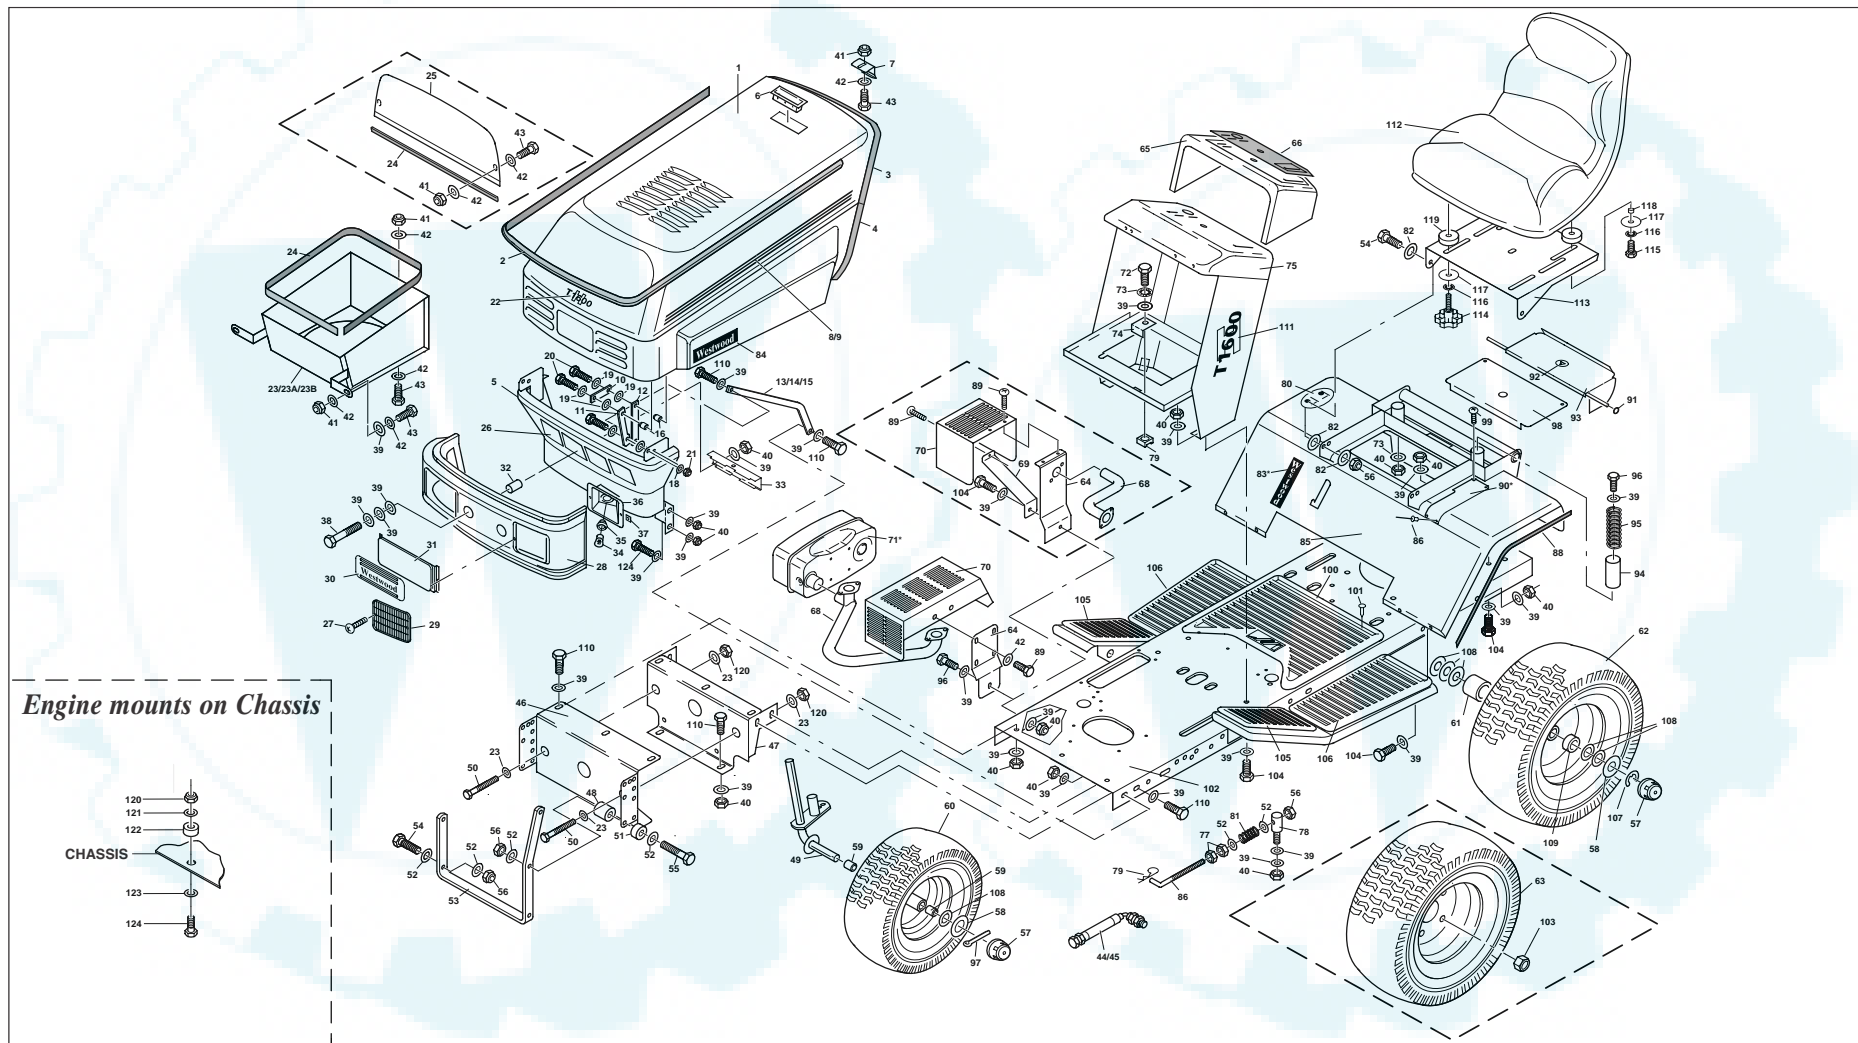

A C U T A B O V E T H E C O M P E T I T I O N

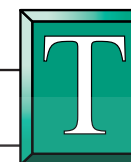

Tractor Chassis and Upper Body Panels

ITEM	PART NO.	DESCRIPTION	QTY
*	RCL902108-00	Bonnet Assembly (Spares)	1
1	RCL564135-00	Bonnet	1
2	RCL136007-00	Trim, Long	1
3	4832	Trim	2
4	3583	Trim	2
5	RCL564133-00	Valance (Bonnet)	1
6	8896	Bonnet Hand Grip	1
7	8551	Bonnet Catch	1
8	RCL766181-00	Bonnet Stripe, Left Hand	1
9	RCL766180-00	Bonnet Stripe, Right Hand	1
10	RCL584418-00	Link Plate	2
11	RCL584371-00	Short Bracket	2
12	RCL584372-00	Long Bracket	2
*	RCL584421-00	Link Plate, S1600	1
13	RCL584419-00	Bonnet Stay, S1600/T1600/T1800	2
*	RCL584419-00	Bonnet Stay, S1300	1
14	RCL584420-00	Bonnet Stay, S1300	1
15	RCL584453-00	Bonnet Stay, Honda Engineered	2
16	RCL584367-00	Spacer, Shouldered	4
17	RCL584366-00	Spacer, Hinge	6
18	1331	Washer, Thin	4
19	3620	Washer, Heavy	12
20	6170	Bolt, Short	4
*	048-0625	Bolt, Long	4
21	RCL089-0608	Nut	8
22	RCL766148-00	Decal, T1600H	1
*	RCL766147-00	Decal, T1600M	1
*	RCL766146-00	Decal, S1600H	1
*	RCL766145-00	Decal, S1600M	1
*	RCL766152-00	Decal, T1800H	1
*	RCL766151-00	Decal, T1800M	1
*	RCL766142-00	Decal, S1300H	1
*	RCL766141-00	Decal, S1300M	1
23	9051	Air Intake Box, T1600/T1800	1
23A	RCL564132-00	Air Intake Lower Tray, Honda 13HP only	1


ITEM	PART NO.	DESCRIPTION	QTY
23B	4098	Rivets	4
24	4832	Air Intake Trim (Length as Required)	1
25	9047	Heatshield Bonnet, S1300/S1600	1
26	8927	Blanking Cap, S1300	4
27	1956	Screw	4
28	8842	Grille Assembly, S1600/T1600/T1800	1
29	8256	Headlamp Lens, S1600/T1600/T1800	2
30	RCL766139-00	Decal, Westwood, Front Grille	1
31	9453	Cover Plate	1
32	M3489	Spacer, Plastic	2
33	9021	Grille Clamp Plate	1
34	8274	Lamp Bulb	2
35	8273	Lampholder	2
36	8905	Headlight Reflector	2
37	3038	J Nut	4
38	1266	Bolt	2
39	3613	Washer	39
40	1273	Nut	19
41	1270	Nut	5
42	1331	Washer	39
43	1156	Setscrew	5
44	7852	Oil Drain, T1600/T1800	1
45	7537	Oil Drain Pipe, S1300/S1600	1
*	3742	Oil Drain Plug, S1300/S1600	1
46	RCL584294-00	Chassis Front	1
47	RCL584295-00	Chassis Plate	1
48	6636	Spacer	2
49	RCL564104-00	Stub Axle, Right Hand	1
50	RCL030-0875	Bolt	2
51	3683	Spacer	2
52	1323	Washer	53
53	9148	Hanger Bar, T1600/T1800	1
*	9094	Hanger Bar, S1300/S1600	1
*	RCL584360-00	Hanger Bar, Honda 13HP only	1
54	1948	Setscrew	4

ITEM	PART NO.	DESCRIPTION	QTY
55	1319	Bolt	2
56	1324	Nut	26
57	4230	Hub Cap	4
58	3908	Washer, Hub Cap	4
59	RCL134007-04	Bush Oilite	4
60	RCL134007-00	Front Wheel Assembly 15"	2
*	RCL134007-01	Front Wheel Trim	2
*	RCL134007-02	Front Tyre	2
*	1540	Inner Tube Front	2
61	1715	Rear Wheel Spacer, 3/4" Bore, T1600M/T1800M	2
*	1980	Rear Wheel Spacer, 3/4" Bore, S1300M/S1600M	4
*	5479	Rear Wheel Spacer, 3/4" Bore, S1300H/S1600H/T1600H	2
62	RCL134008-00	Rear Wheel Assembly, 3/4" Bore-19", S1300/S1600/T1600	2
*	RCL134008-01	Wheel Rim	2
*	RCL134008-02	Tyre	2
*	9041	Inner Tube	2
63	RCL134015-00	Rear Wheel Assembly, T1800H only	2
*	RCL134015-01	Wheel Rim, T1800H only	2
*		Wheel Rim, Honda 13HP	2
64	7592	Support Brkt. Exhaust, T1600/T1800	1
*	8852	Support Brkt. Exhaust, S1300/S1600	1
65	8849	Console Cover, S1600/T1600/T1800	1
66	RCL766149-00	Console Decal, T1600/T1800	1
67	RCL766161-00	Console Decal, S1300/S1600	1
68	7548	Pipe Exhaust, T1600/T1800	1
*	8856	Pipe Exhaust, S1600	1
*	RCL564129-00	Pipe Exhaust, Honda 13HP only	1
69	8854	Heatshield, S1600	1
*	RCL584352-00	Heatshield, Honda 13HP only	1
70	7751	Muffler, T1600/T1800/Honda 13HP	1
*	8653	Muffler, S1600	1


A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis and Upper Body Panels

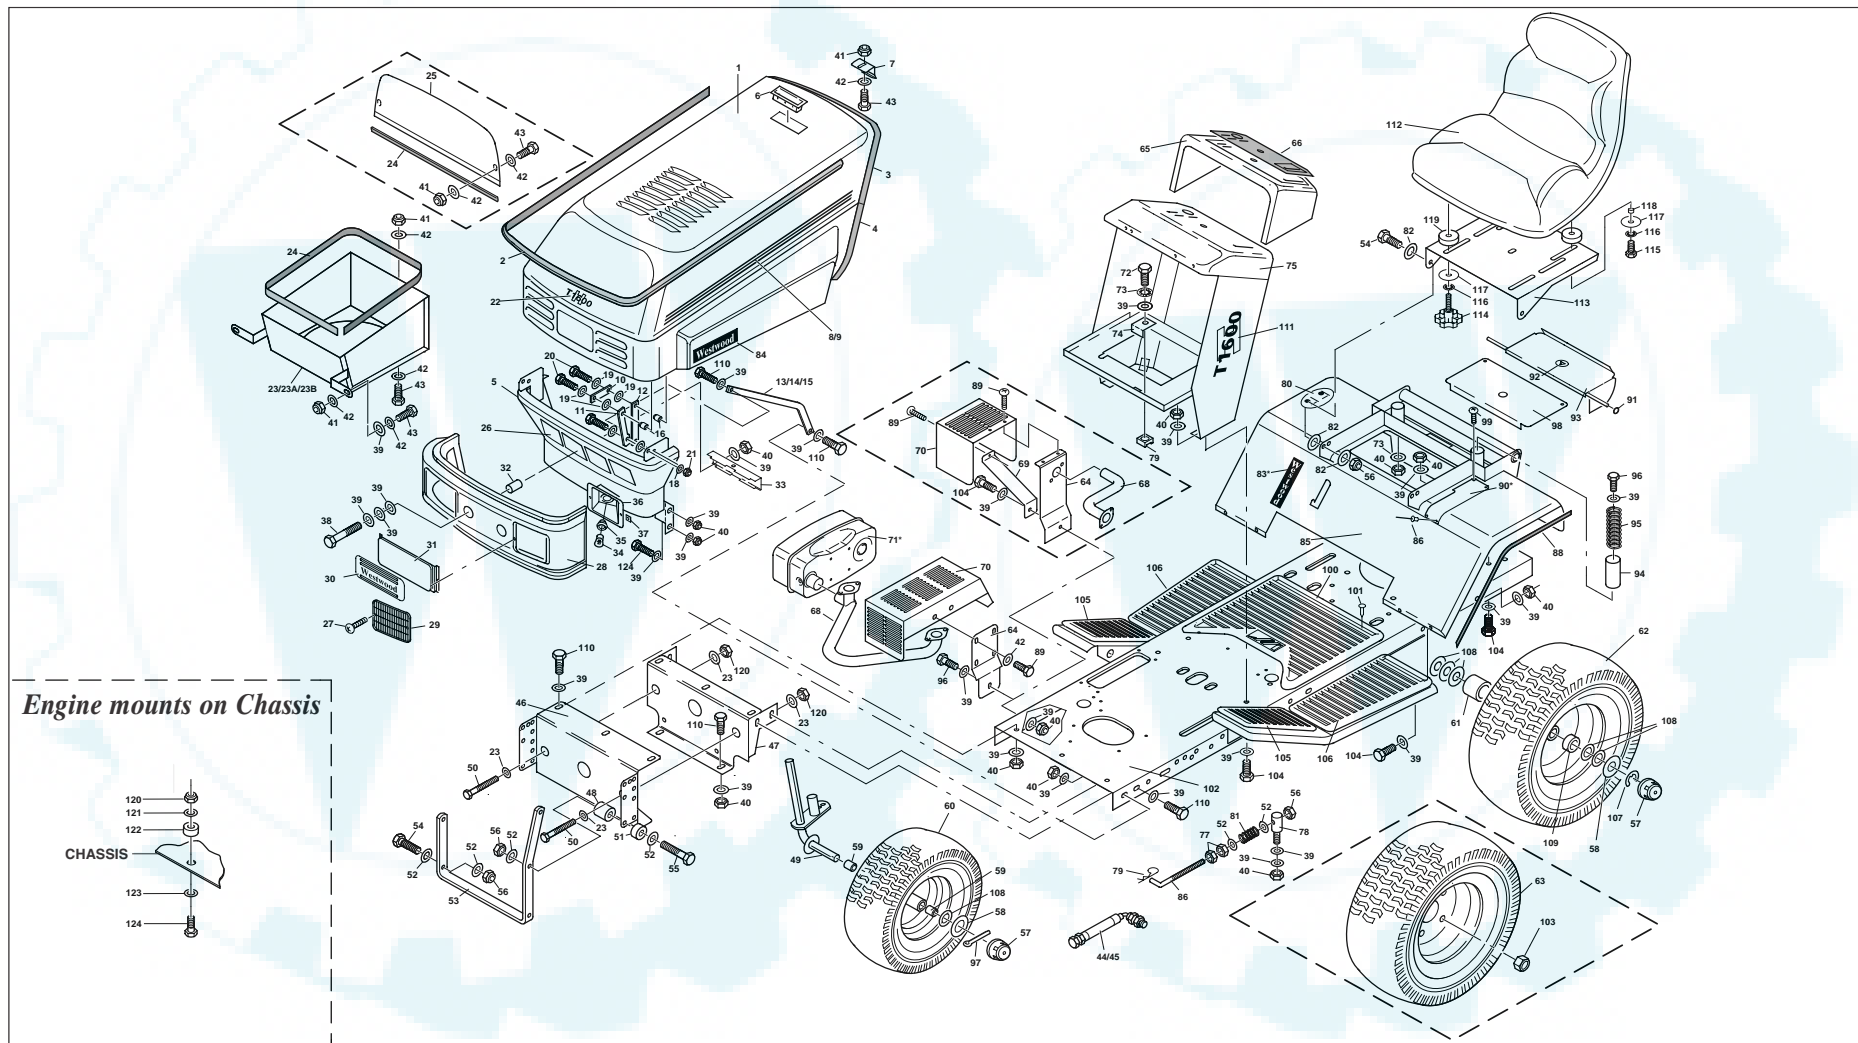

A C U T A B O V E T H E C O M P E T I T I O N

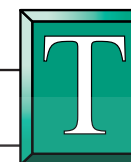

Tractor Chassis and Upper Body Panels (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
71	7351	Exhaust, T1600/T1800 (B&S 493963)	1
*	7627	Exhaust, S1600 (B&S 491413)	1
72	5480	Setscrew	3
73	2048	Washer	3
74	7776	Battery Clamp Brkt.	1
75	RCL564123-00	Console	1
76	4309	J Nut	1
77	3792	Locknut	4
78	7092	Swivel	1
79	4086	"R" Clip, Small	1
80	RCL766137-00	Label P.G.C. Lower / Raise	1
81	7190	Spring Compression	1
82	4124	Washer	8
83	9143	Decal, Westwood, T1600/T1800	1
84	9370	Decal, Westwood, Bonnet	2
85	9363	Centre Body Assembly	1
86	7595	Rivets	4
87	8016	Rod Adjuster	1
88	6305	Wheel Arch Trim	2
89	2030	Setscrew, Muffler, T1600/T1800	4
*	046-0316	Setscrew, Muffler, S1600	3
90	9391	Gear Cover, Blank, T1600H/T1800H	1
*	9366	Gear Cover, S1300M/S1600M/ T1600M/T1800M	1
*	9381	Gear Cover, S1300H/S1600H/ Honda S1300 HP	1
91	4831	Washer, Star Lock	2
92	RCL766179-00	Label, Small Warning	1
93	8329	Flap, P.T.O.	1
94	9422	Plastic Sleeve	2
95	2898	Seat Spring	2
96	2031	Setscrew	2
97	1227	Split Pin	2
98	RCL584019-00	Plate, P.T.O. Cover	1
99	1735	Screw	3

ITEM	PART NO.	DESCRIPTION	QTY
100	8850	CTR Foot Mat	1
101	4958	Fir Tree Fastener	6
102	RCL564033-00	Chassis	1
103	RCL136005-00	Nut, T1800 only	8
104	1982	Setscrew	18
*	RCL048-0820	Setscrew, Honda 13HP only	2
105	5644	Foot Mats, RH and LH Front	1pr
106	5645	Foot Mats, RH and LH Rear	1pr
107	RCL112-0190	'E' Clip (AM 1500-75)	4
108	3712/3713	Washer	As req
109	1980	Wheel Spacer, T1600H	2
110	RCL048-0825	Setscrew	7
111	RCL172-00	Decal, Console LH, T1600H	1
*	RCL766160-00	Decal, Console RH, T1600H	1
*	RCL766176-00	Decal, Console LH, T1800H	1
*	RCL766164-00	Decal, Console RH, T1800H	1
*	RCL766170-00	Decal, Console LH, S1600H	1
*	RCL766158-00	Decal, Console RH, S1600H	1
*	RCL766166-00	Decal, Console LH, S1300H	1
*	RCL766154-00	Decal, Console RH, S1300H	1
*	RCL766171-00	Decal, Console LH, T1600M	1
*	RCL766159-00	Decal, Console RH, T1600M	1
*	RCL766175-00	Decal, Console LH, T1800M	1
*	RCL766163-00	Decal, Console RH, T1800M	1
*	RCL766169-00	Decal, Console LH, S1600M	1
*	RCL766157-00	Decal, Console RH, S1600M	1
*	RCL766165-00	Decal, Console LH, S1300M	1
*	RCL766153-00	Decal, Console RH, S1300M	1
112	9360	Seat, Low Back, S1300/S1600	1
*	9416	Seat, High Back, T1600/T1800	1
113	RCL584343-00	Seat Plate	1
114	RCL748000-00	Thumb Screw, S1300/S1600	2
*	RCL748001-00	Thumb Screw, T1600/T1800	2
115	RCL022-0610	Setscrew, S1300/S1600	2
*	RCL022-0510	Setscrew, T1600/T1800	2


ITEM	PART NO.	DESCRIPTION	QTY
116	1633	Washer, Shakeproof, S1300/S1600	4
*	013-08	Washer, Shakeproof, T1600/T1800	4
117	017-0802	Washer	4
118	8566	Slide Spacer	2
119	2351	Spacer, Large	4
120	1273	Nut	4
121	3618	Washer	4
122	2351	Spacer	4
123	3613	Washer	4
124	1318	Bolt	4

* Not Shown


A C U T A B O V E T H E C O M P E T I T I O N



Steering and Electrical Controls

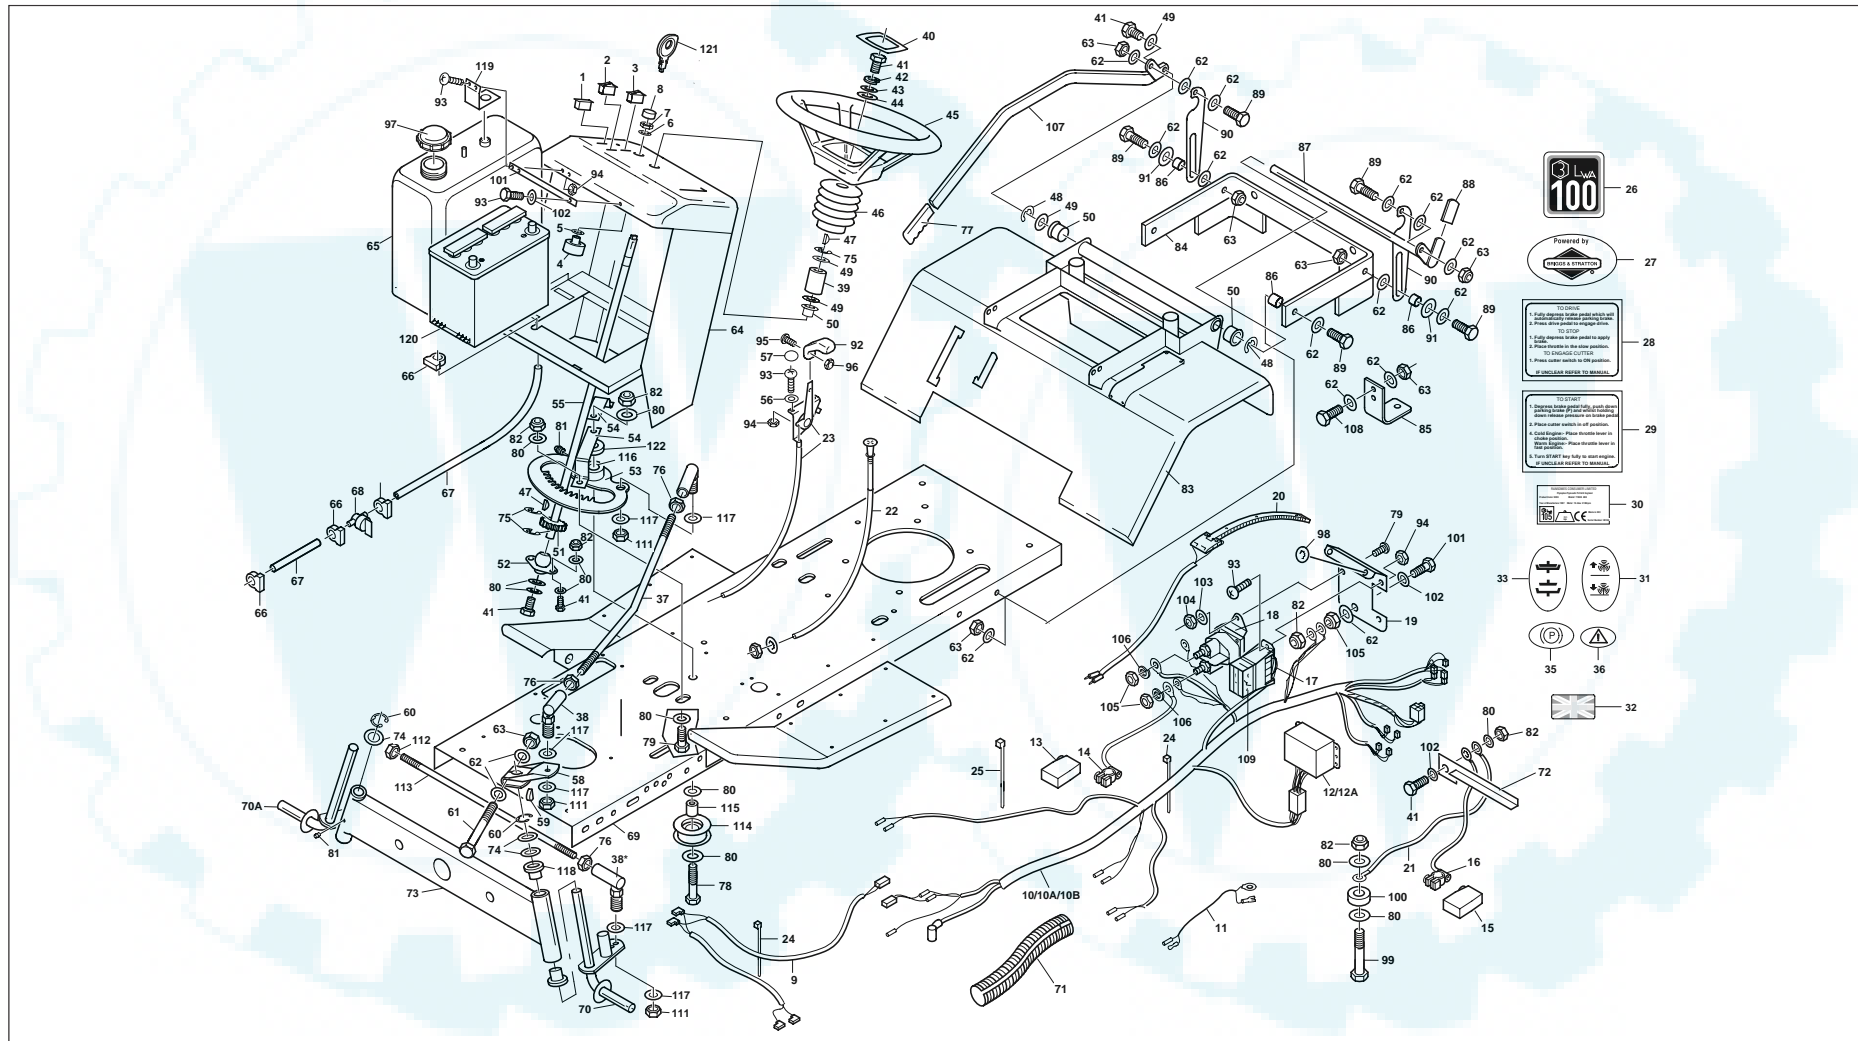

A C U T A B O V E T H E C O M P E T I T I O N

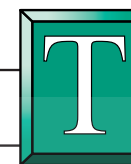


Steering and Electrical Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	8841	Light Battery Charge, S1600/T1600/T1800	1
2	8161	Switch, Cutter Engage (with symbols), T1600/T1800	1
3	8160	Switch, Headlights (with symbols), S1600/T1600/T1800	1
4	2703	Switch, Ignition	1
5	7496	Int. Teethsp. Washer	1
6	6523	Ignition Washer	1
7	2065	Ignition Locknut	1
8	5600	Bezel	1
9	9565	Headlight Harness, S1600/T1600/T1800	1
10	8063	Loom, S1600/T1600/T1800	1
10A	8073	Loom, S1300	1
10B	RCL438006-00	Loom, Honda 13HP only	1
11	8557	Loom Adaptor, T1600/T1800	1
11A	8798	Loom Adaptor, S1600	1
12	8062	P.C.B. Assembly, S1600/T1600/T1800	1
12A	8055	Relay, S1300/Honda 13HP	1
13	9297	Terminal Cover (Red)	1
14	8233	Battery Connection (Positive)	1
15	RCL472000-00	Terminal Cover (Black)	1
16	8234	Battery Connection (Negative)	1
17	8176	Fuse Holder	1
18	1530	Solenoid	1
19	8906	Bkt. Solenoid & Fuse Holder	1
20	9489	Seat Switch (Spares only), Supplied with seats	1
21	7631	Earth Cable	1
22	3559	Choke Control, T1600/T1800	1
23	8569	Throttle Control Assy & Cable, T1600/T1800	1
23A	7348	Throttle, S1300/S1600	1
23B	RCL584359-00	Throttle, Honda 13HP only	1
24	MX1286	Cable Tie	3
25	RCL794000-00	Cable Tie (Re-usable)	2
26	4972	Label, Sound Power Level (100dB)	1

ITEM	PART NO.	DESCRIPTION	QTY
27	RCL766173-00	Label, Powered by Briggs	1
28	7920	Label, To Drive (Hydro)	1
*	8583	Label, To Drive (Manual), S1300/S1600	1
*	7918	Label, To Drive (Manual), T1600/T1800	1
29	7919	Label, To Start (Hydro)	1
*	8252	Label, To Start (Manual), S1300/S1600	1
*	7917	Label, To Start (Manual), T1600/T1800	1
30	*	Decal - Serial No. (Not Replaceable)	1
31	RCL766137-00	Label, P.G.C. Lower / Raise	1
32	3453	Label, Union Jack	1
33	RCL766134-00	Label, P.T.O. Disengage / Engage (all models)	1
*	RCL766134-00	Label has two uses	1
*	RCL766134-00	Deck Disengage, S1300/S1600	1
35	RCL766138-00	Label, Parking Brake	1
36	RCL766179-00	Label, Small Caution	3
37	RCL584318-00	Steering Rod	1
38	RCL102009-00	Ball Joint, Right Hand	3
*	RCL102004-00	Ball Joint, Left Hand	1
39	RCL584309-00	Bush	1
40	9379	Steering Wheel Cap	1
41	RCL048-0820	Setscrew	4
42	RCL083-0802	Washer	1
43	2047	Washer	1
44	4124	Washer	1
45	9378	Steering Wheel	1
46	9426	Gaiter	1
47	1104	Woodruff Key	2
48	2589	"E" Clip No.1500-62	3
49	1975	Washer	6
50	3539	Bush, Steering Column	3
51	2276	Steering Gear	1
52	1699	Steering Foot	1
53	RCL564108-00	Steering Quadrant	1
54	RCL584311-00	Bridge Steering Quadrant, Long	1
*	RCL584312-00	Bridge Steering Quadrant, Short	1

ITEM	PART NO.	DESCRIPTION	QTY
55	RCL584308-00	Steering Column	1
56	3091	Cup Washer (White Plastic)	2
57	3092	Screw Cover (Black Plastic)	2
58	RCL564119-00	Steering Arm	1
59	1098	Woodruff Key	1
60	RCL113-0075	"E" Clip	2
61	RCL030-1065	Bolt	2
62	1323	Washer	24
63	RCL089-1012	Nut	6
64	8919	Console Assy	1
65	3960	Fuel Tank	1
66	3940	Snapper Hoseclip No.6	4
67	3859	Pipe Fuel Supply (Length as required)	1
68	7331	Fuel Cock	1
69	RCL564033-00	Chassis	1
70	RCL564105-00	Stub Axle, Left Hand	1
70A	RCL564104-00	Stub Axle, Right Hand	1
71	9004	Convolute Tubing	As req
72	9458	Battery Location Plate	1
73	RCL564106-00	Axle Beam	1
74	3712/3713	Washer	As req
75	RCL113-0062	Circlip	3
76	RCL066-1207	Locknut	4
77	6083	Handgrip	1
78	RCL023-0636	Bolt	1
79	1156	Setscrew	3
80	3613	Washer	11
81	1423	Grease Nipple	3
82	1273	Nut	18
83	9363	CTR. Body Assembly	1
84	8215	Mounting Frame	1
85	2246	Tow Hitch	1
86	3146	Spacer	4
87	8285	Lifting Shaft	1
88	7851	Rectangular Sleeve	1

A C U T A B O V E T H E C O M P E T I T I O N

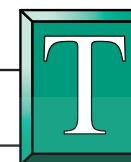

Steering and Electrical Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
89	1948	Setscrew	6
90	7715	Lifting Arm	2
91	014-1301	Washer	2
92	7763	Knob	1
93	1734	Screw	5
94	1053	Nut	5
95	7764	Screw	1
96	7765	Nut	1
97	3963	Fuel Tank Cap	1
98	013-0601	Washer	4
99	1318	Bolt	4
100	2351	Engine Spacer	4
101	2031	Setscrew	3
102	2048	Washer	5
103	1331	Washer	7
104	1270	Nut	2
105	1969	Locknut	3
106	RCL083-0802	Washer	2
107	8280	Lifting Lever	1
108	2015	Setscrew	2
109	8177	Fuse 1 amp	1
*	8178	Fuse 10Amp	1
*	4044	Fuse 10 Amp In-line (S1300)	3
*	6789	Fuse 20 Amp	2
110	8553	Bonnet Catch Plate	1
111	RCL090-1212	Locknut	4
112	RCL141-1207	Nut, Left Hand Thread	1
113	RCL584317-00	Track Rod	1
114	9488	Pulley	1
115	8340	Spacer	1
116	3400	Steering Quad Bush	1
117	RCL584319-00	Washer	8
118	3355	Stub Axle Bush	4
119	8202	Fuel Tank Bracket	1
120	1209	Battery	1
121	2066	Ignition key	2

ITEM	PART NO.	DESCRIPTION	QTY
122	RCL584330-00	Spacer	1
* Not Shown			


ITEM	PART NO.	DESCRIPTION	QTY
* Not Shown			

A C U T A B O V E T H E C O M P E T I T I O N




Tractor Chassis, PTO, Brake & Cutter Controls

S1300H/S1300 Honda H/S1600H Models only

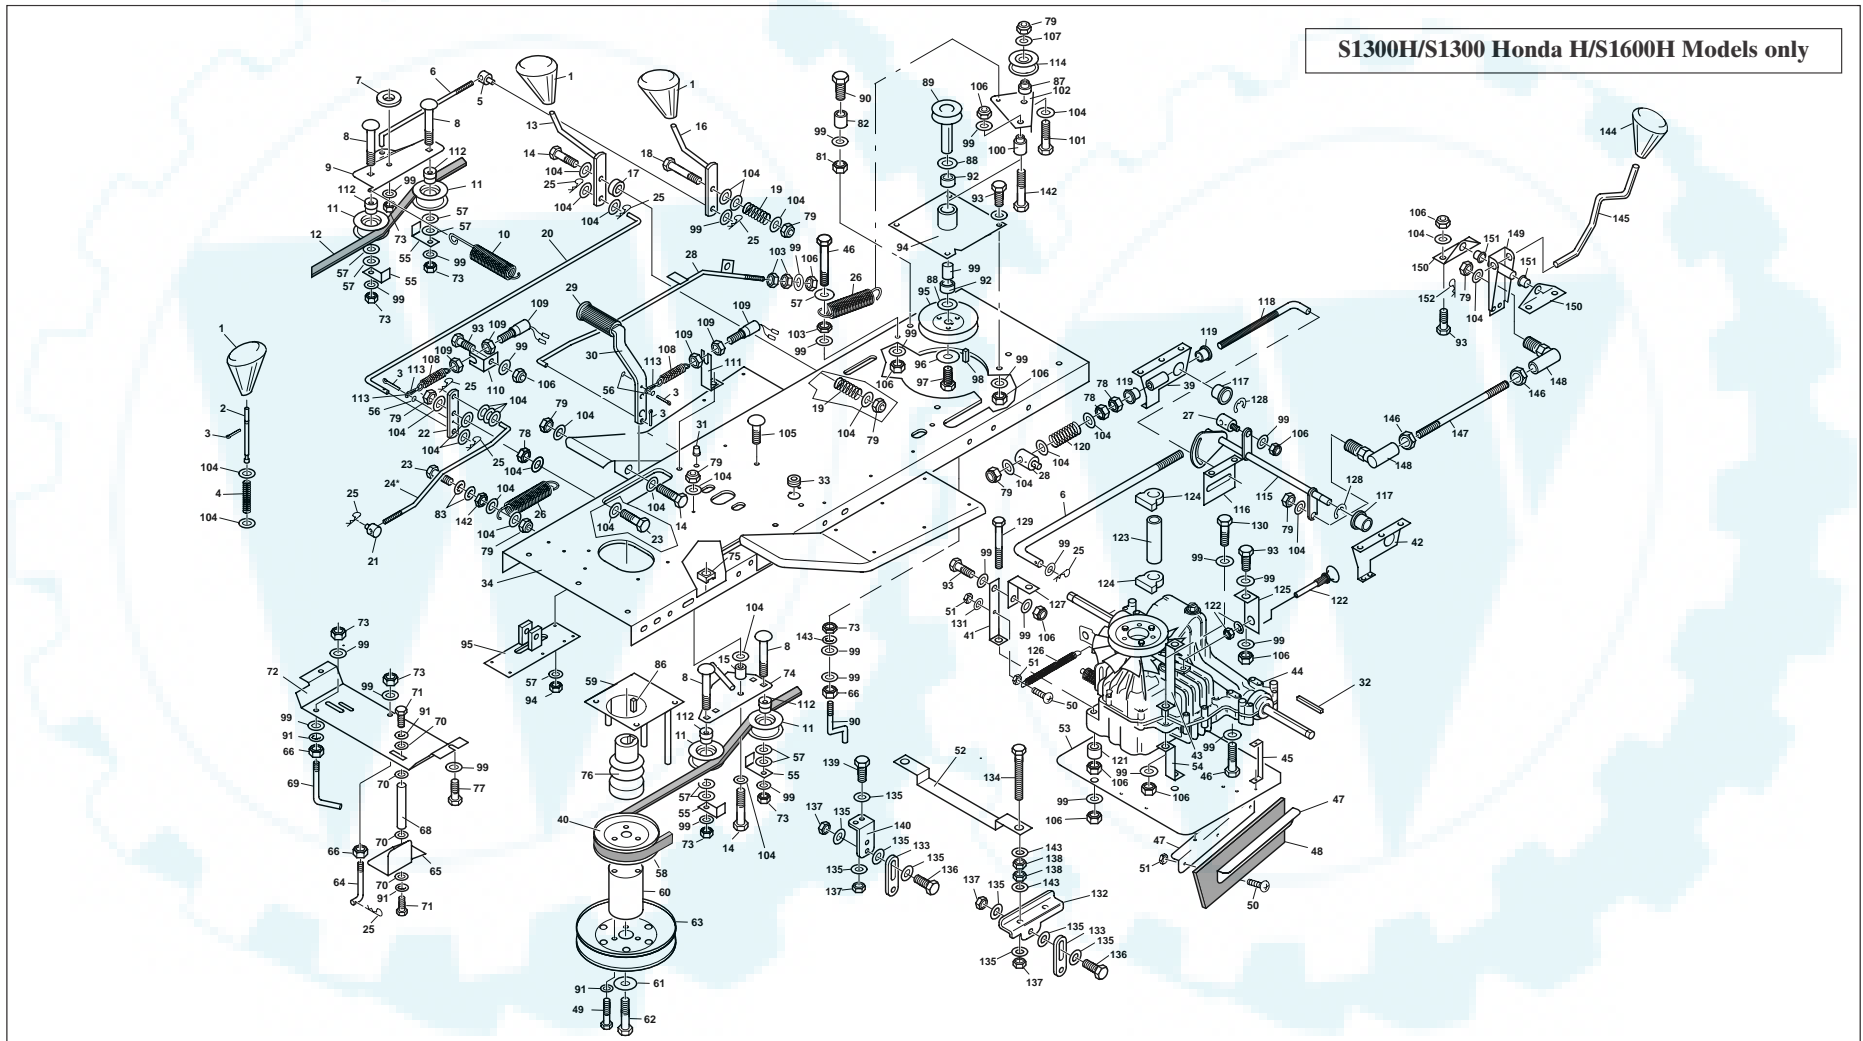

A C U T A B O V E T H E C O M P E T I T I O N

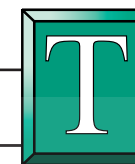

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	2648	Knob	3
2	7383	Plunger Brake	1
3	1233	Split Pin, Steel	3
4	2003	Spring Park Brake	1
5	6817	Swivel Adjuster Rod	1
6	7107	Rod Adjustable	2
7	8418	Spacer, PTO Jockey	1
8	RCL074-0845	Bolt	4
9	8310	Plate PTO Jockey Pulley	1
10	2594	Spring	1
11	9488	Jockey Pulley	6
12	7726	Belt, PTO (A 84%)	1
13	6400	Lever, Engage	1
14	1319	Bolt	2
15	6812	Bush, Jockey Plate	1
16	8538	Lever, PTO Engage	1
17	3683	Spacer	3
18	7285	Bolt	1
19	1613	Spring	2
20	RCL564019-001	Engage Rod (long)	1
21	1695	Swivel Engage Rod	1
22	9093	Transfer Link	1
23	1054	Bolt	1
24	8814	Engage Rod	1
*	RCL584361-00	Engage Rod, Honda 13HP only	1
25	4086	"R" Clip, Small	8
26	2103	Clutch Spring	2
27	8817	Swivel	1
28	8676	Brake Rod	1
29	8912	Foot Pedal Rubber	1
30	8218	Foot Pedal	1
31	MX951	Grommet (S1300-S1600 only)	1
32	RCL 812000-00	Key	2
33	4152	Grommet, Open Chassis	3
34	RCL584033-00	Chassis	1

ITEM	PART NO.	DESCRIPTION	QTY
35	2356	Plate Brake Extension	1
36	1270	Nut	1
37	1331	Washer	1
38	1156	Setscrew	1
39	8726	TX Support Bkt., Rear RH	1
40	7301	Pulley 5", Deep Form	1
41	8681	TX Support Bkt., RH Front	1
42	8727	TX Support Bkt., Rear LH	2
43	8680	TX Support Bkt., LH Front	1
44	8350	Gearbox Hydro (Sundstrand)	1
*	9502	Fan, Hydro	1
*	9501	Pulley, Hydro	1
45	6905	Support Bkt. Grass Def. Rear	2
46	1978	Bolt	4
47	3323	Galv. Support Bkts	2
48	8732	Flap Rubber	1
49	RCL023-08114	Bolt	3
50	1735	Screw	3
51	1053	Nut	3
52	9291	Support Bracket	1
53	4949	Grass Deflector	1
54	8682	Grass Deflector Support Bkt., LH Front	1
55	5735	Belt Guide	5
56	1067	Washer	4
57	3613	Washer	8
58	7239	Belt, Transmission A81	1
59	RCL564030-00	Belt Guide Plate Assembly	1
60	8452	Eng. Blk (1000 Series)	1
61	6536	Washer	1
62	027-11114	Bolt	1
63	1558	Pulley, 7"	1
64	2139	Brake Cable Retaining Pin	1
65	7542	Safety Guard	1
66	RCL061-08	Nut	4
67	3397	Spacer	1

ITEM	PART NO.	DESCRIPTION	QTY
68	7541	Post Safety Guard	1
69	RCL584191-00	Belt Guide Pin	1
70	1331	Washer	4
71	1156	Setscrew	2
72	8284	Guard Plate	1
73	RCL090-08	Nut	11
74	8236	Jockey Plate	1
75	4309	Nut	2
76	7662	Eng. Block (Upper)	1
77	RCL030-0825	Setscrew	2
78	1321	Bolt	1
79	1324	Nut	16
80	9572	Spacer	1
81	RCL084-08	Nut	2
82	9573	Stop	1
83	RCL029-0840	Bolt	1
84	RCL011-1001	Washer	1
85	RCL564081-00	Adaptor Plate	1
86	1602	Key, Engine Block	1
87	8340	Spacer	1
88	RCL016-1601	Washer	2
89	8286	Pulley & Shaft Assembly PTO Drive	1
90	6662	Belt Guide Pin	3
91	2045	Washer	6
92	3229	Bearing	2
93	1982	Setscrew	10
94	9567	PTO Bearing Housing	1
95	8337	Pulley Assembly 5"	1
96	017-0802	Washer	1
97	RCL048-0820	Set Bolt	1
98	MX1285	Key, Long	1
99	1105	Washer	41
100	9571	Spacer	1
101	1200	Bolt	1
102	8232	Plate Jockey Pulley	1

A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis, PTO, Brake & Cutter Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
103	1969	Nut	1
104	1323	Washer	31
105	7418	Bolt	1
106	1273	Nut	25
107	2847	Washer	2
108	3463	Spring	1
109	3414	Switch, Brake & Cutter Dk. Safety	2
110	6393	Bracket Safety Sw. (Short) (Cutter Deck)	1
111	6394	Bracket Safety Sw. (Long) (Brake)	1
112	8220	Shouldered Spacer (Jockey Pulley)	4
113	2592	Chain	Links as req
114	5822	Pulley	1
115	9349	Layshaft Assembly	1
116	9383	Centralising Plate	1
117	3539	Bush	2
118	8672	Centralising Rod	1
119	8686	Bush (Nylon)	2
120	8674	Compression Spring	1
121	3329	Spacer	1
122	8731	Cable, Dump Valve	1
123	8767	Vent Hose	1
124	8765	Hose Clip SNP.14	2
125	8684	Bracket, Dump Valve	1
126	8720	Spring	1
127	8683	TX Support Bkt., RH Front	1
128	2589	"E" Clip	2
129	1312	Bolt	1
130	1318	Bolt	1
131	1962	Washer	1
132	9302	Hanger Bkt., Left Hand Rear	1
*	9303	Hanger Bkt., Right Hand Rear	1
133	8915	Lifting Link	4
134	6213	Setscrew	4
135	RCL017-1003	Washer	30
136	RCL048-1035	Setscrew	8

ITEM	PART NO.	DESCRIPTION	QTY
137	RCL090-10	Nut	16
138	RCL061-10	Nut	8
139	5850	Setscrew	4
140	9304	Hanger Bkt., Front	2
141	RCL090-0808	Nut	4
142	1422	Nut	1
143	RCL013-1001	Washer	10
144	2649	Knob	1
145	9372	Gear Lever	1
146	3792	Locknut	2
147	8818	Gear Change Rod	1
148	6487	Ball Joint	2
149	9373	Gear Lever Assembly	1
150	9376	Pivot Plate	2
151	3541	Bush, Medium Nylon	2
152	4086	"R"Clip, Small	1
* Not Shown			


ITEM	PART NO.	DESCRIPTION	QTY
* Not Shown			

A C U T A B O V E T H E C O M P E T I T I O N




Tractor Chassis, PTO, Brake & Cutter Controls

S1300M/S1300 Honda M/S1600M Models only

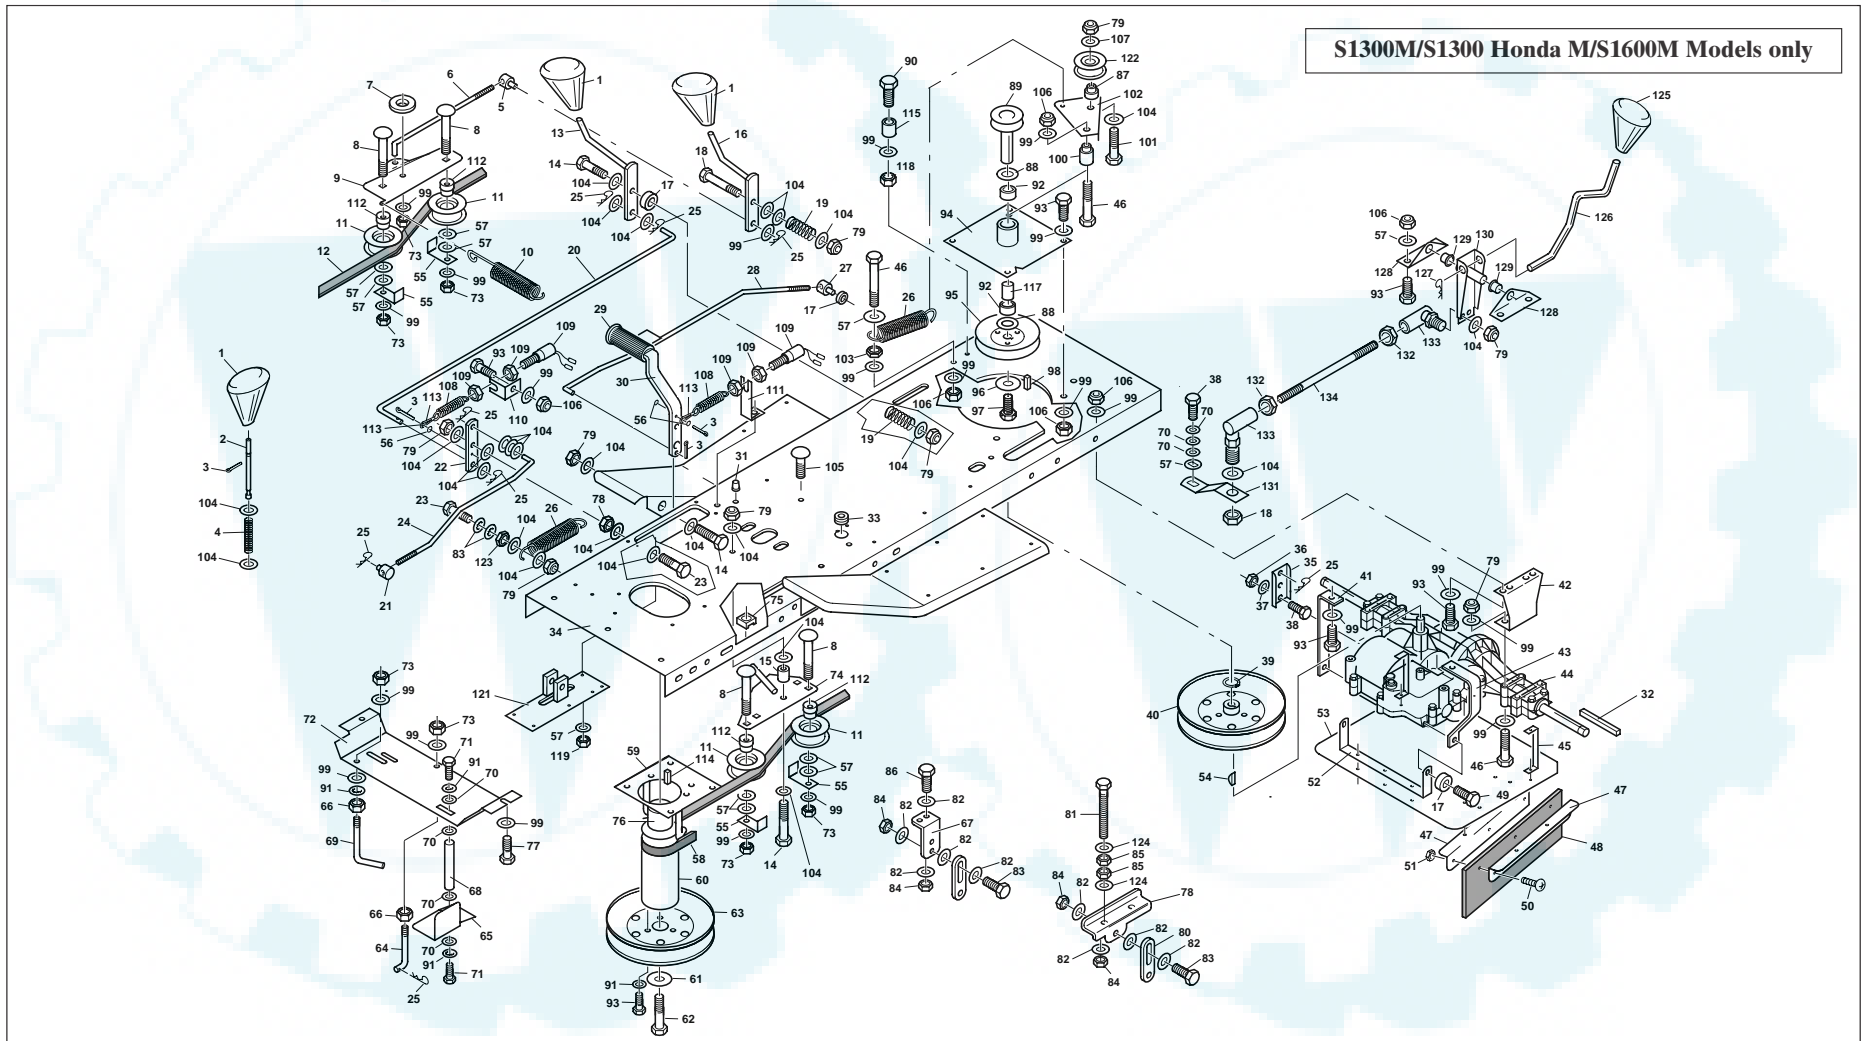

A C U T A B O V E T H E C O M P E T I T I O N

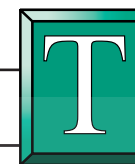

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	2648	Knob	3
2	7383	Plunger Brake	1
3	1233	Steel Split Pin	3
4	2003	Spring Park Brake	1
5	6817	Swivel Adjuster Rod	1
6	7107	Rod Adjustable	1
7	8418	Spacer, PTO Jockey	1
8	RCL074-0845	Bolt	4
9	8310	Plate PTO Jockey Pulley	1
10	2594	Spring	1
11	9488	Jockey Pulley	5
12	7726	Belt, PTO (A 84%)	1
13	6400	Lever, Engage	1
14	1319	Bolt	2
15	6812	Bush, Jockey Plate	1
16	8538	Lever, PTO Engage	1
17	3683	Spacer	4
18	7285	Bolt	1
19	1613	Spring	2
20	RCL564019-00	Engage Rod (long)	1
21	1695	Swivel Engage Rod	1
22	9093	Transfer Link	1
23	1054	Bolt	1
24	8814	Engage Rod	1
*	RCL584361-00	Engage Rod, Honda 13HP only	1
25	4086	"R" Clip, Small	8
26	2103	Clutch Spring	2
27	1694	Swivel	1
28	8515	Brake Rod	1
29	8912	Foot Pedal Rubber	1
30	8218	Foot Pedal	1
31	MX951	Grommet (S1300-S1600 only)	1
32	RCL 812000-00	Key, Square	2
33	4152	Grommet Open Chassis	3
34	RCL564033-00	Chassis	1


ITEM	PART NO.	DESCRIPTION	QTY
35	2356	Plate Brake Extension	1
36	1270	Nut	1
37	1331	Washer	1
38	1156	Setscrew	2
39	1996	Circlip	1
40	8295	Pulley Transaxle	1
41	2831	TX Support Bkt., Right Hand Front	1
42	RCL584061-00	TX Support Bkt., Rear	2
43	9475	TX Support Bkt., Left Hand Front	1
44	9478	Transaxle 200 Series 6 Speed	1
45	8393	Support Bkt. Grass Def. Rear	2
46	1978	Bolt	4
47	3323	Galv. Support Bkts	2
48	3324	Flap Rubber (Std. Tractors)	1
49	7286	Screw	2
50	1735	Screw	3
51	1053	Nut	3
52	9474	Support Bkt. Grass Deflector front	1
53	4949	Grass Deflector	1
54	1104	Key	1
55	5735	Belt Guide	5
56	1067	Washer	4
57	3613	Washer	10
58	1688	Belt Transmission	1
59	RCL564029-00	Belt Guide Plate Assembly	1
60	6796	Eng. Blk	1
61	6536	Washer	1
62	027-11114	Bolt	1
63	1558	Pulley 7"	1
64	2319	Brake Cable Retaining Pin	1
65	7542	Safety Guard	1
66	RCL061-08	Nut	2
67	9304	Hanger Bkt., Front	1
68	7541	Post Safety Guard	1
69	RCL584191-00	Belt Guide Pin	1

ITEM	PART NO.	DESCRIPTION	QTY
70	1331	Washer	7
71	1156	Setscrew	2
72	RCL584099-00	Guard Plate	1
73	RCL090-08	Nut	9
74	8236	Jockey Plate	1
75	4309	Nut	2
76	7684	Spacer	1
77	RCL030-0825	Setscrew	2
78	9302	Hanger Bkt., Left Hand Rear	1
*	9303	Hanger Bkt., Right Hand Rear	1
79	1324	Nut	12
80	8915	Lifting Link	4
81	6213	Setscrew	4
82	RCL017-1003	Washer	30
83	RCL048-1035	Setscrew	8
84	RCL090-10	Nut	16
85	RCL061-10	Nut	8
86	5850	Setscrew	4
87	8340	Spacer	1
88	RCL016-1601	Washer	3
89	9569	PTO Pulley Assembly	1
90	RCL029-0840	Bolt	1
91	2045	Washer	6
92	3229	Bearing	2
93	1982	Setscrew	13
94	9567	PTO Mounting Plate	1
95	8337	Pulley Assembly, 5"	1
96	017-0802	Washer	1
97	RCL048-0820	Bolt	1
98	MX1285	Key, Long	1
99	1105	Washer	34
100	1321	Spacer	1
101	1200	Bolt	1
102	8232	Plate Jockey Pulley	1
103	1969	Nut	1

A C U T A B O V E T H E C O M P E T I T I O N




Tractor Chassis, PTO, Brake & Cutter Controls

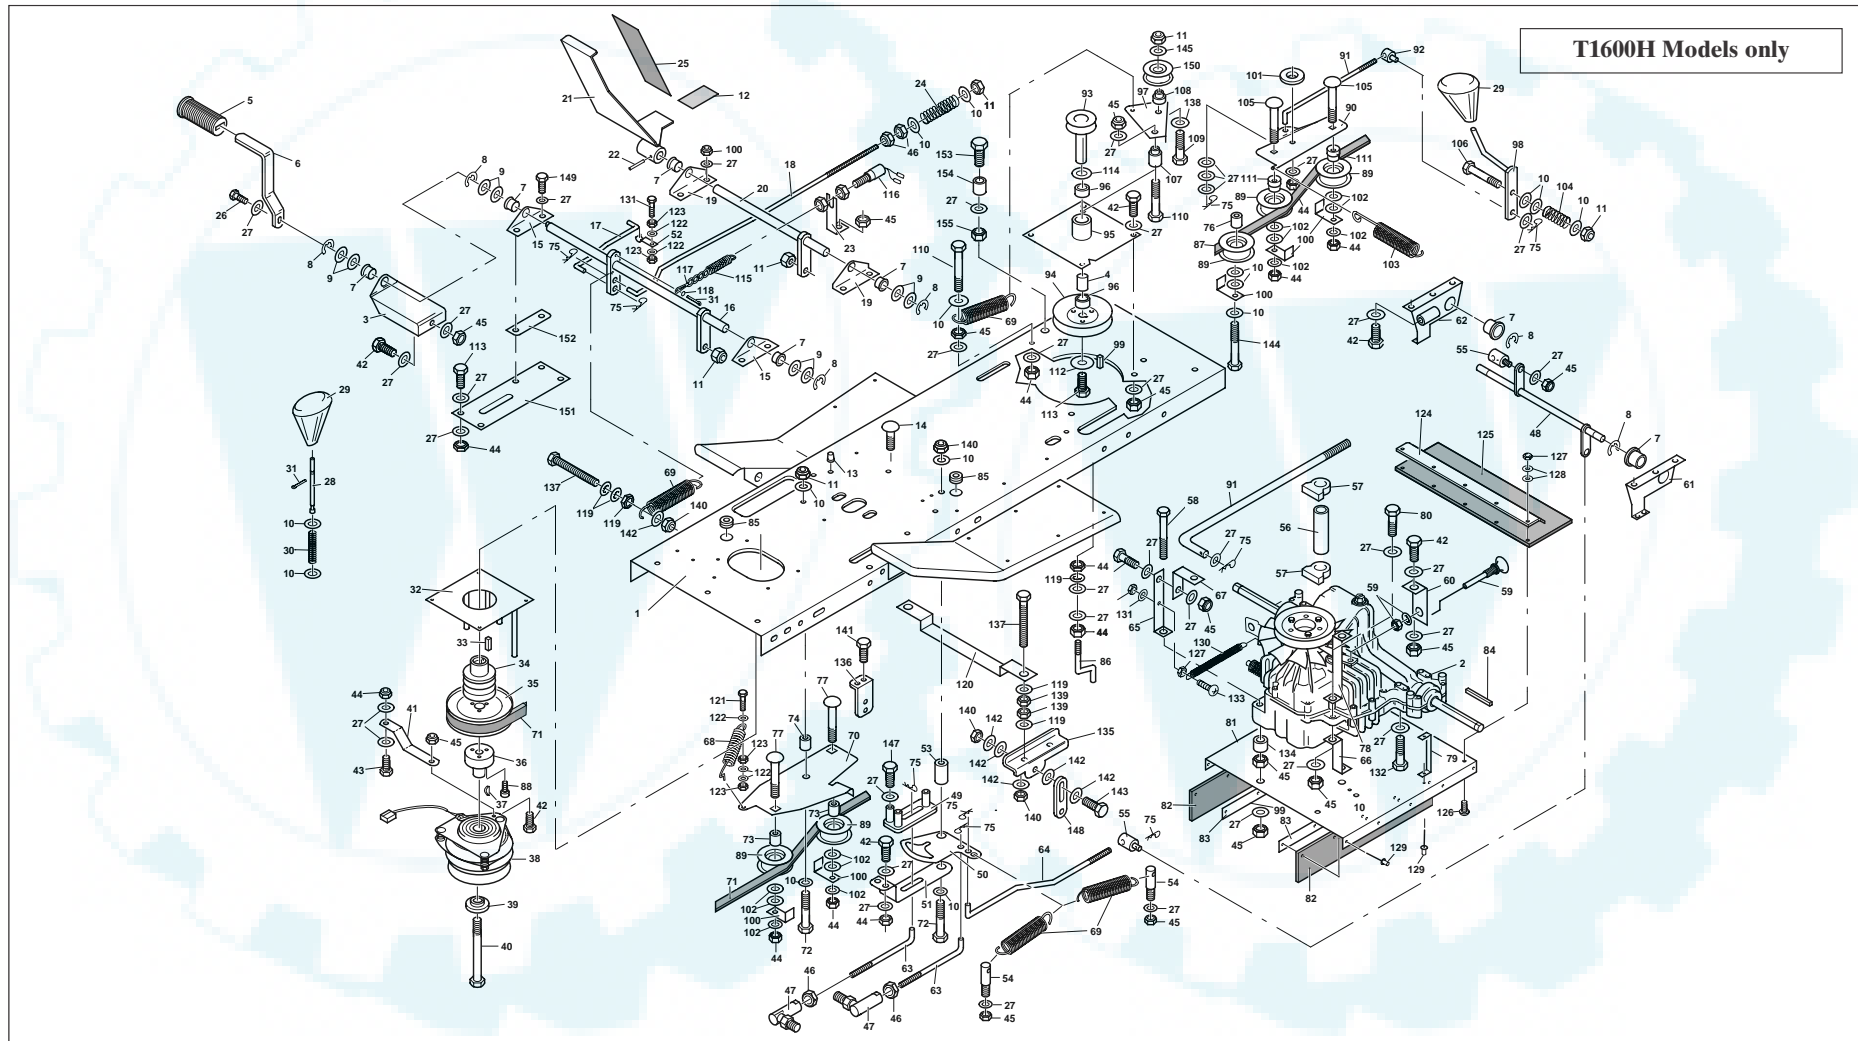

T1600H Models only

A C U T A B O V E T H E C O M P E T I T I O N

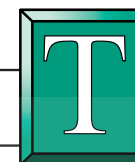

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	RCL584033-00	Chassis	1
2	8350	Gearbox Hydro (Sundstrand)	1
3	7087	Support Pedal Shaft	1
4	9572	Spacer	1
5	8912A	Pedal Rubber	1
6	RCL584358-00	Foot Pedal Lever	1
7	3539	Bush, Nylon	7
8	RCL112-0150	"E" Clip No.1500-62	6
9	009-1630	Washer	8
10	1323	Washer	11
11	1324	Nut	5
12	RCL624005-00	Foot Tread, Small	1
13	MX951	Grommet	1
14	7418	Bolt	1
15	6869	Foot Pedal Shaft Bkt.	2
16	9284	Brake Pedal Shaft Assy.	1
17	9133	Rod Parking Brake	1
18	7824	Brake Rod	1
19	7366	Foot Pedal Shaft Bkt.	2
20	RCL564094-00	Shaft Pedal (Operating)	1
21	RCL564130-00	Foot Pedal Assy.	1
22	MX244	Rollpin (Imperial)	1
23	6394	Bracket Safety Switch (Long)	1
24	6925	Spring	1
25	RCL624004-00	Foot Tread, Large	1
26	4107	Setscrew	1
27	1105	Washer	16
28	7383	Plunger Brake	1
29	2648	Knob	2
30	2003	Spring Park Brake	1
31	1223	Steel Split Pin	3
32	RCL564083-00	Hydro Belt Guide Assy.	1
33	1602	Key	1
34	7662	Pulley Block (Upper)	1
35	1745	Pulley 5" Shallow Form	1

ITEM	PART NO.	DESCRIPTION	QTY
36	7267	Pulley Block (Lower)	1
37	3728	Woodruff Key	1
38	7259	Clutch Electric "T" Series	1
39	8552	Shouldered Plug	1
40	027-11127	Bolt	1
41	7090	Brace Electromagnetic Clutch	1
42	1982	Setscrew	20
43	RCL030-0825	Setscrew	1
44	RCL090-08	Nut	8
45	1273	Nut	18
46	3792	Locknut	4
47	6487	Ball Joint, Right Hand	2
48	9494	Lay Shaft Assembly T1600H	1
49	RCL564088-00	Rod Guide Assy.	1
50	7797	Neutral Quadrant	1
51	RCL584187-00	Rod Guide, Long	1
52	9134	Parking Brake Rod Support Bkt.	1
53	RCL584188-00	Neutral Quadrant Boss	1
54	3995	Hinge Pillar	2
55	1695	Swivel	1
56	8767	Vent Hose	1
57	8765	Hose Clip SNP 14	2
58	1312	Bolt	2
59	8731	Dump Valve Cable	1
60	8684	Dump Valve Cable Support Bkt.	1
61	8727	TX Support Bkt., Rear Left Hand	1
62	8726	TX Support Bkt., Rear Right Hand	1
63	6867	Neutral Gear Rod	2
64	9495	Operating Control Rod (Foot)	1
65	8681	TX Support Bkt., Front Right Hand	1
66	8682	Grass Deflector Support Bkt., Front LH	1
67	8683	TX Support Bkt., Front Right Hand (Upper)	1
68	M4027	Spring	1
69	2103	Clutch Spring	4
70	9135	Jockey Plate	1

ITEM	PART NO.	DESCRIPTION	QTY
71	7239	Belt, Transmission A81	1
72	RCL030-1065	Setscrew	1
73	8687	Bush, Jockey Pulley	2
74	6812	Bush, Jockey Arm Pivot	1
75	4086	"R" Clip, Small	8
76	5478	Spacer, Jockey Pulley	1
77	RCL074-0860	Bolt	2
78	8680	TX Support Bkt., Front Left Hand	1
79	6905	Grass Deflector Support Bkts. Rear	2
80	1318	Bolt	1
81	8812	TX Grass Deflector	1
82	7986	Rubber Flap	2
83	8813	Retaining Strip	2
84	RCL 812000-00	Drive Key	2
85	4152	Grommet, Open Chassis	3
86	6662	Belt Guide Pin	2
87	7726	Belt, PTO (A84%)	1
88	7833	Screw	3
89	9488	Jockey Pulley	6
90	8310	Jockey Plate PTO	1
91	7107	Rod Adjustable PTO	2
92	6817	Swivel Adjuster Rod	1
93	9569	PTO Pulley Assembly	1
94	8337	Pulley Assy 5"	1
95	9567	PTO Bearing Housing	1
96	3229	Bearing	2
97	8232	Plate Jockey Pulley	1
98	8538	Lever, PTO Engage	1
99	MX1285	Key, Long	1
100	5735	Belt Guide	5
101	8418	Spacer Jockey Plate	1
102	3613	Washer	8
103	2594	Spring	1
104	1613	Spring	1
105	RCL074-0845	Bolt	2

A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis, PTO, Brake & Cutter Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
106	7285	Bolt	1
107	9571	Spacer	1
108	8340	Spacer	1
109	1200	Bolt	1
110	1978	Bolt	4
111	8220	Shouldered Spacer, Jockey Pulley	2
112	017-0802	Washer	1
113	RCL048-0820	Bolt	1
114	RCL016-1601	Washer	2
115	3463	Spring	1
116	3414	Switch, Brake & Cutter Deck Safety	1
117	2592	Chain	Links as req
118	1067	Washer	2
119	RCL013-1001	Washer	10
120	9291	Support Bkt.	1
121	1156	Setscrew	1
122	1331	Washer	3
123	1270	Nut	2
124	4233	Retaining Strip (Plated)	1
125	4220	Rubber Flap	1
126	1734	Screw	5
127	1053	Nut	6
128	1962	Washer	10
129	4098	Pop Rivets	12
130	8720	Spring	1
131	4105	Bolt	1
132	1978	Bolt	4
133	1735	Screw	1
134	3329	Spacer	1
135	9302	Hanger Bkt., Left Hand	1
*	9303	Hanger Bkt., Right Hand	1
136	9304	Hanger Bkt., Front	2
137	6213	Setscrew	5
138	RCL011-1001	Washer	1
139	RCL061-10	Nut	9

ITEM	PART NO.	DESCRIPTION	QTY
140	RCL090-10	Nut	17
141	5850	Setscrew	4
142	RCL017-1003	Washer	31
143	RCL048-1035	Setscrew	4
144	7760	Bolt	1
145	2847	Washer	2
146	RCL030-0820	Bolt	3
147	RCL030-0825	Bolt	2
148	8915	Lifting Link	4
149	RCL048-0825	Setscrew	4
150	5822	Pulley	1
151	RCL584029-00	Adaptor Plate (Hydro)	1
152	RCL584165-00	Spacer (Hydro)	1
153	RCL029-0840	Bolt	1
154	9573	Stop	1
155	RCL084-08	Nut	1
156	9572	Spacer	1


* Not Shown

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

A C U T A B O V E T H E C O M P E T I T I O N




Tractor Chassis, PTO, Brake & Cutter Controls

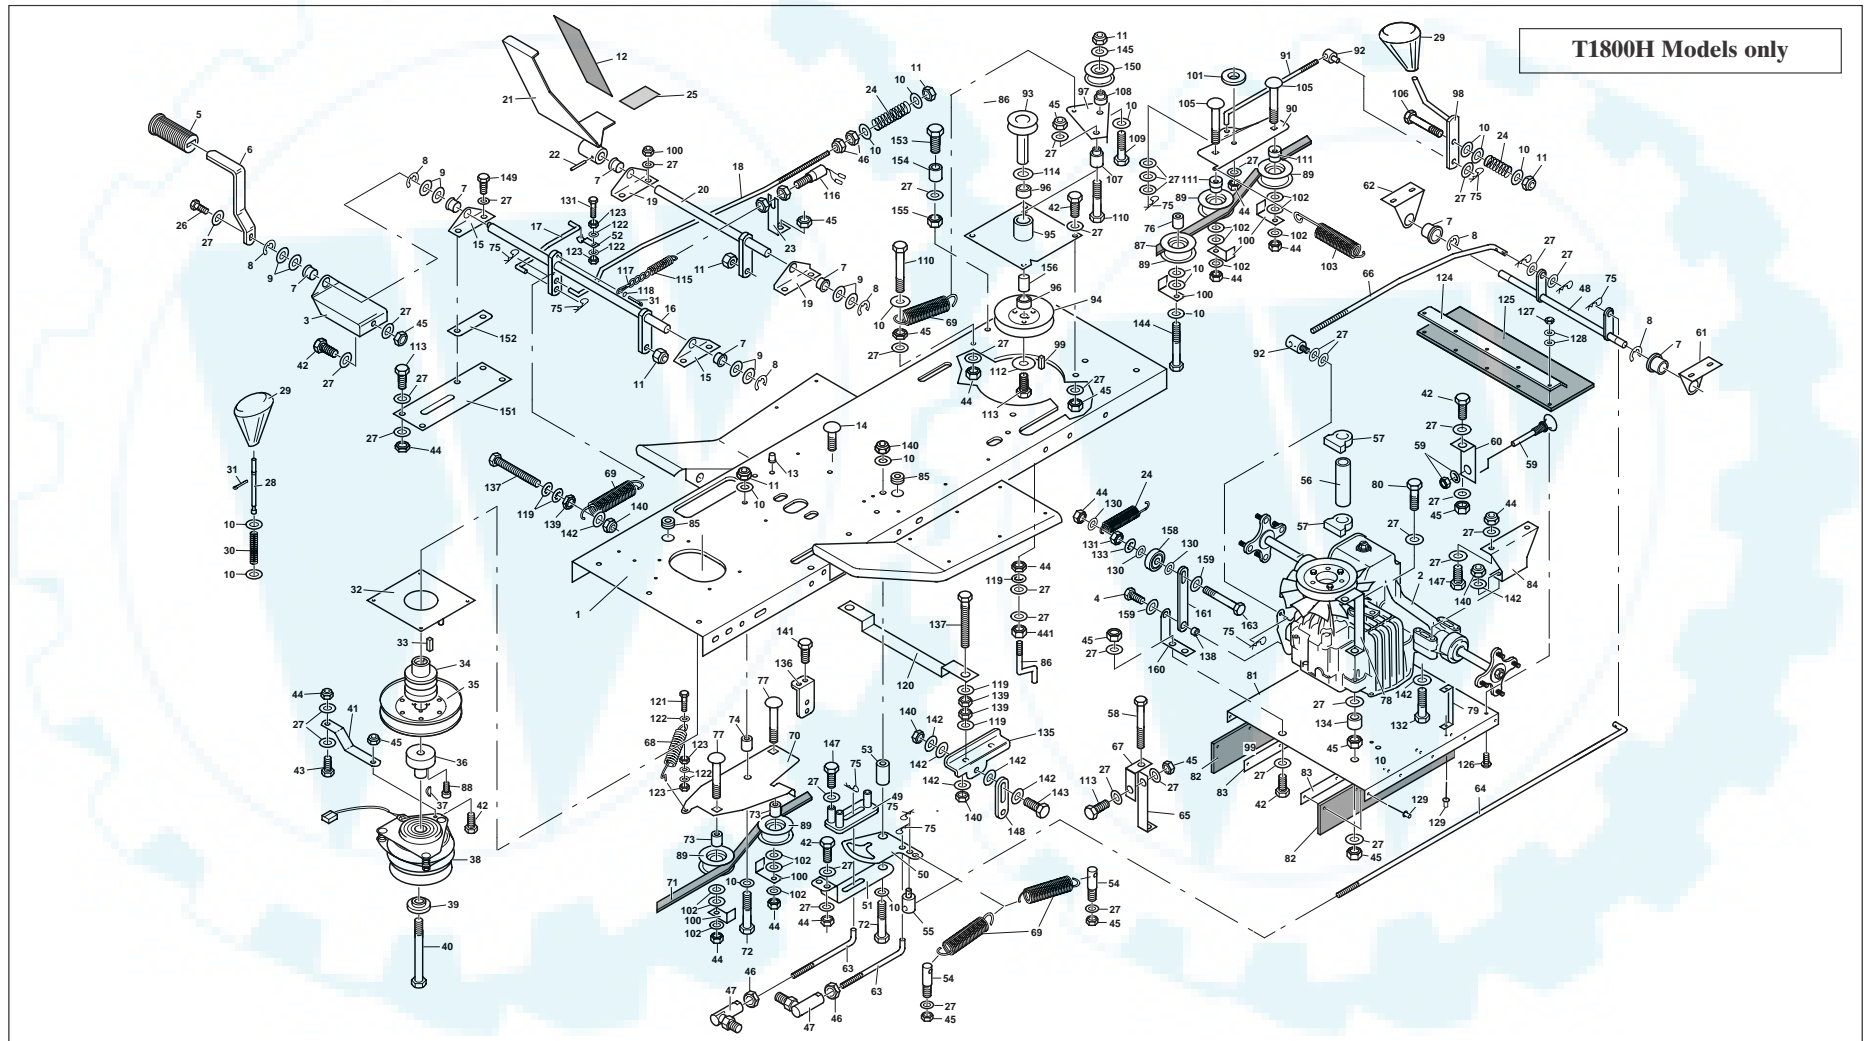

T1800H Models only

A C U T A B O V E T H E C O M P E T I T I O N

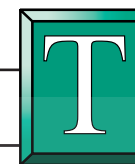

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	RCL584033-00	Chassis	1
2	RCL120002-00	Gearbox Hydro (Sundstrand)	1
*	9502	Fan, Hydro	1
*	9501	Pulley, Hydro	1
3	7087	Support Pedal Shaft	1
4	2031	Setscrew	1
5	8912A	Pedal Rubber	1
6	RCL584358-00	Brake Lever Pedal	1
7	3539	Bush, Nylon	7
8	RCL112-0120	"E" Clip No.1500-62	6
9	009-1630	Washer	8
10	1323	Washer	11
11	1324	Nut	5
12	RCL624004-00	Tread, Large	1
13	MX951	Grommet	1
14	7418	Bolt	1
15	6869	Foot Pedal Shaft Bkt.	2
16	9284	Brake Pedal Shaft Assy.	1
17	9133	Rod Parking Brake	1
18	RCL584180-00	Brake Rod	1
19	7366	Foot Pedal Shaft Bkt.	2
20	RCL564094-00	Shaft Pedal (Operating)	1
21	RCL564130-00	Hydro Pedal Assembly	1
22	RCL117-0532	Rollpin (Imperial)	1
23	6394	Bracket Safety Switch (Long)	1
24	RCL894001-00	Spring	2
25	RCL624005-00	Tread, Small	1
26	4107	Setscrew	1
27	1105	Washer	16
28	7383	Plunger Brake	1
29	2648	Knob	2
30	2003	Spring Park Brake	1
31	1223	Steel Split Pin	3
32	RCL564320-00	Hydro Belt Guide Assy.	1
33	1602	Key	1

ITEM	PART NO.	DESCRIPTION	QTY
34	7662	Pulley Block (Upper)	1
35	3750	Pulley 7" Deep Form-Spaced	1
36	7267	Pulley Block (Lower)	1
37	3728	Woodruff Key	1
38	7259	Clutch Electric "T" Series	1
39	8552	Shouldered Plug	1
40	027-11127	Bolt	1
41	7090	Brace Electromagnetic Clutch	1
42	1982	Setscrew	20
43	RCL030-0825	Setscrew	1
44	RCL090-08	Nut	12
45	1273	Nut	18
46	3792	Locknut	4
47	6487	Ball Joint, Right Hand	2
48	RCL564082-00	Lay Shaft Assembly T1800H	1
49	RCL564088-00	Rod Guide Assy.	1
50	7797	Neutral Quadrant	1
51	RCL584187-00	Rod Guide, Long	1
52	9134	Parking Brake Rod Support Bkt.	1
53	RCL584188-00	Neutral Quadrant Boss	1
54	3995	Hinge Pillar	2
55	1695	Swivel, Adjuster	1
56	8767	Vent Hose	1
57	8765	Hose Clip SNP 14	2
58	1312	Bolt	2
59	8731	Dump Valve Cable	1
60	8684	Dump Valve Cable Support Bkt.	1
61	RCL584179-00	TX Support Bkt., Rear Left Hand	1
62	RCL584178-00	TX Support Bkt., Rear Right Hand	1
63	6867	Neutral Gear Rod	2
64	RCL584182-00	Operating Control Rod (Foot)	1
65	8681	TX Support Bkt., Front Right Hand	1
66	RCL584181-00	Control Rod	1
67	8683	TX Support Bkt., Front Right Hand (Upper)	1
68	M4027	Spring	1

ITEM	PART NO.	DESCRIPTION	QTY
69	2103	Clutch Spring	4
70	9135	Jockey Plate	1
71	6888	Belt Transmission A83	1
72	RCL030-1065	Setscrew	1
73	8687	Bush, Jockey Pulley	2
74	6812	Bush, Jockey Arm Pivot	1
75	4086	"R" Clip, Small	8
76	5478	Spacer, Jockey Pulley	1
77	RCL074-0860	Bolt	2
78	RCL584183-00	TX Support Bkt., Front Left Hand	1
79	7892	Grass Deflector Support Bkts. Rear	2
80	1318	Bolt	1
81	8812	TX Grass Deflector	1
82	RCL624003-00	Rubber Flap	2
83	8813	Retaining Strip	2
84	RCL584167-00	TX Support Bkts	2
85	4152	Grommet, Open Chassis	3
86	RCL584202	Belt Guide Pin	2
87	7726	Belt, PTO (A84½)	1
88	7833	Screw	3
89	9488	Jockey Pulley	6
90	8310	Jockey Plate PTO	1
91	7107	Rod Adjustable PTO	1
92	6817	Swivel Adjuster Rod	2
93	9569	PTO Pulley Assembly	1
94	8337	Pulley Assy 5"	1
95	9567	PTO Bearing Housing	1
96	3229	Bearing	2
97	8232	Plate Jockey Pulley	1
98	8538	Lever, PTO Engage	1
99	MX1285	Key, Long	1
100	5735	Belt Guide	5
101	8418	Spacer Jockey Plate	1
102	3613	Washer	8
103	2594	Spring	1

A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis, PTO, Brake & Cutter Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
104	RCL030-0840	Bolt	1
105	RCL074-0845	Bolt	2
106	7285	Bolt	1
107	9571	Spacer	1
108	8340	Spacer	1
109	1200	Bolt	1
110	1978	Bolt	4
111	8220	Shouldered Spacer, Jockey Pulley	2
112	017-0802	Washer	1
113	RCL048-0820	Set Bolt	1
114	RCL016-1601	Washer	2
115	3463	Spring	1
116	3414	Switch Brake & Cutter Deck Safety	1
117	2592	Chain	Links as req
118	1067	Washer	2
119	RCL013-1001	Washer	12
120	9291	Support Bkt.	1
121	1156	Setscrew	1
122	1331	Washer	3
123	1270	Nut	2
124	4233	Retaining Strip (Plated)	1
125	4220	Rubber Flap	1
126	1734	Screw	5
127	1053	Nut	6
128	1962	Washer	10
129	4098	Pop Rivets	12
130	RCL009-0817	Washer	1
131	RCL061-08	Nut	3
132	RCL030-1080	Bolt	4
133	RCL013-08	Washer	1
134	3329	Spacer	1
135	9302	Hanger Bkt., Left Hand	1
*	9303	Hanger Bkt., Right Hand	1
136	9304	Hanger Bkt., Front	2
137	6213	Setscrew	5

ITEM	PART NO.	DESCRIPTION	QTY
138	RCL584176-00	Pivot Spacer	1
139	RCL061-10	Nut	9
140	RCL090-10	Nut	17
141	5850	Setscrew	4
142	RCL017-1003	Washer	31
143	RCL048-1035	Setscrew	4
144	7760	Bolt	1
145	2847	Washer	2
146	RCL030-0820	Bolt	3
147	RCL030-0825	Bolt	6
148	8915	Lifting Link	4
149	RCL048-0825	Setscrew	4
150	5822	Pulley	1
151	RCL584029-00	Adaptor Plate (Hydro)	1
152	RCL584165-00	Spacer (Hydro)	1
153	RCL029-0840	Bolt	1
154	9573	Stop	1
155	RCL084-08	Nut	1
156	9572	Spacer	1
157	RCL011-1001	Washer	1
158	2445	Bearing	1
159	RCL011-0801	Washer	2
160	RCL584179-00	Bracket	1
161	RCL584087-00	Neutral Arm	1


* Not Shown

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

A C U T A B O V E T H E C O M P E T I T I O N




Tractor Chassis, PTO, Brake & Cutter Controls

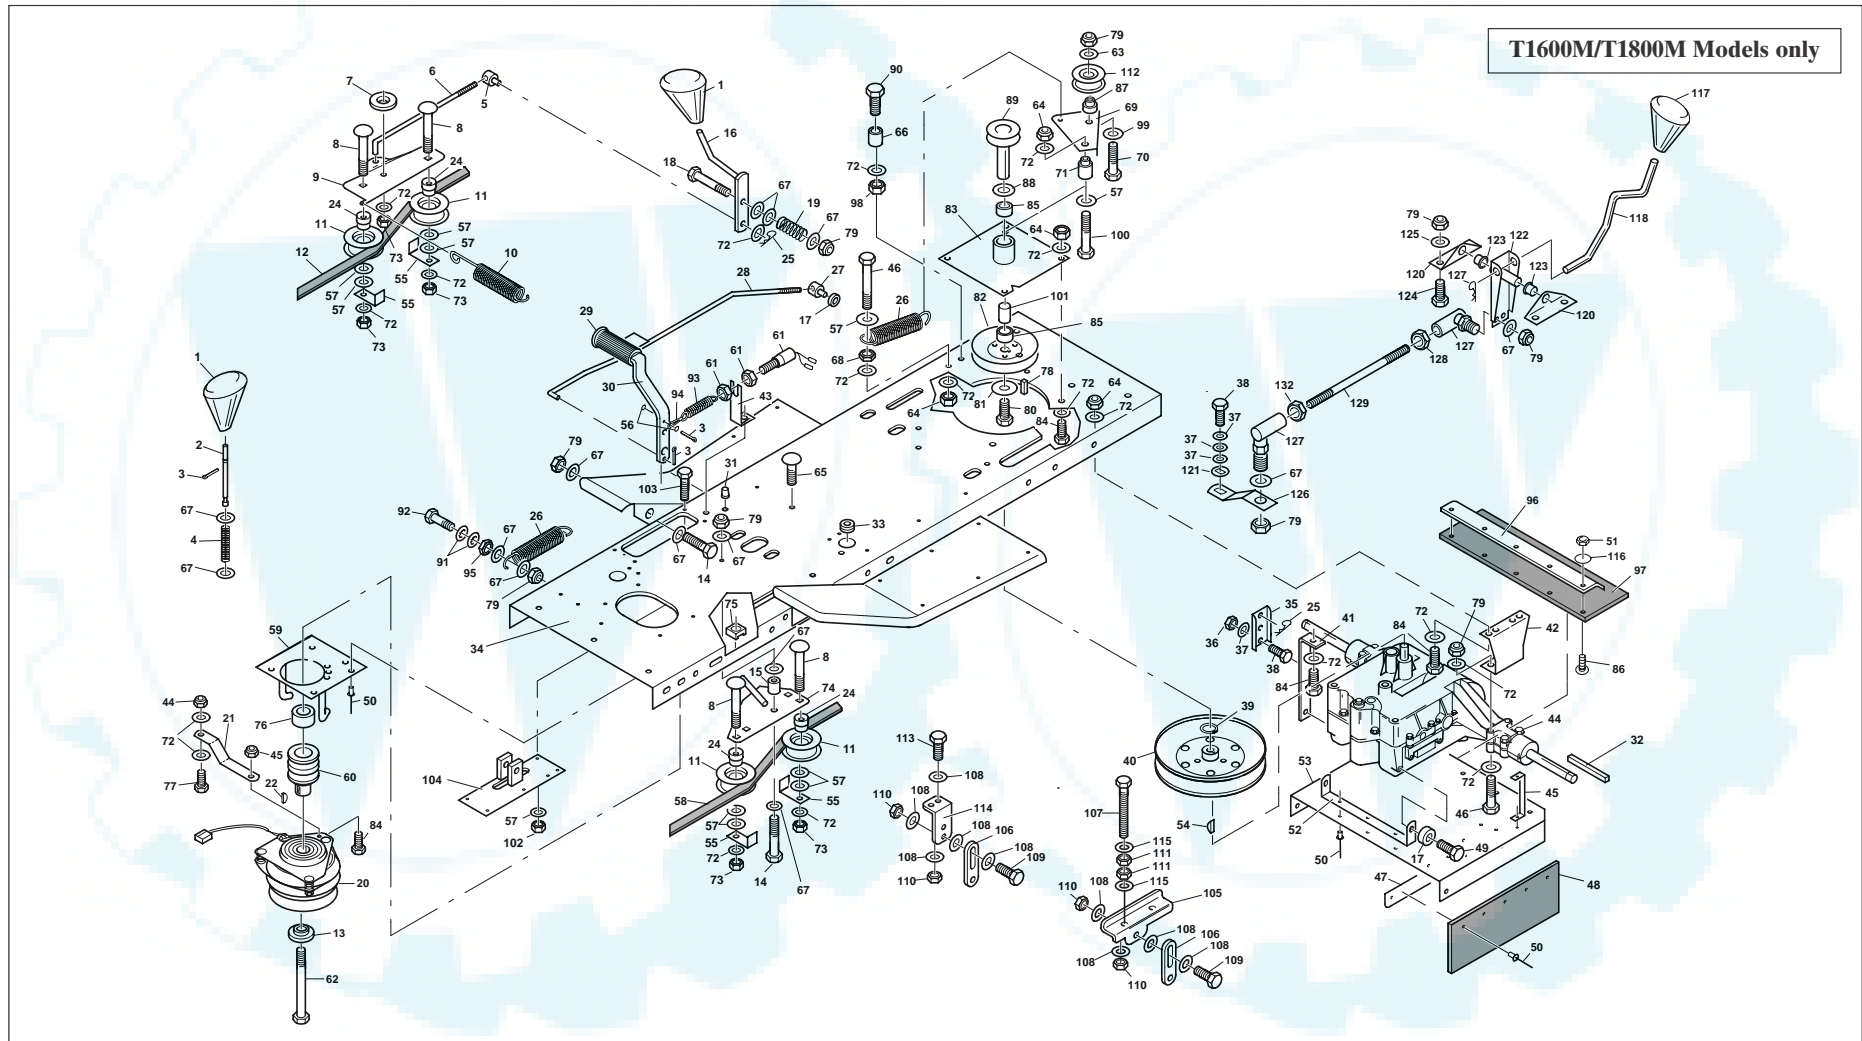

T1600M/T1800M Models only

A C U T A B O V E T H E C O M P E T I T I O N

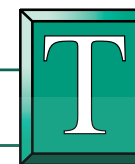

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	2648	Knob	2
2	7383	Plunger Brake	1
3	1223	Split Pin, Steel	2
4	2003	Spring Park Brake	1
5	6817	Swivel Adjuster Rod	1
6	7107	Rod Adjustable	1
7	8418	Spacer, PTO Jockey	1
8	RCL074-0845	Bolt	4
9	8310	Plate PTO Jockey Pulley	1
10	2594	Spring	1
11	9488	Jockey Pulley	5
12	7726	Belt, PTO (A 84%)	1
13	8552	Shouldered Plug	1
14	1319	Bolt	2
15	6812	Bush, Jockey Plate	1
16	8538	Lever, PTO Engage	1
17	8394	Spacer	3
18	7285	Bolt	1
19	1613	Spring	1
20	7259	Clutch Electric "T" Series	1
21	7090	Brace, Electromagnetic Clutch	1
22	3728	Woodruff Key	1
23	2045	Washer	3
24	8220	Shouldered Spacer (Jockey Pulley)	4
25	4086	"R" Clip, Small	2
26	2103	Clutch Spring	2
27	1694	Swivel	
28	8515	Brake Rod	1
29	8912	Foot Pedal Rubber	1
30	8218	Foot Pedal	1
31	MX951	Grommet (S1300-S1600 only)	1
32	RCL 812000-00	Key, Square	2
33	4152	Grommet, Open Chassis	3
34	RCL584033-00	Chassis	1
35	2356	Plate Brake Extension	1

ITEM	PART NO.	DESCRIPTION	QTY
36	1270	Nut	1
37	1331	Washer	4
38	1156	Setscrew	2
39	1996	Circlip	1
40	8295	Pulley Transaxle	1
41	2831	TX Support Bkt., Right Hand Front	2
42	RCL584061-00	TX Support Bkt., Rear	2
43	6394	Bracket Safety Sw. (Long) (Brake)	1
44	2019	Transaxle Heavy Duty 801 (Peerless)	1
45	8393	Support Bkt. Grass Def. Rear	2
46	1978	Bolt	5
47	8813	Side Rubber Retaining Strips	2
48	7986	Flap Rubber (Std. Tractors)	2
49	7286	Screw	2
50	4098	Pop Rivet	15
51	1053	Nut	3
52	3320	Support Bkt. Grass Deflector front	1
53	8812	Grass Deflector	1
54	1104	Key	1
55	5735	Belt Guide	5
56	1067	Washer	3
57	3613	Washer	8
58	1688	Belt Transmission	1
59	RCL564031-00	Belt Guide Plate Assembly	1
60	7088	Eng. Blk	1
61	3414	Switch, Brake & Cutter Dk. Safety	1
62	027-11127	Bolt	1
63	2847	Washer, Jockey Pulley	2
64	1273	Nut	24
65	7418	Bolt	1
66	9573	Stop	1
67	1323	Washer	15
68	1969	Nut	1
69	8232	Plate Jockey Pulley	1
70	1200	Bolt	1

ITEM	PART NO.	DESCRIPTION	QTY
71	9571	Spacer	1
72	1105	Washer	35
73	RCL090-08	Nut	8
74	8236	Jockey Plate	1
75	4309	Nut	2
76	7684	Spacer	1
77	RCL030-0825	Setscrew	1
78	MX1285	Key, Long	1
79	1324	Nut	6
80	RCL048-0820	Bolt	1
81	017-0802	Washer	1
82	8337	Pulley Assembly 5"	1
83	9567	PTO Bearing Housing	1
84	1982	Setscrew	9
85	3229	Bearing	2
86	1734	Screw	5
87	8340	Spacer	1
88	RCL016-1601	Washer	2
89	9569	PTO Pulley Assembly	1
90	RCL029-0840	Bolt	1
91	1633	Washer	2
92	1054	Bolt	1
93	3463	Spring	1
94	2592	Chain	Links as req
95	1422	Nut	1
96	4233	Retaining Strip	1
97	4220	Rubber Flap	1
98	RCL084-08	Nut	1
99	RCL011-1001	Washer	1
100	1321	Bolt	1
101	9572	Spacer	1
102	RCL090-0808	Nut	4
103	RCL048-0820	Setscrew	4
104	RCL564081-00	Adaptor Plate Manual	1
105	9302	Hanger Bkt., Left Hand Rear	1

A C U T A B O V E T H E C O M P E T I T I O N



Tractor Chassis, PTO, Brake & Cutter Controls (Cont.)

ITEM	PART NO.	DESCRIPTION	QTY
*	9303	Hanger Bkt., Right Hand Rear	1
106	8915	Lifting Link	4
107	6213	Setscrew	4
108	RCL017-1003	Washer	30
109	RCL048-1035	Setscrew	8
110	RCL090-10	Nut	16
111	RCL061-10	Nut	8
112	5822	Jockey Pulley	1
113	5850	Setscrew	4
114	9304	Hanger Bracket	2
115	RCL013-1001	Washer	10
116	1962	Washer	10
117	2649	Knob	1
118	9372	Gear Lever	1
119	4086	“R” Clip, Small	1
120	9376	Pivot Bracket	2
121	4242	Washer, TX Gear Change	1
122	9373	Gear Lever Assembly	1
123	3541	Bush, Medium Nylon	2
124	1982	Setscrew	4
125	RCL083-0802	Washer	4
126	6624	Lever, Cranked, 5 Speed	1
127	6487	Ball Joint	2
128	3792	Nut	2
129	9392	Gear Change Rod	1

* Not Shown

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

A C U T A B O V E T H E C O M P E T I T I O N