
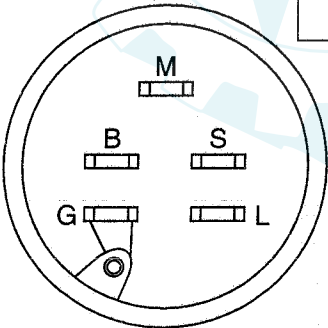


12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

SCHEMATIC

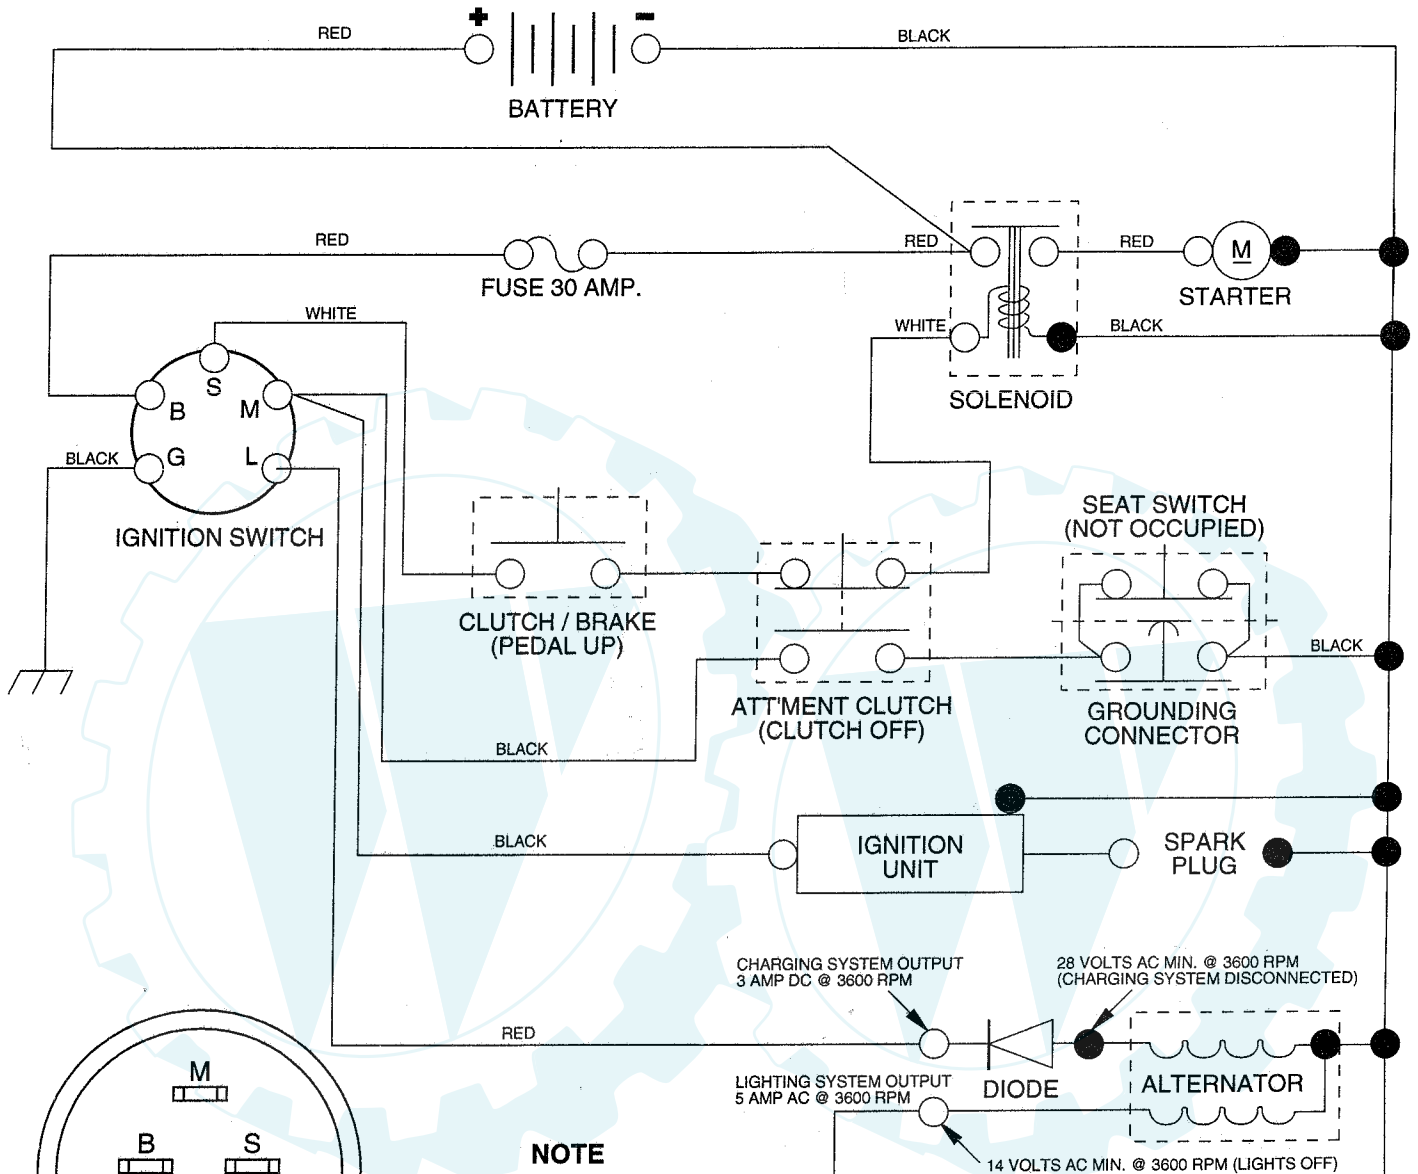


IGNITION SWITCH

POSITION	CIRCUIT
OFF	M + G
ON	B + L
START	B + S

NOTE
 YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

WIRING INSULATED CLIPS



NOTE: If wiring insulated clips were removed for servicing of unit, they should be replaced to properly secure your wiring.



REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

ELECTRICAL

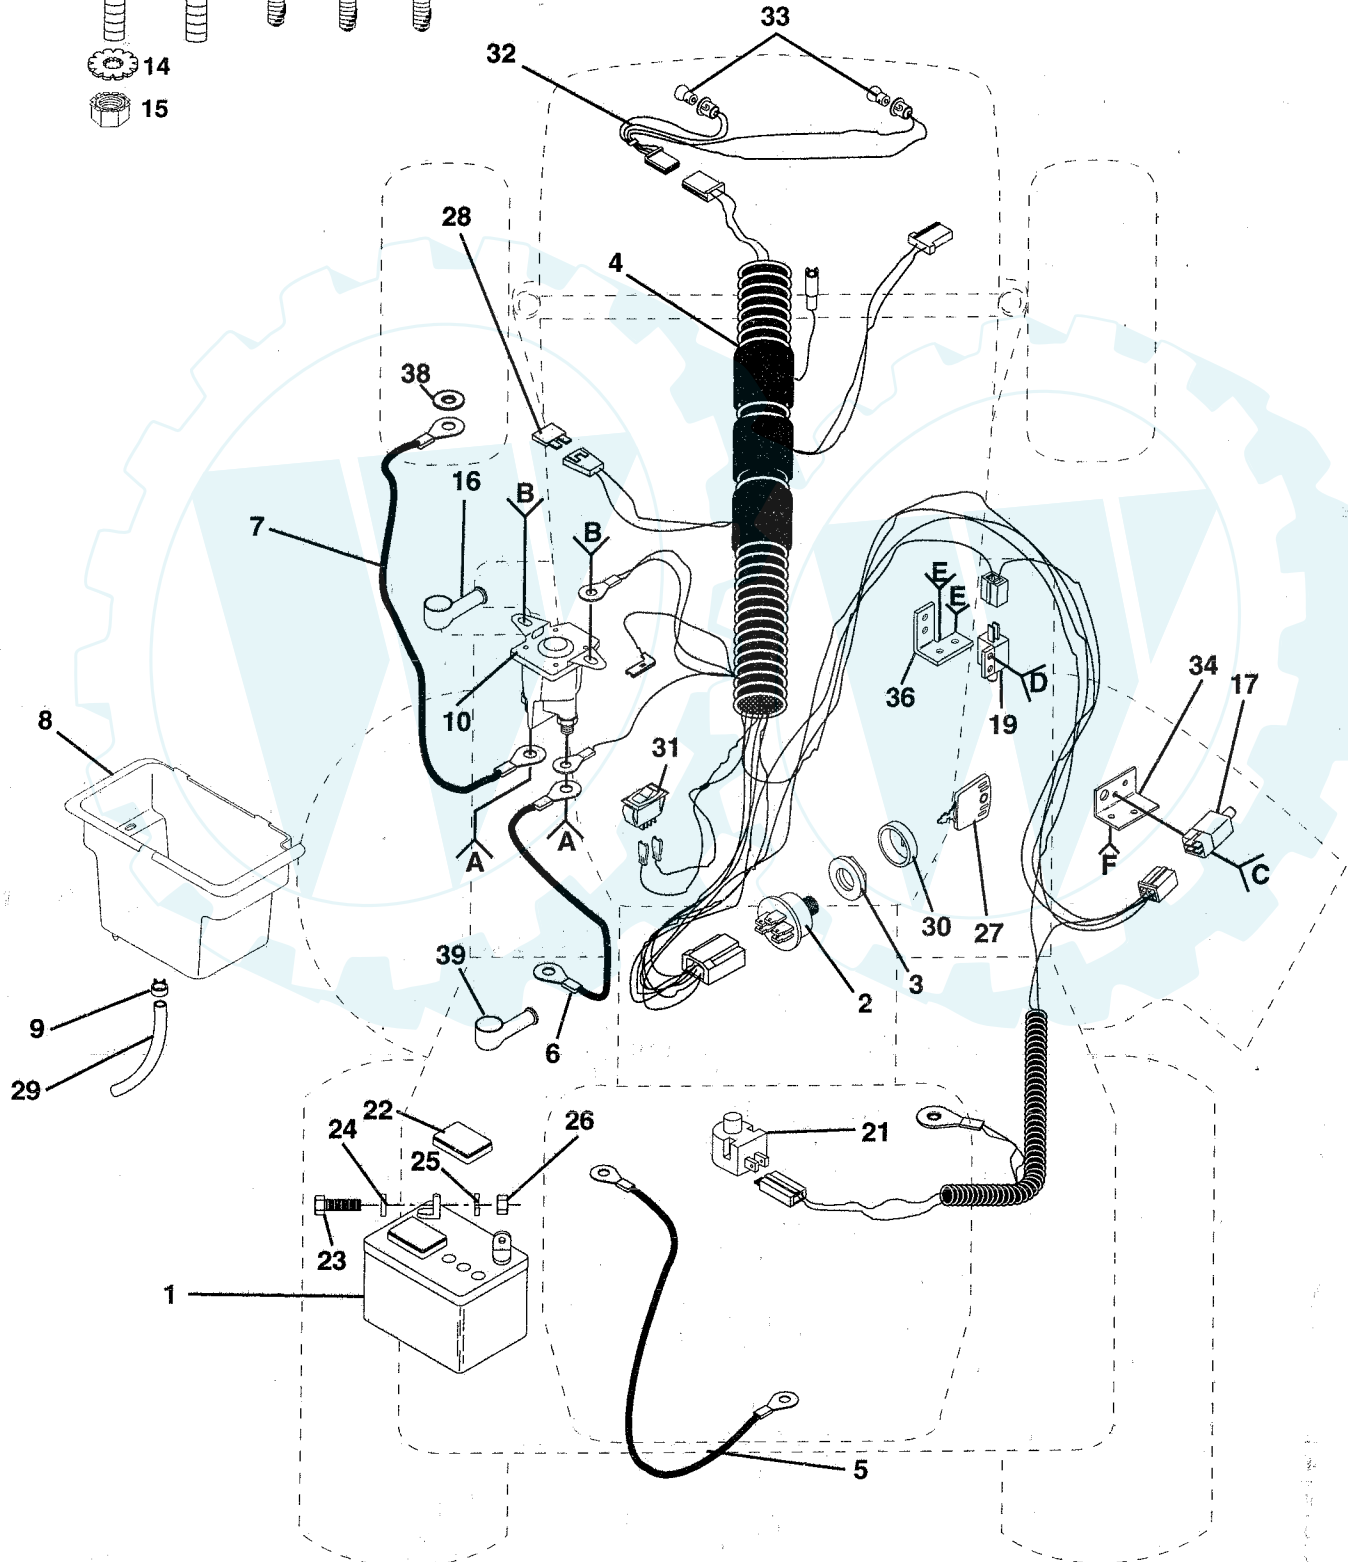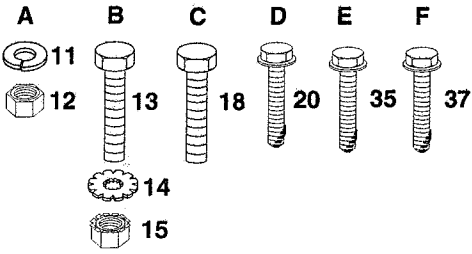

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	121265X	Battery 12 Volt 25 Amp
2	4406R	Switch Ign 5 Term Wo/wash/nut
3	124211X	Nut Ignition
4	132017	Harness Ign Bs/tec Dash HI
5	4207J	Cable Ground 6 Ga 12"black
6	132202	Cable Battery 6 Ga 43"red
7	4799J	Cable Battery 6 Ga 11"red
8	133753	Case Battery W/o Lid
9	109596X	Clamp Hose Olive
10	138406	Solenoid
11	10090400	Washer Lock 1/4
12	73350400	Nut Jam Hex 1/4-20 Unc
13	74780408	Bolt Fin Hex 1/4-20uncx1/2 Gr5
14	11050400	Washer Lock Ext Tooth 1/4
15	73510400	Nut Keps Hex 1/4-20 Unc
16	131563	Cover Terminal Red
17	109553X	Switch Intlk Clutch Gry 4 Term
18	17021008	Screw Tap Hex #10-24unc X 1/2
19	104445X	Switch Intlk Clutch Gry 2 Term
20	17021008	Screw Tap Hex #10-24unc X 1/2
21	121305X	Switch Plunger Nc Gray
22	121264X	Caps Battery 20/25/30 AMP
23	74760412	Bolt Hex Hd 1/4-20unc X 3/4
24	19091016	Washer 9/32 X 5/8 X 16 Ga
25	10040400	Washer Lock Hvy Helical 1/4
26	73220400	Nut Fin Hex 1/4-20 Unc
27	7552H	Key Ign
28	108824X	Fuse 30 AMP Auto Green
29	109238X	Tube Plastic 12"
30	123620X	Cover Sw Key Blk 1 25 Text SLT
31	110712X	Switch Light Blk Blk Red
32	136849	Harness Asm Light W/7662j
33	7662J	Bulb Light #1141
34	108236X	Bracket Switch Clutch
35	17021008	Screw Tap Hex #10-24unc X 1/2
36	130890	Bracket Switch Interlock
37	17021008	Screw Tap Hex #10-24unc X 1/2
38	11150400	Washer Lock Internal Tooth 1/4
39	719J	Cover Terminal Red Vinyl

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

CHASSIS AND ENCLOSURES

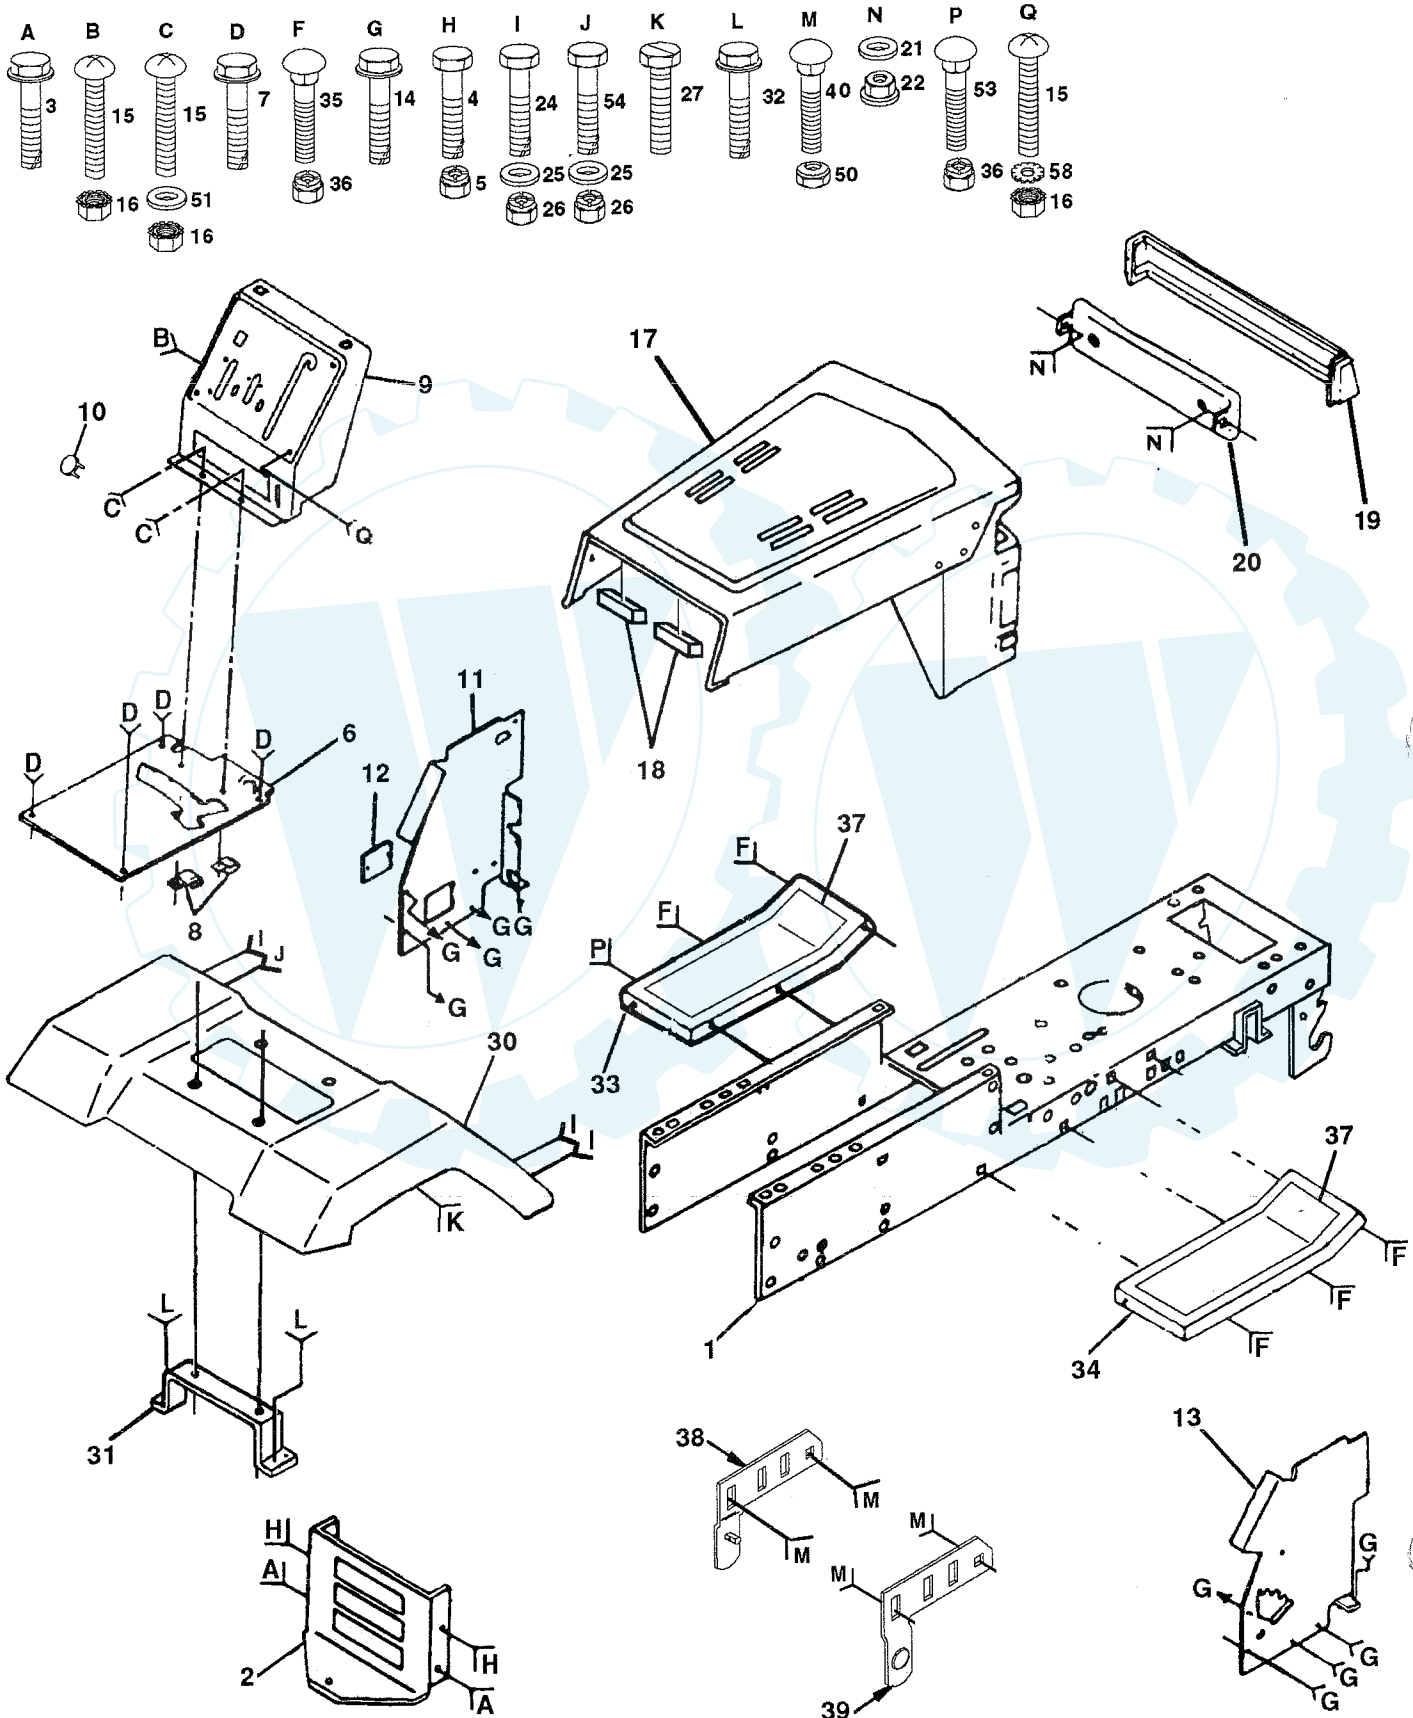

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	135034	Chassis Wldmt 11ga 38/42 W/pvt
2	137275	Drawbar LT/YT 11 Ga
3	17490612	Screw Thdrol 3/8-16x3/4 Ty-tt
4	74760612	Bolt Fin Hex 3/8-16unc X 3/4
5	73680600	Nut Crownlock 3/8-16 Unc
6	124466X019	Saddle Silkscreen W/o HGT Adj
7	17490608	Screw Thdrol 3/8-16x1/2 Ty-tt
8	2751R	Clip Line Fuel 13/32 Mtg Hole
9	137411X016	Dash 1-pc M W/i N/c Sym
10	5479J	Plug Button Blk 359 Dia Choke
11	122795X	Panel Dash LH
12	121794X	Cover Access Black Square
13	124031X	Panel Dash RH Weldment
14	17490608	Screw Thdrol 3/8-16x1/2 Ty-tt
15	74180512	Screw Mach TRHD 5/16-18uncx3/4
16	73510500	Nut Keps 5/16-18 Unc
17	133956X505	Hood/grille Asm Pnt Welded
18	126938X	Bumper Hood
19	133805	Lens Grille HI Bar Clear
20	132257	Bezel Light Lt
21	19091216	Washer 9/32 X 3/4 X 16 Ga
22	108067X	Nut Pal
24	74760612	Bolt Fin Hex 3/8-16unc X 3/4
25	19131312	Washer 13/32 X 13/16 X 12 Ga
26	73680600	Nut Crownlock 3/8-16 Unc
27	17490608	Screw Thdrol 3/8-16x1/2 Ty-tt
30	109872X505	Fender Pnt LT W/o Shift(red)
31	136619	Bracket Fender Repl 109873x
32	17490612	Screw Thdrol 3/8-16x3/4 Ty-tt
33	105465X505	Footrest Pnt LH Ms-505
34	105464X505	Footrest Pnt RH Ms-505
35	72110606	Bolt Rdhd Sht Sqnk 3/8-16 X3/4
36	73680600	Nut Crownlock 3/8-16 Unc
37	131864	Pad Footrest Abrasive LT
38	134618	Bracket Asm Pvt38 LH MWR Rear
39	134617	Bracket Asm Pvt38 RH MWR Rear
40	72140608	Bolt Rdhd Sqnk 3/8-16unc X1
50	73800600	Nut Lock Hex W/wsh 3/8-16unc
51	19131216	Washer 13/32 X 3/4 X 16 Ga
53	72140608	Bolt Rdhd Sqnk 3/8-16unc X 1
54	74760614	Bolt Fin Hex 3/8-16unc X 7/8
58	11050600	Washer Lock Ext. Tooth 3/8

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

DRIVE

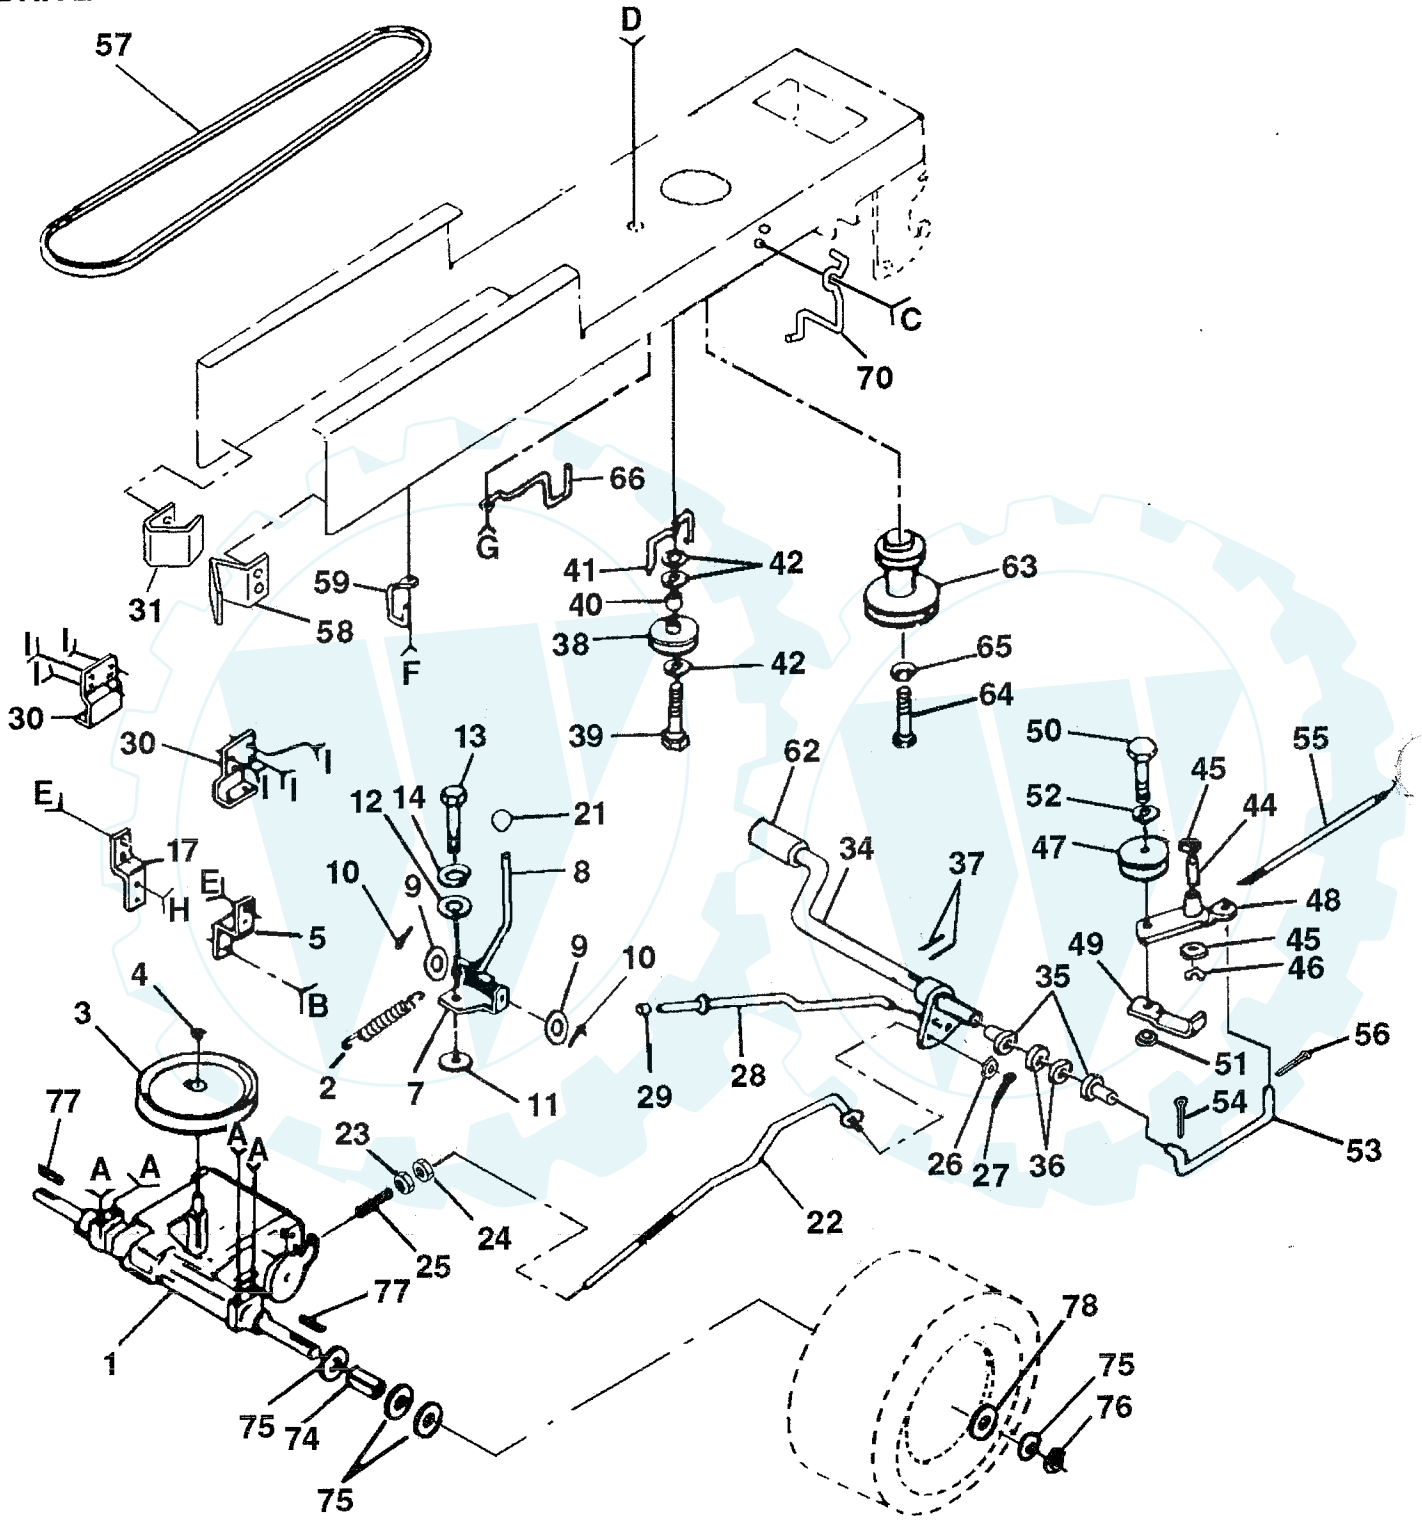

- | A | B | C | D | E | F | G | H | I |
|-----|---|----|----|----|----|----|----|----|
| 15 | 6 | 71 | 43 | 18 | 61 | 67 | 20 | 32 |
| 100 | | 72 | | 19 | 60 | 68 | | 33 |
| 16 | | 73 | | | | 69 | | |

Der Ersatzteilspezialist im Internet.

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	137361	Transaxle 4 Sp Dana Model Number 4360-46	40	4470J	Spacer Split 395 X 59 Bzp
2	110422X	Spring Return Brake	41	109070X	Keeper Belt Retainer
3	123666X	Pulley Transaxle	42	19131312	Washer 13/32 X 13/16 X 12 Ga
4	12000028	Ring Retainer	43	73680600	Nut Crownlock 3/8-16 Unc
5	121520X	Strap Torque 30 Degrees	44	105706X	Bearing Nyl 503 X 628 X 1 25
6	17490512	Screw Thdrol 5/16-18 X 3/4 TYT	45	110812X	Washer Hardened
7	106919X	Plate Rod Shift T/a	46	12000039	Ring Klip #t5304-50
8	124461X	Rod Shift Blk Dana	47	127783	Pulley Idler V Groove Plastic
9	19151216	Washer 15/32 X 3/4 X 16 Ga	48	123789X	Bellcrank Asm Clutch
10	76020416	Pin Cotter 1/8 X 1 Cad	49	123205X	Retainer Belt Style Spring
11	105701X	Washer Plate Shf 388 Sq Hole	50	74760624	Bolt Hex Hd 3/8-16unc X 1-1/2
12	19091210	Washer 9/32 X 3/4 X 10 Ga	51	73680600	Nut Crownlock 3/8-16 Unc
13	71040412	Bolt Fin Hex 1/4-28unfx3/4 Gr8	52	19131316	Washer 13/32 X 13/16 X 16 Ga
14	10040400	Washer Lock Hvy Helical 1/4	53	105710X	Link Clutch 7 66
15	74760644	Bolt Hex 3/8-16 x 2-3/4	54	76020412	Pin Cotter 1/8 X 3/4 Cad
16	73680600	Nut Crownlock 3/8-16 UNC	55	105709X	Spring Return Clutch 6 75
17	121520X	Strap Torque 30 Degrees	56	76020412	Pin Cotter 1/8 X 3/4 Cad
18	74760612	Bolt Fin Hex 3/8-16unc X 3/4	57	125907X	V-Belt Ground Drive 90 00
19	73680600	Nut Crownlock 3/8-16 Unc	58	127274X	Keeper Belt RH LT Pnt/zinc 16g
20	17490512	Screw Thdrol 5/16-18 X 3/4 TYT	59	136715	Keeper Belt Chassis Span Ctr
21	106933X	Knob Rd 1/2-13 Plstc Thds Blk	60	19131312	Washer 13/32 X 13/16 X 12 Ga
22	131867	Rod Brake LT	61	17490612	Screw Thdrol 3/8-16x3/4 Ty-tt
23	73800600	Nut Lock Hex W/wsh 3/8-16unc	62	8883R	Cover Pedal Blk Round
24	73350600	Nut Hex Jam 3/8-16 Unc	63	134825	Engine Pulley LT/YT
25	106888X	Spring Rod Brake 2 00 Zinc	64	71170764	Bolt Hex 7/16-20x4 Gr 5
26	19131316	Washer 13/32 X 13/16 X 16 Ga	65	10040700	Washer Lock Hvy Hlcl Spr 7/16
27	76020412	Pin Cotter 1/8 X 3/4 Cad	66	129921	Keeper Belt Engine LH LT
28	128904	Rod Brake Parking LT	67	74760616	Bolt Fin Hex 3/8-16unc X 1
29	71673	Cap Brake Parking Black	68	19131312	Washer 13/32 X 13/16 X 12 Ga
30	109167X	Bracket Transmission	69	73680600	Nut Crownlock 3/8-16 Unc
31	127275X	Keeper Belt LH LT 14 Ga	70	134683	Guide Belt Mower Drive RH
32	74760616	Bolt Fin Hex 3/8-16unc X 1"	71	74760616	Bolt Fin Hex 3/8-16unc X 1
33	73680600	Nut Crownlock 3/8-16 Unc	72	19132012	Washer 13/32 X 1-1/4 X 12 Ga
34	122424X	Shaft Asm Pedal Foot 1 930	73	73680600	Nut Crownlock 3/8-16 Unc
35	120183X	Bearing Nylon Blk 629 Id	74	109502X	Spacer Axle
36	19211616	Washer 21/32 X 1 X 16 Ga	75	121749X	Washer 25/32 X 1 1/4 X 16 Ga
37	1572H	Pin Roll 3/16 X 1"	76	12000001	E-ring #5133-75
38	123674X	Pulley Idler Flat	77	123583X	Key Square 2 0 X 1845/ 1865
39	74760644	Bolt Fin Hex 3/8-16unc X 2-3/4	78	121748X	Washer 25/32 X 1-5/8 X 16 Ga
			100	19131216	Washer 13/32 x 3/4 x 16. Ga.

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

STEERING ASSEMBLY

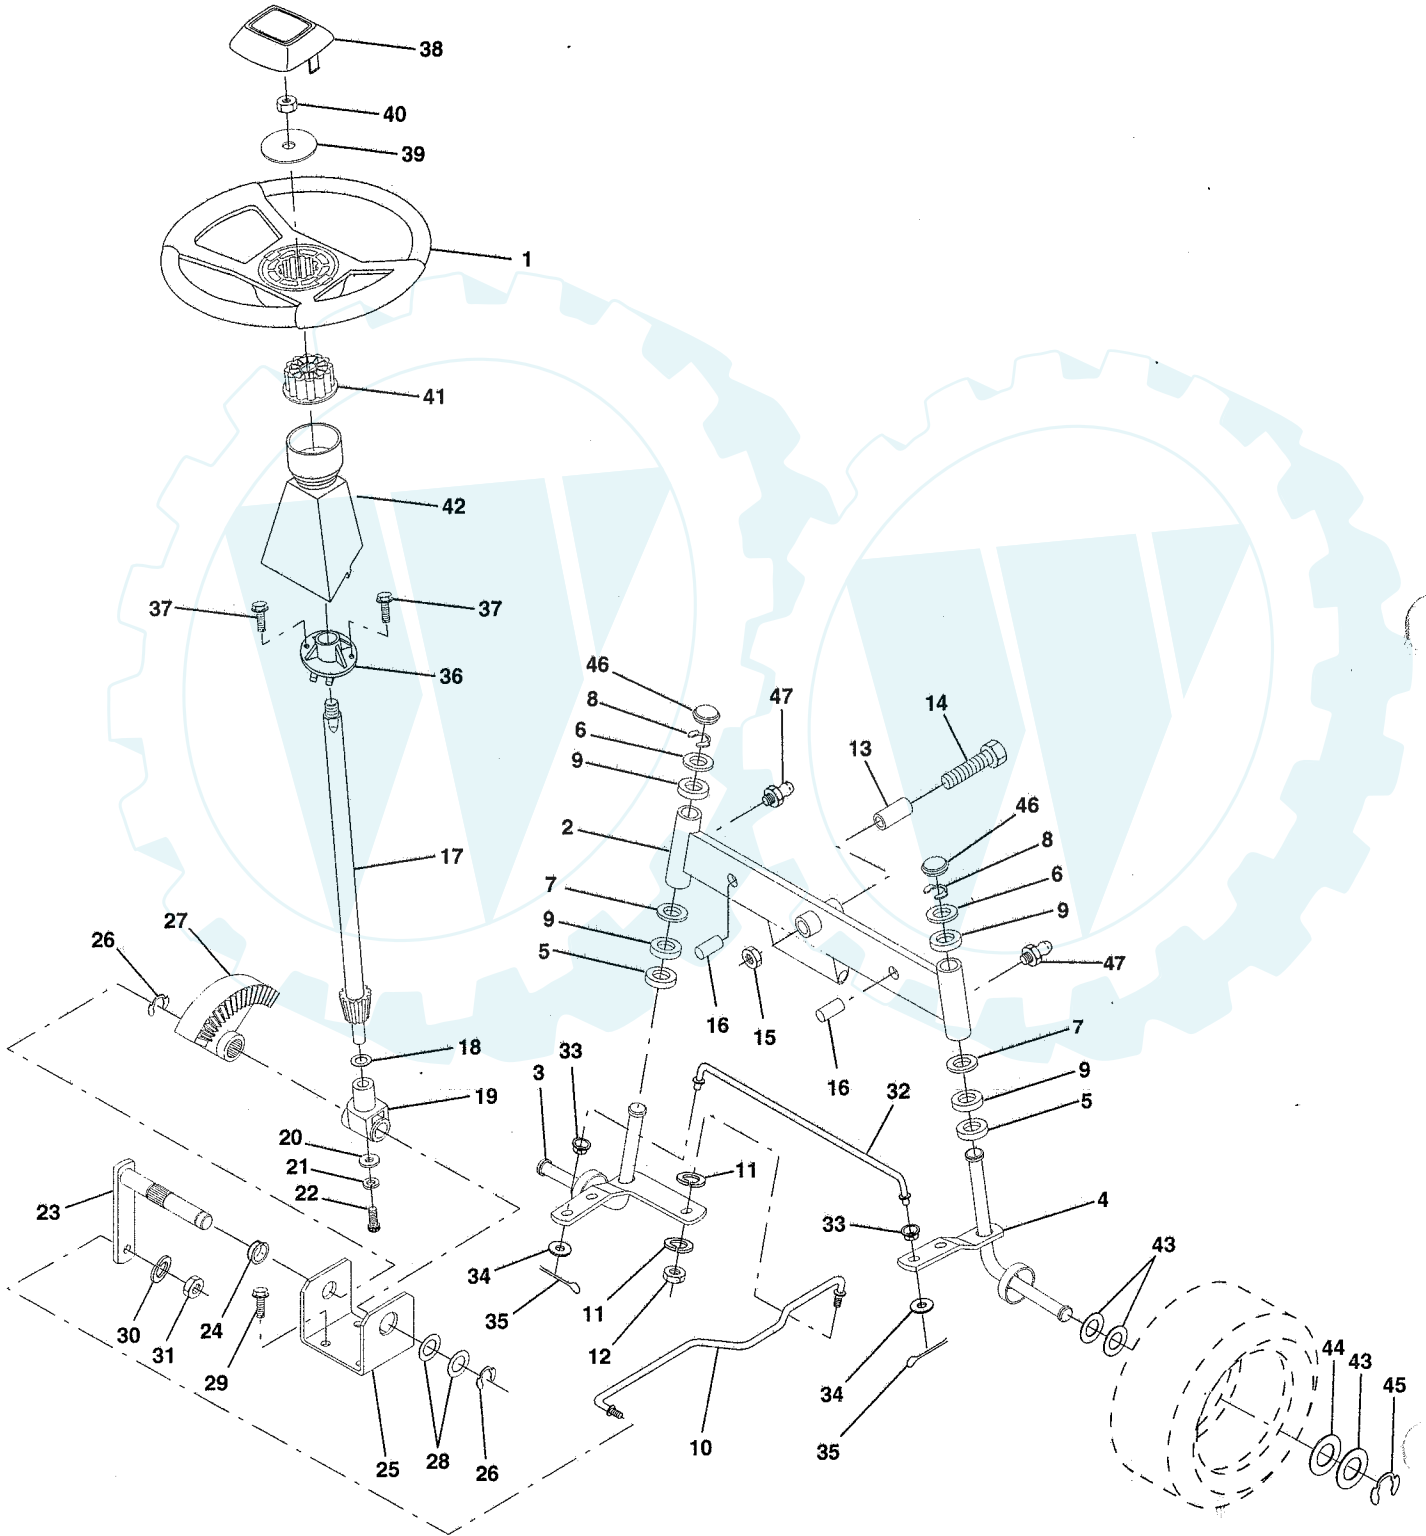

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	133741	Wheel Steering Ayp/kelch Blk
2	133988	Axle Asm Fr LT W/gzks 38/42
3	135227	Spindle Asm LH
4	135228	Spindle Asm RH
5	6266H	Bearing Race Thrust Harden
6	121748X	Washer 25/32 X 1-5/8 X 16 Ga
7	19272016	Washer 27/32 X 1-1/4 X 16 Ga
8	12000029	Ring Klip #t5304-75
9	3366R	Bearing Col Strg Blk
10	130468	Link Drag Sol Ball Jt 20 064
11	10040600	Washer Lock Hvy Hlcl Spr 3/8
12	73610600	Nut Fin Hex 3/8-24 Unf
13	110438X	Spacer Bearing Axle Front
14	74011056	Bolt Hex 5/8-11 Unc X 3-1/2
15	73901000	Nut Lock Flange 5/8-11 Unc
16	132624	Pin Axle 5/8 X 1 55/1 54 Lg
17	132614	Shaft Asm Strg 5/8 X 15 19 LT
18	57079	Washer Thrust 515x 750x 033
19	124035X	Support Shaft
20	126684X	Washer Shim 1/4 X 5/8 X 062
21	10040400	Washer Lock Hvy Helical 1/4
22	71070410	Screw Hex Socket 1/4-20 X 5/8
23	127501	Shaft Asm Pittman
24	109816X	Nyliner Snap In
25	124036X	Bracket Steering
26	12000029	Ring Klip #t5304-75
27	136874	Gear Sector 22 Teeth
28	6266H	Bearing Race Thrust Harden
29	17490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30	10040600	Washer Lock Hvy Hlcl Spr 3/8
31	73610600	Nut Fin Hex 3/8-24 Unf
32	130465	Rod Tie Wire Form 19 75 Mech
33	126847X	Bushing Link Drag Blk LR
34	19131416	Washer 13/32 X 7/8 X 16 Ga
35	76020412	Pin Cotter 1/8 X 3/4 Cad
36	132196	Bushing Strg 5/8 Id Dash
37	17431008	Screw Slftp #10-16 X 1/2 Ty-b
38	133742	Cap Wheel Steer Ayp/kelch Blk
39	19133808	Washer 13/32 X 2-3/8 X 8 Ga
40	7810H	Nut Lock Center 3/8-24unf
41	104820X	Adaptor Wheel Strg 640/ 635id
42	124418X	Boot Shaft Steering Blk
43	121749X	Washer 25/32 X 1 1/4 X 16 Ga
44	121748X	Washer 25/32 X 1-5/8 X 16 Ga
45	12000029	Ring Klip #t5304-75
46	121232X	Cap Spindle Fr Top Blk
47	6855M	Fitting Grease

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

SEAT ASSEMBLY

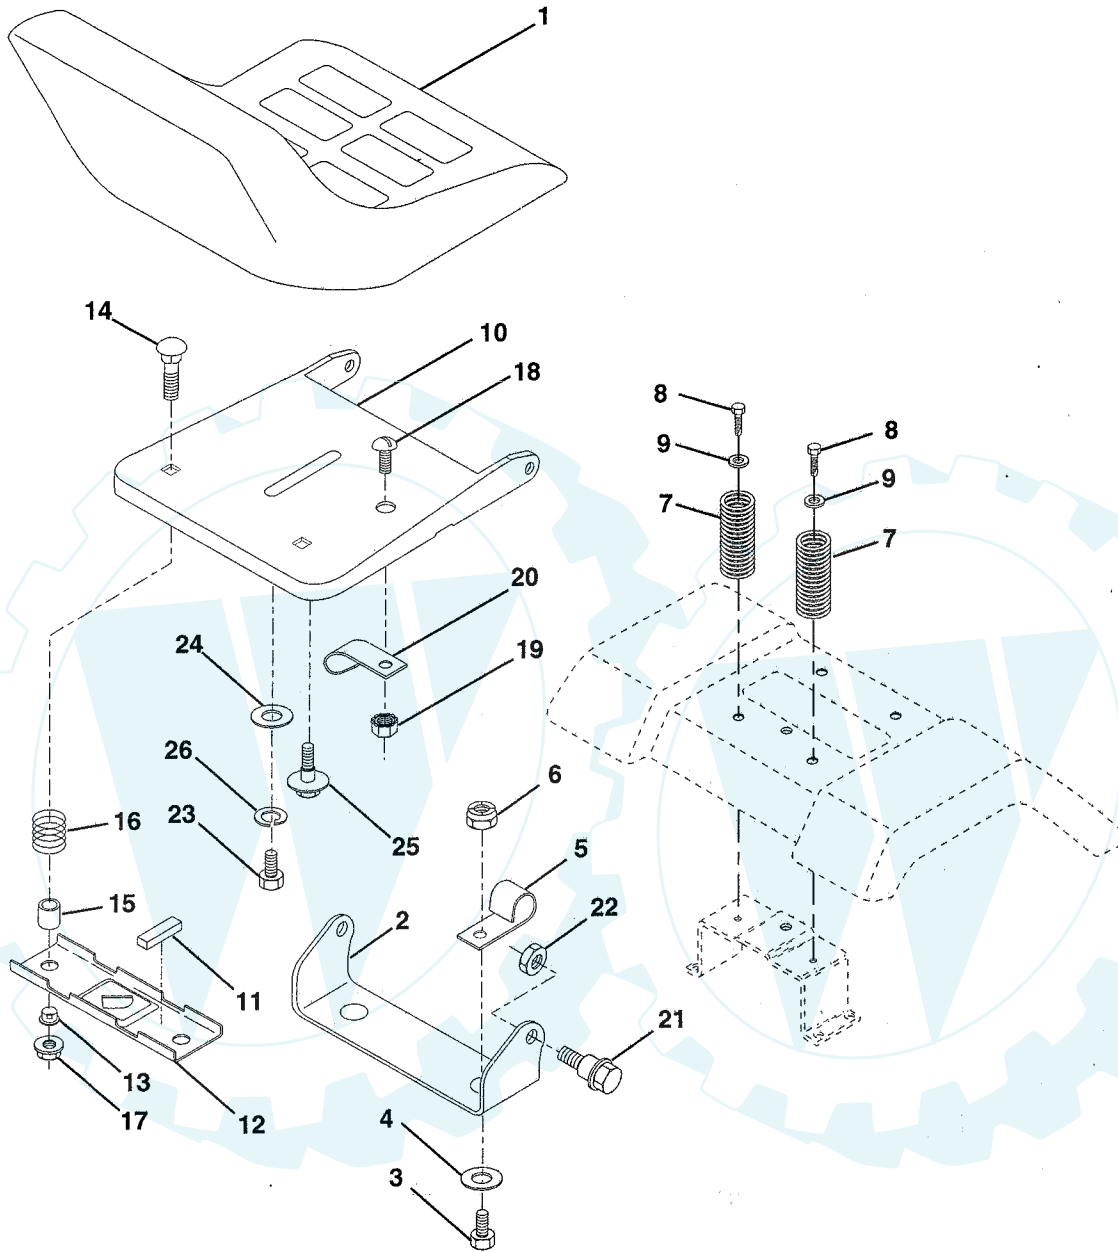

KEY NO.	PART NO.	DESCRIPTION
1	134647	Seat V-150 Blk/blk
2	126656X	Bracket Pivot Seat 8 720
3	74760612	Bolt Fin Hex 3/8-16unc X 3/4
4	19131610	Washer 13/32 X 1 X 10 Ga
5	2751R	Clip Line Fuel 13/32 Mtg Hole
6	73680600	Nut Crownlock 3/8-16 Unc
7	124181X	Spring Seat Cprsn 2 250 Blk Zi
8	17490616	Screw Thdrol 3/8-16 X 1 Ty-tt
9	19131614	Washer 13/32 X 1 X 14 Ga
10	131451	Pan Seat
11	121251X	Strip Foam Gray Or Black
12	121246X	Bracket Mounting Switch
13	121248X	Bushing Snap Blk Nyl 50 ld


KEY NO.	PART NO.	DESCRIPTION
14	72050411	Bolt Rdhd Sht Nk 1/4-20x1-3/8
15	134300	Spacer Split 28x 96 Yel Zinc
16	121250X	Spring Cprsn 1 27 Blk Pnt
17	123976X	Nut Lock 1/4 Lge Fig Gr 5 Zinc
18	74641008	Screw SLTD Pan Hd #10-32 X 1/2
19	73951000	Nut Keps #10-32 Unf
20	4171R	Clip Insulated 11/32 Mtg Hole
21	105529X	Bolt Shoulder 5/16-18 Unc Blkz
22	73680500	Nut Crown Lock 5/16-18
23	74780814	Bolt Fin Hex 1/2-13 X 7/8 Gr 5
24	19171912	Washer 17/32 X 1-3/16 X 12 Ga
25	127018X	Bolt Shoulder 5/16-18 X 62
26	10040800	Washer Lock Hvy Hlcl Spr 1/2

Der Ersatzteilspezialist im Internet.


REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

ENGINE

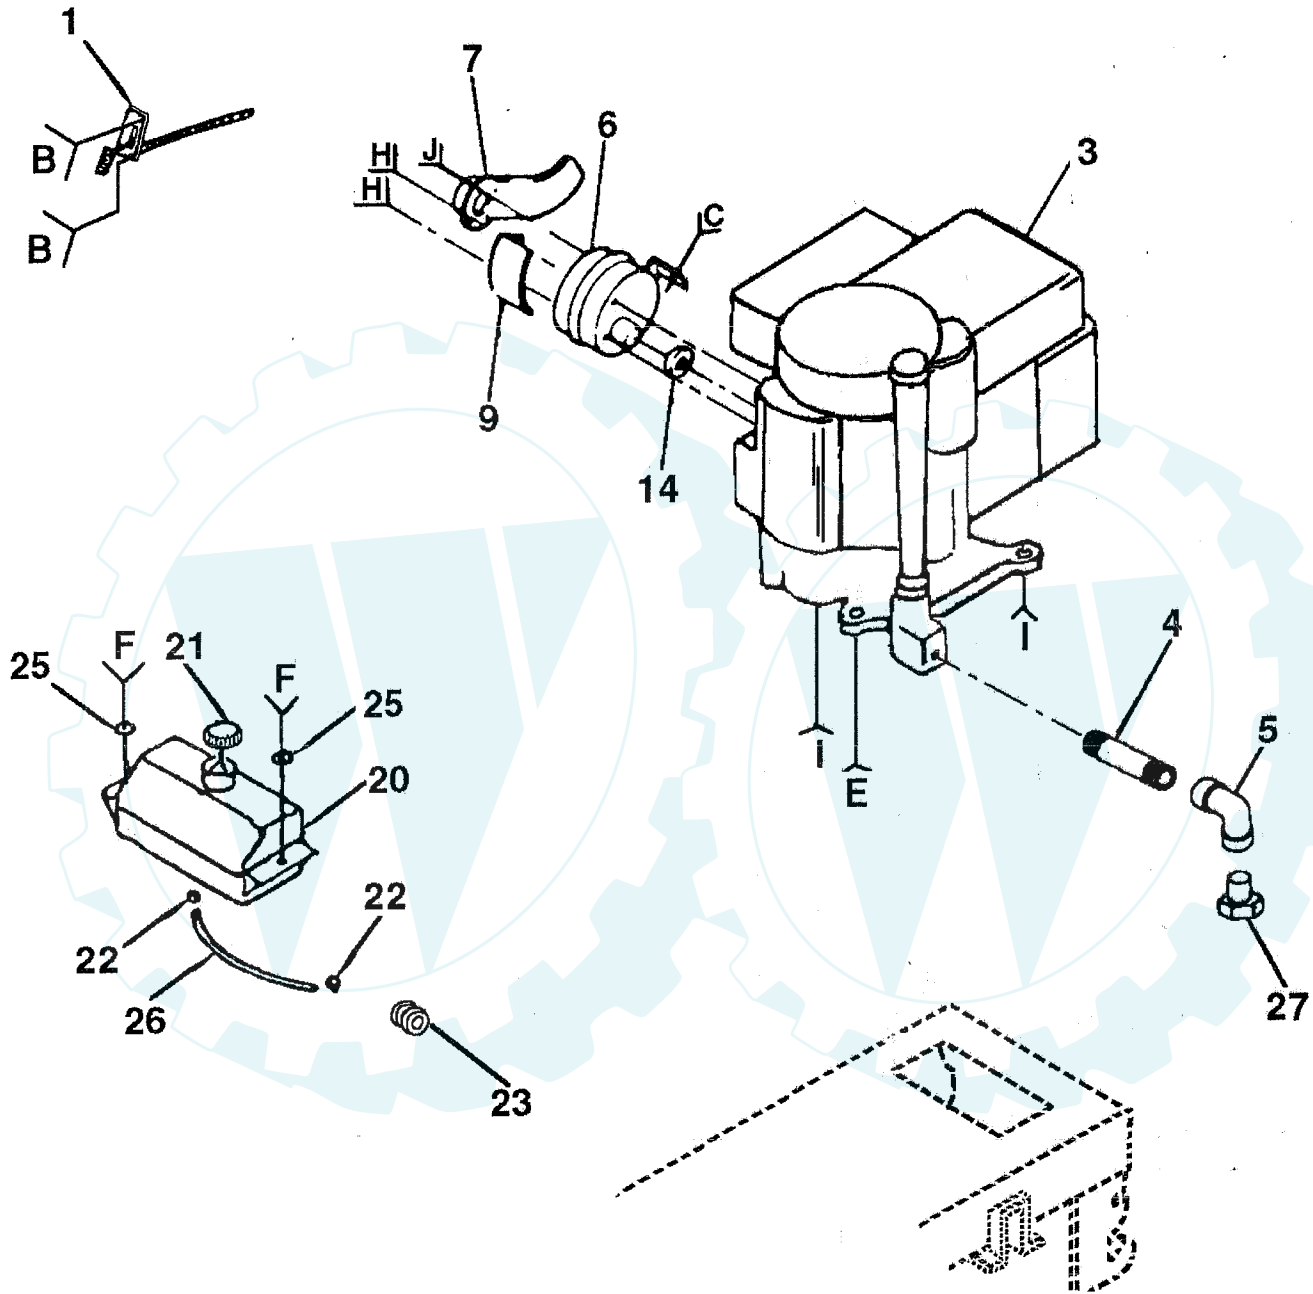

19
OPTIONAL EQUIPMENT
Spark Arrester

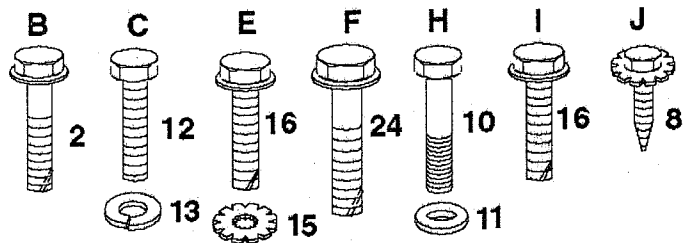

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	132759	Control Th/ch RH Blk Pdl 15 10
2	17720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine B&S (See Breakdown) → 283707-0217-01
4	13280324	Nipple Pipe 3/8 Npt X 3"
5	13200300	Elbow Std 90 Degree 3/8-18 Npt
6	101273M	Muffler Exhaust B&S Lc
7	108767X	Deflector Asm Muffler
8	17030808	Screw Spiderloc Hexhd#8x1/2 Ab
9	101159L	Shield Ht Muff 2 20 Alum Lcost
10	74780556	Bolt Fin Hex 5/16-18unc X3-3/8
11	19111012	Washer 11/32 X 5/8 X 12 Ga
12	74780408	Bolt 1/4-20
13	10040400	Washer Lock Hvy Helical 1/4
14	125593X	Gasket Eng 1 313 Id Tin Plated
15	11050600	Washer Lock Ext Tooth 3/8
16	17490620	Screw Thdrol 3/8-16x1-1/4 TYTT
19	137180	Kit Spark Arrestor (Flat Scrm)
20	109202X	Tank Fuel Front 1 25
21	123549X	Cap Asm Fuel W/sym Vented
22	123487X	Clamp Hose Blk
23	124028X	Bushing Snap Nyl Blk Fuel Line
24	17490412	Screw Hexwsh Thdrol 1/4-20x3/4
25	19091416	Washer 9/32 X 7/8 X 16 Ga
26	8548R	Line Fuel 13"
27	-----	Plug Oil Drain (Order From Engine Manufacturer)

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

MOWER LIFT

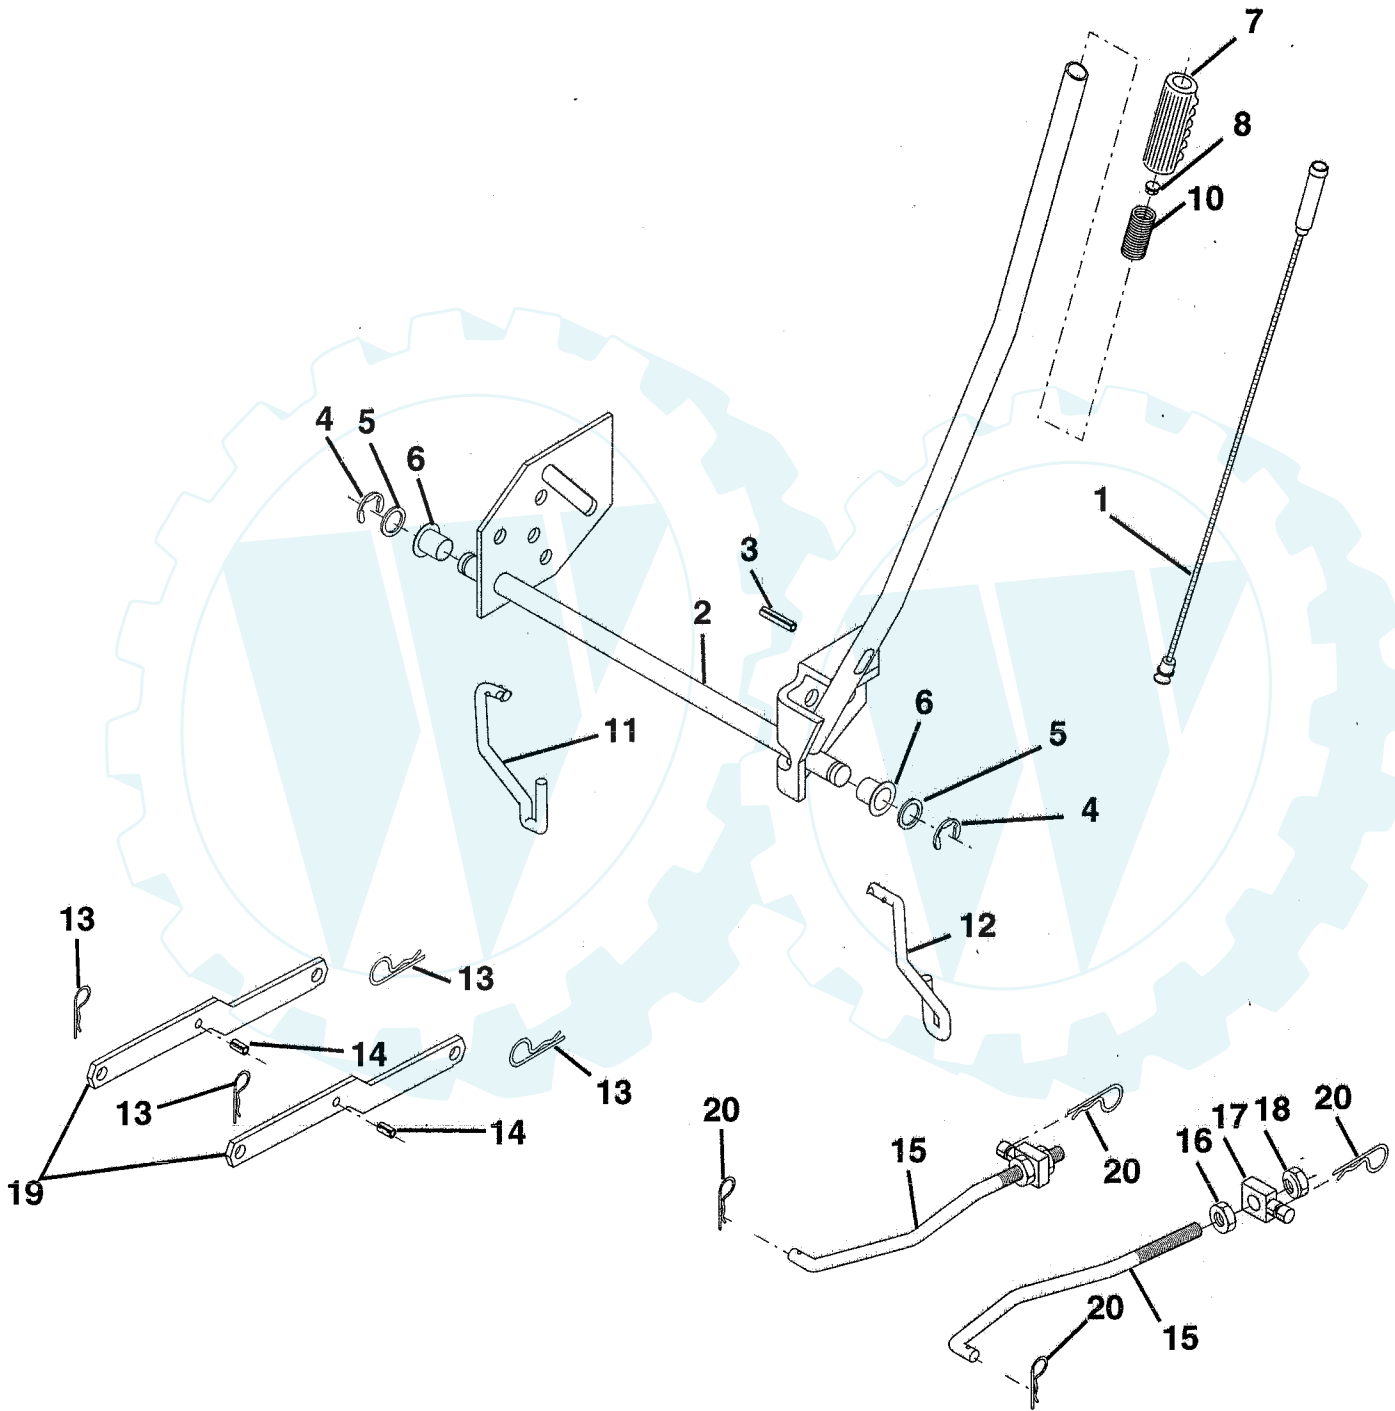

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	136973	Wire Asm Inner W/plunger 17 32
2	122507X	Shaft Asm Lift 9 680
3	105767X	Pin Groove 1 500 Zinc
4	12000002	E Ring #5133-62
5	19211621	Washer PLTD 21/32 X 1 X 21ga
6	120183X	Bearing Nylon Blk 629 Id
7	109413X	Grip Handle Bicycle Matte Blk
8	124526X	Button Plunger Black
10	122512X	Spring Cprsn 3 750 Oiled
11	134619	Link Lift LH Fixed Length
12	135388	Link Lift RH Fixed Length
13	4939M	Retainer Spring
14	135563	Pin Roll SLT 5/16 X 1 25 Blk O
15	127218	Link Front
16	73350800	Nut Jam Hex 1/2-13 Unc
17	130171	Trunnion Blk Zinc
18	73800800	Nut Lock W/wsh 1/2-13unc
19	130832	Arm Suspension Rear
20	3146R	Retainer Spring

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

38" MOWER DECK

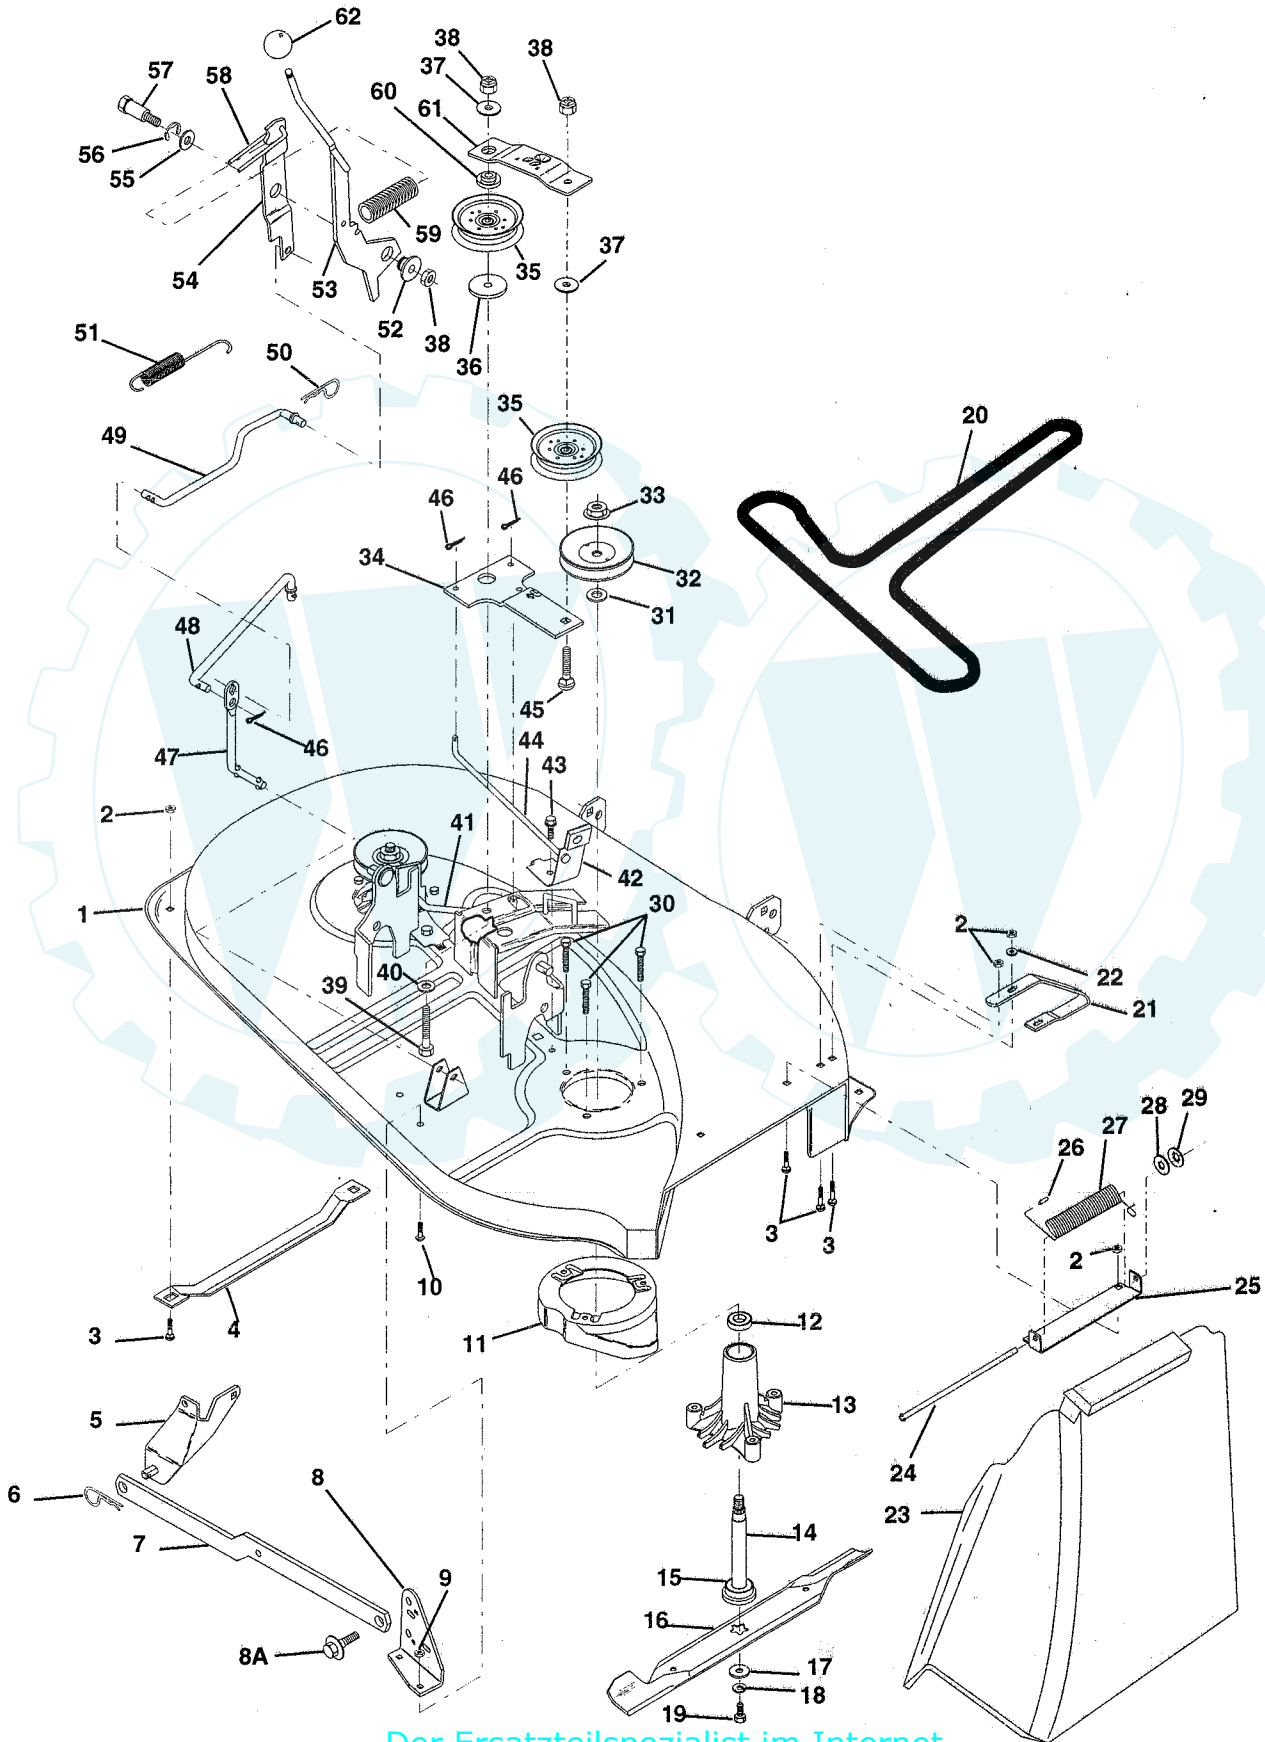

Der Ersatzteilspezialist im Internet.

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


38" MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	138026	Deck Asm Weldment 38"sway Bar	33	137266	Nut 9/16 Top Lock Flng Oil Dip
2	73680500	Nut Crown Lock 5/16-18	34	133840	Arm Idler 38"
3	72140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	35	131494	Pulley Idler Flat 3 060
4	7631J	Runner Mower LH 10 00	36	122052X	Spacer Retainer Pm Mower
5	138017	Bracket Asm Fr Sway Bar 38/42	37	19131612	Washer 13/32 X 1 X 12 Ga
6	4939M	Retainer Spring	38	73680600	Nut Crownlock 3/8-16 Unc
7	130832	Arm Suspension Rear	39	74600636	Bolt Hex 3/8-16 X 2-1/4
8	138440	Bracket Asm Deck Sway Bar 38"	40	19131612	Washer 13/32 X 1 X 12 Ga
8a	132827	Bolt Shoulder	41	131289	Rod Brake Mandrel LH 4 856
9	73800500	Locknut-hex W/ins 5/16-18unc P	42	130840	Brake Asm Mower Vented
10	72140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	43	17490512	Screw Thdrol 5/16-18 X 3/4 TYT
11	136929	Stripper Mower Vented	44	131288	Rod Brake Mandrel RH 10 744
12	110485X	Bearing Ball Mandrel	45	72110614	Bolt Rdhd 3/8-16uncx1-3/4 Gr5
13	128774	Housing Mandrel (Vented)	46	76020312	Pin Cotter 3/32 X 3/4 Cad
14	137645	Shaft Asm Mandrel Vented	47	133551	Rod Pivot W/nibs
15	129895	Bearing Ball #6204 (Mandrel)	48	133504	Rod Clutch Secondary W/nibs
16	138497	Blade Mower High Perf 38	49	134666	Rod Clutch Primary 38/42
17	129962	Washer Hard Blade Mower Vented	50	4497H	Spring Retainer 1" Zinc/cad
18	10030600	Washer Lock Hvy 3/8 Unplated	51	131870	Spring Return
19	850857	Bolt 3/8 24 X 1.25 Gr 8 Patched	52	127498	Bushing 747 Od X 794 Lg Brass
20	131290	V-Belt Mower 88 12 Black 38"	53	133573	Arm Asm Clutch Primary
21	128772	Runner RH 38"	54	127847	Arm Clutch Secondary
22	19111216	Washer 11/32 X 3/4 X 16 Ga	55	121748X	Washer 25/32 X 1-5/8 X 16 Ga
23	106736X	Shield Deflector Mower 38"blk	56	12000029	Ring Klip #t5304-75
24	106735X	Rod Hinge Brt/blk Zinc 9 88 Lg	57	128903	Bolt Shoulder 3/8-16 Unc 1 44
25	137607	Bracket Deflector 38/44/50 Df	58	127845	Keeper Spring 4 000
26	105304X	Cap Sleeve 80x 112 Blk Mower	59	128759	Spring Clutch Mower 2 750 Zinc
27	123713X	Spring Torsion Deflector 2 52	60	133502	Spacer Arm Idler Upper Hdn 42"
28	19111016	Washer 11/32 X 5/8 X 16 Ga	61	133503	Stiffener Arm Idler Upper 42"
29	110452X	Nut Push Phos & Oil	62	106932X	Knob Rd 3/8-16 Plstc Thds Blk
30	78158	Bolt 5/16-18 X 1 25 T/t	--	130794	Mandrel Asm Service (Includes Key
31	129963	Washer Spacer Mower Vented	--	138360	Nos. 12-15, 17-19, 31 and 33)
32	129206	Pulley Mandrel 38" Single			Deck Serv 38"mch S Bar Eng/fr

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39


DECALS

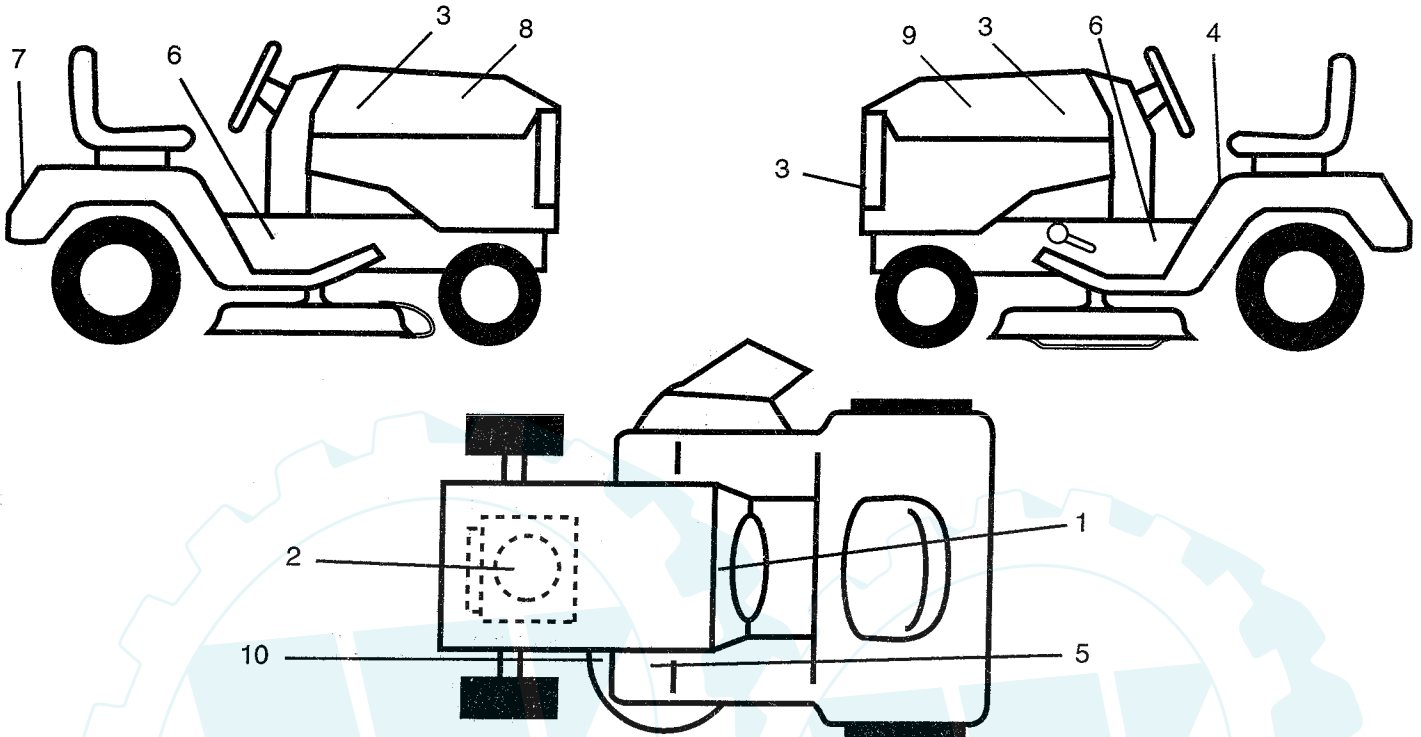

KEY NO.	PART NO.	DESCRIPTION
1	138955	Decal Instruction Dash English
2	120601X	Decal Engine 12HP Ic B&S
3	129212	Nameplate Logo (Wizard)
4	133796	Decal Caution Fender English
5	4900J	Decal Clutch/brake English
6	133782	Decal Chassis 12/38 4sp l/c
7	127520	Decal USA White
8	138490	Decal Hood RH Wizard

KEY NO.	PART NO.	DESCRIPTION
9	138491	Decal Hood LH Wizard
10	136832	Decal V-Belt Schematic
--	138311	Decal Handle Lft Height Adjust (Lift Handle)
--	139982	Manual Owners Ayp7122b39 Eng
Available accessories not included with tractor:		
--	C38	Grass Catcher
--	SB20	Snow Thrower
--	BD20	42" Snow Thrower

WHEELS AND TIRES

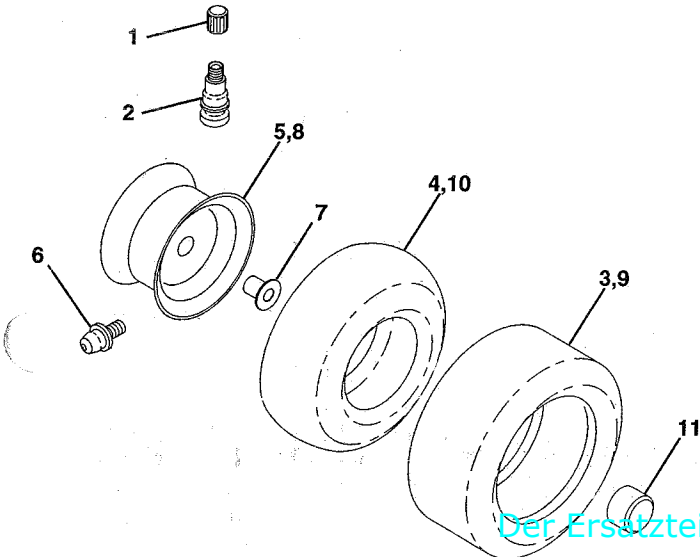


KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap Valve Tire
2	65139	Stem Valve
3	106222X	Tire F Ts 15 X 6 0 - 6 Service
4	59904	Tube Front (Service Item Only)
5	106732X311	Rim Asm 6"front White Service
6	278H	Fitting Grease (Front Wheel Only)
7	9040H	Bearing Flange (front Wheel Only)
8	106108X311	Rim Asm 8"rear White Service
9	106268X	Tire R Ts 18x9 5-8-C Service
10	7152J	Tube Rear (Service Item Only)
11	104757X	Cap Axle Blk 1 50 X 1 00

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

DANA TRANSAXLE - MODEL NUMBER 4360-46

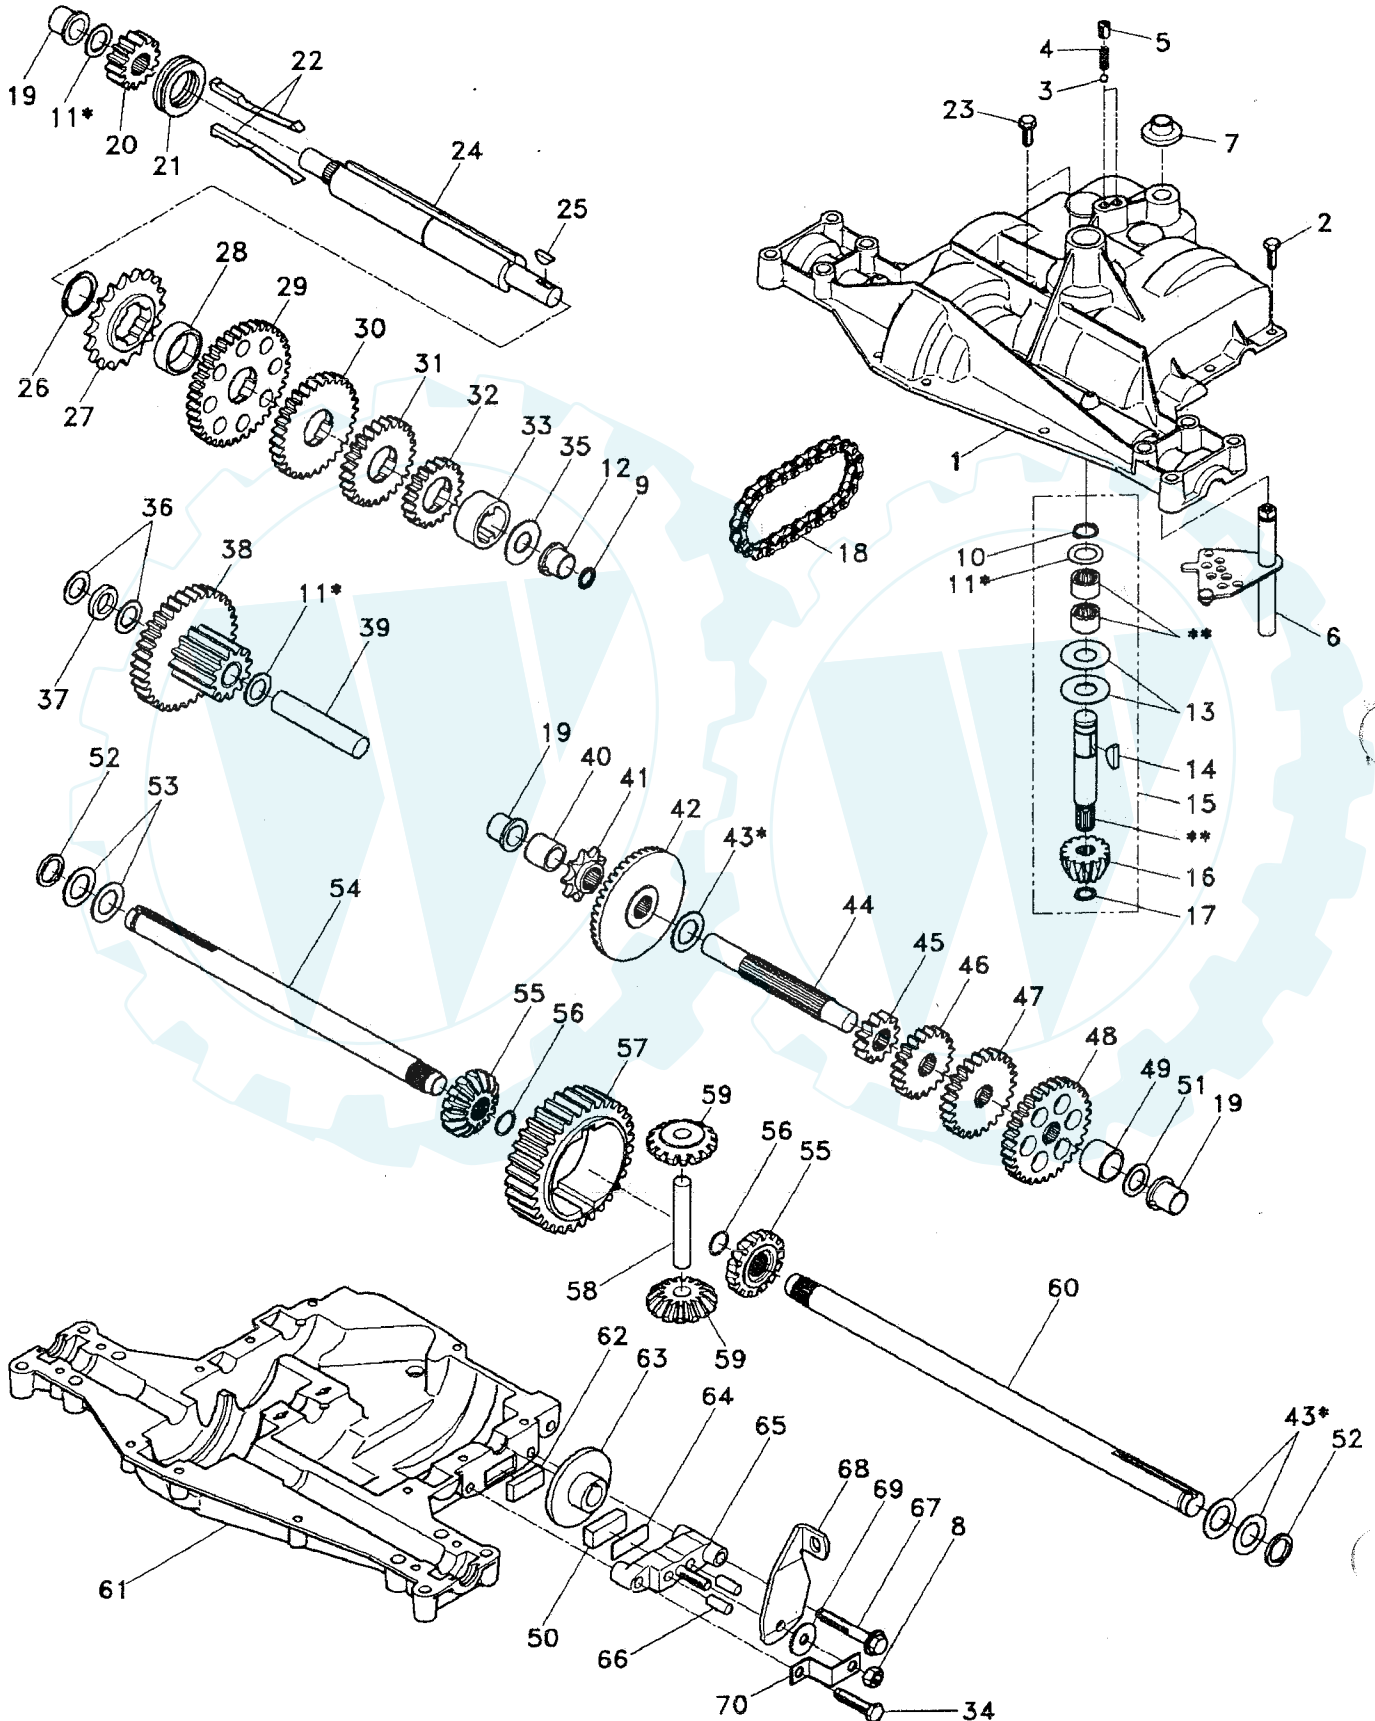

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

MANA TRANSAXLE - MODEL NUMBER 4360-46

**KEY PART
NO. NO.**

DESCRIPTION

1	5305	Housing, Upper
2	1919	Screw, Self-Tapping, Large 1/4-20 x .734
3	5112	Ball, Detent
4	3626	Spring, Detent
5	3623	Screw, Set
6	4731	Kit, Shifter Assembly
7	5024	Boot, Shifter
8	3847	Locknut 5/16-24
9	5279	Square Ring
10	1099	Ring, Retaining
11	4689	* Assembly, Kit, Shim .625 Shaft
12	5278	Bearing, Flange
13	3876	Washer, Plain .632 x 1.38 x .046
14	1374	Key, Woodruff, #9
15	4551	Assembly, Kit, Input Shaft
16	3590	Pinion, Bevel, 14 Teeth
17	3624	Ring, Retaining
18	3625	Chain, 24 Pitches
19	1542	Bearing, Flange
	5280	Gear, Spur, 14 Teeth
	5303	Collar, Clutch
22	4758	Assembly, Kit, Clutch Keys
23	5131	Screw, Self-Tapping, with Sealer
24	5281	Shaft, Intermediate
25	1375	Key, Woodruff, #61
26	3627	Ring, Retaining
27	3830	Sprocket, 18 Teeth
28	3841	Spacer
29	3786	Gear, Spur, 37 Teeth
30	3867	Gear, Spur, 30 Teeth
31	3783	Gear, Spur, 25 Teeth
32	5202	Gear, Spur, 19 Teeth
33	5026	Spacer 1.133 x 1.50 x .750
34	3724	Screw, Self-Tapping 5/16-18 x 1.40
35	3628	Washer, Plain .640 x 1.37 x .061
36	1423	Washer, Plain .632 x 1.00 x .026
37	3422	Spacer .630 x 1.00 x .169
38	4286	Assembly, Gear, Combination of 12 Teeth and 35 Teeth

**KEY PART
NO. NO.**

DESCRIPTION

39	3967	Shaft, Idler
40	3901	Spacer .635 x .875 x .755
41	3645	Sprocket 9 Teeth
42	3853	Gear, Bevel, 42 Teeth
43	4691	* Assembly, Kit, Shim, .750 Shaft
44	3882	Shaft, Drive
45	3646	Gear, Spur, 12 Teeth
46	3866	Gear, Spur, 20 Teeth
47	3719	Gear, Spur, 25 Teeth
48	3683	Gear, Spur, 31 Teeth
49	3684	Spacer .781 x 1.00 x .750
50	3907	Puck, Friction
51	1145	Washer, Plain .632 x 1.00 x .060
52	5130	Washer, Neoprene
53	3184	Washer, Plain .758 x 1.25 x .031
54	3880	Axle, L.H.
55	3780	Gear, Miter, 15 Teeth
56	3656	Ring, Retaining
57	3839	Gear, Spur, 32 Teeth
58	3919	Shaft, Cross
59	3781	Gear, Miter, 15 Teeth
60	3881	Axle, R.H.
61	5304	Housing, Lower
62	3920	Puck, Friction
63	3276	Disc, Brake
64	3758	Spacer
65	3916	Jaw, Brake
66	3843	Pin, Dowel
67	5120	Screw, Self-Tapping, Large 5/16-18 x 2.25
68	5285	Lever, Actuating
69	3760	Washer, Plain .321 x 1.00 x .055
70	3917	Bracket, Anti-Rotation
71	4300	Grease

* Use in combinations to maintain proper clearances


** Order Key Number 15

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

BRIGGS & STRATTON ENGINE - MODEL NUMBER 283707, TYPE NUMBER 0217-01

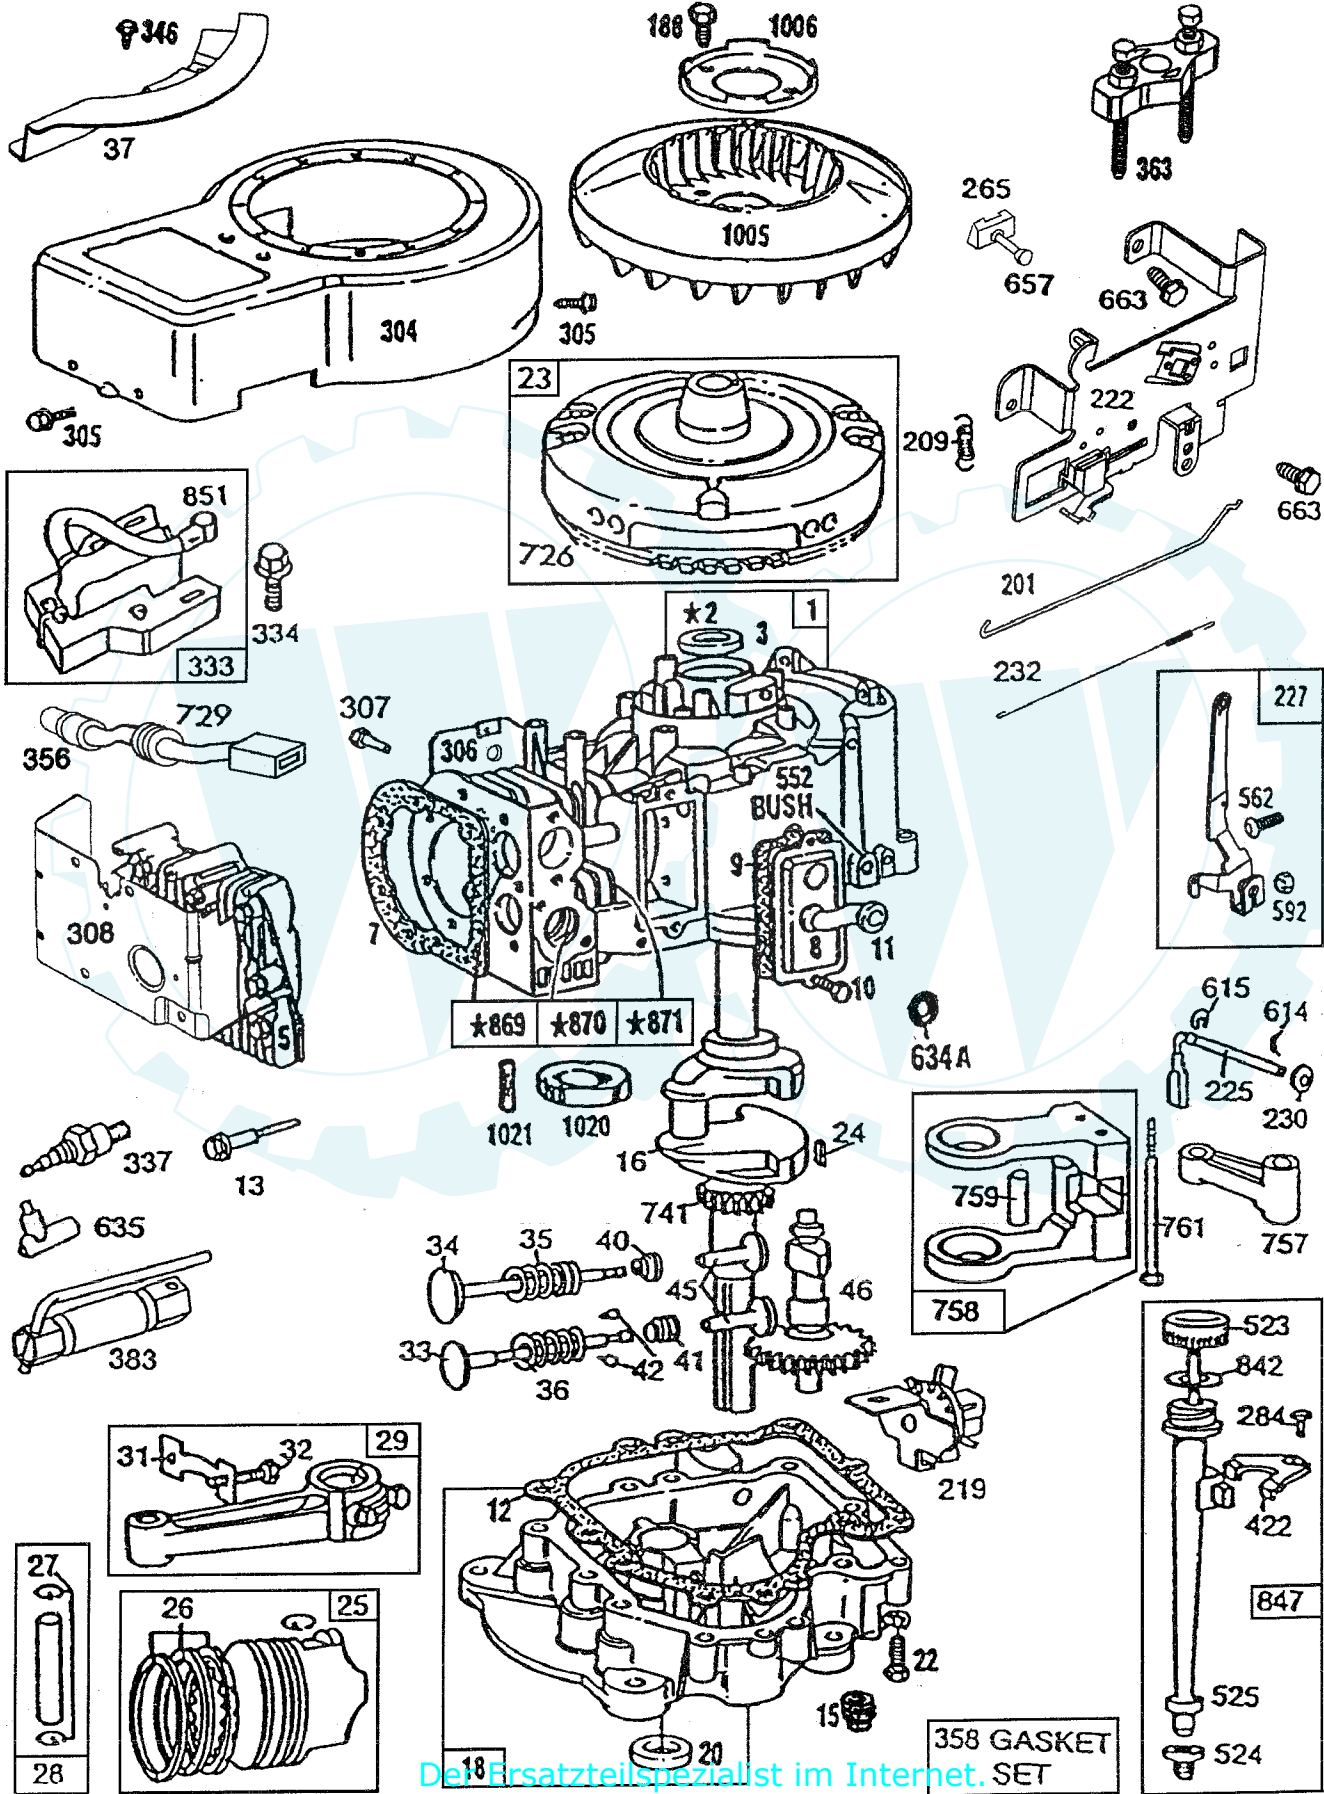


Der Ersatzteilspezialist im Internet. SET

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

RIGGS & STRATTON ENGINE - MODEL NUMBER 283707, TYPE NUMBER 0217-01

121 CARBURETOR OVERHAUL KIT

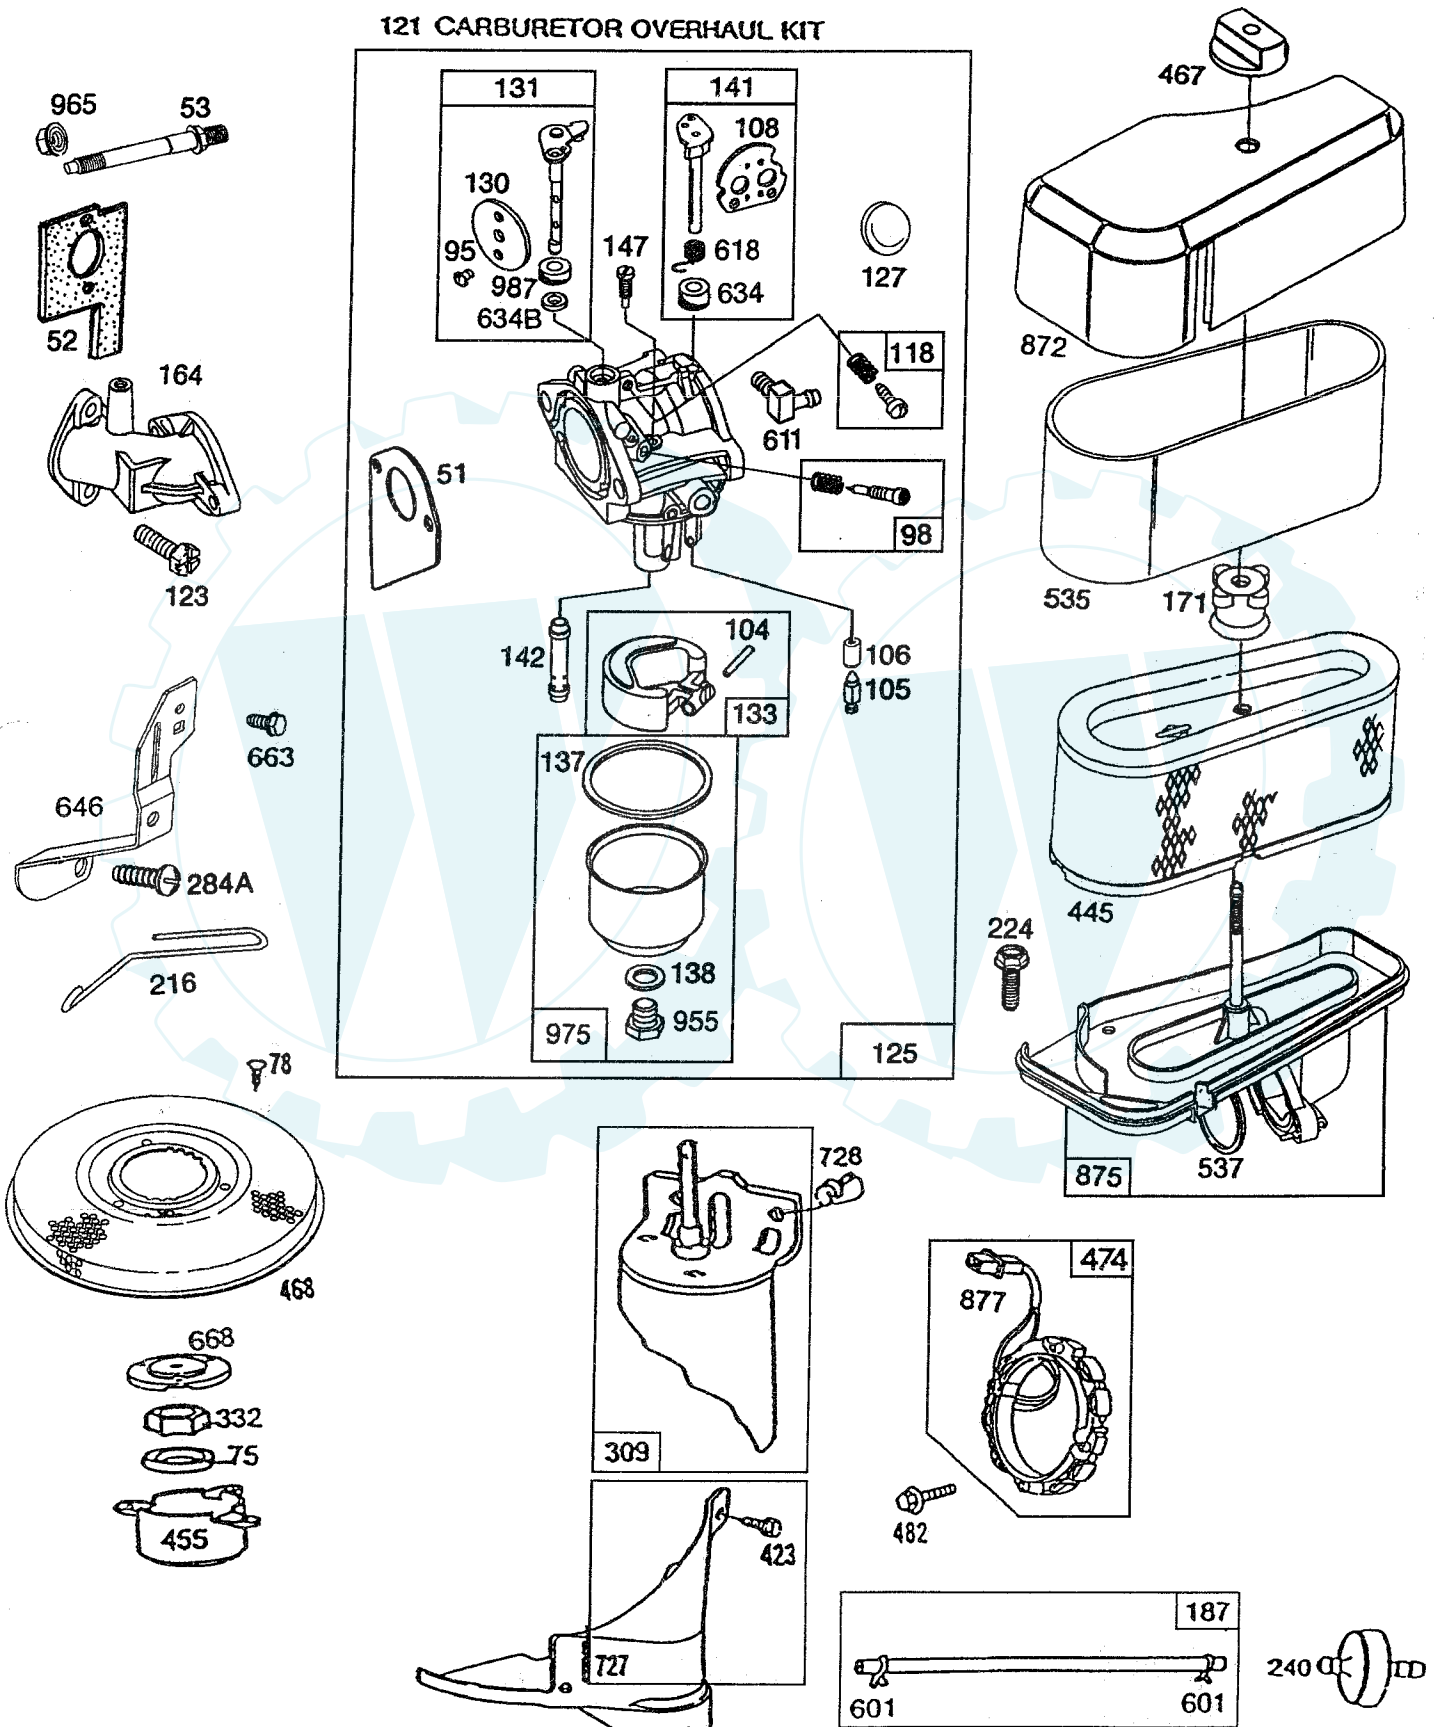


Der Ersatzteilspezialist im Internet.

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

BRIGGS & STRATTON ENGINE - MODEL NUMBER 283707, TYPE NUMBER 0217-01

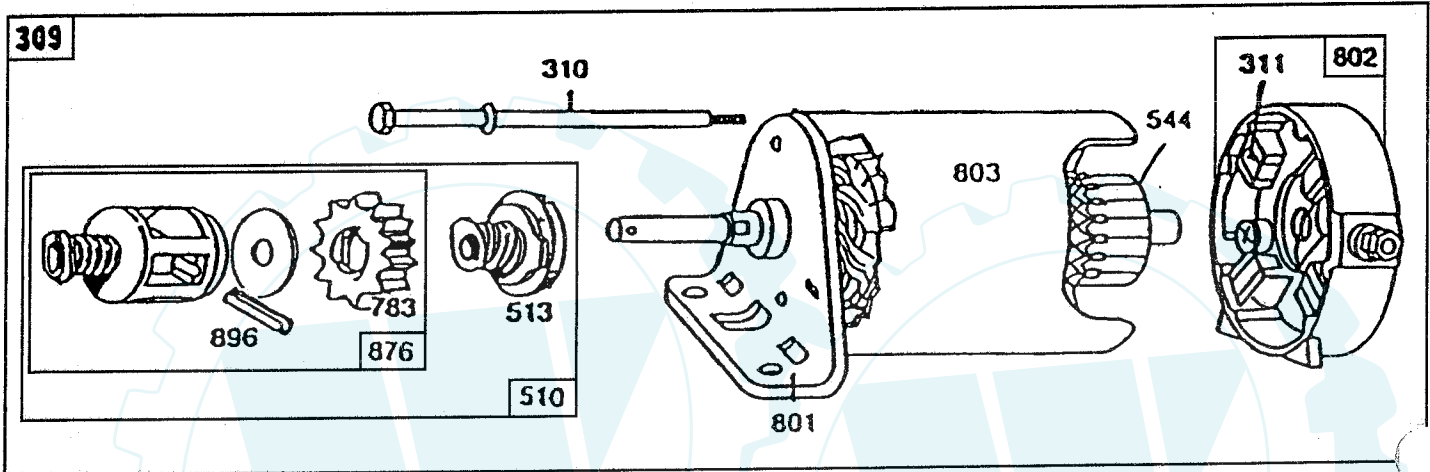

Reference Number	309	310	311	510	544	801	802	803	
Manufacturer	Motor and Drive Ass'y.	Thru Bolt Assembly	Brush Assembly	Drive Assembly	Armature Assembly	Drive End Cap Assembly	End Cap Ass'y. Commutator	Housing Assembly	
Briggs & Stratton	Housing Length								
12V	3-21/32"	394805	94003	395538	490421**	390837	394856	395537*	393825

*Includes Brush Set
 **Includes #398003 Clutch Assembly (Ref. No. 513)
 #280104 Gear (Ref. No. 783)
 #490467 Retainer and Pin (Ref. No. 876)
 # 94288 Roll Pin (Ref. No. 896)

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

RIGGS & STRATTON ENGINE - MODEL NUMBER 283707, TYPE NUMBER 0217-01

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 490450	Cylinder Assembly	53 94637	Stud, Carburetor Mounting
2 399265	Bearing, Cylinder (Requires Special Tools For Installation)	75 224061	Washer, Spring
3 391086	* Seal, Oil	78 93805	Screw, Sems
5 494240	Head, Cylinder	95 94098	** Screw, Throttle
7 271866	* Gasket, Cylinder Head	98 494382	Screw, Idle Speed
8 391406	Breather Assembly	104 231789	** Pin, Float Hinge
9 27803	* Gasket, Valve Cover	105 231790	** Valve Assembly, Inlet Needle
10 93394	Screw, Sems	106 281169	Inlet, Valve Seat
11 280100	Tube, Breather	108 224540	Valve, Choke
12 271916	* Gasket, Crankcase Cover 1/64"	118 494383	** Valve, Needle
271997	* Gasket, Crankcase Cover .005"	121 494384	Carburetor Overhaul Kit
271996	* Gasket, Crankcase Cover .009"	123 94616	Screw, Elbow Mounting
13 93723	Screw, Cylinder Head	125 494502	Carburetor Assembly
15 94239	Plug, Oil Drain	127 - - -	** Plug, Welch (Sold in Kit Only)
16 490466	Crankshaft	130 224539	Valve, Throttle
94196	Key, Timing Gear	131 494379	Shaft and Lever, Throttle
18 494238	Base, Engine	133 494381	Float, Carburetor
20 291675	* Seal, Oil	137 281165	*** Gasket, Float Bowl
22 94305	Screw, Sems, Base Mounting	138 281164	*** Washer, Float Bowl Screw
23 492326	Flywheel and Ring Gear Assembly, Magneto	141 494380	** Shaft and Lever, Choke
222698	Key, Flywheel	142 494537	** Nozzle / Jet, Carburetor
25 394661	Piston Assembly, Standard	494499	High Altitude Kit:
394662	Piston Assembly .010" Oversize	147 231794	231796 Pilot, Jet, High Altitude
394663	Piston Assembly .020" Oversize	164 213819	281164 Seal, Bowl Screw
394664	Piston Assembly .030" Oversize	171 281051	** Pilot, Jet
26 391780	Ring Set, Piston, Standard Size	187 393815	Carburetor, Elbow
392331	Ring Set, Piston, Chrome, Standard	188 93535	Nut, Air Cleaner Mounting
391781	Ring Set, Piston .010" Oversize	201 262767	Line, Fuel
391782	Ring Set, Piston .020" Oversize	209 260871	Screw, Sems
391783	Ring Set, Piston .030" Oversize	216 262766	Link, Governor
27 260924	Lock, Piston Pin	219 490815	Spring, Governor
28 299691	Pin Assembly, Piston, Standard	222 494887	Link, Choke
391286	Pin Assy., Piston .005" Oversize	224 94513	Oil Slinger, Governor Gear and Bracket Assembly
29 490348	Rod Assembly, Connecting	225 231058	Plate, Governor Control (Choke-A-Matic)
490469	Rod Assembly, Connecting, .020" Undersize Crankpin Bore	227 493935	Screw, Sems, Air Cleaner
31 222299	Lock, Connecting Rod Screw	230 222450	Crank, Governor
32 92909	Screw, Connecting Rod	232 262785	Lever Assembly, Governor
33 262246	Valve, Exhaust	240 394358	Washer, Governor Crank
34 262247	Valve, Intake		Spring, Governor Link
35 65906	Spring, Intake Valve		Filter, Fuel
36 26828	Spring, Exhaust Valve		
37 223752	Guard, Flywheel		
40 221596	Retainer, Intake Valve		
41 292260	Rotocoil, Exhaust Valve		
42 93630	Retainer, Exhaust Valve Rotocoil		
45 262248	Tappet, Valve		
46 212897	Gear, Cam		
51 272465	*** Gasket, Carburetor (Carburetor to Elbow)		
270872	* Gasket, Carburetor (Elbow to Cylinder)		

* Included in Gasket Set (494241)
 ** Included in Carburetor Overhaul Kit (494384)
 *** Included in both Carburetor Overhaul Kit (494384) and Carburetor Gasket Set (494385)

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

REPAIR PARTS

12 HP 38" TRACTOR - - MODEL NUMBER AYP7122B39

BRIGGS & STRATTON ENGINE - MODEL NUMBER 283707, TYPE NUMBER 0217-01

KEY PART NO.	NO.	DESCRIPTION	KEY PART NO.	NO.	DESCRIPTION
265	221535	Clamp, Casing	635	66538	Elbow, Spark Plug
284	94419	Screw, Clamp Mounting	646	224546	Brace, Air Cleaner
284A	94326	Screw, Air Cleaner	657	93496	Screw, Sems
304	494269	Housing, Blower	663	94620	Screw, Hex Head
305	94608	Screw, Sems, Blower Housing Mounting	668	280848	Spacer
			726	392134	Gear, Ring (Includes Mounting Parts)
306	224545	Shield, Cylinder	727	490324	Cover, Starter (Includes Mounting Screws)
307	93949	Screw, Sems, Cylinder Shield Mounting	728	94627	Screw, Sems
308	491490	Cover, Cylinder Head	729	281159	Clip, Lead Wire
309	---	Motor, Starting (See Chart on Illustrated Pages for Replacement Parts for Starting Motors)	741	262135	Gear, Timing
			757	212359	Link, Counterweight
332	92284	Nut, Hex	758	399891	Counterweight Assembly
333	492341	Armature, Magneto	759	298909	Pin, Counterweight
334	93381	Screw, Sems, Armature Mounting	761	93875	Screw, Counterweight
337	802592	Plug, Spark	842	270920	Seal, Oil Filler Cap
346	93705	Screw, Hex Head	847	490474	Fill Group, Oil
356	494328	Wire, Ground	851	221798	Terminal, Ignition Cable
358	494241	Gasket Set	869	261463	Seat, Intake Valve, Standard
363	19203	Puller, Flywheel	870	213316	Seat, Exhaust Valve, Standard
383	89838	Wrench, Spark Plug	871	261961	Guide, Exhaust Valve
422	223721	Clamp, Oil Filler Tube	872	281104	Cover, Air Cleaner
423	94073	Screw, Sems	875	494237	Body, Air Cleaner
445	493909	Cartridge, Air Cleaner	877	393456	Diode and Connector Assembly, Dual Circuit
455	222561	Cup, Screen Mounting	955	94642	** Screw, Fuel Bowl
467	493903	Knob, Air Cleaner	965	94108	Locknut, Air Cleaner Mounting
468	222562	Screen, Flush Rotating	975	494378	Bowl Assembly, Carburetor
474	393474	Stator, Alternator	977	494385	Carburetor Gasket Kit
482	93621	Screw, Sems	987	281166	** Seal, Throttle Shaft
523	490327	Cap and Dipstick, Oil Filler	1005	280687	Fan, Flywheel
524	68838	Seal, Filler Tube	1006	224413	Retainer, Fan
525	280741	Tube, Oil Filler	1020	262243	Eccentric
535	272403	Element, Air Cleaner	1021	94160	Pin, Eccentric
537	281106	* O-Ring, Air Cleaner			
552	231597	Bushing, Governor Crank			
562	92613	Bolt, Governor Lever			
592	231082	Nut, Hex #10-24			
601	93053	Clamp, Fuel Pipe			
611	494451	Fuel Inlet Tube			
614	93306	Cotter, Hair Pin			
615	93307	Retainer, E-Ring			
618	262803	Spring, Choke Return			
634	281168	** Seal, Choke Shaft			
634A	491323	* Seal, Governor			
634B	281167	Washer, Throttle Shaft			

* Included in Gasket Set (494241)
 ** Included in Carburetor Overhaul Kit (494384)
 *** Included in both Carburetor Overhaul Kit (494384) and Carburetor Gasket Set (494385)

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm