


RAIY

12 CRD


Lawn Tractor

MODEL NO. REE1236A

REPAIR PARTS MANUAL


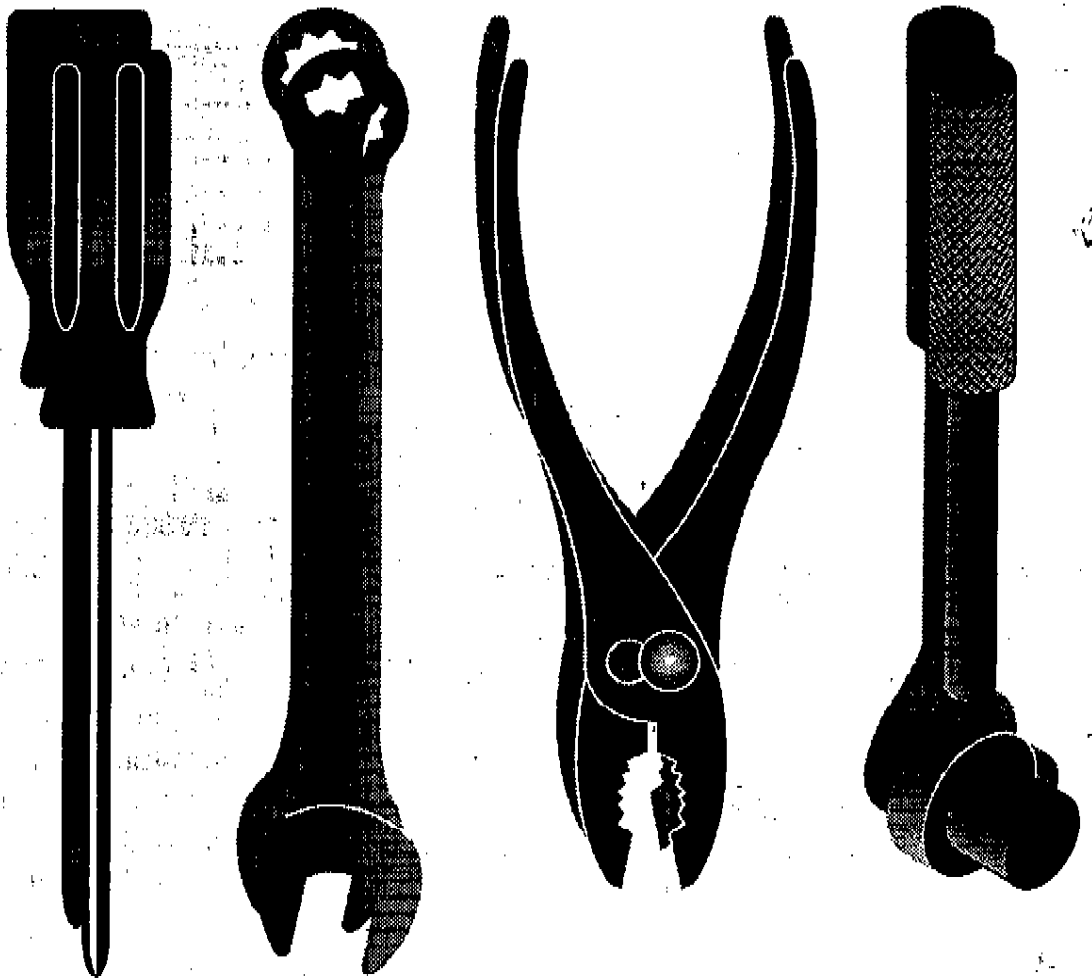


TRACTOR -- MODEL NUMBER RER1236A

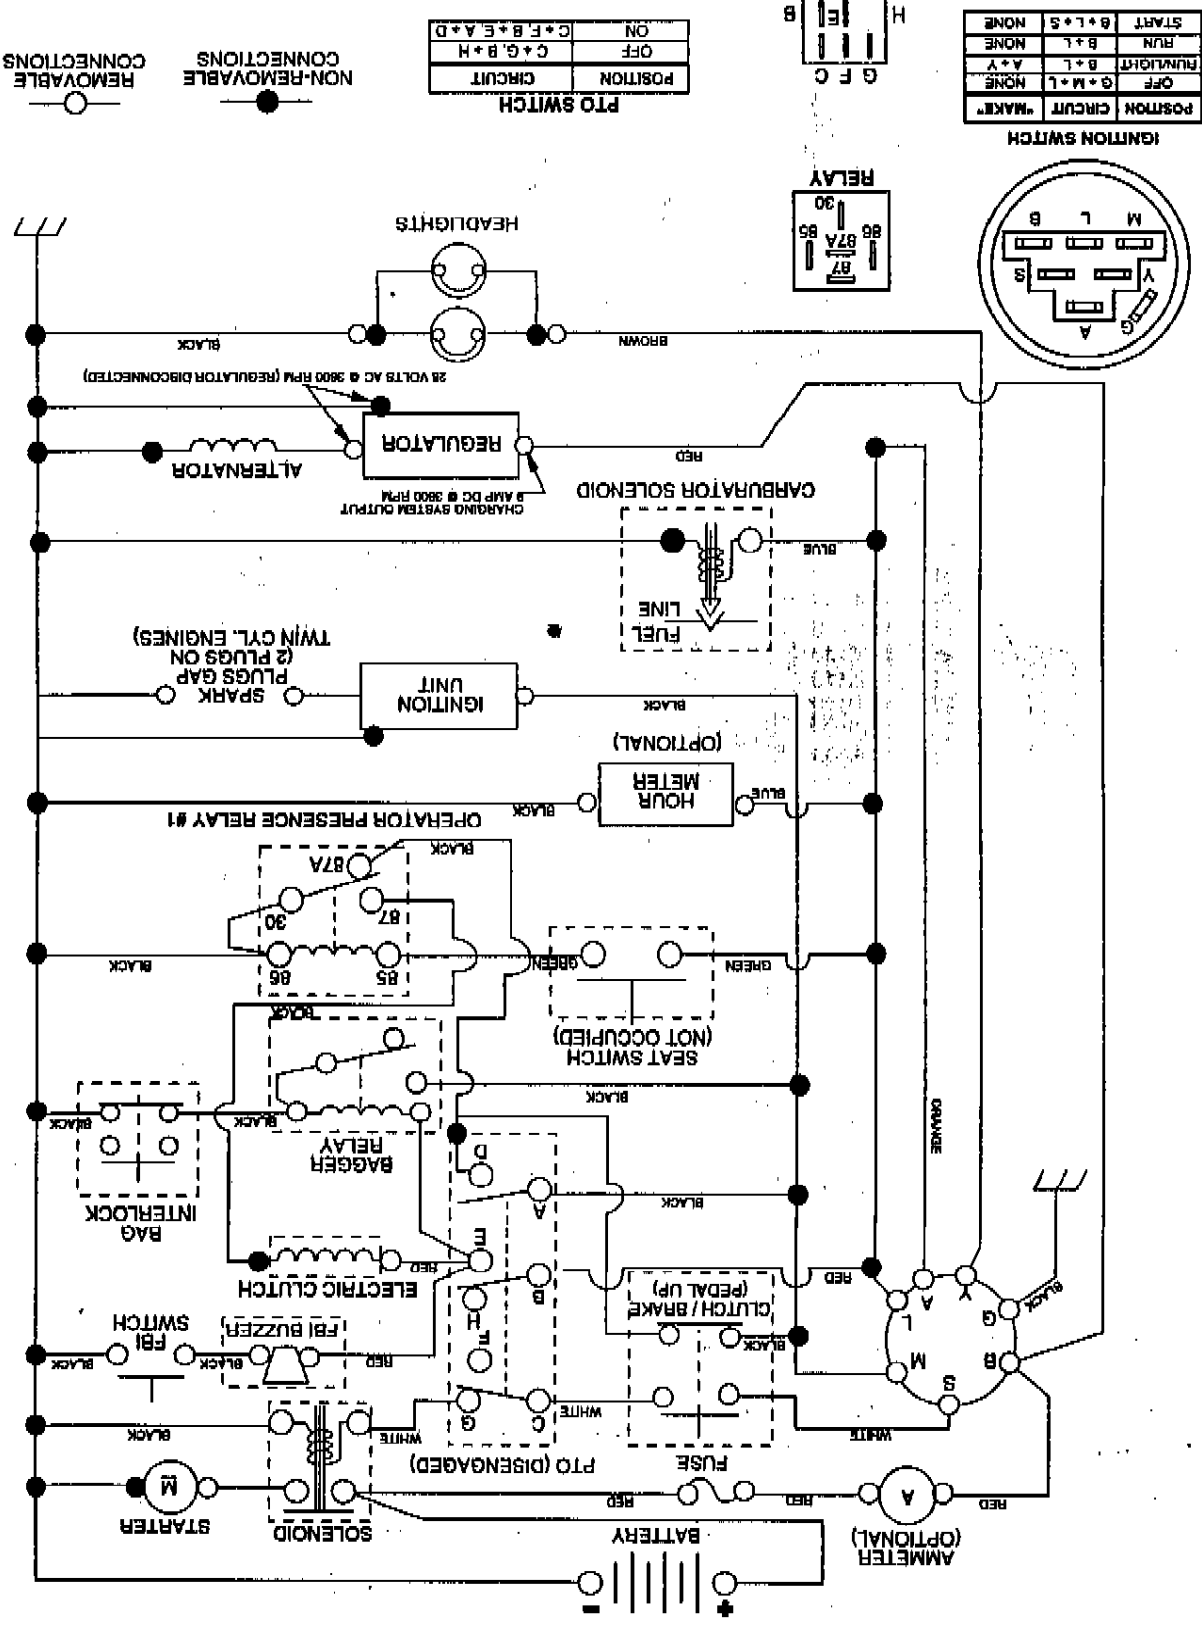


WIRING INSULATED CLIPS SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

POSITION	CIRCUIT	"MAKE"
OFF	G + M + L	NONE
RUNLIGHTS	B + L	A + Y
RUN	B + L	NONE
START	B + L + S	NONE

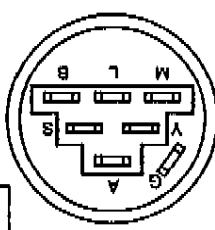


POSITION	CIRCUIT
OFF	C + G, B + H
ON	C + F, B + E + A + D

PTO SWITCH

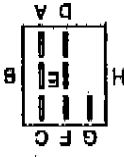

NON-REMOVABLE CONNECTIONS
REMOVABLE CONNECTIONS

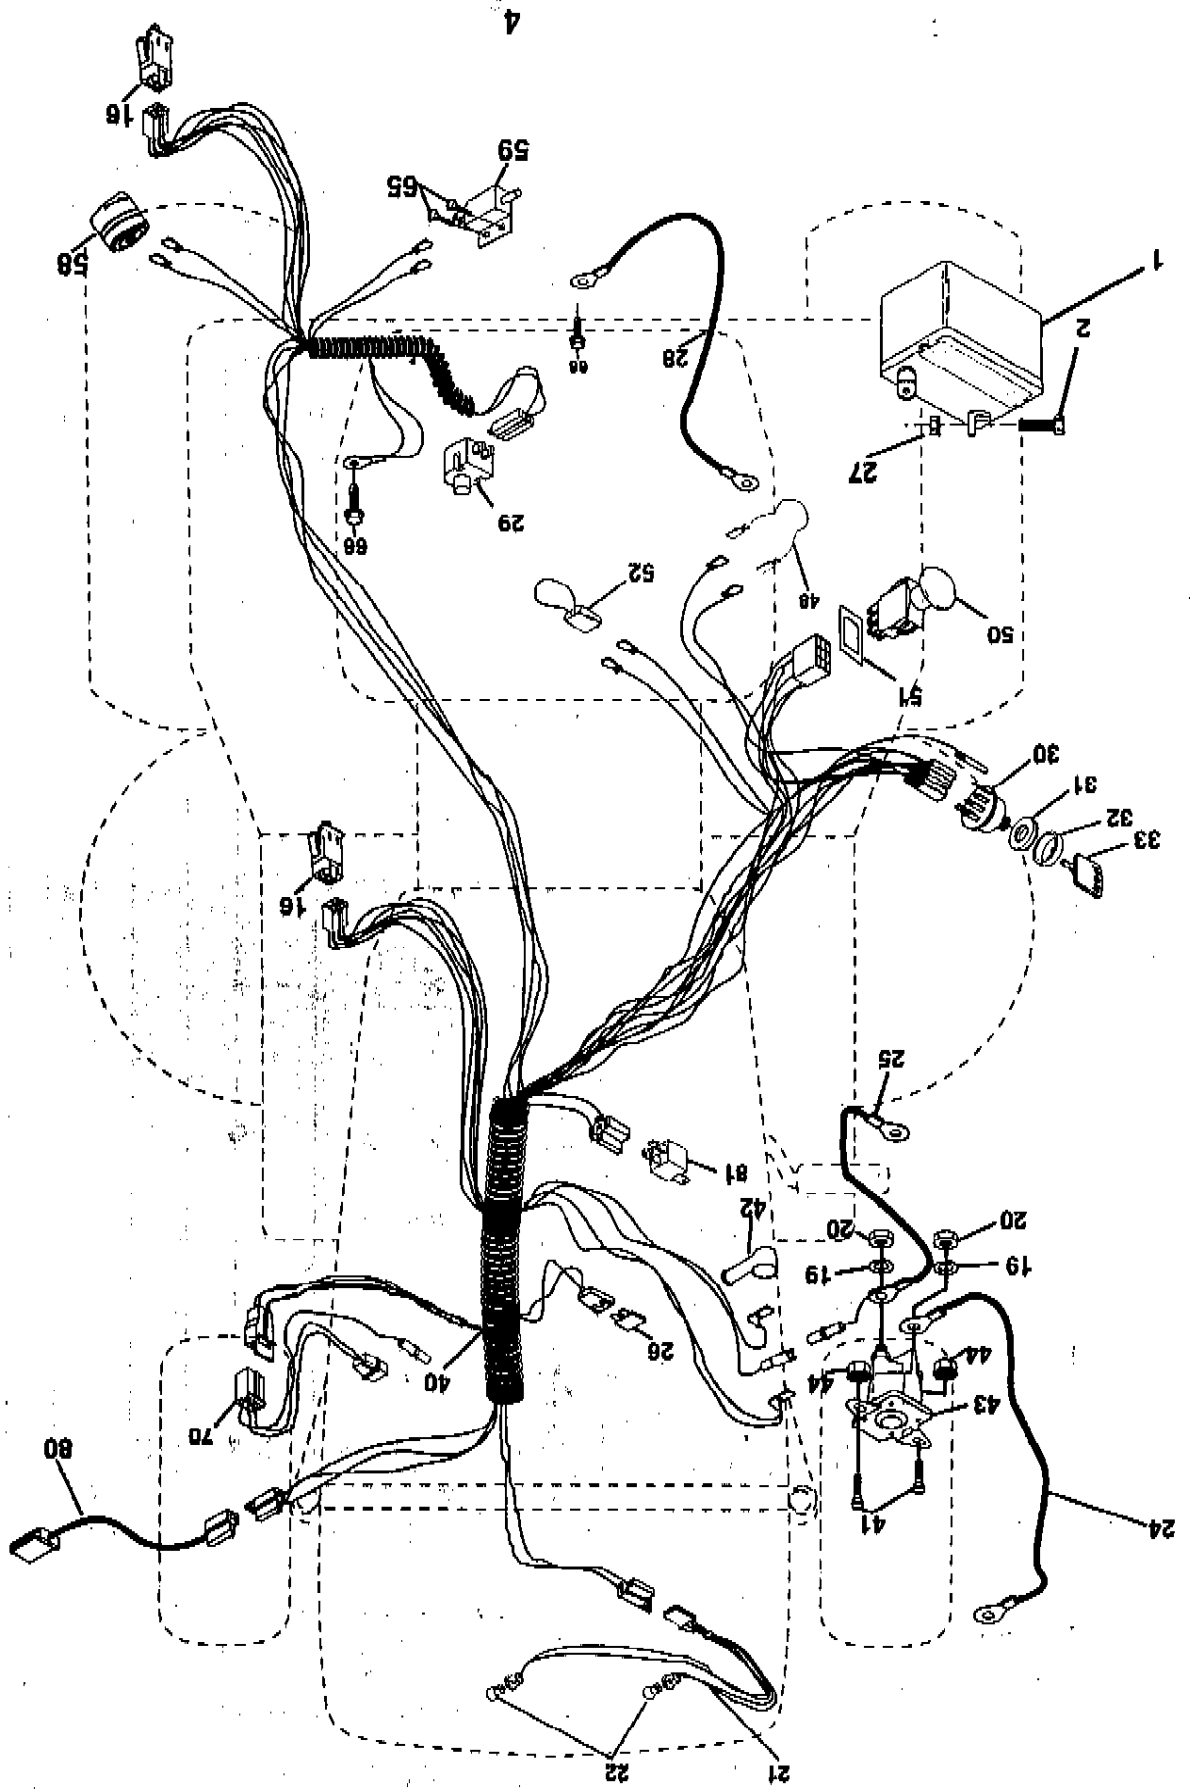

TRACTOR - MODEL NO. RER1236A

ELECTRICAL

REPAIR PARTS

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

ELECTRICAL

KEY PART NO. DESCRIPTION


1	144925	Battery 12 Volt 25 AMP Wet
2	74760412	Bolt Hex Hd 1/4-20 Unc X 3/4
16	153664	Switch Interlock Push-In
19	10090400	Washer Lock 1/4
20	73350400	Nut Jam Hex 1/4-20 Unc
21	166181	Harness Asm Light W/4152J
22	4152J	Bulb Light #1156
24	4799J	Cable Starter 6Ga 11" Red
25	165987	Cable Battery Crd 56" Red
26	166180	Fuse 15 Amp
27	73510400	Nut Keps Hex 1/4-20 Unc
28	1272725X	Cable Ground 6Ga 18" Black
29	160784	Switch Plunger Normal Op Olive
30	140301	Switch Ignition 4Pos W/Lights
31	124211X	Nut Ignition #125
32	141226	Cover Switch Ignition #121
33	122147X	Key Ign Molded Indak
40	166158	Harness Ign Crd Elect
41	71110408	Bolt Flk Fin Hex 1/4-20 Unc X 1/2
42	131563	Cover Terminal Red
43	145673	Solenoid
44	73640400	Nut Keps Bik Hex 1/4-20 Unc
46	140844	Adapter Ammeter
50	154963	Switch PTO 3PDT
51	140405	Ring Retainer PTO
52	141940	Protection Wire Loop
58	165943	Buzzer Crd
59	166299	Switch FBI CRD
65	17211008	Screw Sltip #10-16 x 1/2 Ty-Ab
66	17490608	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
70	166668	Harness Engine B&S Reg W/AFTSO
80	146685	Harness Clutch EVX
81	109748X	Relay Asm

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

CHASSIS AND ENCLOSURES

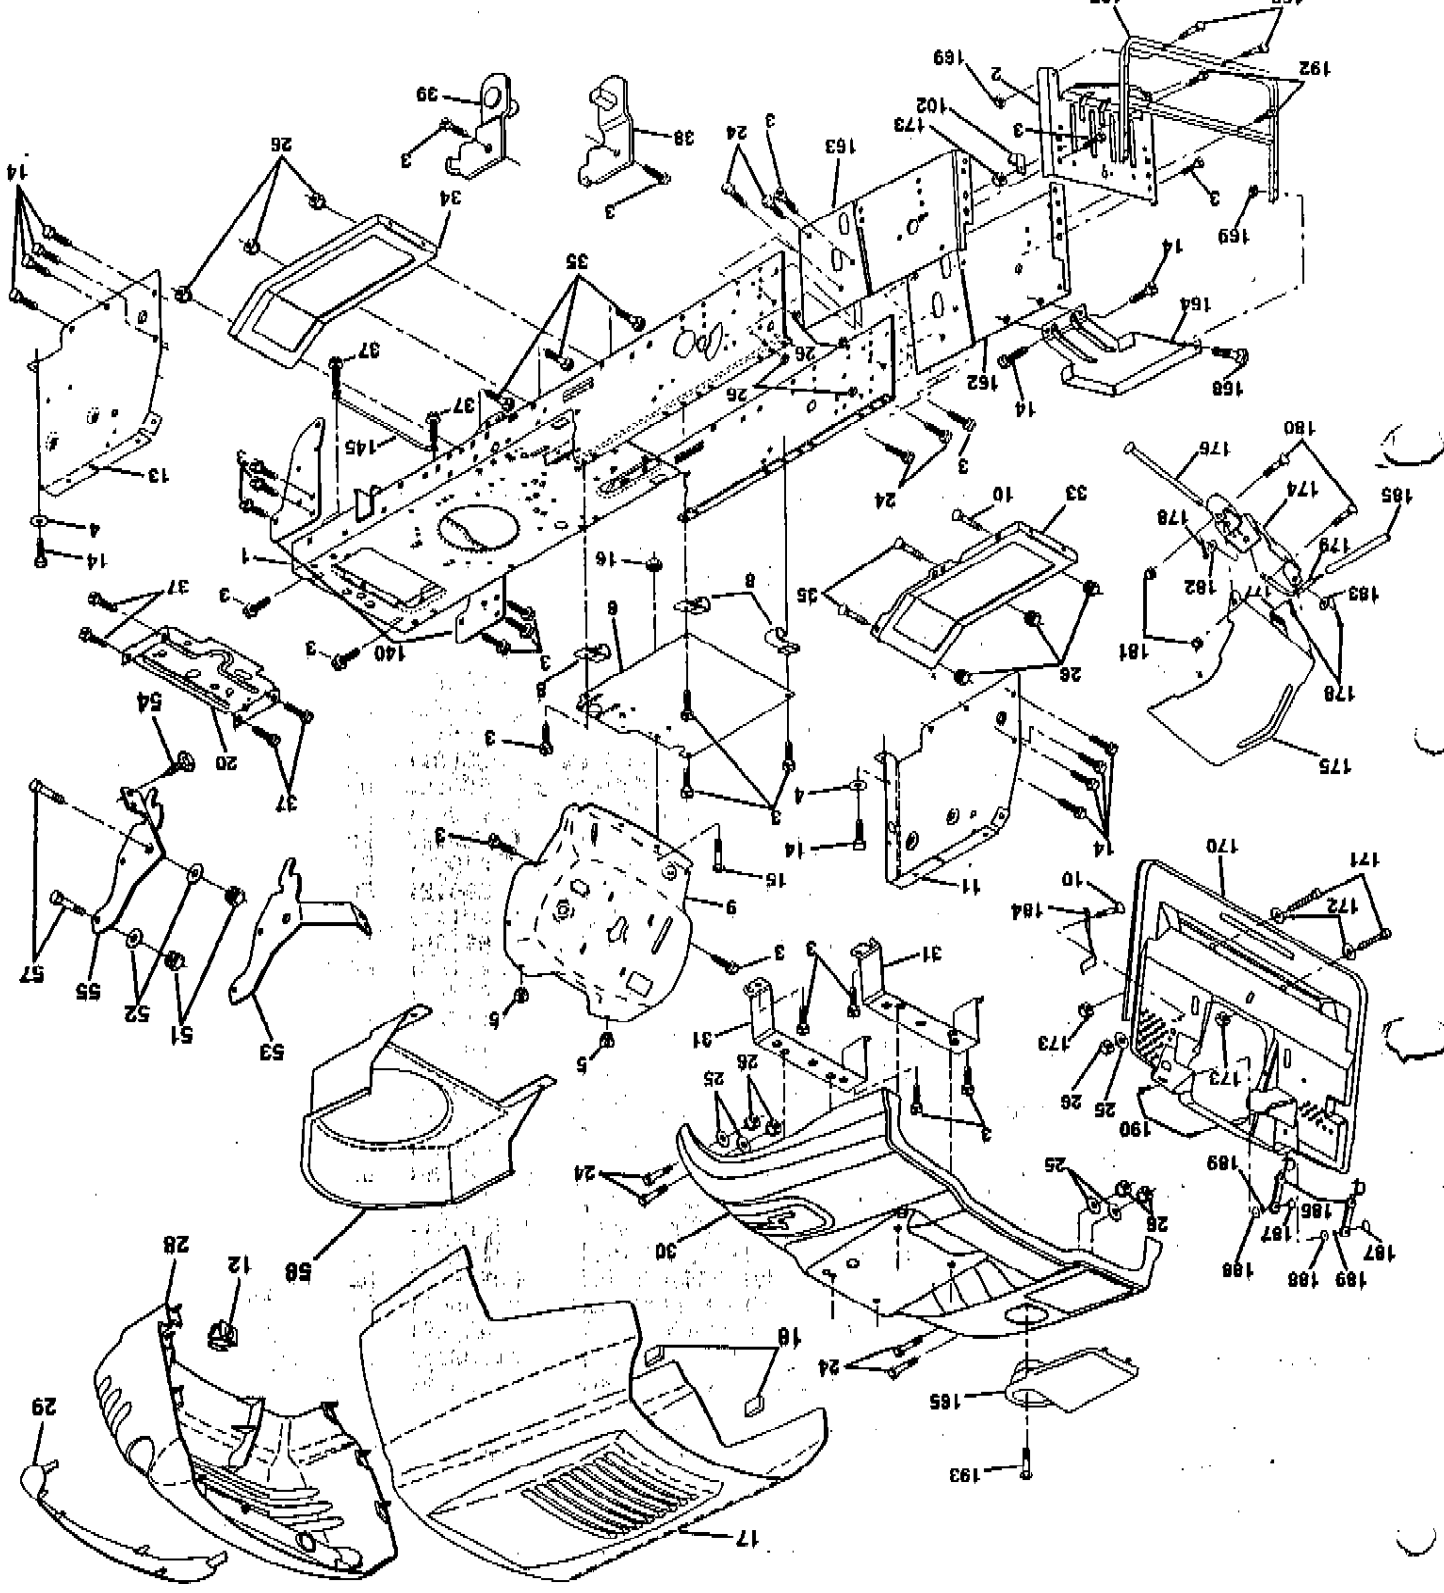

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

CHASSIS AND ENCLOSURES

KEY NO.	PART	DESCRIPTION
1	165480	Chassis Assembly
2	165606	Drawbar
3	17490612	Screw, Thd. Roll. 3/8-16 x 3/4
4	19131216	Washer 13/32 x 3/4 x 16 Gauge
5	155272	Bumper Hood/Dash
6	135923	Saddle
8	126471X	Clip Insulator 13/32 Mtg. Hole
9	147631X011	Dash
10	72140608	Bolt, Carriage 3/8-16 x 3/4
11	155927	Panel, Dash, L.H.
11	145660	Clip, Tinnerman Grille P/L
14	155934X010	Panel, Asm. Dash R.H.
14	17490608	Screw Thdrol 3/8-16 x 1/2
15	74180512	Screw, Machine, Truss Head
16	73510500	Nut
17	159639X505	Hood Assembly
18	126938X	Bumper Hood
20	156437	Plate Mtg. Battery/Fuel Tank
24	74780616	Bolt
25	19131312	Washer 13/32 x 13/16 x 12 Gauge
26	73800600	Nut
9	157373	Grille P/L
29	140273X589	Lens, Grille
30	165714X505	Fender
31	165156	Bracket, Fender Support
33	105476X505	Footrest, L.H.
34	105475X505	Footrest, R.H.
35	72110606	Bolt
37	17490508	Screw Thdrol 5/16-18 x 1/2 TT
38	139888	Pivot Bracket Assembly, L.H.
39	139887	Pivot Bracket Assembly, R.H.
51	73800400	Nut Lock w/Insert 1/4-20 UNC
19091416	Washer 9/32 x 7/8 x 16 Ga.	
144697	Bracket, Grille LH	
161464	Screw Hex WSHD 8-18 x 7/8	
55	144696	Bracket, Grille RH


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

KEY NO.	PART	DESCRIPTION
57	74780412	Bolt, Fin Hex 1/4-20 UNC x .75
58	150127	Duct Air Engine P/Lt
102	2751R	Clip Fuel Line
140	158418	Bracket Front Suspension
145	156524	Rod Pivot Chassis/Hood
162	165672	Bracket Exten Chassis Lh CRD
163	165673	Bracket Exten Chassis Rh CRD
164	165605	Support Battery CRD
165	165742X428	Cover Battery CRD Lt
167	165779	Support Asm. Backplate W/LDMNT
168	72050412	Bolt, RDHD SHT NK 1/4-20 x 1-1/2
169	123976X	Nut, Lock 1/4 LGE FLG Gr. 5 Zinc
170	165607	Cover, Backplate Plastic Black
171	74520640	Bolt, Hex 3/8-16 x 2-1/2 Gr. 5
172	19132016	Washer 13/32 x 1-1/4 x 16 Ga.
173	73510600	Nut, Keys Hex 3/8-16 UNC
174	165939	Bracket Switch FBI CRD
175	166212	Guard Door Rear CRD
176	1288600	Pin Hinge Pivot
177	132796	Spring Bagger Top LH Black
178	76520312	Pin Cotter 3/32 x 3/4 Cad Zinc
179	165942	Rod Pivot FBI CRD
180	74760516	Bolt Hex HD 5/16-18 UNC x 1
181	73680500	Nut Crownlock 5/16-18
182	138200	Washer .365 x .625 x 11 Ga.
183	19131316	Washer 13/32 x 13/16 x 16 Ga.
184	166139	Bracket Actuator Bagger CRD
185	165940	Tube Lever Switch FBI CRD
186	160793	Latch Asm Mulch/Bagger
187	2029J	Nut Weld .327/.304 # 10-24
188	19061218	Washer 9/32 x 3/4 x 16 Ga.
189	10071000	Washer Lock #10
190	71161010	Screw Truss Hd Phil 10-24 x 5/8
192	17490624	Screw Thdrol 3/8-16 x 1-1/4 TT-TT
193	17720410	Screw Hex Thdrol Cut 1/2 x 20 x 5/8
--	5479J	Plug, Button

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

DRIVE

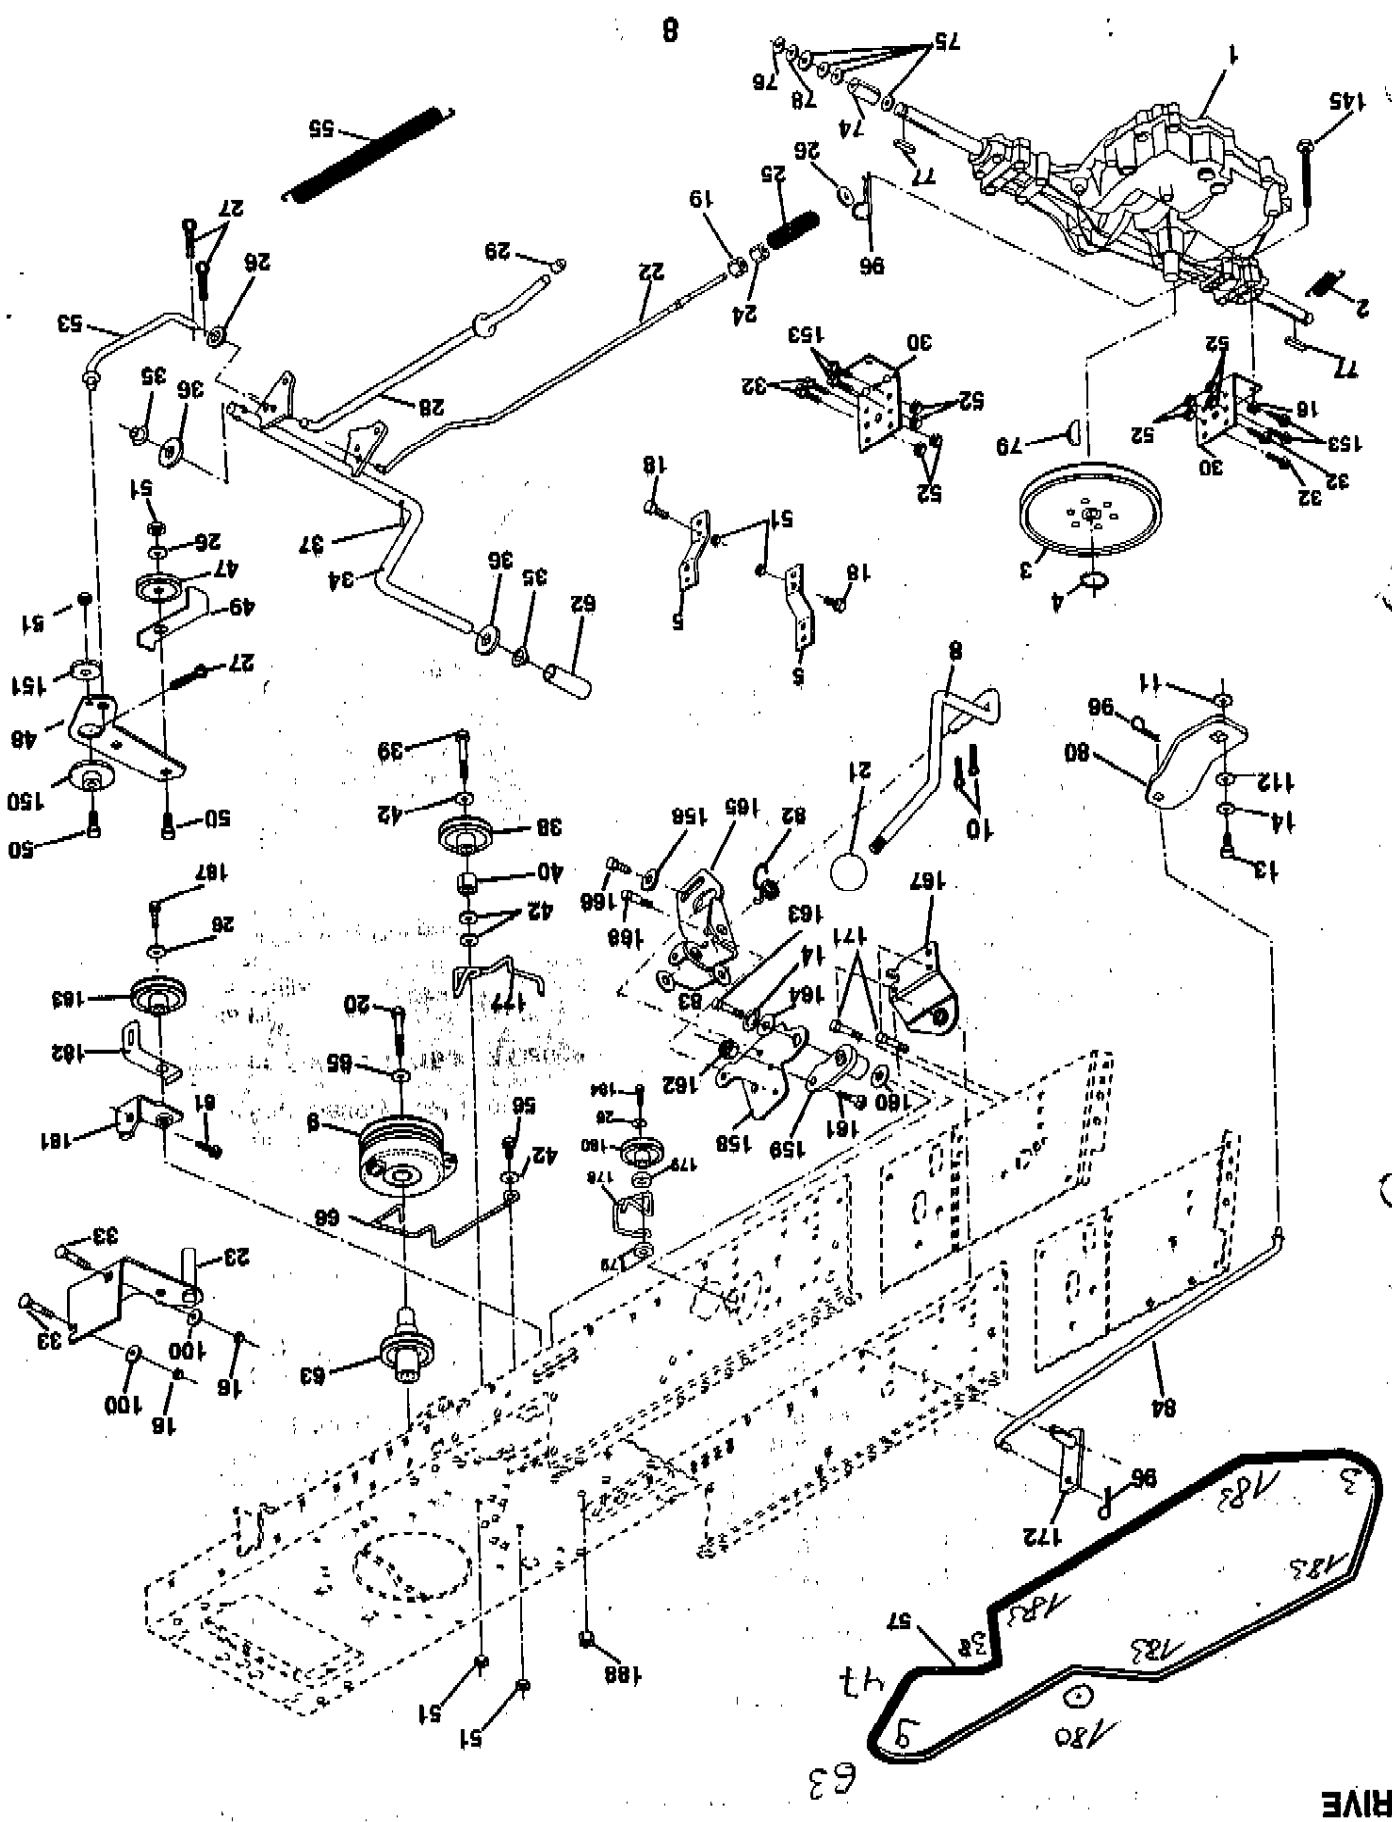

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

PAIVE

NO. KEY PART

NO.	KEY PART	DESCRIPTION
2	146682	Spring Return Brake
3	165999	Pulley Transaxle 7"
4	12000028	Ring Retainer # 5100-62
5	121520X	Strap Torque 30 Degrees
8	165619	Rod Shift Fender Adjust LT
9	167162	Clutch Eie EVX 80 W/Hard Brake
10	76020416	Pin Cotter 1/8 X 1 Cad
11	105701X	Washer Plate Sht 388 Sq Hole
12	74550412	Bolt 1/4-28 Unt Gr 8 W/Patch
16	10040400	Washer Lock Hvy Helical 1/4
18	74780616	Nut Lock Hex w/Ins 5/16-18 Unc Pl
19	73800600	Nut Lock 3/8-16 Unc
20	150280	Bolt, Hex 7/16-20 x 4-1/4 5 Ga 1.38
21	106933X	Knob Rd 1/2-13 Plstc. Thds Black
22	165811	Rod Brake PMST CRD
23	154978	Bracket Asm Clutch Mfg, EVX 97
24	73350600	Nut Hex Jam 3/8-16 Unc
25	106888X	Spring Rod Brake 2.00 Zinc
26	19131316	Washer 13/32 X 13/16 X 16 Ga
27	76020412	Pin Cotter 1/8 X 3/4 Cad
29	71673	Cap Brake Parking LT/RT
30	130807	Bracket Mig Transaxle
32	74760512	Bolt Hex Hd 5/16-18unc X 3/4
33	72140506	Bolt Rhd Sqnk 5/16-18 Unc x 3/4
34	165496	Shaft Asm Pedal Foot Crd
35	120183X	Bearing Nylon Bk 629 Id
36	19211616	Washer 21/32 X 1 X 16 Ga
37	1572H	Pin Roll 3/16 X 1"
38	165936	Pulley Flat Composite 3.06"
42	19131312	Washer 13/32 X 13/16 X 12 Ga
47	127783	Pulley Idler V Groove Plastic <i>polyamide 116</i>
48	154407	Ballcrank Clutch Grnd Drive
49	123205X	Retainer Belt Style Spring
50	74760624	Bolt Hex Hd 3/8-16unc X 1-1/2
51	73680600	Nut Crownlock 3/8-16 Unc
52	73680500	Nut Crownlock 5/16-16
53	105710X	Lnk Clutch 7.66
55	105709X	Spring Return Clutch 6.75
56	74760620	Bolt Fin Hex 3/8-16unc X 1-1/4
57	165631	V-Belt Key 111" Pmst Crd
61	17490612	Screw Thdrol 3/8-16 x 3/4 Ty-Ti

Transaxle Peerless Model 206-546
Order parts from transaxle manufacturer

NO. KEY PART DESCRIPTION


NO.	KEY PART	DESCRIPTION
62	8883R	Cover Pedal Bk Round
63	145868	Pulley, Clutch Elect
65	10040700	Washer Lock Hvy Hcil Spr 7/16
66	154778	Keeper Belt Engine F-Proof
74	137057	Spacer Axle
75	121749X	Washer 25/32 X 1 1/4 X 16 Ga
76	12000001	E-ring #5133-75
77	123583X	Key Square 2.0 X .1845/.1865
78	121748X	Washer 25/32 X 1-5/8 X 16 Ga
79	2228M	Key Woodruff #9 3/16 x 3/4-5/8 42.50 5c
80	145090	Arm Shift Pmst 20" Tires
82	123782X	Spring, Torsion T/A
83	19171216	Washer 17/32 x 3/4 x 16 Ga.
84	165621	Link Shift CRD PMST 20"
96	4497H	Retainer Spring 1" Zinc/Cad
100	19111216	Washer 11/32 x 3/4 x 16 Ga.
112	19091210	Washer 9/32 x 3/4 x 10 Ga.
145	74490540	Bolt Hex Flghd 5/16-18 x Gr. 5
150	165860	Bushing Ballcrank Grd Drive
151	19133210	Washer 13/32 X 2 X 10 Ga.
153	74760516	Bolt Hex Hd 5/16-18unc x 1
156	166002	Washer Sfrnd 5/16 ID x 1.0 x .125 Tk
158	165589	Bracket Shift Mount
159	165494	Hub Tapered Flange Shift Lt
160	19292016	Washer 29/32 x 1-1/4 x 16 Ga.
161	72140406	Bolt Rhd Sqnk 1/4-20 x 3/4 Gr 5
162	73680400	Nut Crownlock 1/4-20 Unc
163	74780416	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
164	19091010	Washer 5/8 x .281 x 10 Ga.
165	165623	Bracket Pivot Lever
166	166880	Screw 5/16-18 x 5/8 Tl Yellow
167	165588	Bracket Support Shift CRD
168	165492	Bolt Shoulder 5/16-18 x .561 Tl
171	17490608	Screw Thdrol 3/8-16 x 1/2 Ty-Ti
172	165635	Shaft Asm, Shift Front Crd Pmst
177	165932	Keeper Flat Idler 3.06" Crd
178	165933	Keeper Belt Idler 1.88" CRD
179	120958X	Washer Sintered
180	165630	Pulley Flat Idler 1.88" CRD
181	165797	Bracket Idler Ground Drive CRD
182	165634	Keeper Belt 2.5" Od V-Idler CRD
183	165626	Pulley V-Idler 2.50" Od CRD
184	17490644	Screw Hex Wsh Thdrol. 3/8-16 x 2-3/4
187	17490620	Scrw Thdrol 3/8-16 x 1-1/2 Ty-Ti
188	110436X	Bushing Snap Split Bk

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

STEERING ASSEMBLY

TRACTOR - MODEL NO. RER1236A

REPAIR PARTS

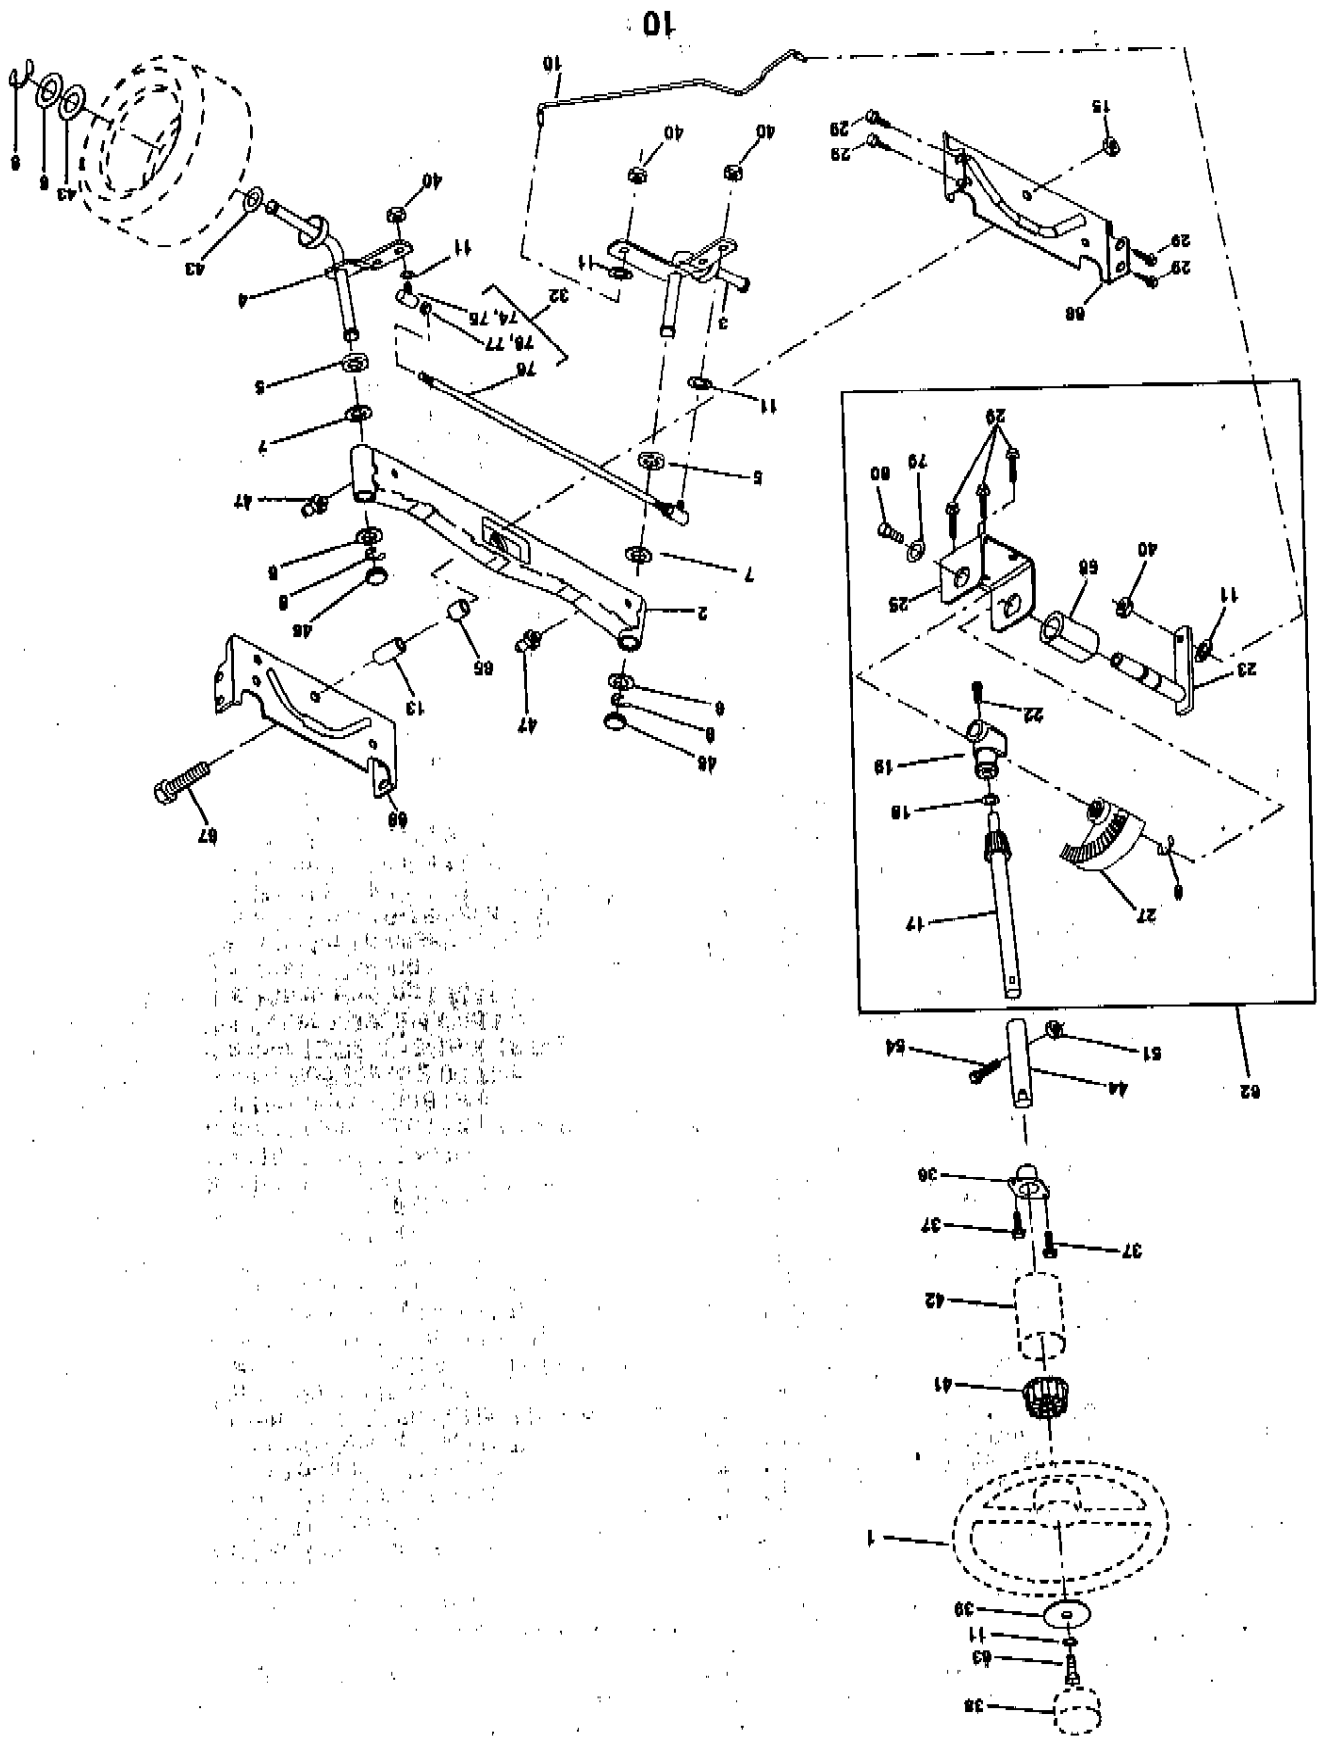

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

STEERING ASSEMBLY


KEY	PART NO.	DESCRIPTION
1	133741	Steering Wheel
2	137094	Front Axle Assembly
3	157479	Spindle Assembly, L.H.
4	157478	Spindle Assembly, R.H.
5	62664	Bearing, Race, Thrust, Hardened
6	121748X	Washer 25/32 x 1-5/8 x 16 Gauge
7	19272016	Washer 27/32 x 1-1/4 x 16 Gauge
8	12000029	Ring, Klip
10	154432	Link, Drag
11	10040600	Washer, Lock
13	167118	Spacer Axle
15	73901000	Nut, Lock, Flange 5/8-11 UNC
17	156546	Shaft Assembly, Steering
18	5709	Washer, Thrust .515 x .750 x .038
19	160395	Support, Shaft
22	165857	Screw Hex Wshd Torx
23	165851	Pittman Shaft Assembly
25	154406	Bracket, Steering
27	136874	Gear, Sector
29	17490612	Screw, Thd., Roll. 3/8-16 x 3/4
32	137347	Rod, Tie
36	155099	Bushing, Steering
37	152927	Screw TT #10-32 x 5 x 3/8 Flange
38	133742	Cap Wheel Steering
39	19133808	Washer 13/32 x 2-3/8 x 8 Gauge
40	7810H	Nut Lock Center 3/8-24 Unt
41	100711L	Adaptor, Steering Wheel
42	145054	Boot, Steering Dash P/L Mtl
43	121749X	Washer 25/32 x 1-1/4 x 16 Gauge
44	153720	Extension Steering Non-Adjust
46	121232X	Cap, Spindle
47	6855M	Fitting, Grease
51	73800500	Nut Lock Hx W/lms 5/16-18 UNC
54	74780520	Bot Fin Hex 5/16-18 UNC x 1-1/4
62	167902	Kit, Steering Assembly, Service
63	74780616	Bot Fin Hex 3/8-16 unc. x 1 Gr. 5
65	154780	Spacer Axle
66	154404	Bearing Arm Pittman
67	74781044	Bolt Fin Hex 5/8-11unc x 2-3/4
68	154429	Brace Axle
74	109850X	Joint Asm Ball Rh Service
75	109851X	Joint Asm Ball Lh Service
76	137156	Rod Tie Ball J Adj, VGT Service
77	73700600	Nut Hex Jam 3/8-24 Unt Lh
78	73360600	Nut Hex Jam 3/8-24
79	19132012	Washer 13/32 x 1-1/4 x 12 Ga
80	74950612	Bolt Hex Nylon 3/8-16 x 3/4

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR-MODEL NO. RER1236A

SEAT ASSEMBLY

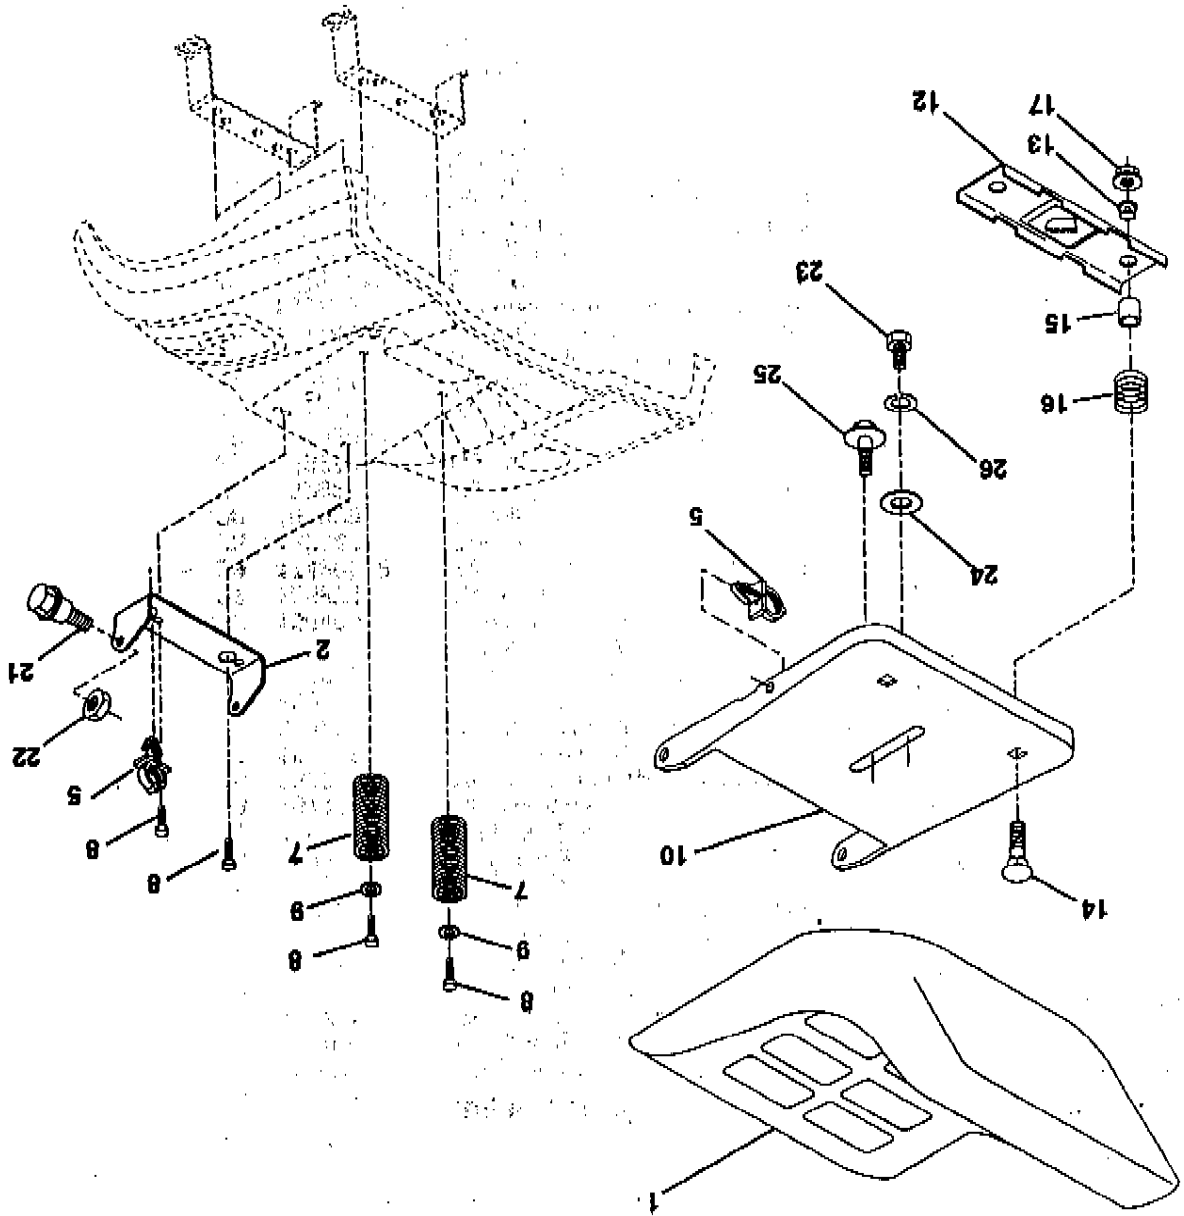

KEY NO.	PART NO.	DESCRIPTION
---------	----------	-------------

1	127426X	Seat
2	140551	Bracket Pnt Pivot Seat (blk)
5	145006	Clip Push In Hinged
7	124181X	Spring Seat Cprsn 2 250 Bk Zi
8	17490616	Screw Thdrl 3/8-16 X 1 Ty-H
9	19131614	Washer 13/32 X 1 X 14 Ga
10	155925	Pan Pnt Seat (blk)
12	121246X	Bracket Pnt Mounting Switch
13	121248X	Bushing Snap Bk Nyl 50 Id
14	72050412	Bolt Rdhd Sht Nk 1/4-20x1-1/2


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

15	134300	Spacer Spilt .28 X .96 Zinc
16	121250X	Spring Cprsn 1.27
17	123976X	Nut Lock 1/4 Lge Fig Gr 5 Zinc
21	153236	Bolt Shoulder 5/16-18 Unc-2A
22	73800500	Nut Hex Lock w/lms 5/16-18
23	74780814	Bolt Fin Hex 1/2-13 x 7/8 Gr. 5
24	19171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	127018X	Bolt Shoulder 5/16-18 X 62
26	10040800	Washer Lock 1/2

REPAIR PARTS

TRACTOR--MODEL NO. RER1236A


DECALS

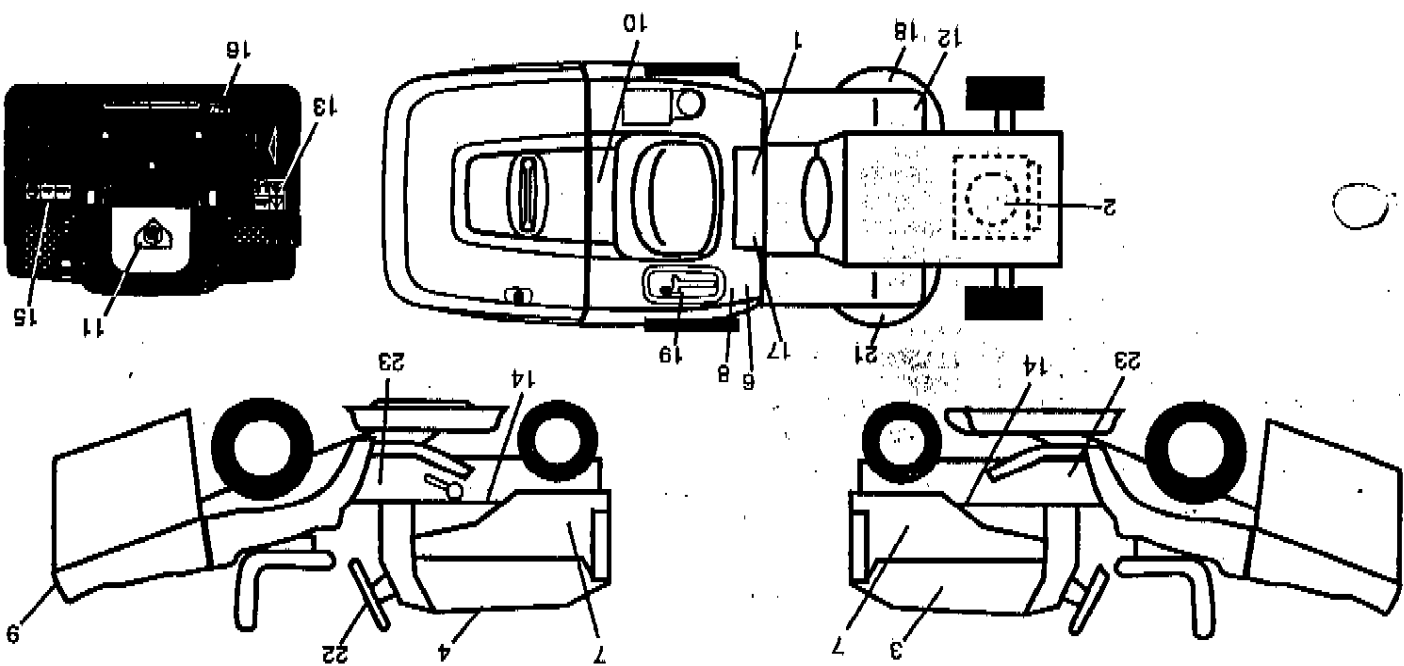

KEY PART NO.	DESCRIPTION
145498	Decal Read Owner's Manual Sym
168408	Decal Hp Engine
153266	Decal Hood R/h
153267	Decal Hood L/h
166963	Decal Console
126187X	Decal 100 DBA
138610	Decal Insert Hood
145437	Decal Europe Stand Ca
132628	Decal Fender Logo
145005	Decal Bat Bar/Pol P/L Sym Wpn
145494	Decal Mower Cut Finger Symbol
159737	Decal Brake/Clutch Symbol Lt
166958	Decal Warn Back Plate CRD

KEY PART NO.	DESCRIPTION
159736	Decal Chassis Hot Muffler
166961	Decal Oper Bag Presence CRD
162598	Decal Drawbar Load Limit
140837	Decal Saddle Brake Parking
135013	Decal Deck Enviro
166963	Decal Console Hydro CRD White
166286	Decal Deck Sch 92 CRD
127075	Decal Strg Whl
167326	Decal Chassis
138311	Decal Lift Handle
167435	Manual Operator's (Euro)
167436	Manual Operator's (Scan)
167437	Manual Parts

WHEELS & TIRES

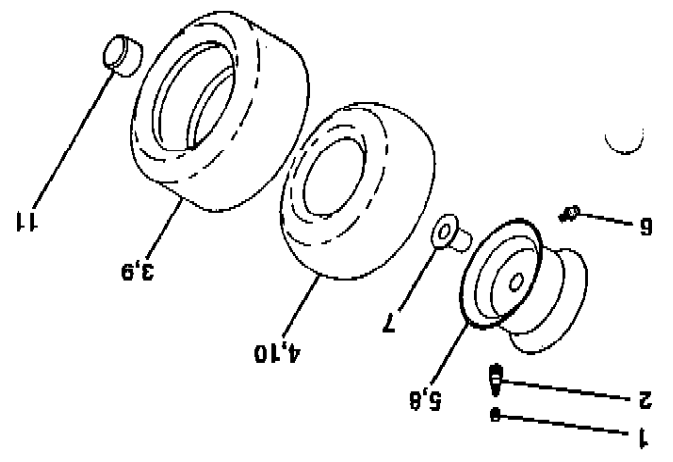


KEY PART NO.	DESCRIPTION
59192	Cap Value Tire
65139	Stem Value
106222X	Tire F Ts 15 X 6.0 - 6 Service
59904	Tube Inner Front #35060
106732X427	Rim Asm 6" Front Service
278H	Fitting Grease
9040H	Bearing Flange
106108X427	Rim Asm 8" Rear Service
124635X	Tire R Ts 18 X 8.5-8 Service
7152J	Tube Rear 9.5 X 8 Service
104757X	Cap Axle Bk 1.50 X 1.00
144334	Sealant, Tire (10 oz. tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

ENGINE

TRACTOR - MODEL NO. RER1236A

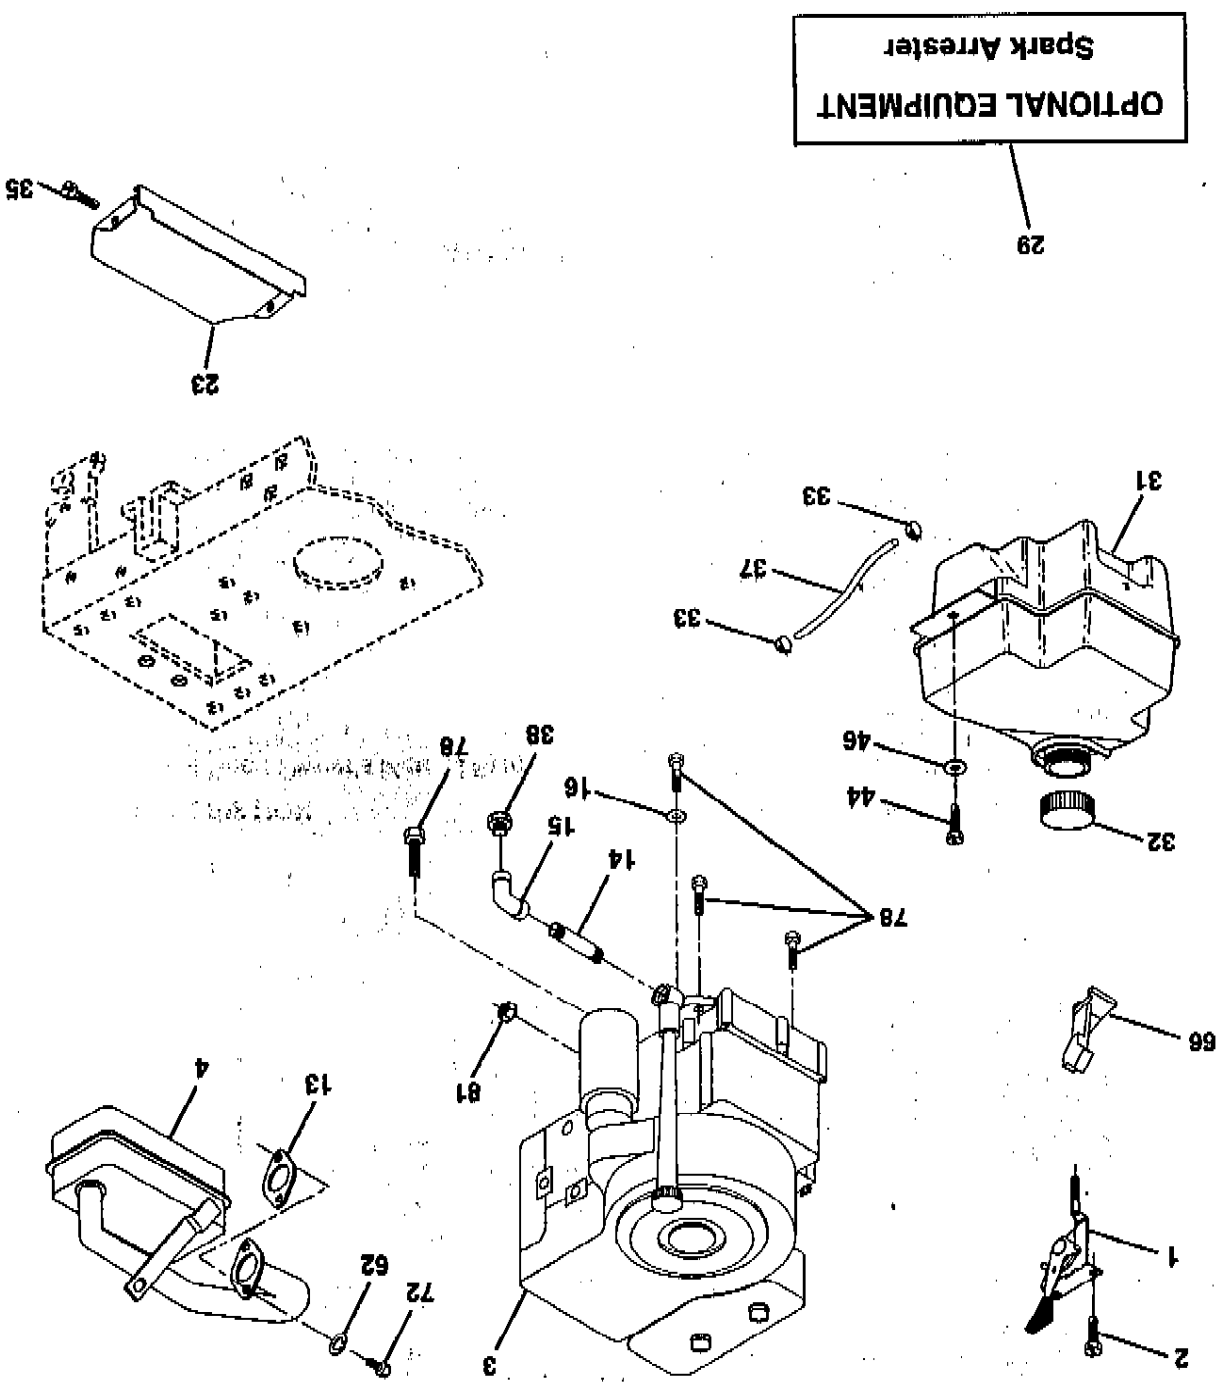

REPAIR PARTS

ENGINE

TRACTOR-MODEL NO. RER1236A

KEY PART NO. DESCRIPTION


1	141359	Control Throt/Ch Lh
2	17720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine Briggs Model 28707
4	137352	Muffler Exhaust B&S Lt
13	165291	Gasket 1 313 Id Tin Plated
14	13280324	Nipple Pipe 3/8 Npt X 3"
15	13200300	Elbow Std 90 Degree 3/8-18 Npt
16	11050600	Washer Lock Ext Tooth 3/8
23	159880	Shield Browning/Debris Guard
29	137180	Arrestor Spark
31	161911	Tank Fuel 2.00 Ft
32	140527	Cap Asm Fuel Top Vent N/Lany
33	123487X	Clamp Hose Bik
35	17490512	Screw, Thdrol 5/16-18 x 3/4 Tyt
37	137040	Line Fuel 20"
38	-----	Plug Oil Drain (Order From Engine Manufacturer)
44	17490412	Screw Hexwsh Thdrol 1/4-20x3/4
46	19091416	Washer 9/32 X 7/8 X 16ga
62	10040500	Washer Lock Hvy Hicl Spr 5/16
66	127951	Stop Throttle 3000 Rpm
72	71070612	Screw Hexhd Cap 5/16-18x3/4
78	17490620	Screw Thdrol 3/8-16x1-1/4 Tyt
81	128861	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. RER1236A

MOWER LIFT

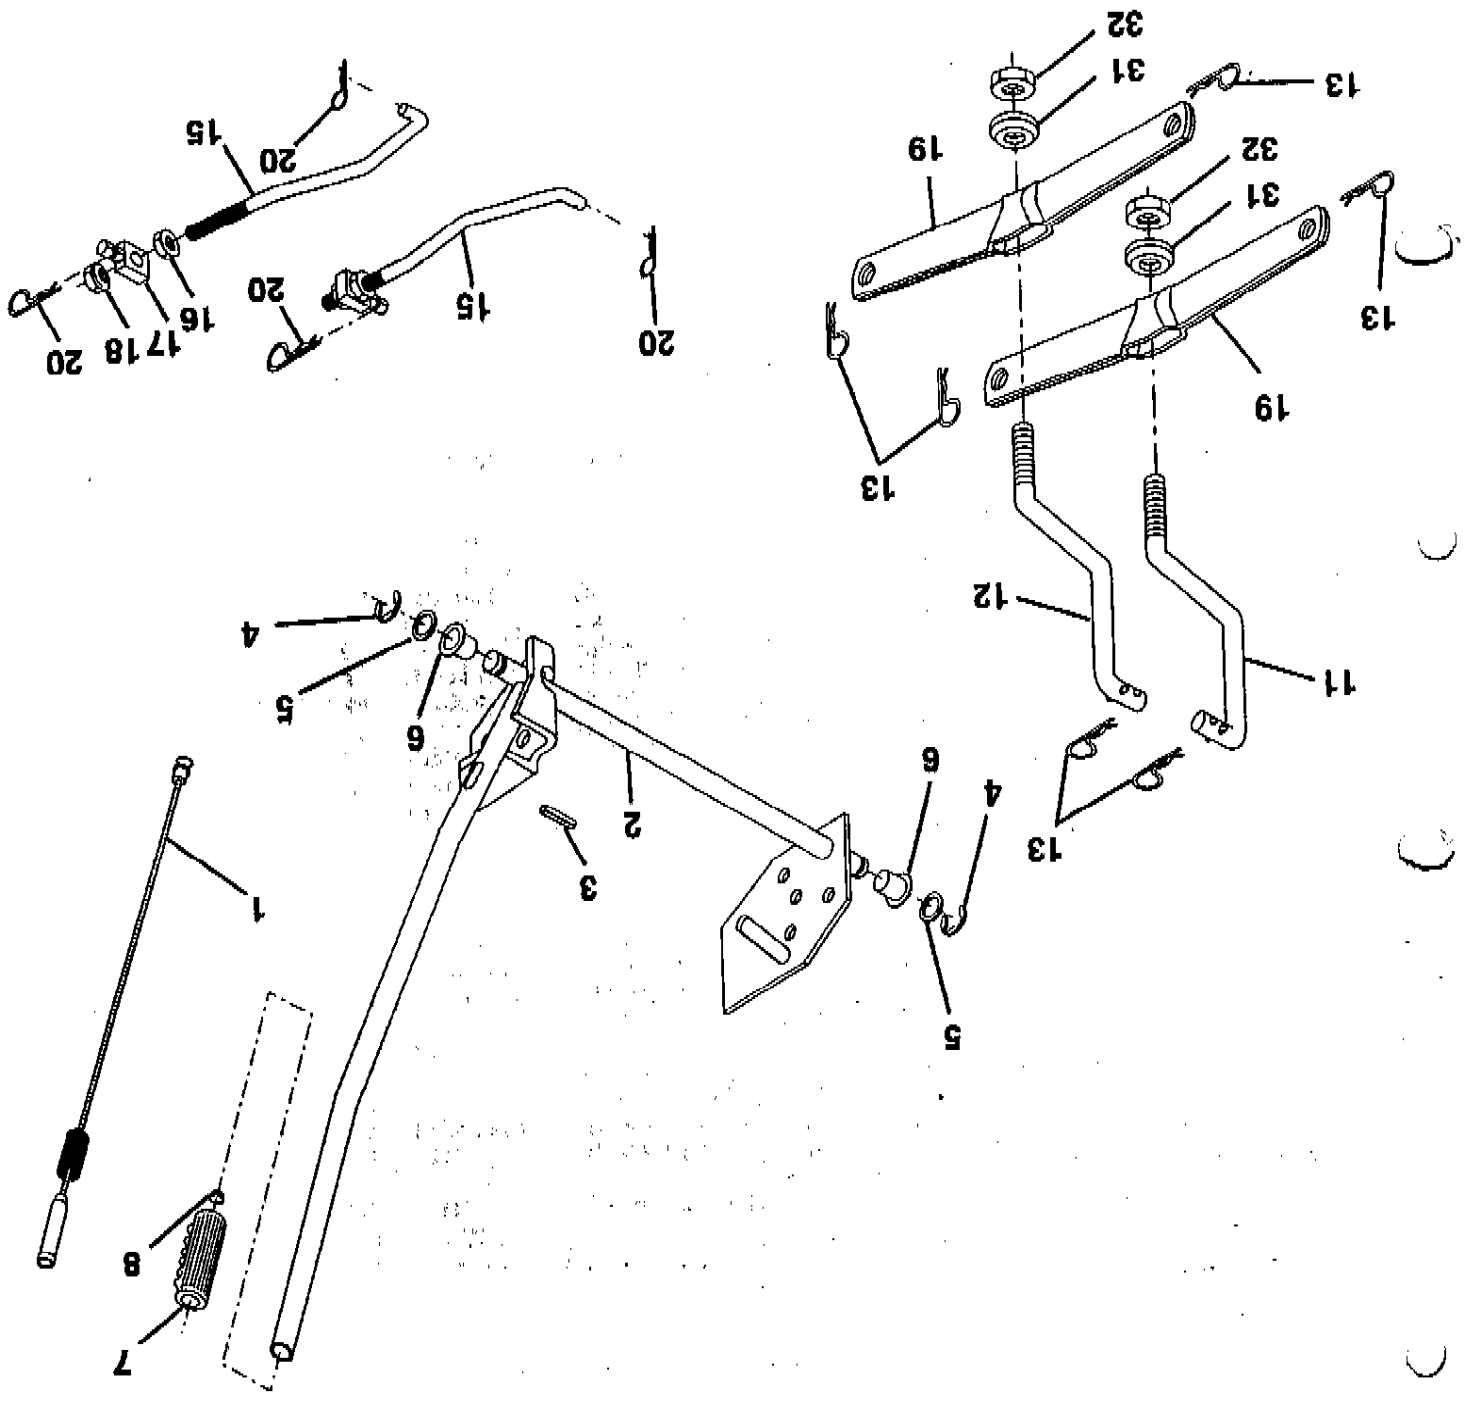

REPAIR PARTS

LOWER LIFT

TRACTOR-MODEL NO. RER1236A

KEY PART NO.	DESCRIPTION
--------------	-------------

1	159460	Washer Asm Inner Spring W/Plunger
2	159471	Shaft Asm. Lift
3	105767X	Pin Groove
4	12000002	E Ring #5133-62
5	19211621	Washer 21/32 x 1 x 21 Ga.
6	120183X	Bearing Nylon
7	109413X	Grp Handle
8	124526X	Button Plunger Black
11	165829	Link Asm Lift L.H.
12	165831	Link Asm Lift R.H.
13	4939M	Retainer Spring
15	127218	Link Front
16	73350800	Nut Jam Hex 1/2-13 Unc
17	130171	Trunion Bik Zinc
18	73680800	Nut Crownlock 1/2-13 Unc
19	139868	Arm Suspension Mower
20	163552	Retainer Spring
31	140302	Bearing, Pvt. Lift, Spherical
32	73540600	Nut Crownlock 3/8-24


NOTE: All component dimensions given in U.S. inches

1 Inch = 25.4 mm

REPAIR PARTS

TRACTOR MODEL NO. HERR1236A

MOWER

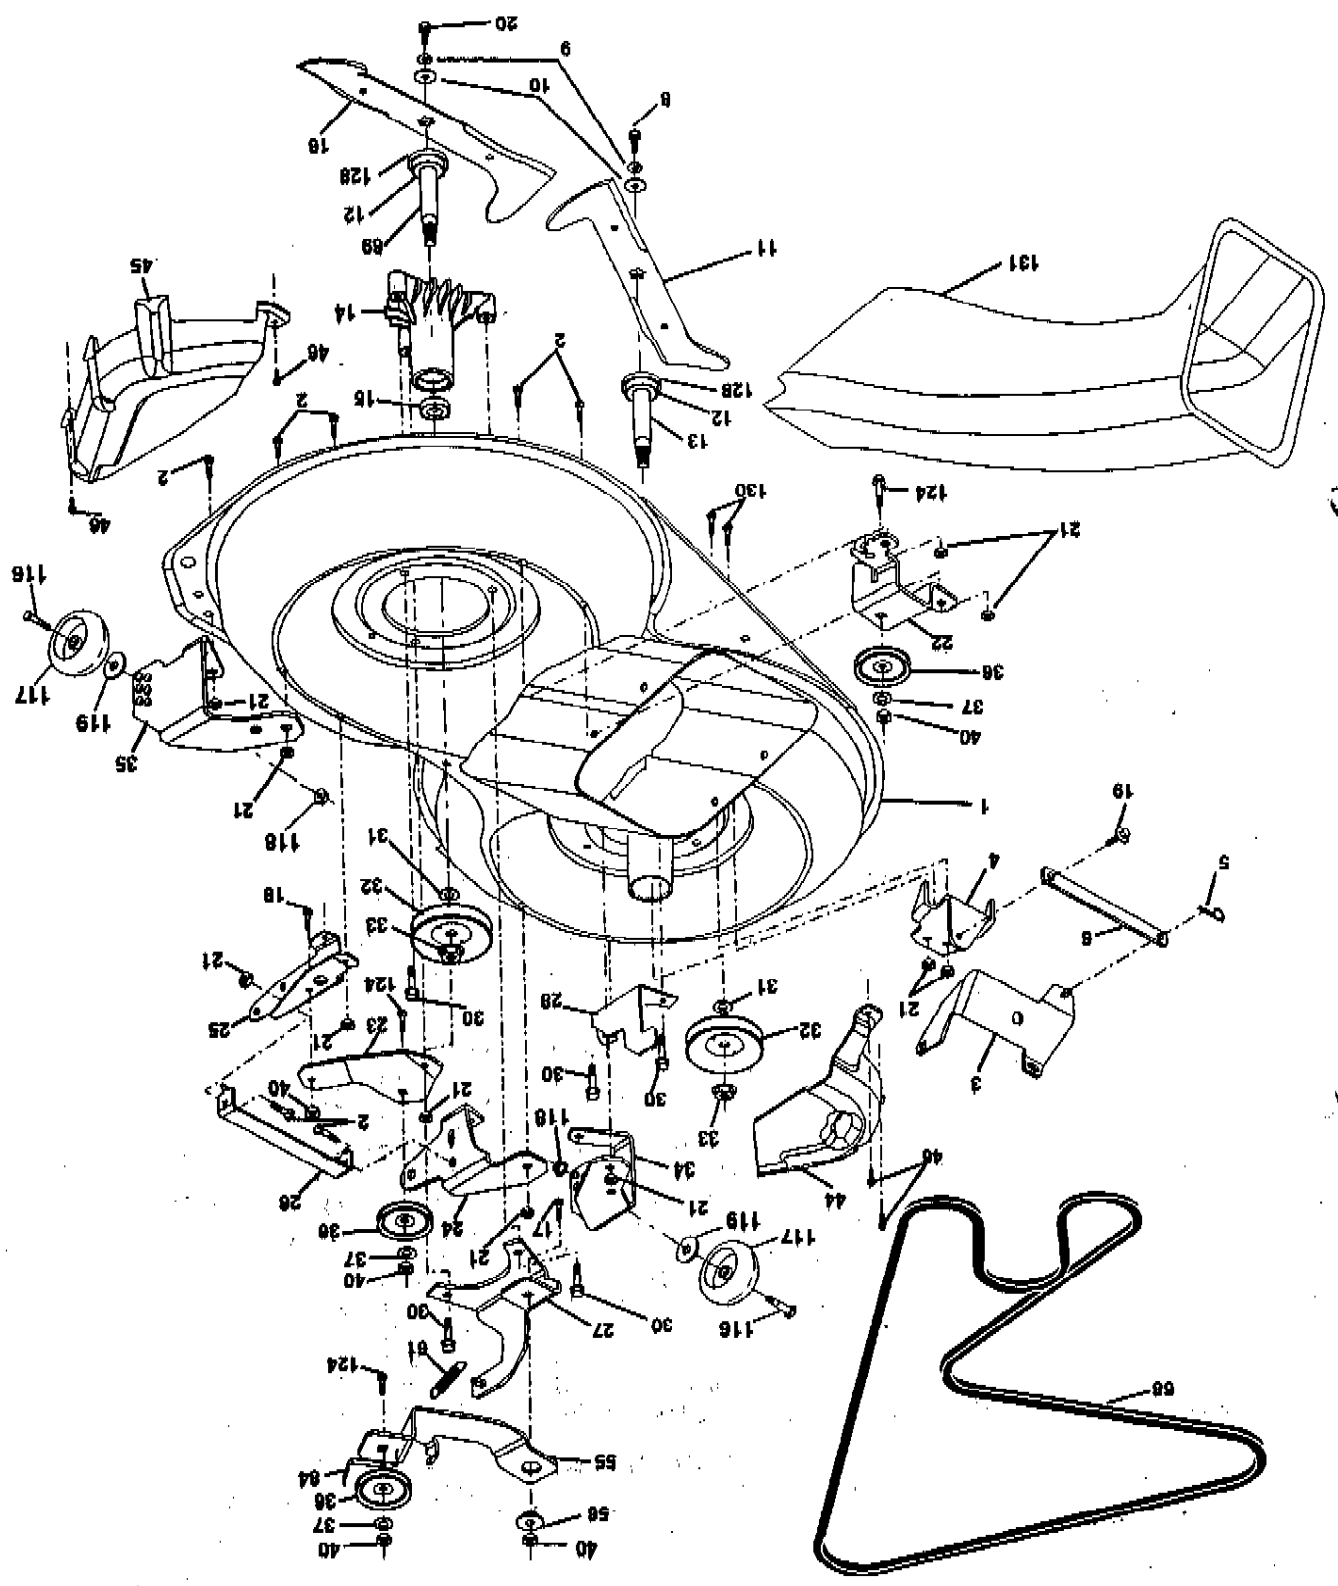

REPAIR PARTS

TRACTOR - MODEL NO. RER1236A

OWER

KEY PART NO.

DESCRIPTION


1	165552	Housing Asm. Mower 92 CRD
2	72140508	Bolt Rhdd Sqnk 5/16-18 Unc x 3/4
3	1655569	Bracket Asm. S-Bar Chass 92 CRD
4	1655558	Bracket Bar Sway Deck 92 CRD
5	4939M	Retainer Spring
6	1655557	Bar Sway 92 CRD
8	650857	Bolt 3/8-24 x 1.25 Gr8 Patched
9	10030600	Washer Lock Hvy 3/8 Unplated
10	140296	Washer Hard Blade Mower vented
11	165560	Blade 3-1 Lh 92 CRD
12	129895	Bearing Ball #6204 (Mandrel)
13	137645	Shaft Asm. W/Lower Bearing 5 1/2
14	128774	Housing Mandrel Vented (Machd)
15	110485X	Bearing Ball Mandrel
16	165561	Blade 3-1 Rh 92 CRD
17	72140610	Bolt Carriage 3/8-16 x 1-1/4
18	72110608	Bolt Rhdd Sqnk 3/8-16 x 1 Gr5
19	132827	Bolt Shoulder 5/16-18 Thd Form
20	165484	Bolt 3/8-24 x 1.25 Gr8 Pich Lhthd
21	73680500	Nut Crown Lock 5/16-18
22	165243	Bracket Idler Spt Rh 92 CRD
23	165446	Bracket Idler Spt Rh 92 CRD
24	165242	Bracket Suspension Lf 92 CRD
25	165244	Bracket Suspension Rf 92 CRD
26	165237	Brace Support Susp Ft CRD
27	165568	Bracket Asm. Susp Rh 92 CRD
28	165567	Bracket Asm. Susp Lh 92 CRD
30	157722	Screw Thd Rolling Washer Head
31	129963	Washer Spacer Mower Vented
32	153531	Mandrel Pulleys 36 & 46

KEY PART NO.

DESCRIPTION

33	137266	Nut Fig Top Lock Cntr B 9/16
34	165239	Bracket Gauge Wheel Lt 92 CRD
35	165238	Bracket Gauge Wheel Rt 92 CRD
36	146763	Pulley Idler V-Groove Dim 4.25
37	19131316	Washer 11/32 x 13/16 x 16 Ga
40	73680600	Nut Crownlock 3/8-16 Unc
44	165724	Cover Mandrel Lh 92 CRD
45	165556	Cover Mandrel Rh 92 CRD
46	137729	Screw Thd Roll 1/4-20 x 5/8
55	165445	Arm Idler 92 CRD
56	122052X	Spacer Retainer PM Mower
61	165945	Spring Tension Belt
68	165555	Hex-Belt 92 Mower 105AA
69	165482	Shaft Asm W/Lwr Brg Rh Thd CRD C 20
84	156085	Keeper Belt Idler
116	137644	Bolt Shoulder
117	133957	Wheel Gage Donut Wide
118	73930600	Nut Centerlock 3/8-16 Unc
119	19121414	Washer 3/8 x 7/8 x 14 Ga.
124	72110612	Bolt Carr Sh 3/8-16 x 1-1/2 Gr5
128	153390	Washer Felt
130	72110506	Bolt Rhddsqnk 5/16-18 Unc x 3/4
131	165661	Chute Bagger CRD 92cm
--	130794	Mandrel Asm Service (5 or 6 blades)
--	165579	Mandrel Asm CRD Lh Threads SVC(6 or 7)
--	165578	Deck Mower Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

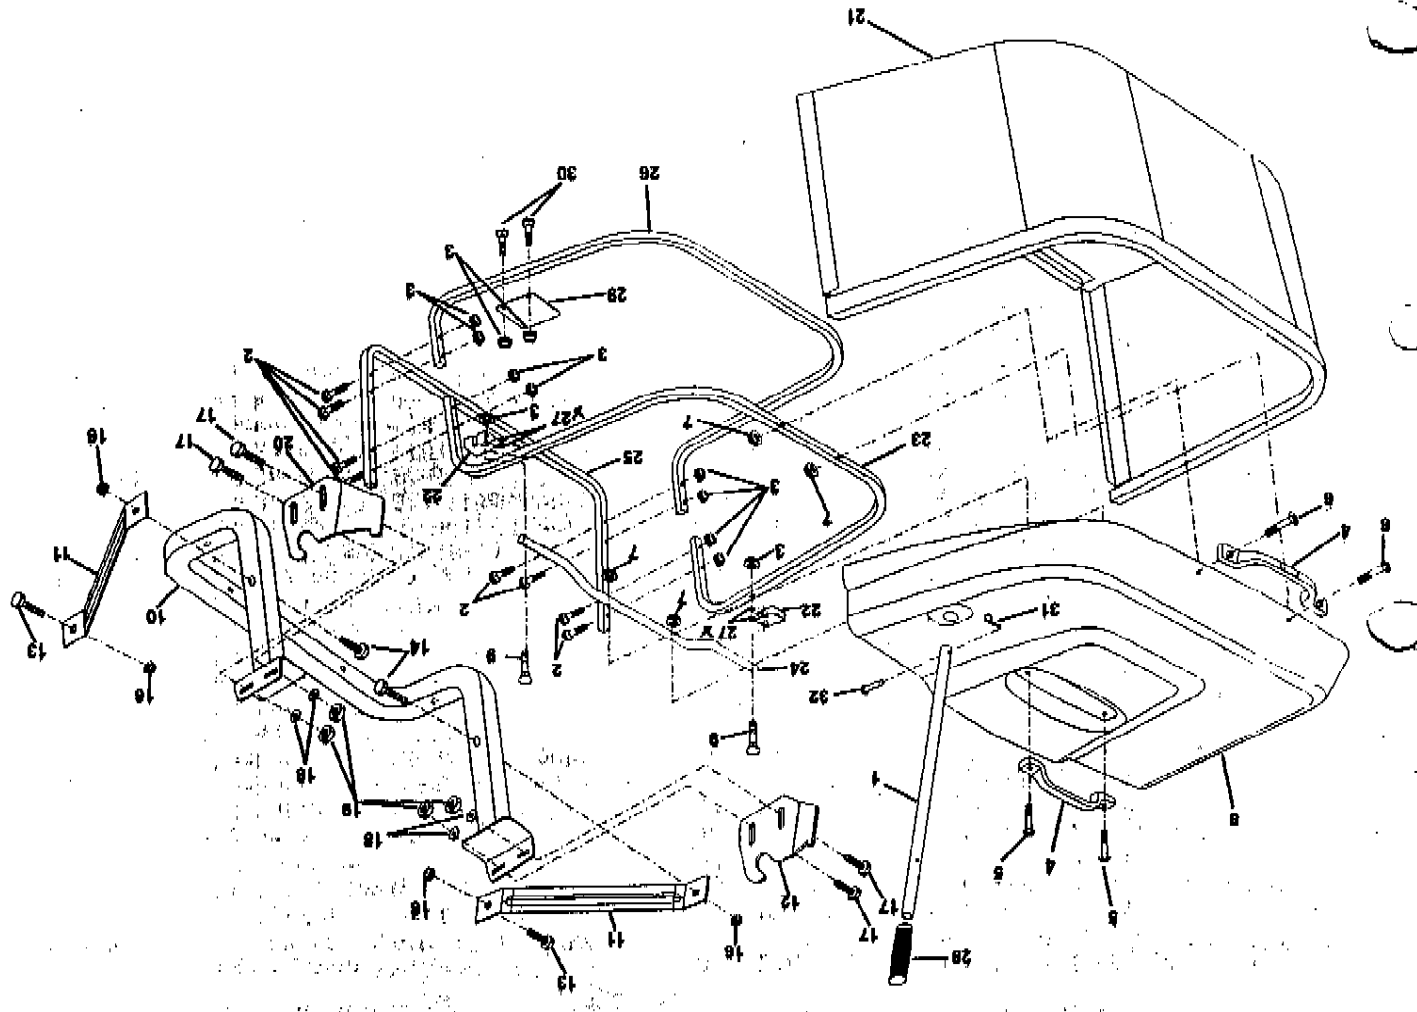

TRACTOR-MODEL NO. RER1236A

BAGGER

REPAIR PARTS

REPAIR PARTS

TRACTOR - MODEL NO, RER1236A

AGGER

KEY PART NO. DESCRIPTION

1	165249	Tube Handle Bagger CRD
2	72140416	Bolt Carriage 1/4-20 x 2.0 Gr.5
3	123976X	Nut Lock 1/4 Lge Fig Gr. 5 Zinc
4	165693	Handle Grab Plastic Black
5	74981024	Screw Pan Head #10-24 x 1.50 Blk
6	74981032	Screw Pan Hd
7	59931	Nut Lock #10-24 Fig Gr.5 Zinc
8	165715X505	Cover Bagger Plastic CRD MS422
9	72140418	Bolt Carriage 1/4-20 x 2.25d x Gr.5
10	165716	Support Asm/Widmt Bagger CRD
11	165719	Bracket Support Upper Bag CRD
12	165735	Bracket Pivot Bagger Lh CRD
13	72110606	Bolt Rdhd Sht Sqnk 3/8-16 x 3/4
14	74520640	Bolt Hex 3/8-16 x 2-1/2 Gr.5
16	73900600	Nut Lock Fig 3/8-16 Unc
17	72140506	Bolt Rdhd Sht Sqnk 5/16 -18 Unc x 3/4
18	19112016	Washer 11/32 x 1.25 x 16 Ga.
19	73900500	Nut Lock Hex W/lns 5/16-18 Unc Pl
20	165736	Bracket Pivot Bagger RH CRD
21	165780	Bag Asm CRD
22	165781	Bracket Side Bagger CRD
23	165782	Tube Upper Bagger CRD
24	165783	Tube Pivot Bagger CRD
25	165784	Tube Front Bagger CRD
26	165785	Tube Lower Bagger CRD
27x	165786	Grommet Extruded Cut/8 <i>Gummstiftzelle</i>
28	165787	Grip Handle Black
29	165839	Plate Stop Bagger handle CRD
30	72140410	Bolt Carriage 1/4-20 x 1 Gr.5
31	4497H	Retainer Spring 1" Zinc/Cad
32	126875X	Rivet Rd Hd Drilled 3/8 Dia

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

532 16 99-97 Dichtungsteilersatz zur neuen Box + Heckschirm