




WESTWOOD GARDEN TRACTORS 1984-1986 PARTS CATALOGUE

CONTENTS

	PAGE No.
S600R, S600E, S800E AND S1000 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRICAL, SEAT, STEERING WHEEL, ROAD WHEELS	2 – 3
T800 AND T1100 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRICAL, SEAT, STEERING WHEEL, ROAD WHEELS	4 – 6
T1200 (DIESEL) AND T1600 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRIC, SEAT, STEERING WHEEL, ROAD WHEELS	7 – 9
MK4 TRACTORS S600, S800, T800, T1100, T1200 DIESEL AND T1600 TRACTORS (T1200 ILLUSTRATED)	10 – 12
30" GRASS CUTTER	13 – 14
36" STANDARD GRASS CUTTER	15 – 16
CONTRA-ROTATING GRASS CUTTERS 32", 36" AND 42"	17 – 18



ILLUSTRATION FOR:
S600R, S600E, S800E AND S1000
Upper Frame, Bonnet & Grille,
Console, Electrical, Seat,
Steering Wheel,
Road Wheels

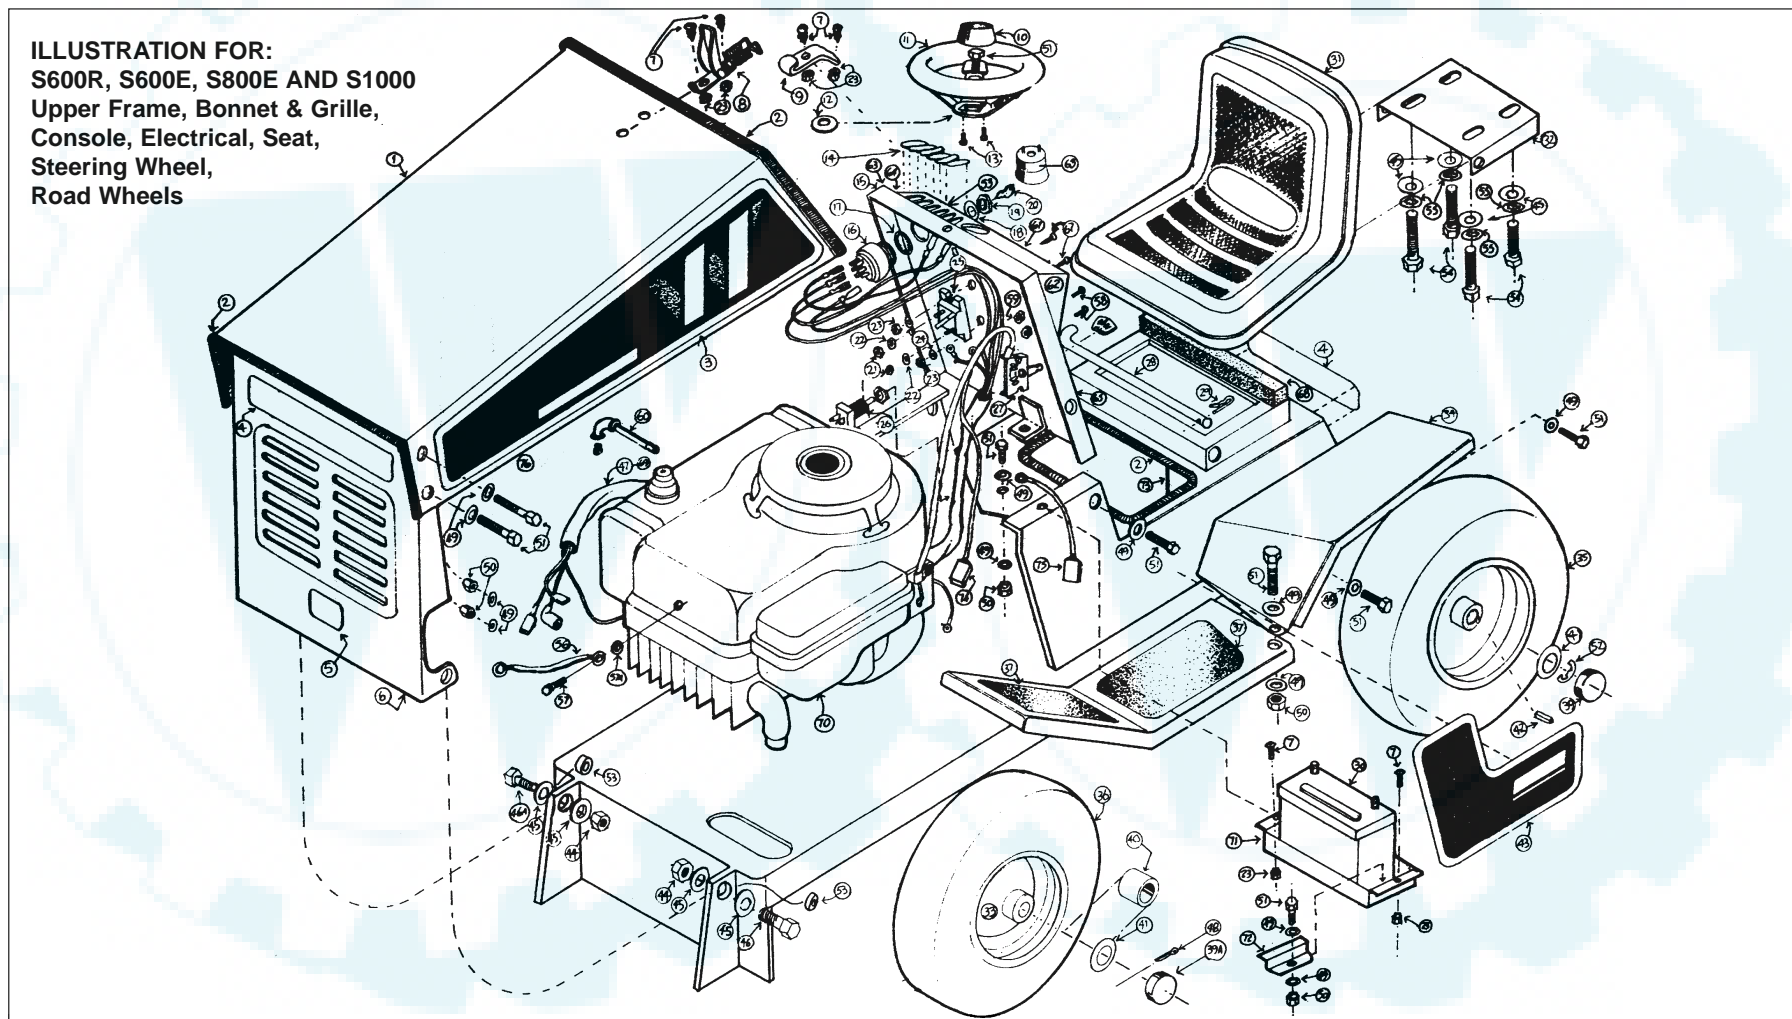




**PARTS LIST FOR:
S600R, S600E, S800E and S1000**

Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty
1	1739	Bonnet Baby 6 & 8 HP	1
2	2057	Beading, Bonnet Front	1
	1489	Beading, Bonnet Rear	1
	1645	Beading, Petrol Can Aperture	1
3	2696	Transfers, Tractor Set S600	1
	2697	Transfers, Tractor Set S800	1
4		N/A	
5		N/A	
6	2344	Grille, Baby 6 & 8 HP	1
7	1734	Screw 2BA x 1/2" LG Recess Pan HD	6
8	1490	Bonnet Catch	1
9	2058	Bonnet Clip	1
10	2059	Steering Column Cap	1
11	2367	Steering Wheel MK.4	1
12	1006	Disc Spring Washer 3/8" ID x 1 3/4" OD	1
13	2060	Pin Steering Column Cap	2
14	2061	Blank for light or switch position	1
14-1	2062	'Safe Brake' and 'Safe Cutter' Light Green 12 V	2
14-2	2063	Light Amber 12V	1
14-3	2064	Ignition Light Red 12V	1
15	2261	Console Body	1
16	1649	Ignition Starter Switch	1
17	2049	Washer, 5/8" Dia. Internal Shakeproof	1
18	1976	Washer, 5/8" ID x 1" OD Plain	1
19	2065	Securing Nut (Ignition Switch)	1
20	2066	Ignition, Starter Key	2
21	1969	Nut, 5/16" UNF Thin Locking Hex.	2
22	2047	Washer, 5/16" Dia. Single Coil Locking	2
23	1053	Nut, 2BA Self Locking Hex.	6
24	1962	Washer, 2BA Ord. Plain, Large	2
25	1530	Solenoid	1
26	1608	Safety Cut Out Switch (cutters)	1

Item	Part No	Description	Qty
27	1507	Throttle/Choke Control	1
28	2067	Seat Hinge Pin	1
29	1225	'R' Clip	1
30	1209	12V Battery	1
31	1660	Seat	1
32	1742	Seat Mounting Plate	1
33	1173	Bush, Oilite, Front Wheels	4
34	1501	Mudguard LH	1
	1502	Mudguard RH	1
35	1746	Rear Wheel, Small	2
	1662	Hub, Rear Wheel	2
	1748	Inner Tube, Rear Wheel, Small	2
	1747	Tyre, Rear Wheel, Small	2
36	1749	Front Wheel, Small	2
	1541	Hub Front Wheel	2
	1201	Inner Tube Front Wheel, Small	2
	1163	Tyre, Front Wheel	2
37	1650	Foot Rest Mat, Front (Tractor Set)	1
38		N/A	
39	2068	Hub Cap	4
40	1980	Spacer 3/4" ID x 1 1/4" OD x 3/8" LG	2
41	1099	Washer 1/4" ID x 1 1/4" OD Plain	4
42	1664	Key 3/16" Sq Parallel x 2" LG Refer to Illust. 3	2
44	1324	Nut 3/8" Dia. Self Locking Hex.	2
45	1323	Washer, 3/8" Dia. Ord. Plain	8
46	1966	Bolt, 3/8" UNF x 1" LG. Hex. HD	2
47	2070	Main Wiring Loom, Baby 6 HP	1
	2071	Main Wiring Loom, Baby 8 HP	1
48	1227	Split Pin, 1/8" Dia. x 1 3/4" LG	2
49	1105	Washer, 5/16" Dia. Ord. Plain	28
50	1273	Nut, 5/16" UNF Self Lock Hex.	14
51	1334	Bolt, 5/16" UNF x 3/4" LG. Hex. HD	11
52	1663	'E' Clip for 3/4" Dia. Shaft	2
53		N/A	
54	2034	Setscrew, 3/8" UNC x 3/4" LG. Hex. HD	4

Item	Part No	Description	Qty
55	1633	Washer, 3/8" Dia. Internal Shakeproof	4
56	1498	Bonnet Stay	1
57	2030	Setscrew, 1/4" UNC x 3/4" LG. Hex. HD	1
57A	1331	Washer, 1/4" Dia. Ord. Plain	1
58	2021	M/C Screw 4BA x 1/2" LG Recess Pan HD	2
59	1144	Nut, 4BA Self Locking Hex.	2
60	2074	Drain Pipe & Plug, Engine Oil Baby 6HP	1
	2075	Drain Pipe & Plug, Engine Oil Baby 8HP	1
61		N/A	
62		N/A	
63	2780	Steering Wheel Shroud	1
64		Transfer 'Safe'	
65		N/A	
66		Not Allocated	
67	1735	Machine Screw 2BA x 3/4" LG Recess Pan HD	2
68	2079	Set Spring (Foam Rubber)	1
69	2080	Loom Tie	2
70	2081	Tecumseh 6HP Engine, Recoil Start	1
	2082	Tecumseh 6HP Engine, Electric Start	1
	2083	Briggs & Stratton 8HP Engine Electric Start	1
71	2087	Battery Support Tray	1
72	2088	Restraining Bracket (Battery)	1
73	2089	Lining, Petrol Can Aperture	1
74	2090	Snap on Connector, Battery Term. (Red)	1
75	2091	Snap on Connector, Battery Term. (Blue)	1
76		N/A	
77	1813	Battery Lead, Black	1
78	1814	Battery Lead, Red	1

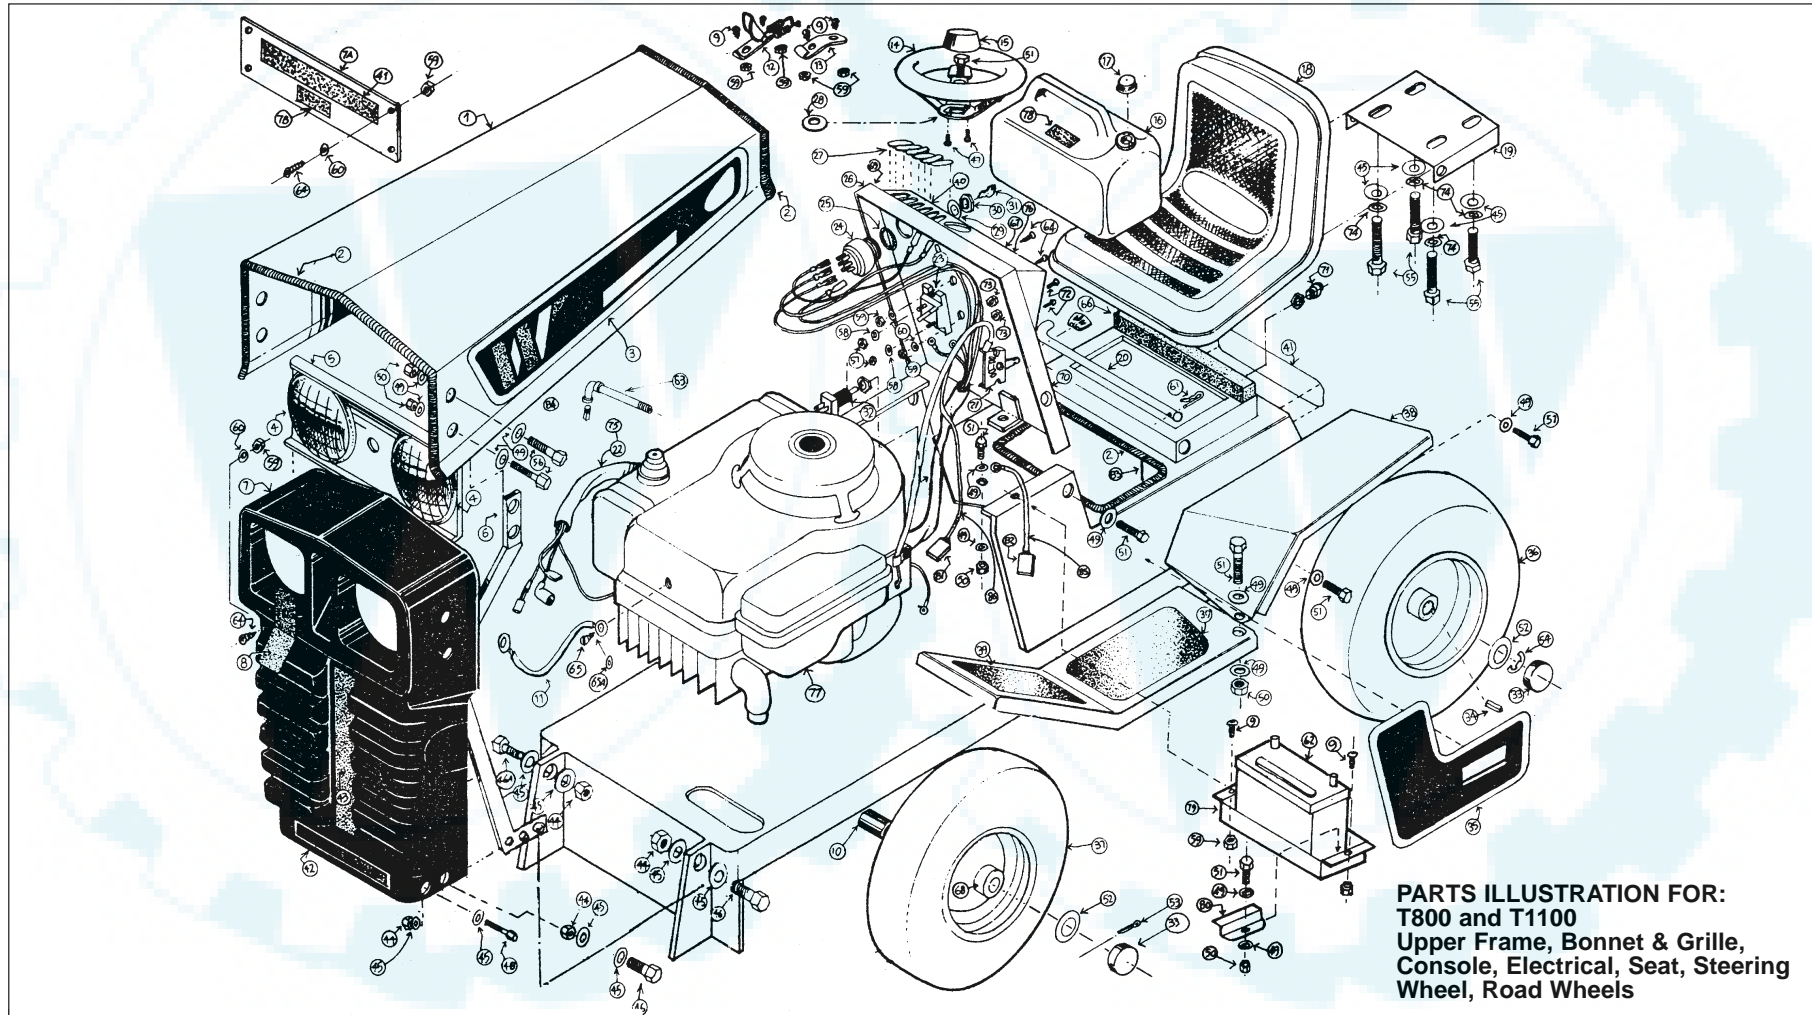

PARTS ILLUSTRATION FOR:
T800 and T1100
Upper Frame, Bonnet & Grille,
Console, Electrical, Seat, Steering
Wheel, Road Wheels



PARTS LIST FOR: T800 and T1100

Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
1	1643	Bonnet Std 8 & 11 HP	1	27/1	2062	'Safe Brake' and 'Safe Cutter' Light Green 12V	2	42		N/A	1
2	1488	Beading Bonnet Front	1					43		N/A	1
	1489	Beading Bonnet Rear	1	27/2	2063	Charge On/Off Light Amber 12V	1	44	1324	Nut, 3/8" UNF Self Lock Hex.	6
	1645	Beading Petrol Can Aperture	1	27/3	2064	Ignition Light Red 12V	1	45	1323	Washer, 3/8" Dia. Ord. Plain	16
3		Refer to Illust. 35		27/4	2099	'Lights On/Off' Light Illum. Switch		46	2016	Bolt, 3/8" UNF x 1 1/4" LG. Hex. HD	4
4	1536	Headlight	2			White 12V	1	47	2060	Pin, Steering Column Cap	2
5	1497	Retaining Plate Headlights	1	28	1006	Disc Spring Washer		48	1966	Bolt, 3/8" UNF x 1" LG. Hex. HD	2
6	2257	Grille Frame	1			3/8" ID x 1 3/4" OD	1	49	1105	Washer, 5/16" Dia. Ord. Plain	28
7	1491	Grille, Std 8 HP	1	29	1976	Washer 5/8" ID x 1" OD Plain	1	50	1273	Nut, 5/16" UNF, Self Lock Hex	14
	1492	Grille, Std 11 HP	1	30	2065	Special Nut, Ignition/Starter Switch	1	51	1334	Bolt, 5/16" UNF x 3/4" LG. Hex. HD	11
7A	1496	Blanking Plate	1	31	2066	Ignition/Starter Key	2	52	1099	Washer, 3/4" ID x 1 1/4" OD Plain	4
7B		N/A		32	1608	Safety Cut Out Switch (Cutter)	1	53	1227	Split Pin, 1/8" Dia x 1 3/4" LG	2
8	1495	Grille Plate	1	33	2068	Hub Cap	4	54	1663	'E' Clip for 3/4" Dia. Shaft	2
		N/A		34	1644	Key, 3/16" sq. parallel x 2" LG	2	55	2034	Setscrew, 3/8" UNC x 3/4" LG Hex HD	4
9	1734	Machine Screw 2BA x 1/2" LG		35	2698	Transfer Set S1100	1	56	1335	Bolt, 5/16" UNF x 1 1/4" LG. Hex. HD	4
		Recess Pan HD	6		2699	Transfer Set T800	1	57	1969	Nut, 5/16" UNF, Thin Lock Hex.	2
10	1980	Spacer 3/4" ID x 1 1/4" OD x 3/8" LG	2		2700	Transfer Set T1100	1	58	2047	Washer, 5/16" Dia. Single Coil Lock	2
11	1498	Bonnet Stay	1	36	1746	Rear Wheel Small	2	59	1053	Nut, 2BA Self Lock Hex.	13
12	1490	Bonnet Catch	1		1586	Rear Wheel Large	2	60	1962	Washer, 2BA Dia. Ord. Plain Large	7
13	2058	Bonnet Clip	1		1662	Hub Rear Wheel	2	61	1225	'R' Clip	1
14	2367	Steering Wheel	1		1748	Inner Tube Rear Wheel Small	2	62	1209	Battery 12V	1
15	2059	Steering Column Cap	1		1588	Inner Tube Rear Wheel Large	2	63	2075	Drain Pipe & Plug, Engine Oil STD 8 & 11 HP	1
16	1658	Petrol Can	1		1747	Tyre Rear Wheel Small	2				
17	1659	Cap, Petrol Can	1		1587	Tyre Rear Wheel Large	2	64	1735	Machine Screw, 2BA x 3/4" LG	
18	1660	Seat	1	37	1749	Front Wheel Small	2			Recess Pan HD.	7
19	1742	Seat Mounting Plate	1		1538	Front Wheel Large	2	65	2030	Setscrew, 1/4" UNC x 3/4" LG Hex HD	1
20	2067	Seat Hinge Pin	1		1201	Inner Tube Front Wheel Small	2	65A	1331	Washer, 1/4" Dia. Ord. Plain	1
21	1507	Throttle/Choke Control	1		1540	Inner Tube Front Wheel Large	2	66	2079	Seat Spring	1
22	2094	Main Wiring Loom Std. 8 HP	1		1163	Tyre Front Wheel Small	2			N/A	
	2095	Main Wiring Loom Std. 11 HP	1		1539	Tyre Front Wheel Large	2	68	1173	Bush Oilite	4
23	1530	Solenoid	1	38	1501	Mudguard LH	1	69		N/A	
24	1649	Ignition/Starter Switch	1		1502	Mudguard RH	1	70		N/A	
25	2049	Washer, 1/8" Dia. Internal Shakeproof	1	39	1650	Foot Rest Mat (Tractor Set)	1	71	2086	Accessory Power Socket	1
26	2261	Console Body	1	40		N/A	2	72	2021	Machine Screw, 4BA x 1/2" LG.	
27	2061	Blank for Light or Switch Position	1	41		N/A	1			Recess Pan HD.	2




PARTS LIST FOR:

T800 and T1100

Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
73	1144	Nut, 4BA Self Lock Hex.	2								
74	1633	Washer, 3/8" Dia. Internal Shakeproof	4								
75	2080	Loom Tie	2								
76		N/A									
77	2083	Briggs & Stratton 8 HP Engine, Elec. Start	1								
	2084	Briggs & Stratton 11 HP Engine, Elec. Start	1								
78	2098	Transfer "Highly Inflammable" complies with S1. 1982/630	1								
79	2087	Battery Support Tray	1								
80	2088	Restraining Bracket (battery)	1								
81	2090	Snap On Connector, Battery Terminal (Red)	1								
82	2091	Snap On Connector, Battery Terminal (Blue)	1								
83	2089	Lining, Petrol Can Aperture	1								
84		N/A									
85	1813	Battery Lead, Black	1								
86	1814	Battery Lead, Red	1								

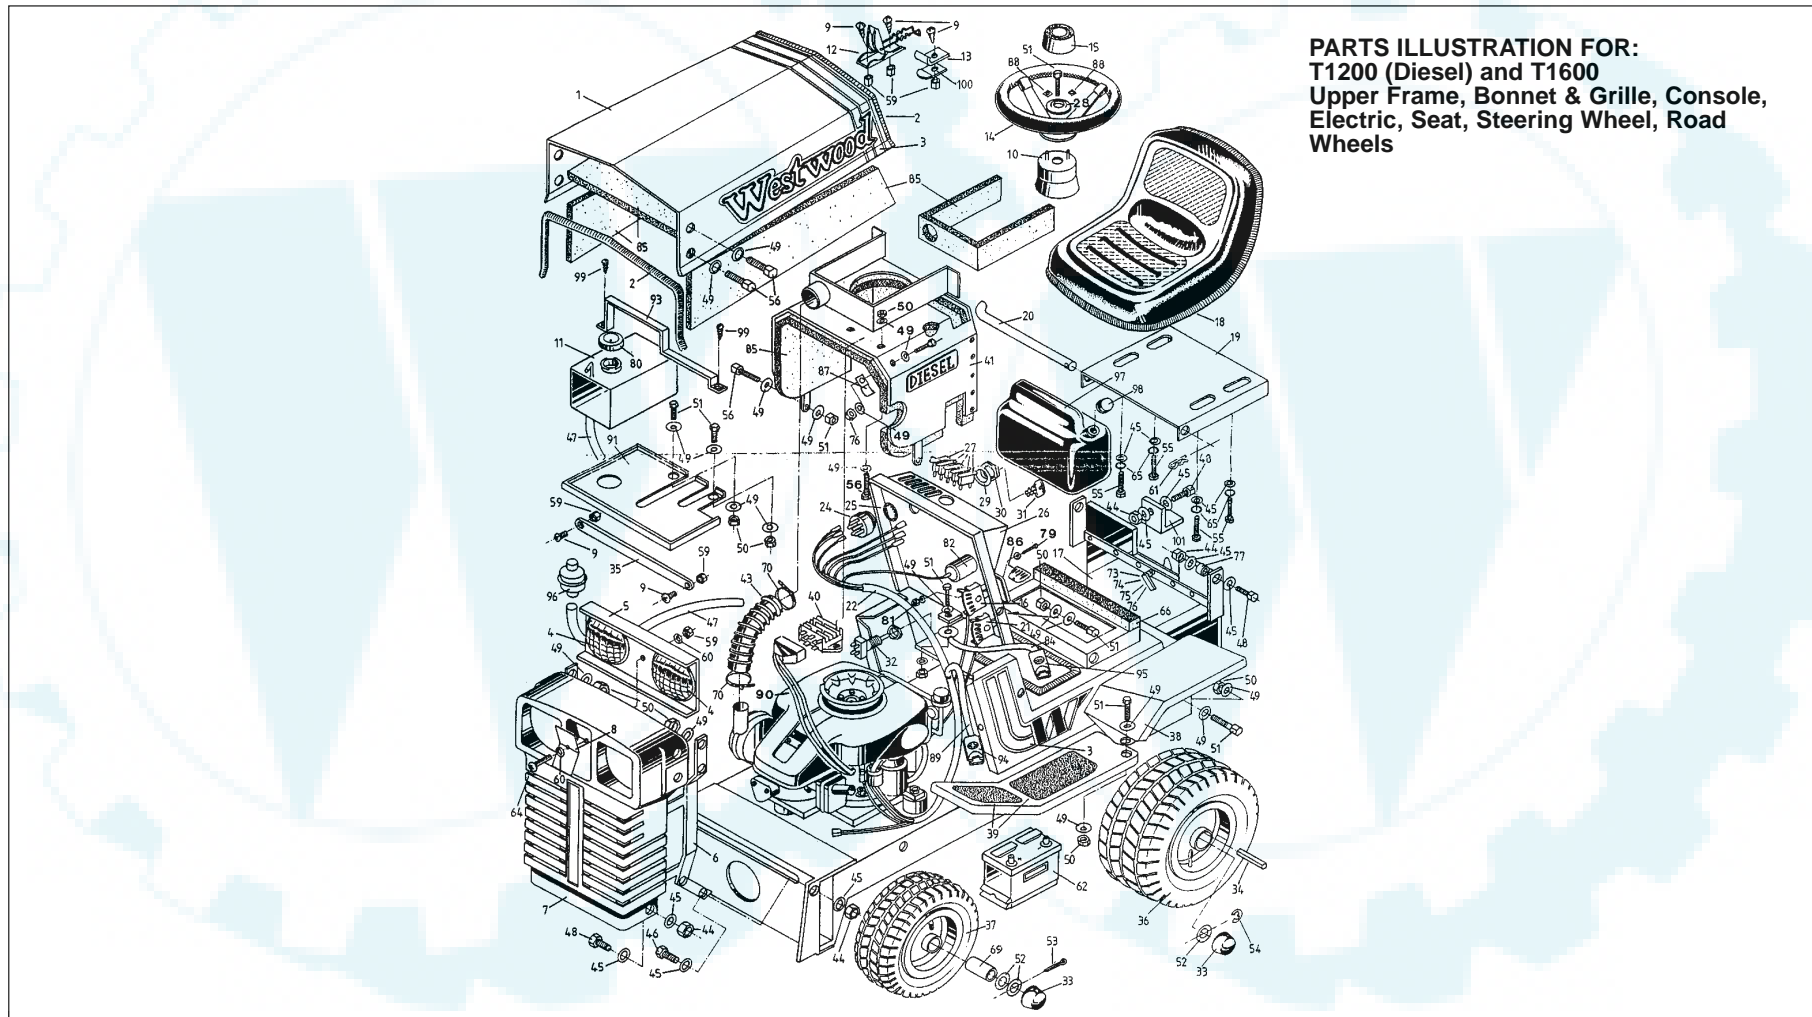

**PARTS ILLUSTRATION FOR:
T1200 (Diesel) and T1600
Upper Frame, Bonnet & Grille, Console,
Electric, Seat, Steering Wheel, Road
Wheels**



PARTS LIST FOR: T1200 (Diesel) and T1600

Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels


Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
1	1643	Bonnet T1200	1	27.1	2062	Safe Brake & Safe Cutter Green Light	2	51	1334	Bolt, 5/16" UNF x 1/3" LG	19
	1797	Bonnet T1600	1	27.2	2063	Charge Light, Amber	1	52	1099	Washer 3/4" ID x 1 1/4" OD	6
2	1488	Beading, Bonnet Front	1	27.3	2064	Ignition Light, Red	1	53	1227	Split Pin 1/8" dia. x 1 3/4" LG	2
	1489	Beading, Bonnet Rear	1	27.4	2099	Switch, Lights On/Off	1	54	1663	"E" Clip 3/4" dia. Shaft	2
	1802	Beading, Bonnet Sides – T1600	1	28	1006	Domed Spring Washer, 3/8" ID x 1 3/4" OD	1	55	2034	Setscrew 3/8" UNC x 3/4" LG	4
	2101	Beading, Engine Deflector – T1600	1	29	1976	Washer, 5/8" ID x 1" OD	1	56	1335	Bolt, 5/16" UNF x 1 1/4" LG	4
3	2701	Transfers, Tractor Set – T1200	1	30	2065	Nut, Special, Starter Switch	1	57	1969	Sol/nut 5/16" UNF, Thin Nyloc (Not Shown)	2
	2702	Transfers, Tractor Set – T1600	12	31	2066	Key, Starter Switch	2	58	2047	T1600 Solenoid (Not Shown)	2
4	1536	Headlamp	2	32	1608	Switch, Cutter Safety	1	59	1053	Nut, 2BA Nyloc	13
5	1497	Retaining Plate, Headlights	1	33	2068	Hub Cap	4	60	1962	Washer, 2BA Plain	8
6	2257	Grille Support T1200	1	34	1664	key, 3/16" Sq. Parallel x 2" Long	2	61	1225	"R" Clip	1
	2102	Grille Support T1600	1	35	3359	Support Brace	1	62	1209	Battery Type 138	1
7	1492	Grille	1	36	1586	Rear Wheel Assembly	2	63	2107	Engine Oil Drain Pipe & Plug T1600	1
8	1495	Grille Plate	1		1662	Rim, Rear Wheel	2		2809	Engine Oil Drain Pipe & Plug T1200	1
9	1734	Screw 2BA x 1/2" LG Pan Hd	4		1588	Tube, Rear Wheel	2	64	1735	Screw, 2BA x 3/4" LG	3
10	2780	Steering Wheel Shroud	2		1587	Tyre, Rear Wheel	2	65	1633	Washer, 3/8" dia. Shakeproof	4
11	2811	Fuel Tank	1]	37	2796	Front Wheel Assembly	2	66	2079	Seat Spring	1
12	1490	Bonnet Catch	1		2797	Rim, Front Wheel	2	67	2108	Exhaust Stub – T1600 (Not Shown)	1
13	2058	Bonnet Clip	1		1539	Tyre, Front Wheel	2	68	2029	Setscrew 4BA x 3/8" LG (T1600 Exhaust)	2
14	2367	Steering Wheel Mk4	1		1540	Tube, Front Wheel	2	69	3354	Bush, Oilite 3/4" ID x 1" OD x 3/4" LG	4
15	2059	Steering Wheel Cap	1	38	1501	Mud Guard LH	1	70	2826	Hose Clip Jubilee No.3 (Air Intake)	2
16	2793	Engine Stop Control – T1200	1		1502	Mud Guard RH	1	71	2827	Hoser Clip Jubilee No.00 (Fuel Line)	2
	1807	Engine Choke Control – T1600	1	39	1650	Footrest Mats – Set	2	72	2828	Hose Clip No.8, Plastic (Fuel Line)	3
17	1819	Rubber Flap Assembly	1	40	2814	Rectifier (T1200) (Lombardini Pt No. 2760, 7362, 022 FVIC)	1	73	1795	Bolt, Special 1/4" UNF x 1 1/2" LG	1
18	1660	Seat	1	41	2815	Engine Cover Assy (T1200)	1	74	1796	Stop Piece	1
19	12742	Seat Mounting Plate	1	43	2839	Hose, Air Intake (T1200)	1	75	2042	Nut, 1/4" UNF, Thin Nyloc	1
20	2067	Seat Hinge Pin	1	44	1324	Nut, 3/8" UNF Nyloc	7	76	1270	Nut, 1/4" UNF Nyloc	1
21	2794	Throttle Control T1200	1	45	1323	Washer 3/8" Dia. Plain	18	77	1680	Spacer, 3/8" ID x 1/2" OD x 3/16" LG	2
	1507	Throttle Control T1600	1	46	2016	Bolt, 3/8" UNF x 1 1/4" LG	2	78	2046	Washer, Locking 4BA (T1600 Exhaust Stub)	2
22	2795	Wiring Loom T1200	1	47	2822	Hose, Fuel	1	79	2021	Screw, 4BA x 1/2" LG Throttle Controls	4
	2100	Wiring Loom T1600	1	48	1966	Bolt, 3/8" UNFX x 1" LG	5	80	1806	Cap Fuel Tank	1
23	1530	Solenoid (not shown) T1600	1	49	1105	Washer, 5/16" Dia. Plain	56	81	1144	Nut, 4BA Nyloc Throttle Controls	4
24	1649	Starter Switch	1	50	1273	Nut, 5/16" UNF Nyloc	30				
25	2049	Washer, 5/8" dia. Shakeproof	1								
26	2262	Console Body	1								



**PARTS LIST FOR:
T1200 (Diesel) and T1600**

Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
82	2086	Cigar Lighter – Accessory Socket	1								
83	2829	Hose Clip No.2 (Plastic)	1								
84	1813	Battery Lead, Black	1								
85	2792	Insulation (Bonnet & Engine Cowl)	As req								
86	2010	Knob, Throttle Controls	2								
87	1818	Cleat – Rectifier Cable	1								
88	2840	Spring Clips (Steering Wheel Shroud)	2								
89	1814	Battery Lead, Red	1								
90	2798	Lombardini 7.5HP Diesel Engine	1								
	2085	Briggs & Stratton 16HP Engine	1								
91	2799	Tray, Battery/Fuel Tank Support	1								
92	2088	Restraining Bracket (Battery)	1								
93	2800	Strap Restraint Battery/Fuel Bank	1								
94	2090	Battery Connector – Red	1								
95	2091	Battery Connector – Blue	1								
96	2813	Fuel Filter T1200	1								
	1816	Fuel Filter T1600	1								
97	1658	Petrol Can	1								
98	1659	Cap, Petrol Can	1								
99	3019	Screw, S.T. No.8	2								
100	2841	Bonnet Stop Plate	1								
101	2246	Tow Hitch Bracket	1								

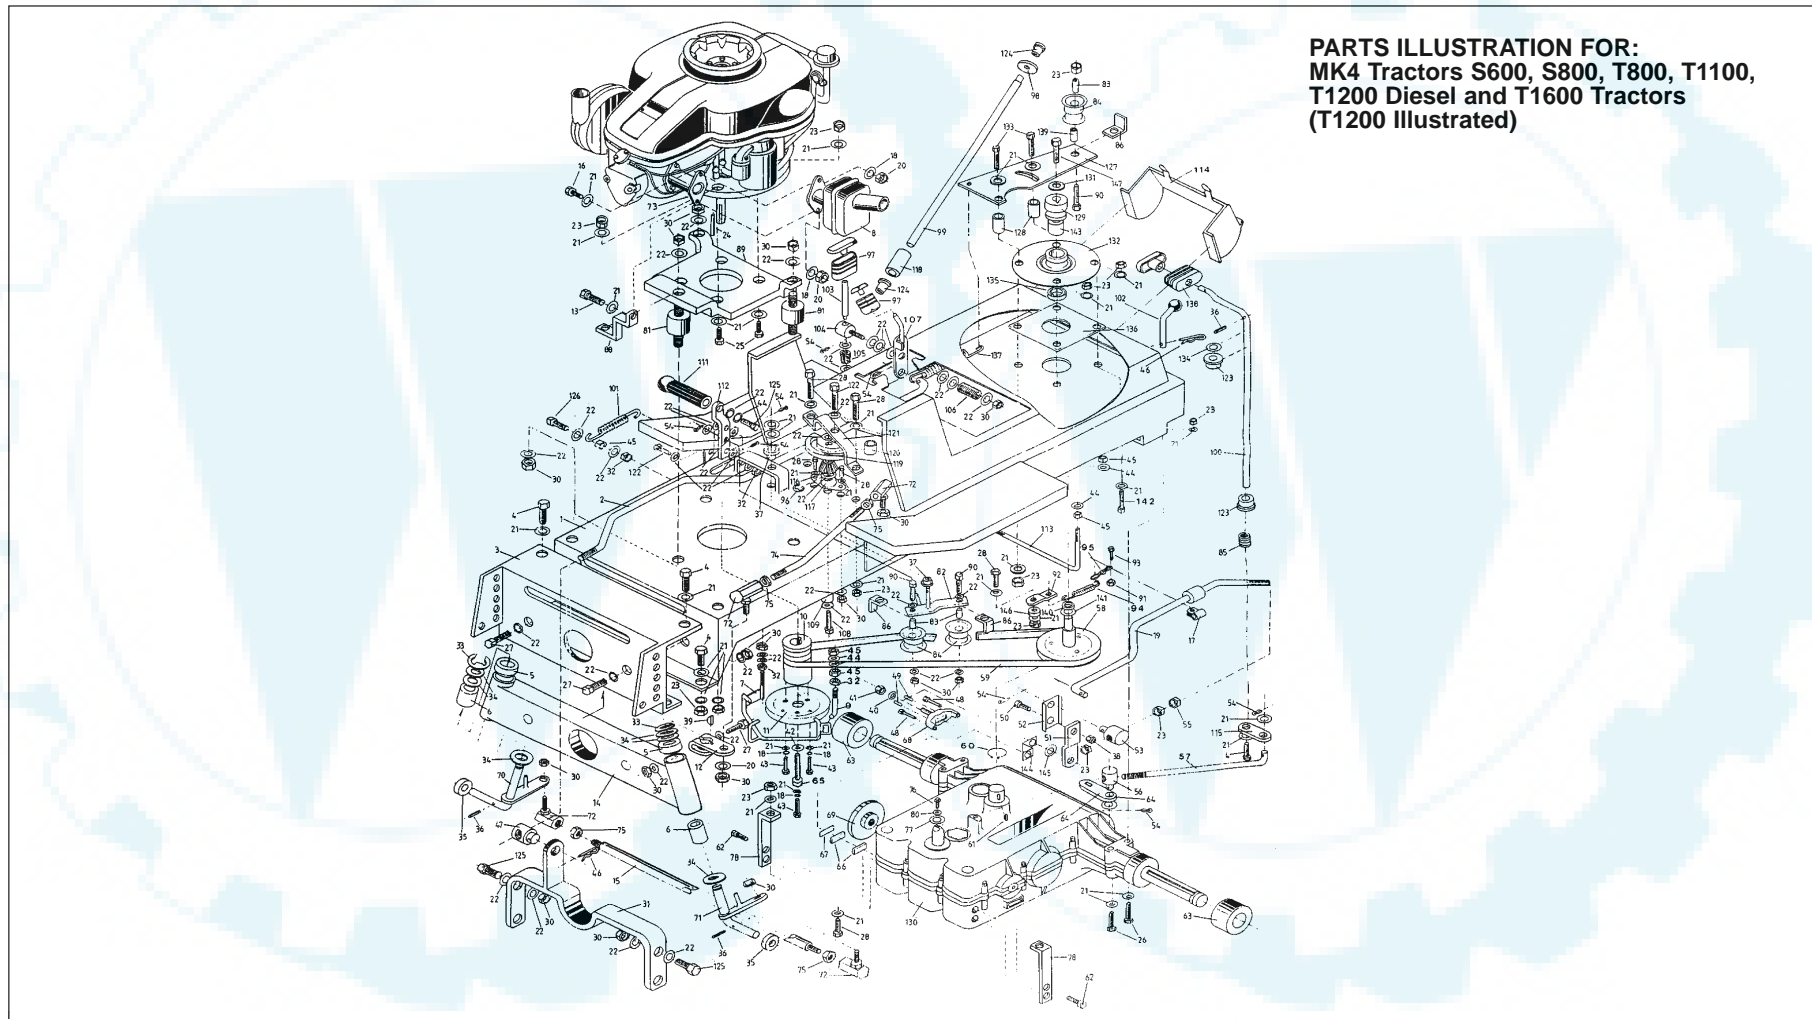

**PARTS ILLUSTRATION FOR:
MK4 Tractors S600, S800, T800, T1100,
T1200 Diesel and T1600 Tractors
(T1200 Illustrated)**



PARTS LIST FOR: MK 4 Tractors

S600, S800, T800, T1100, T1200 Diesel and T1600 Tractors (T1200 Illustrated)

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
1	2238	Chassis (all models)	1	19	1710	Brake Rod	1	46	1225	'R' Clip	2
2	2355	Cutter Engage Rod ("S" Series)	1	20	2040	Nut, 5/16" Plain	2	47	1695	Swivel Engage Rod	1
	1671	Cutter Engage Rod (T800, T1100)	1	21	1105	Washer, 5/16" Plain	28	48	1983	Setscrew, 1/4" UNC x 1 1/4" LG	2
	1672	Cutter Engage Rod (T1600)	1	22	1323	Washer, 3/8" Plain	36	49	1984	Dowel Pins 1/4" dia x 3/4" LG	2
	2802	Cutter Engage Rod (T1200)	1	23	1273	Nut, 5/16" UNF Nyloc	20	50	1156	Bolt, 1/4" UNF x 3/4" LG	1
3	2249	Chassis Front Bracket	1	24	1181	Woodruff Key, No 6 (6HP only)	1	51	1985	Brake Arm	1
4	1982	Setscrew, 5/16" UNF x 3/4" LG	5		1602	Drive Key, 1/4" square	1	52	1986	Brake Arm Extension ('T' models)	1
5	2293	Stub Axle Spacer	3	25	1318	Bolt, 5/16" UNF x 2" LG (6HP only)	3		2356	Brake Arm Extension ('S' models)	1
6	3355	Nylon Bush (6, 8 and 11 HP only)	4		2688	Bolt, 5/16" UNF x 1 1/4" LG (6HP only)	1	53	1693	Brake Rod Swivel	1
	3354	Bush, Oilite (T1200, T1600)			1321	Bolt, 5/16" UNF x 1 1/2" LG		54	1233	Split Pin, 1/8" dia x 3/4" LG	8
		001"- I/D 3/4"	4			(8, 11 HP Diesel)	4	55	1964	Nut, 5/16" UNF Binx	2
7	2313	Belt Guide (30" cutter units)	1		1336	Bolt, 5/16" UNF x 2 1/4" LG (16HP only)	4	56	1694	Swivel, Gear Change Rod	1
	2311	Belt Guide (36" cutter units)	1	26	1978	Bolt, 5/16" UNF x 2 1/2" LG ('T' series)	4	57	2271	Rod, Gear Change ('T' models)	1
	2312	Belt Guide (32" and 36"			1933	Bolt, 5/16" UNF x 3 1/2" LG ('S' series)	4		2272	Rod, Gear Change ('S' models)	1
		Contra Cutter Units)	1	27	1200	Bolt, 3/8" UNF x 2 1/2" LG	3	58	2821	Transaxle Pulley/PTO ('S' models)	1
	2314	Belt Guide (T1600/42")	1	28	1327	Bolt, 5/16" UNF x 1" LG	5		2819	Transaxle Pulleys/PTO ('T' models)	1
	2804	Belt Guide (T1200/42")	1	29	1666	Washer, Plain 3/8" ID x 1 3/4" OD	2		3356	Transaxle Pulleys/PTO (T1600 only)	1
8		Muffler (Refer to				(Deck stop - Not shown)		59	1688	Belt Transmission	1
		Engine Manufacturers Parts List)	1	30	1324	Nut, 3/8" UNF Nyloc	15	60	1996	Circlip, External 5/8" dia	1
9	2319	Pin, Belt guide retaining	1	31	2329	Hitching bracket	1	61	1104	Key, Woodruff No 9	1
10	2307	Engine Pulley Block (6HP only)	1	32	1979	Half nut, 3/8" UNF Nyloc	5	62	1987	Setscrew, 5/16" UNC x 7/8" LG	2
	2308	Engine Pulley Block	1	33	1663	'E' Clip 3/4" dia	2	63	1715	Spacer, 3/4" ID x 1 1/4" OD x 1 5/8" LG	2
11	1745	Engine Cutter Drive Pulley		34	1099	Washer, 3/4" ID x 1 1/4" OD	4	64	2273	Gear Change Arm (Transaxle)	1
		('S' Models)	1	35	1980	Spacer, 3/4" ID x 1 1/4" OD x 3/8" LG	2	65	2586	Bolt, 7/16" UNF x 3" LG	1
	1558	Engine Cutter Drive Pulley		36	1553	Roll Pin, 1/8" dia x 1 1/2" LG	3		2690	Bolt, 3/8" UNF x 3 1/4" LG (6HP only)	1
		('T' Models)	1	37	2833	Bush, flanged 1/2" OD x 5/15" ID		66	1988	Brake Pad (Transaxle)	1
						x 1/2" LG	2	67	1989	Brake Pad Plate (Transaxle)	1
12	2286	Steering Arm	1	38	1270	Nut, 1/4" UNF Nyloc	1	68	1990	Brake Pad Holder (Transaxle)	1
13	1321	Bolt, 5/16" UNF x 1 1/2" LG		39	1098	Key, Woodruff No 13	1	69	1995	Disc Brake (Transaxle)	1
		(T1200 only)	1	40	1981	Washer, 5/16" ID x 1" OD	1	70	2291	Stub Axle RH	1
14	2296	Axle Beam	1	41	1969	Nut, thin 5/16" UNF Nyloc	1	71	2287	Stub Axle LH	1
15	2691	Track Rod	1	42	1737	Washer, 7/16" dia plain	1	72	1551	Rod End and Ball Joint	4
16	2688	Setscrew 5/16" UNC x 1 1/4" LG		43	2031	Setscrew, 5/16" UNF x 1" LG	3	73	2824	Exhaust Stub (T1200 only)	1
		(T1200 only)	1	44	1633	Washer, 3/8" dia shakeproof	7	74	2285	Steering Rod (T1200 only)	1
17	1977	Clip, Brake safety switch	1	45	1422	Nut, 3/18" UNF Plain	7		2807	Steering Rod (Kinked)	1
18	2048	Washer, 5/16" shakeproof	3								




PARTS LIST FOR:

MK 4 Tractors

S600, S800, T800, T1100, T1200 and T1600 Tractors (T1200 Illustrated)

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
75	1991	Nut, Locking 1/2" UNF	4	110	2354	Spacer, Transaxle ('S' Models)				1 7/16" OD x 1" ID x 4mm	As req
76	1992	Setscrew, 1/4" UNF x 3/8" LG	1			Not shown	4	141	2641	Spindle Spacer	
77	1046	Washer, 1/2" dia, Plain	1	111	2004	Foot Pedal Bar				1 7/16" OD x 1" ID x 2mm	As req
78	2831	Support Bracket (Transaxle)	2		2009	Foot Pedal Rubber	1	142	1334	Bolt, 5/16" UNF x 3/4" LG	2
79		Not Allocated	1	112	2505	Foot Pedal Arm	1	143	2784	Spacer, PTO Pulley	1
80	1331	Washer, 1/4" dia. Plain	1	113	2332	Hanger Bar, Cutter Deck		144		Bracket, Peerless Pt No. 786086	1
81	2812	Flexible Engine Mounts (T1200)	3	114	2893	Flap PTO Access	1	145		Bracket, Peerless Pt No. 792076	1
82	2715	Arm Jockey Pulley	1	115	2270	Link Plate, Gear Change	1				
83	2306	Bush, Jockey Pulley	2	116	2276	Steering Gear	1				
84	2694	Jockey Pulley	2	117	1699	Bearing, Steering Column Base	1				
85	2574	Spring, Compression	1	118	2277	Spacer, Steering Column	1				
86	1706	Belt Guide (Jockey Pulley)	2	119	2279	Steering Quadrant	1				
87	2333	Deck Stop (not illustrated)	1	120	2284	Bush, Steering Quadrant Pivot	1				
88	2825	Bracket, Exhaust (T1200)	1	121	2278	Bridge Support, Steering Quadrant	1				
89	2818	Bracket, Engine mount (T1200)	1	122	1267	Bolt, 3/8" UNF x 2 1/2" LG	2				
90	1997	Bolt, 3/8" UNF x 1 3/4" LG	3	123	1860	Bush, Flanged 1/2" ID x 5/8" OD					
91	1998	Nut, 2BA Plain	1			x 1/2" LG	2				
92	1609	Brake Safety Switch	1	124	2588	Bush, Flanged 5/8" ID x 3/4" x 1" LG	1				
93	1999	Screw, 2BA x 1/2" LG	1	125	2015	Setscrew, 3/8" UNF x 1" LG	3				
94	2000	Tension Spring	1	126	2016	Bolt, 3/8" UNF x 1 1/4" LG	1				
95	2592	Chain Link	1	127	2786	Jockey Plate	1				
96	2589	'E' Clip, 5/8" dia Shaft	1	128	2787	Spacer, Jockey Plate	2				
97	2648	Knob	2	129	2820	Pulley, PTO Drive	1				
98	2275	Washer, Steering Column	1	130	2018	Transaxle Unit (6, 8 and 11HP)	1				
99	2274	Steering Column	1		2019	Transaxle Unit (T1200, T1600)	1				
100	2269	Gear Change Lever	1	131	1006	Washer, Dome Spring	1				
101	2103	Spring Tension (Clutch/Brake)	1	132	1955	Bearing Housing	1				
102	1399	Pin, Tow Hitch	1	133	1388	Bolt, 5/16" UNF x 2" LG	2				
103	2643	Parking Brake Plunger	1	134	2587	Washer, 1/2" ID x 1" OD	1				
104	2302	Pivot Boss, Engage Lever	1	135	1180	Bearing, PTO Shaft	1				
105	2003	Spring Compression (Park Brake)	1	136	2834	Plate, Bearing Retainer	1				
106	1613	Spring Compression (Engage Lever)	1	137	2791	Spring Tension	1				
107	2644	Cutter Engage/Disengage Lever	1	138	2649	Knob, Gear Lever	1				
108	2590	Setscrew, 3/8" UNF x 1 1/4" LG	1	139	2788	Bush, PTO Jockey Pulley	1				
109	2593	Spacer, 5/8" x 1/2" (Gear Stop)	1	140	2640	Spindle Spacer					

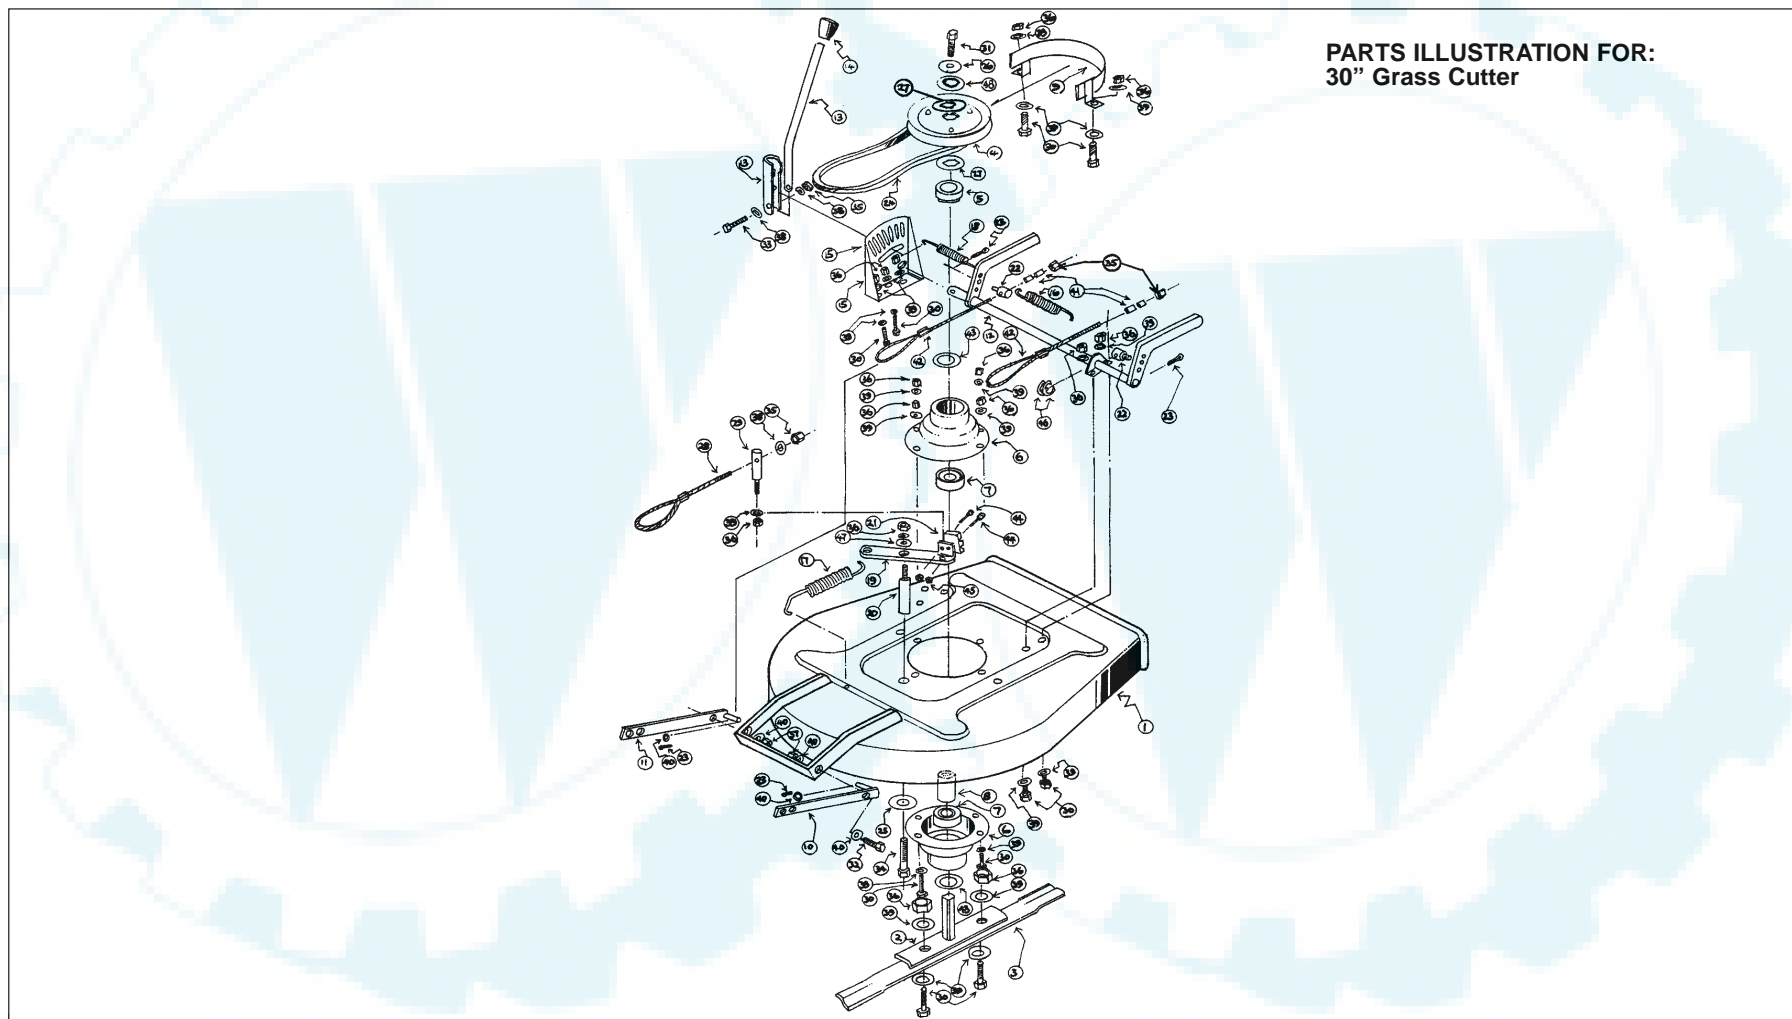

**PARTS ILLUSTRATION FOR:
30" Grass Cutter**




PARTS LIST FOR: 30" Grass Cutter


Item	Part No	Description	Qty
1	2413	Cutter Deck	1
2	2692	Blade Spindle	1
3	2693	Cutter Blade, 30"	1
4	2499	Cutter Pulley	1
5	2412	Pulley Spacer	1
6	1951	Bearing Housing	2
7	1180	Ball Bearing	2
8	2411	Bearing Spacer	1
9	2425	Pulley Guard	1
10	2418	Bar Hitch L.H.	1
11	2419	Bar Hitch R.H.	1
12	2395	Hanger Bar	1
13	2646	Height Adjuster Lever	1
14	2649	Knob	1
15	2398	Height Adjustment Plate	1
16	1946	Tension Spring (hanger bar)	2
17	2594	Tension Spring (brake)	1
18	2595	Tension Spring (Height Adjuster Lever)	1
19	2431	Brake Arm	1
20	2404	Brake Arm Pivot	1
21	1621	Brake Pad	1
22	1756	Lift Cable Pivot	2
23	1233	Split Pin, 1/8" x 3/4" LG	4
24	1767	Cutter Drive Belt (type 2043-42.5084)	1
25	1666	Washer, 3/8" ID x 1 3/4" OD	1
26	1006	Dome Spring Washer	1
27	2621	Hexagonal Dimpled Washer	2
28	2596	Cutter Brake Cable	1
29	2434	Brake Cable Pivot	1
30	1982	Setscrew, 5/16" UNF x 3/4" LG Hex HD	12
31	1051	Bolt, 3/8" UNF x 1 LG Hex HD	1
32	1054	Bolt, 3/8" UNF x 1 1/2" LG Hex HD	2
33	2022	Bolt, 1/4" UNF x 1 1/4" LG Hex HD	1

Item	Part No	Description	Qty
34	1312	Bolt, 5/16" UNF x 3" LG Hex HD	1
35	1270	Nut, 1/4" UNF Self Locking Hex	4
36	1273	Nut, 5/16" UNF Self Locking Hex	14
37	1324	Nut, 3/8" UNF Self Locking Hex	2
38	1331	Washer, Plain 1/4" Dia	3
39	1105	Washer, Plain 5/16" Dia.	25
40	1323	Washer, Plain 3/8" Dia.	6
41	1733	Spacer, Lift Cables	4
42	1757	Lift Cable	2
43	2640	Spindle Spacer, 1 7/16" OD x 1" x 4mm	2
44	1735	Machine Screw 2BA x 3/4" LG Pan Head	2
45	1053	Nut 2BA Self Locking Hex.	2
46	1663	'E' Spring Clip for 3/4" Dia Shaft	2
47	2599	Washer, Plain 1/2" ID x 1" OD	1
48	2500	Spindle Spacer 1 3/4" OD x 1" ID x 3/8"	1

Item	Part No	Description	Qty
------	---------	-------------	-----

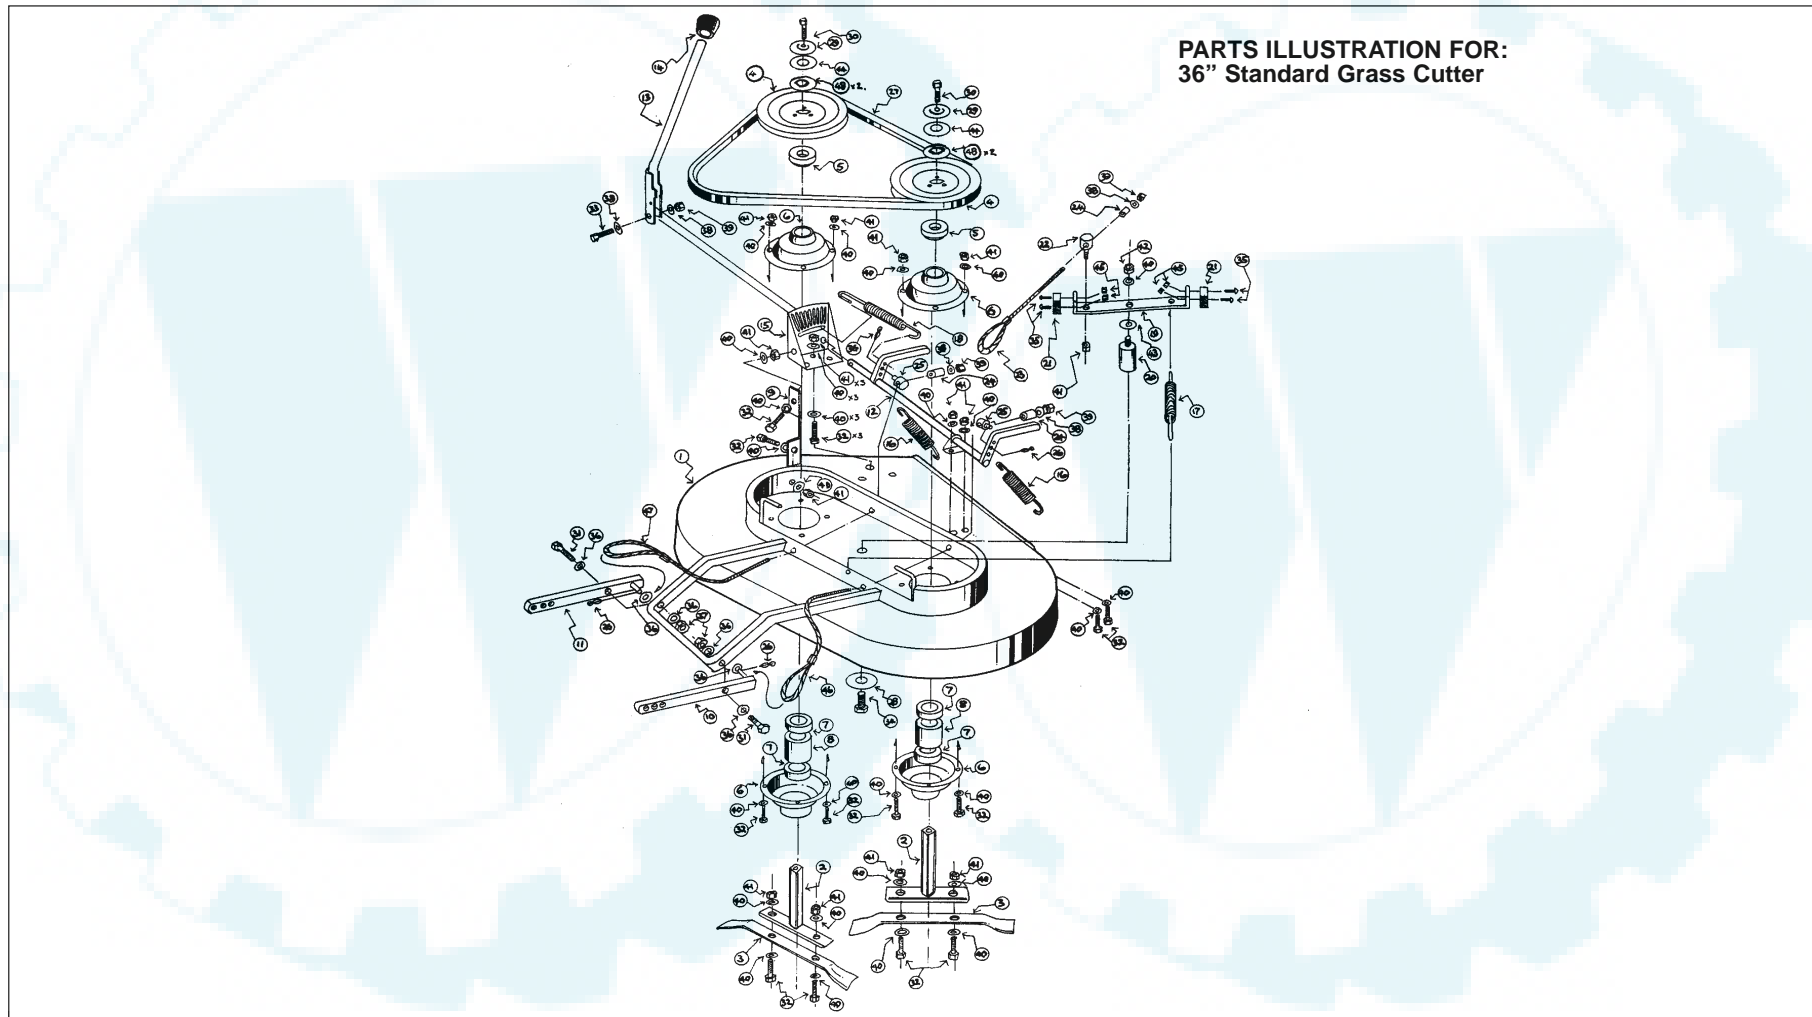

**PARTS ILLUSTRATION FOR:
36" Standard Grass Cutter**

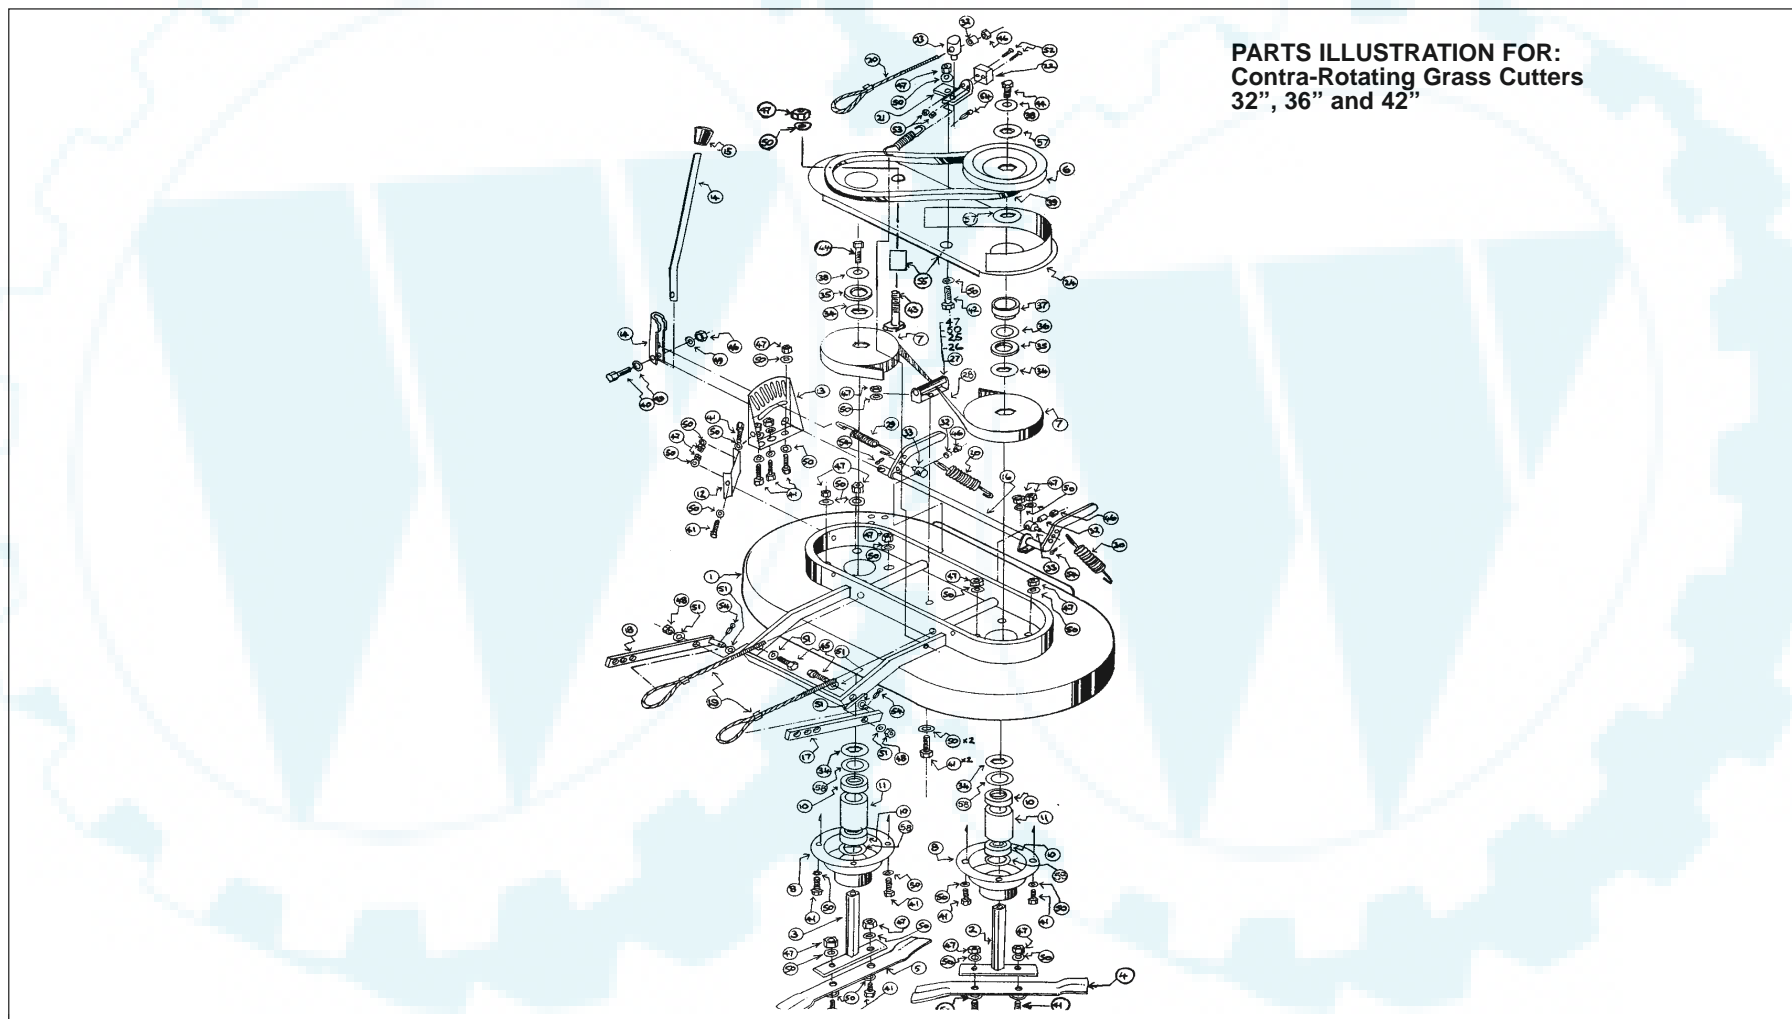

**PARTS ILLUSTRATION FOR:
Contra-Rotating Grass Cutters
32", 36" and 42"**



PARTS LIST FOR: Contra-Rotating Grass Cutters, 32", 36" and 42"

Item	Part No	Description	Qty
1	2464	32" Cutter Deck	1
	2435	36" Cutter Deck	1
	2477	42" Cutter Deck	1
2	2391	Blade Spindle LH (Long)	1
3	2452	Blade Spindle RH (Short)	1
4	2472	Cutter Blade LH (32")	1
	2450	Cutter Blade LH (36")	1
	2486	Cutter Blade LH (42")	1
	2473	Cutter Blade RH (32")	1
5	2451	Cutter Blade RH (36")	1
	2487	Cutter Blade RH (42")	1
	2498	Cutter Drive Pulley	1
7	2652	Toothed Cutter Pulleys	2
8	1951	Bearing Housing Lower	2
9	1955	Bearing Housing Upper (Not shown)	2
10	1180	Ball Bearing	4
11	2454	Bearing Spacer	2
12	2474	Height Adjuster Bracket (32")	1
	2456	Height Adjuster Bracket (36")	1
	2398	Height Adjustment Plate (32"/36")	1
13	2485	Height Adjustment Plate (42")	1
	2646	Height Adjustment Lever	1
15	2649	Knob	1
16	2385	Hanger Bar	1
17	2442	Bar Hitch LH	1
18	2440	Bar Hitch RH	1
19	2653	Lift Cable	2
20	2494	Brake Operating Rod (32")	1
	2495	Brake Operating Rod (36")	1
	2493	Brake Operating Rod (42")	1
	2457	Brake Arm	1
22	1621	Brake Pad	1
23	2434	Brake Cable Pivot	1
24	2470	Belt Guard Cover (32")	1
	2446	Belt Guard Cover (36")	1

Item	Part No	Description	Qty
	2483	Belt Guard Cover (42")	1
25	1972	Bolt, 5/16" UNF x 3 1/4" LG	1
26	2443	Belt Separator Bracket Upper	1
27	2445	Belt Separator Roller Bearings	4
28	2655	Toothed Belt (1200, 8m20)	1
	2659	Toothed Belt (1280, 8.20)	1
	2660	Toothed Belt (1440, 8m20)	1
29	2595	Tension Spring (Height Adjuster Lever)	1
30	1946	Tension Spring, Hanger Bar (32")	2
	1076	Tension Spring, Hanger Bar (36"/42")	2
	2594	Tension Spring, Cutter Brake	1
32	1733	Spacer	3
33	1756	Pivot Lift Cables	2
34	2455	Hexagonal Dimpled Washer	6
35	1632	Washer, Plain 25mm ID x 42mm OD (thick)	2
	1631	Washer, Plain 25mm ID x 42mm OD (thin)	5
37	2412	Pulley Spacer, (32" and 42")	1
38	1006	Washer, Dome Spring	2
39	2225	Belt, Cutter Drive (SP1320) 32"/36"	1
	2226	Belt, Cutter Drive (42-769) 42" (T1600)	1
40	2022	Bolt, 1/4" UNF x 1 1/4" LG Hex HD	1
41	1982	Setscrew, 5/16" UNF x 3/4" LG Hex HD	19
42	1933	Bolt, 5/16" UNF x 3 1/2" LG Hex HD	1
43	1272	Bolt, 5/16" UNF x 2 3/4" LG Hex HD	1
44	1051	Bolt, 3/8" UNF x 1" LG Hex HD	2
45	1054	Bolt, 3/8" UNF x 1 1/2" LG Hex HD	2
46	1270	Nut, 1/4" UNF Self Locking	4
47	1273	Nut, 5/16" UNF Self Locking	23
48	1324	Nut, 3/8" UNF Self Locking	2
49	1331	Washer, Plain 1/4" Dia.	2
50	1105	Washer, Plain 5/16" Dia.	36
51	1323	Washer, Plain 3/8" Dia.	6
52	1735	Machine Screw, 2BA x 3/4" LG Pan HD	2

Item	Part No	Description	Qty
53	1053	Nut, 2BA Self Locking	2
54	1233	Split Pin, 1/8" x 3/4" LG	5
55	2460	Spacer, 2 1/8" LG x 5/8"	2
56	2573	Compression Spring Cutter	
		Brake Rod (not shown)	1
57	2621	Hexagonal Dimpled Washers	2
58	2640	Spindle Spacer	4