




Westwood

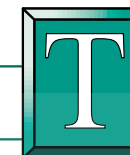

Tractor Chassis, PTO, Brake & Cutter Controls

ITEM	PART NO.	DESCRIPTION	QTY
1	RCL584033-00	Chassis	1
2	RCL120002-00	Gearbox Hydro (Sundstrand)	1
3	7087	Support Pedal Shaft	1
4	9132	Brake Arm	1
5	6861	Pedal Brake	1
6	MX681	Foot Pedal Rubber	1
7	3539	Bush, Nylon	7
8	RCL112-0120	"E" Clip No.1500-62	6
9	009-1630	Washer	8
10	1323	Washer	16
11	1324	Nut	6
12	1997	Bolt	1
13	MX951	Grommet	1
14	7418	Bolt	1
15	6869	Foot Pedal Shaft Bkt.	2
16	9284	Brake Pedal Shaft Assy.	1
17	9133	Rod Parking Brake	1
18	RCL584180-00	Brake Rod	1
19	7366	Foot Pedal Shaft Bkt.	2
20	RCL564094-00	Shaft Pedal (Operating)	1
21	RCL564092-00	Foot Pedal Assy.	1
22	RCL117-0532	Rollpin (Imperial)	1
23	6394	Bracket Safety Switch (Long)	1
24	RCL894001-00	Spring	2
25	RCL624001-00	Foot Tread	1
26	4107	Setscrew	1
27	1105	Washer	16
28	7383	Plunger Brake	1
29	2648	Knob, 3/8"	2
30	2003	Spring Park Brake	1
31	1223	Steel Split Pin, 1/8" x 3/8"	3
32	RCL5640320-00	Hydro Belt Guide Assy.	1
33	1602	Key, 1/8" Sq. x 1"	1
34	7662	Pulley Block (Upper)	1
35	3750	Pulley 7" Deep Form-Spaced	1
36	7267	Pulley Block (Lower)	1

ITEM	PART NO.	DESCRIPTION	QTY
37	3728	Woodruff Key, 1/4" x 3/8"	1
38	7259	Clutch Electric "T" Series	1
39	8552	Shouldered Plug	1
40	027-11127	Bolt	1
41	7090	Brace Electromagnetic Clutch	1
42	1982	Setscrew	20
43	RCL030-0825	Setscrew	1
44	RCL090-08	Nut	12
45	1273	Nut	18
46	3792	Locknut	4
47	6487	Ball Joint, Right Hand	2
48	RCL564082-00	Lay Shaft Assembly T1800H	1
49	RCL564088-00	Rod Guide Assy.	1
50	7797	Neutral Quadrant	1
51	RCL584187-00	Rod Guide Long	1
52	9134	Parking Brake Rod Support Bkt.	1
53	RCL584188-00	Neutral Quadrant Boss	1
54	3995	Hinge Pillar	2
55	1695	Swivel, Adjuster	1
56	8767	Vent Hose	1
57	8765	Hose Clip SNP 14	2
58	1312	Bolt	2
59	8731	Dump Valve Cable	1
60	8684	Dump Valve Cable Support Bkt.	1
61	RCL584179-00	TX Support Bkt., Rear Left Hand	1
62	RCL584178-00	TX Support Bkt., Rear Right Hand	1
63	6867	Neutral Gear Rod	2
64	RCL584182-00	Operating Control Rod (Foot)	1
65	8681	TX Support Bkt., Front Right Hand	1
66	RCL584181-00	Control Rod	1
67	8683	TX Support Bkt., Front Right Hand (Upper)	1
68	M4027	Spring	1
69	2103	Clutch Spring	4
70	9135	Jockey Plate	1
71	6888	Belt Transmission A83	1
72	RCL030-1065	Setscrew	1

ITEM	PART NO.	DESCRIPTION	QTY
73	8687	Bush, Jockey Pulley	2
74	6812	Bush, Jockey Arm Pivot	1
75	4086	"R" Clip, Small	8
76	5478	Spacer, Jockey Pulley	1
77	RCL074-0860	Bolt	2
78	RCL584183-00	TX Support Bkt., Front Left Hand	1
79	7892	Grass Deflector Support Bkts. Rear	2
80	1318	Bolt	1
81	8812	TX Grass Deflector	1
82	RCL634003-00	Rubber Flap	2
83	8813	Retaining Strip	2
84	RCL584167-00	TX Support Bkts	2
85	4152	Grommet, 3/8" Open Chassis	3
86	RCL584202	Belt Guide Pin	2
87	7726	Belt, PTO (A84 1/2)	1
88	7833	Screw	3
89	9488	Jockey Pulley	6
90	8310	Jockey Plate PTO	1
91	7107	Rod Adjustable PTO	1
92	6817	Swivel Adjuster Rod	2
93	9569	PTO Pulley Assembly	1
94	8337	Pulley Assy 5"	1
95	9567	PTO Bearing Housing	1
96	3229	Bearing	2
97	8232	Plate Jockey Pulley	1
98	8538	Lever, PTO Engage	1
99	MX1285	Key, 6mm Sq. x 15mm Long	1
100	5735	Belt Guide	5
101	8418	Spacer Jockey Plate	1
102	3613	Washer	8
103	2594	Spring	1
104	RCL030-0840	Bolt	1
105	RCL074-0845	Bolt	2
106	7285	Bolt	1
107	9571	Spacer	1
108	8340	Spacer	1

A L L Y E A R R O U N D P E R F O R M A N C E